

User Guide

2.0 Channel Bluetooth Sound Bar

KY-8000E KY-8000ED

Soundbar (Subwoofer)

support@assistrust.net

213-666-2168

Monday to Friday, 9am to 6pm EST.

(Closed on all US Holidays)

Step 1. Check parts and know their function

Page 1/2 will briefly describe the functions of buttons and cables.

Body button description

— 1 —

— 2 —

Step 2. Assemble 2 soundbars

When you just open the outer box, you will find 2 separate small soundbars and 1 base. You can choose 2 usages/usage A and B to it.

A: assemble 2 separate small soundbars together to be a long soundbar.

B: assemble 2 separate small soundbars on the base to be a tower soundbar.

— 3 —

Install the soundbars to the base

Base installation method:

- Align the sound bar with the base as shown in Figure 1.
- Lock and unlock the sound bar and the base according to the $\rightarrow \rightarrow \rightarrow$ method.
- Lock the sound bar and the base according to the $\rightarrow \rightarrow \rightarrow$ method, and the installation is complete.

— 4 —

Install the soundbars to the base

Base installation method:

- Align the sound bar with the base as shown in Figure 1.
- Lock and unlock the sound bar and the base according to the $\rightarrow \rightarrow \rightarrow$ method.
- Lock the sound bar and the base according to the $\rightarrow \rightarrow \rightarrow$ method, and the installation is complete.

— 5 —

Install the soundbars to the base

Base installation method:

Connect the two sound bars with the base installed with the connecting wire of the base to complete the vertical assembly.

After getting the package

- Open the box.
- Check all the cables/base/power adapter/remote, if anything wrong, please contact support@assistrust.net.
- Install 2 small soundbars and a subwoofer unit.
- If you get the package, the soundbars are separate like 2 small soundbars. You can choose to independently connect the soundbars to the base or attach them to the base and use them independently. Then connect the subwoofer to the soundbars and use it.
- Power On and Connect the soundbar with your TV.
- Keep reading the next page to power on and connect.

— 6 —

Connect the subwoofer

1. Connect the subwoofer's own cable to the sub hole of the soundbar.

Step 3. Power on

- First, Connect the power cord to the DC IN port on the back of the soundbar.
- Next, Plug the other end of the power cord into an AC (main) power outlet.

Tips:

1. Connect the soundbar.
- Note: The soundbar needs to be connected to use as a soundbar or dual tower speaker.
2. Plug the soundbar into a power source. Once it's connected, the soundbar LED indicator will turn RED.
- Note: The LED light doesn't represent standby mode, but signals there's an active power source

— 7 —

Step 4. Turn on

Press power button on the soundbar remote to turn it on, LED will flash BLUE and hear a beep (in default mode - Bluetooth mode).

Remote control key description you may want to know:

Power OFF (For Your Information)

- When you need to turn off the soundbar after using, you can refer to here.
- First, Turn off the soundbar by pressing the power button on the remote or the power button on the soundbar.
- Next, Turn off the TV.
- Because many TV's can generate a large audio input signal when they are turned off, this signal will be transmitted to Soundbar, which will cause a noise and affect your hearing.

It's suggested that the soundbar should be turned off first.

Step 5. Connect soundbar with TV

1. choose 1 connection according to TV sets, such as HDMI/ARC/OPT/AUX.

2. If you want to use the soundbar as a speaker, you can choose 2 connection: OPT/AUX/BT/HDMI.

Please contact us at: support@assistrust.net

If the soundbar stops working unexpectedly, an overly strong signal may have activated the audio amplifier protection system. To restore normal operation, follow these steps:

1. Unplug the power adapter from the wall outlet.

2. Wait a few seconds.

3. Plug the adapter back into the wall outlet.

4. Turn on the device on.

5. If you want to use OPT connection please refer to the troubleshooting section or contact customer support.

Power OFF (For Your Information)

When you need to turn off the soundbar after using, you can refer to here.

1. First, Turn off the soundbar by pressing the power button on the remote or the power button on the soundbar.

2. Next, Turn off the TV.

Because many TV's can generate a large audio input signal when they are turned off, this signal will be transmitted to Soundbar, which will cause a noise and affect your hearing.

It's suggested that the soundbar should be turned off first.

Step 6. Connect soundbar with TV

Press power button on the soundbar remote to turn it on, LED will flash BLUE and hear a beep (in default mode - Bluetooth mode).

Remote control key description you may want to know:

HDMI: Before plug the HDMI cable, please press this button to set the soundbar into HDMI mode. You can check the LED color (orange) to know if the mode is set.

OPT: Before plug the OPT cable, please press this button to set the soundbar into OPT mode. You can check the LED color (green) to know if the mode is set.

AUX: Before plug the AUX cable, please press this button to set the soundbar into AUX mode. You can check the LED color (white) to know if the mode is set.

§: Press this button to set the BT mode, you can check the form below to know the status.

*According to local transportation rules, batteries are not allowed in the package.

Please prepare 2 AAA batteries for the remote control. Thank you for understanding.

— 8 —

INSTALL THE REMOTE BATTERIES

1. Open the battery compartment cover on the back of the remote.

2. Insert the two AAA 1.5V batteries. Match the H and Z symbols on the batteries with the + and - markings inside the compartment.

3. Put the battery compartment cover back into place.

Note: Be sure you insert the HDMI cable into an HDMI ARC port on your TV, not a standard HDMI port. (NOTE: Some TVs have 2 HDMI jacks and modes, choose "HDMI ARC ONLY" if your TV does not have an HDMI ARC port and optical cable.)

Note: Some TVs require further setup, pls try path 3.

Path 3: Smart Home > Settings > Audio Output > ARC (HDMI) > Digital Output Format > PCM or Passthrough

Internal TV speaker

Optical

Digital Sound Out - AUTO

Digital Sound Out - PCM or Passthrough

Sound Sync

Some TVs require further setup. If there is no sound after connecting, enable HDMI-CEC

Path 4: Settings > Display > Sound > HDMI-CEC Device Control

DISPLAY & SOUNDS

Screamer

Allow your TV to control connected CEC-capable HDMI devices

Display & Sound

HDMI-CEC Device Control

ON

Allow the mode to CEC

Display & Sound

Power

Playback, navigation, and power on/off can be controlled by a single TV remote.

Note: If you do not see a Red LED light on the other end of the optical cable, this means your TV's Optical port is not working properly by HDMI ARC, 3.5mm RCA or Bluetooth connection.

— 10 —

4. TV Settings (Different TV has different paths)

After connecting, please set the TV sound mode according to your TV model. Please refer to page 16-19 for different TV settings. Here are some common setup paths:

Path 1: Smart Home > Settings > Sound > Sound Out > External Speaker/External Audio

Path 2: Settings > Sound > Sound Output > Audio Out > HDMI/ARC > Digital Output

Path 3: Smart Home > Settings > Audio Output > Optical > Digital Output Format > PCM or Passthrough

Display

Sound

General

Desktop

Voice

About

Internal TV speaker

Optical

Digital Sound Out - PCM

Sound Sync

Note: Some TVs require further setup, pls try path 3.

Path 3: Smart Home > Settings > Audio Output > Optical > Digital Output Format > PCM or Passthrough

Internal TV speaker

Optical

Digital Sound Out - AUTO

Digital Sound Out - PCM or Passthrough

Sound Sync

Note: Some TVs require further setup, pls try path 4.

Path 4: Settings > Display > Sound > HDMI-CEC Device Control

DISPLAY & SOUNDS

Screamer

Allow your TV to control connected CEC-capable HDMI devices

Display & Sound

HDMI-CEC Device Control

ON

Allow the mode to CEC

Display & Sound

Power

Playback, navigation, and power on/off can be controlled by a single TV remote.

Note: If you do not see a Red LED light on the other end of the optical cable, this means your TV's Optical port is not working properly by HDMI ARC, 3.5mm RCA or Bluetooth connection.

— 11 —

> Option 2: Optical

If you want to use OPT connection please keep reading, if you want to use other connections, please refer to other pages.

1. Open the protective cap on both ends of the optical cable.

2. Insert one end of the optical cable into your TV's Optical OUT port. After inserting, you should see a red LED light on both ends of the optical cable.

3. Hold the plug at the other end of the optical cable.

4. Align the plug with the soundbar's OPT/ARC port, and insert the plug carefully.

CAUTION: Inserting the plug with the cap attached or in the wrong direction can damage the plug and/or the port.

5. Firmly push the plug into the port until you hear or feel a click.

6. Press "INPUT" button on soundbar remote, LED turn solid green to indicate the mode is OPT. If LED show other color, please press "INPUT" button again to show green.

Note: If you do not see a Red LED light on the other end of the optical cable, this means your TV's Optical port is not working properly by HDMI ARC, 3.5mm RCA or Bluetooth connection.

— 12 —

7. TV Settings(Different TV has different paths.)

After connecting, please set the TV sound mode according to your TV model. Please refer to page 16-19 for different TV settings. Here are some common setup paths:

Path 1: Smart Home > Settings > Sound > Sound Out > External Speaker/External Audio

Path 2: Settings > Sound > Sound Output > Audio Out > Optical > Digital Output Format > PCM

Display

Sound

General

Desktop

Voice

About

Internal TV