

 
Through the design, combination, and programming of intelligent stunt actions, combined with intelligent voice control and coordinated interaction of actions, your little dog can easily complete various interactive actions of "training, teasing, and walking dogs" according to your instructions.

**2.4GHz**  
REMOTE CONTROL

## Remote control robot dog

### - INSTRUCTION MANUAL -


HELLO!

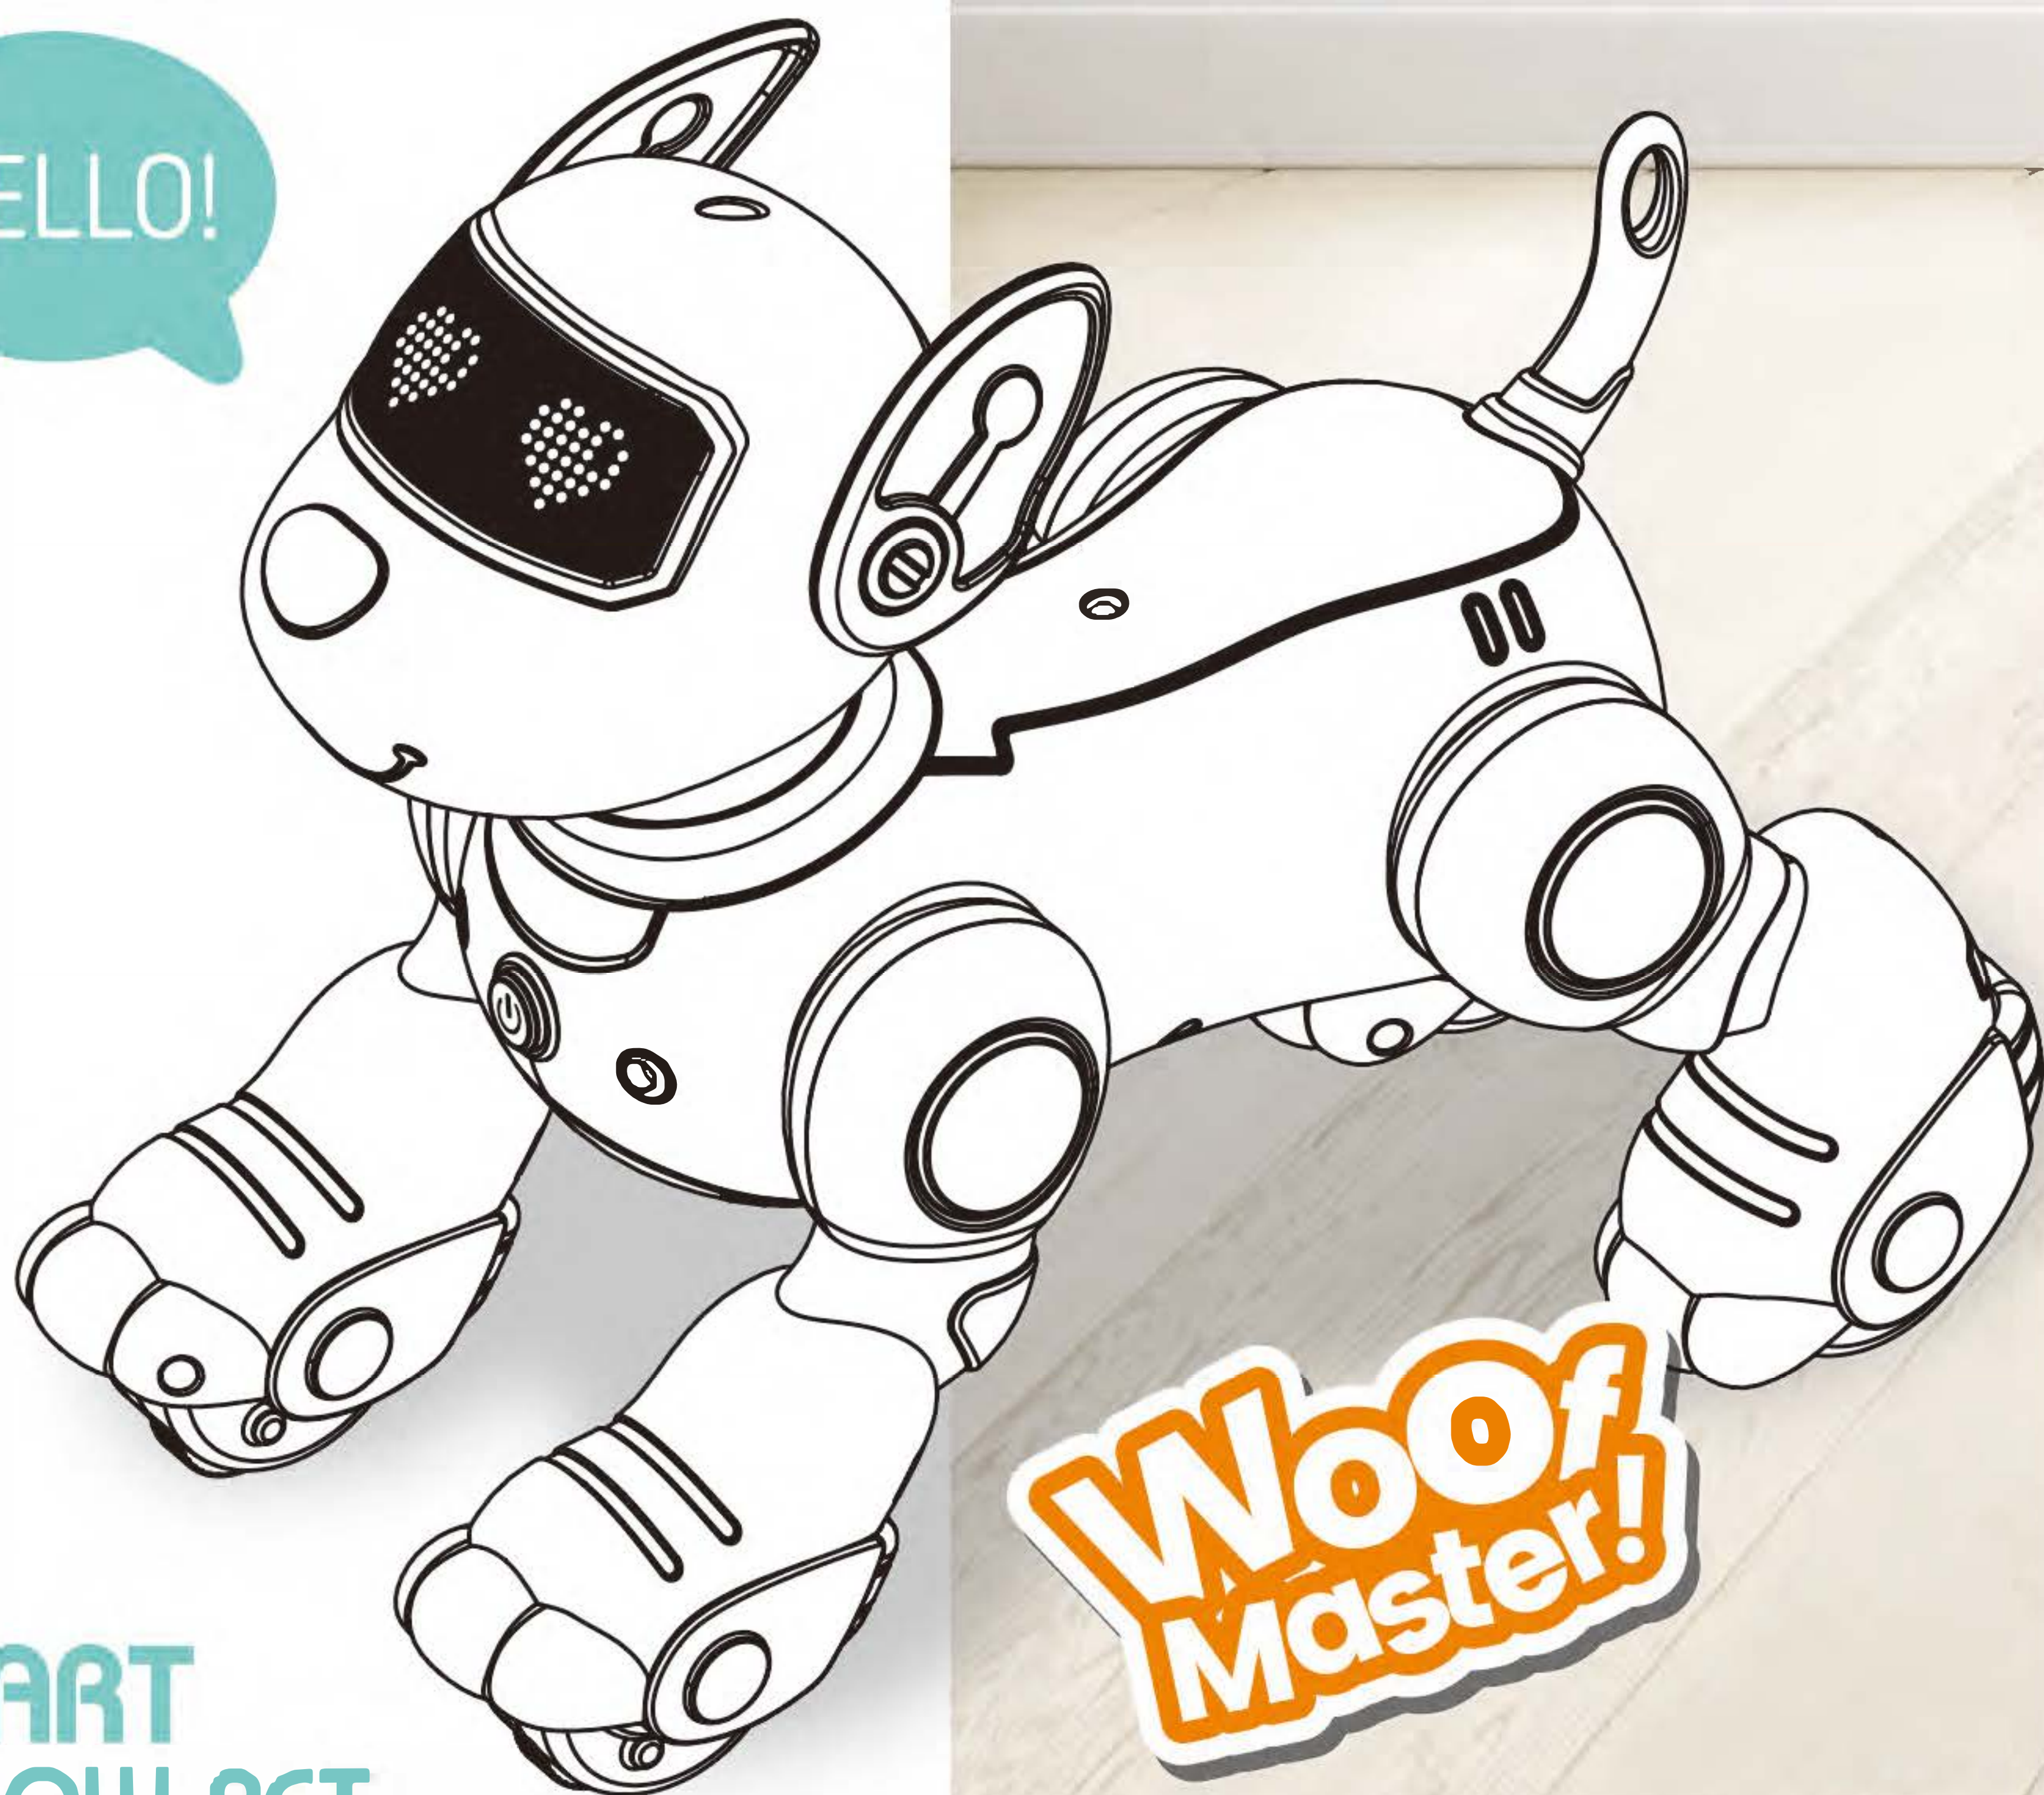


## SMART FOLLOW PET

- 2.4GHz remote control
- Intelligent interaction
- Intelligent voice control
- Intelligent voice following
- Intelligent touch sensing

 
**2.4GHz** LONG-RANGE  
REMOTE CONTROL

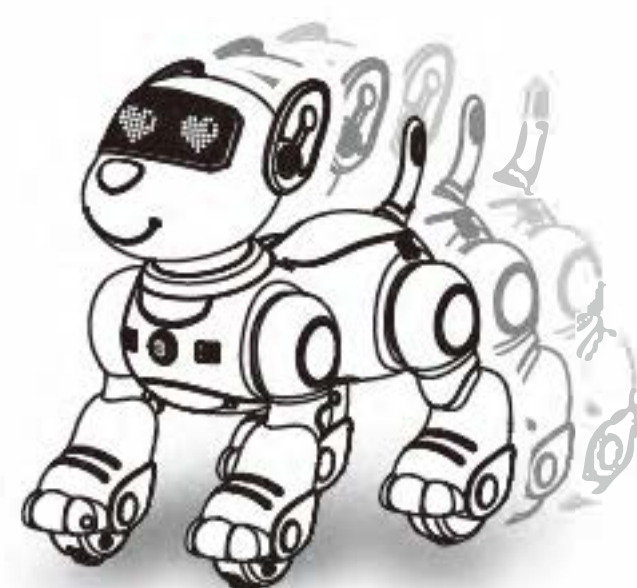


Move

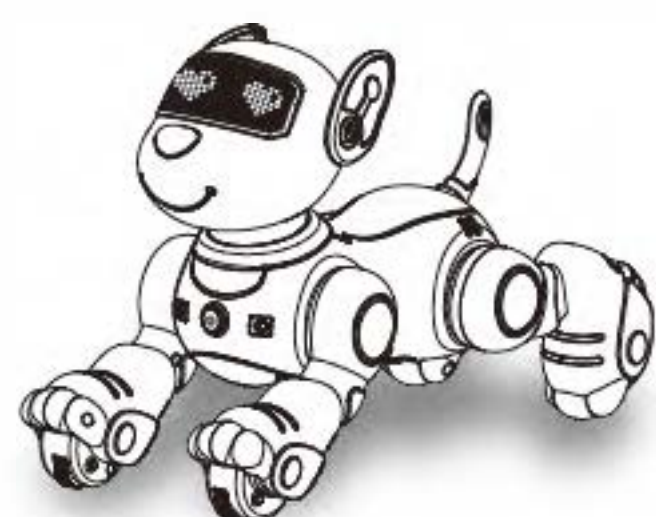 


Push ups

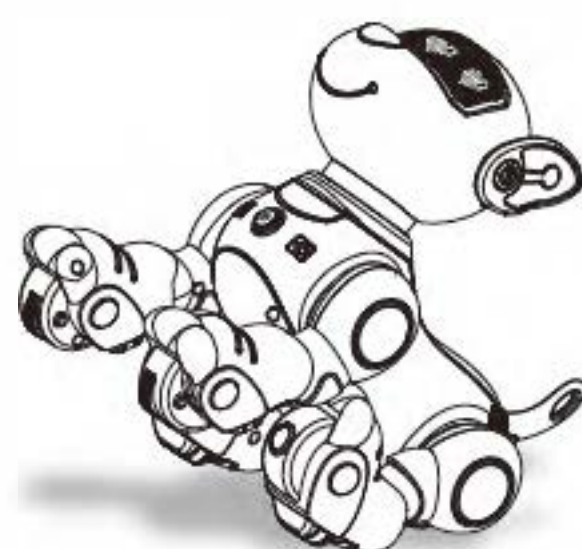 

Sit down

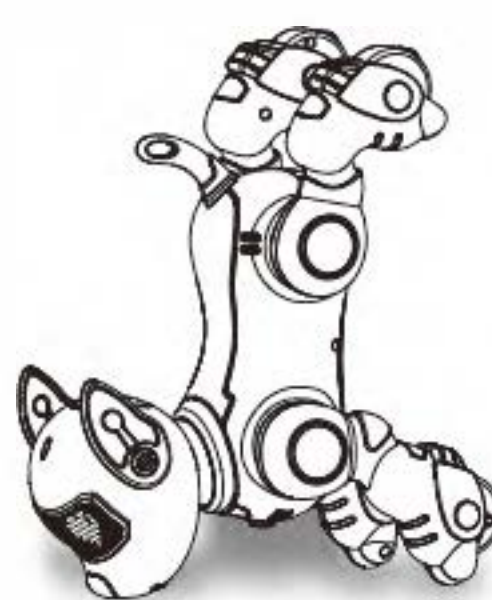 

Handstand

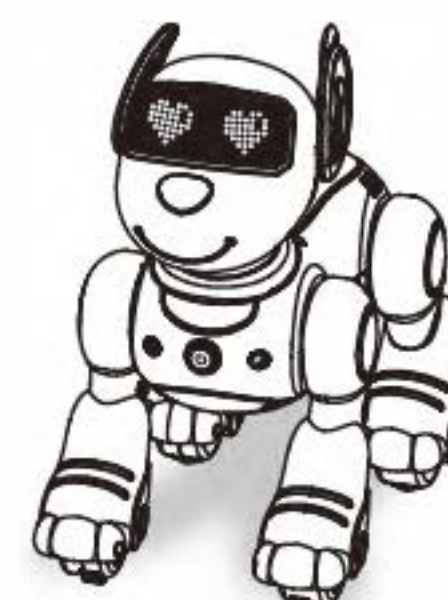 

More...



## **WARNING!**

This product contains small parts and is not suitable for children under three years of age. This product includes electronic components and must not be used in water or a humid environment. The wires, plugs, casing, and other components of the battery charger should be checked for damages periodically. In case of damage, the usage of the product should be discontinued.

## **CAUTION PROCEEDING**

1. Detachable small parts should be stored safely and out of reach of children.
2. Remote control will not function correctly if the batteries are low. Please replace the batteries.
3. Please discard old/used batteries in a safe manner. Consider your environment!
4. Please store your product in a dry and cool place.
5. Please do not store the product in a place near the fire, with high humidity or temperatures.
6. Please recharge the battery regularly if it is not used for a long time.
7. The rechargeable battery and its charger are not toys.

 
## **BATTERY USE CAUTION PROCEEDING**

1. A 3.7V 600mAh rechargeable battery is used for the product.
2. We recommend using two 1.5V AAA non-rechargeable alkaline batteries for the remote control.
3. While installing batteries for the remote control, please note that the battery polarity should correspond to the polarity identifications in the remote control battery compartment.
4. The recharging process must be supervised by an adult when the battery in the product is out of power.
5. Do not mix new, old, or different battery models in the remote control.
6. The batteries in the remote control are non-rechargeable batteries which cannot be recharged.
7. Do not leave drained or used up batteries inside the remote control.
8. To avoid accidents or pollution, do not short circuit or dissect the battery, or put it into fire or water.
9. DO NOT short circuit any terminals.
10. The rated input voltage of the adapter must match the local household voltage, and the output voltage must match the USB input voltage.
11. During charging it is quite normal for the charger and batteries to heat up.

# 1 Batteries and Instructions for Charging


## 1. The remote control uses two 1.5V AAA-size batteries.

- (1). Remove the battery cover with a Phillips head screw driver.
- (2). Put batteries into the battery compartment, with correctly corresponded battery polarities.
- (3). Replace the battery cover and tighten the screws.

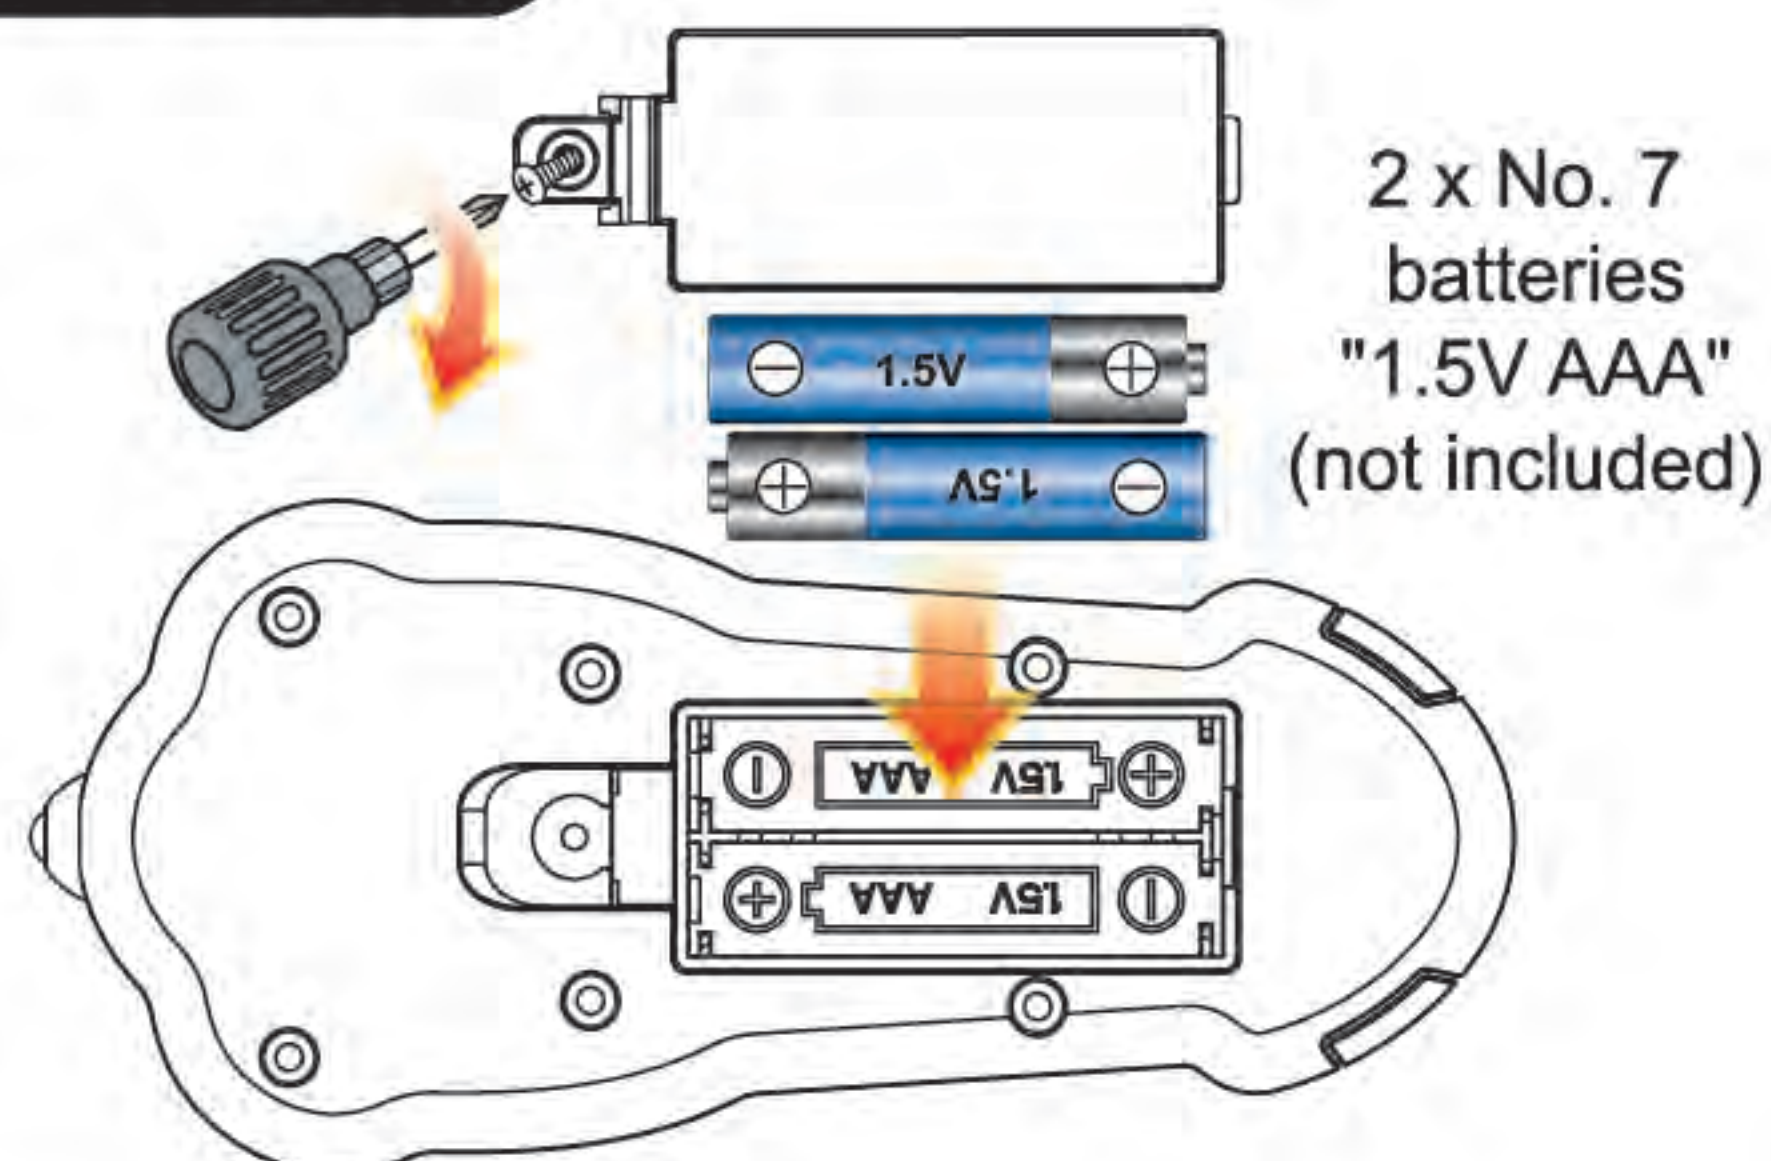


## 2. Charge with the USB cable

 - (1). As shown in the picture, take the rechargeable battery out of the robot dog.

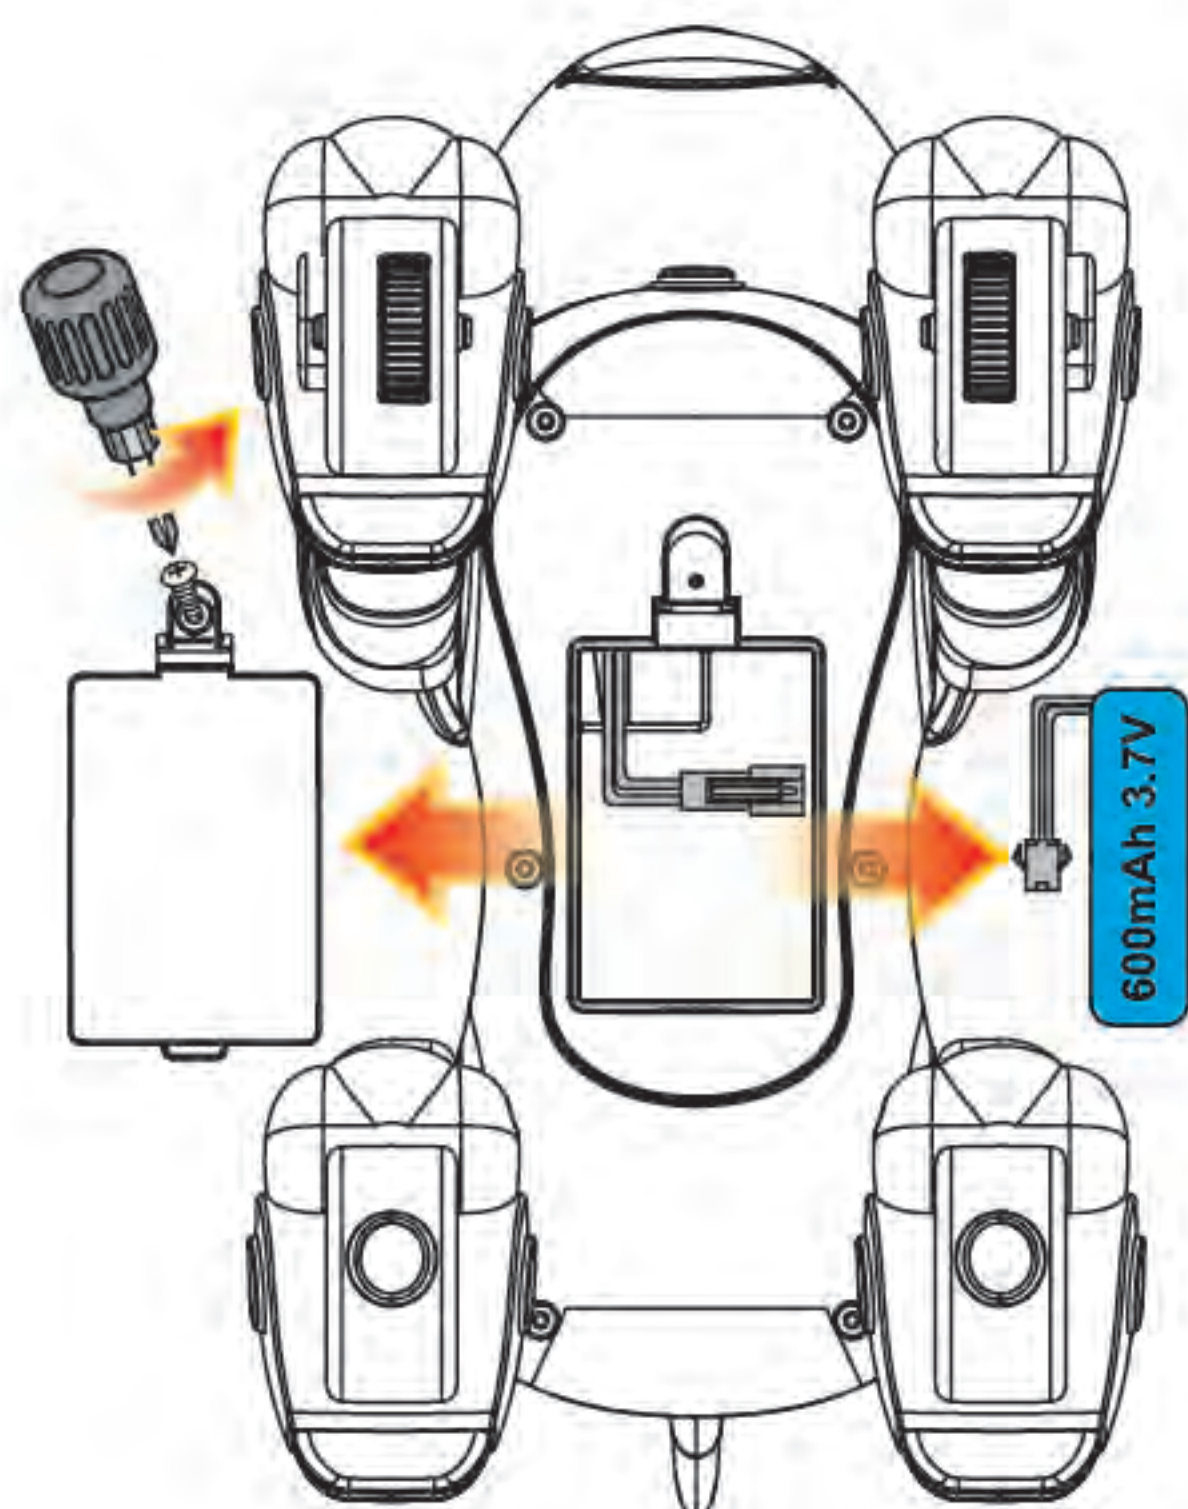


- (2). Charging mode

 - ①. Computer charging: first insert the USB socket into the computer USB interface, then insert the lithium battery plug into the USB charging plug, and the USB charging indication is on for a long time; After charging for about 120 minutes, the USB charging indicator goes out and the charging is completed.
- ②. DC device charging: connect the input interface of the USB charging line to the USB related power medium with an output DC voltage of 5V and a current greater than or equal to 500mA, insert the other end into the lithium battery socket, and the USB charging indication is normally on; After charging for about 120 minutes, the USB charging indicator goes out and the charging is completed.

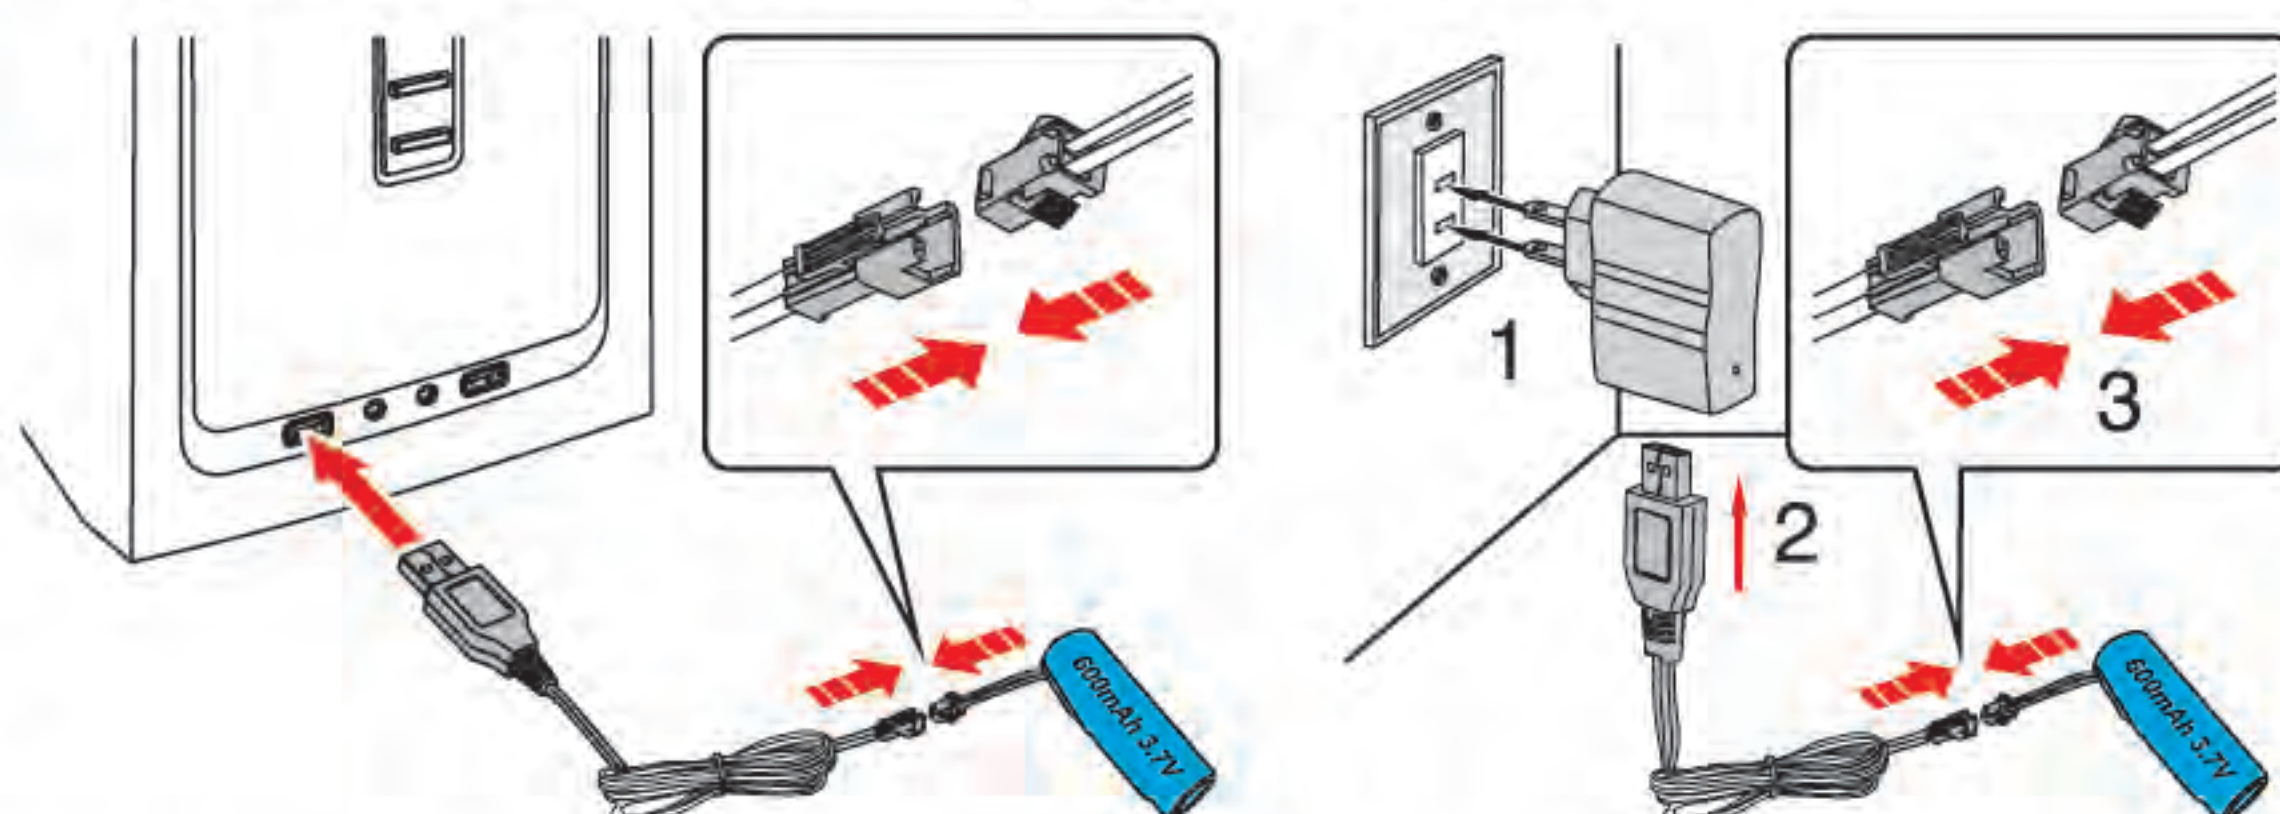

 - (3). As shown in the picture, connect the correct electrodes, and then load the battery in the battery case. After that, cover the battery case with the battery cover and then screw the battery cover.


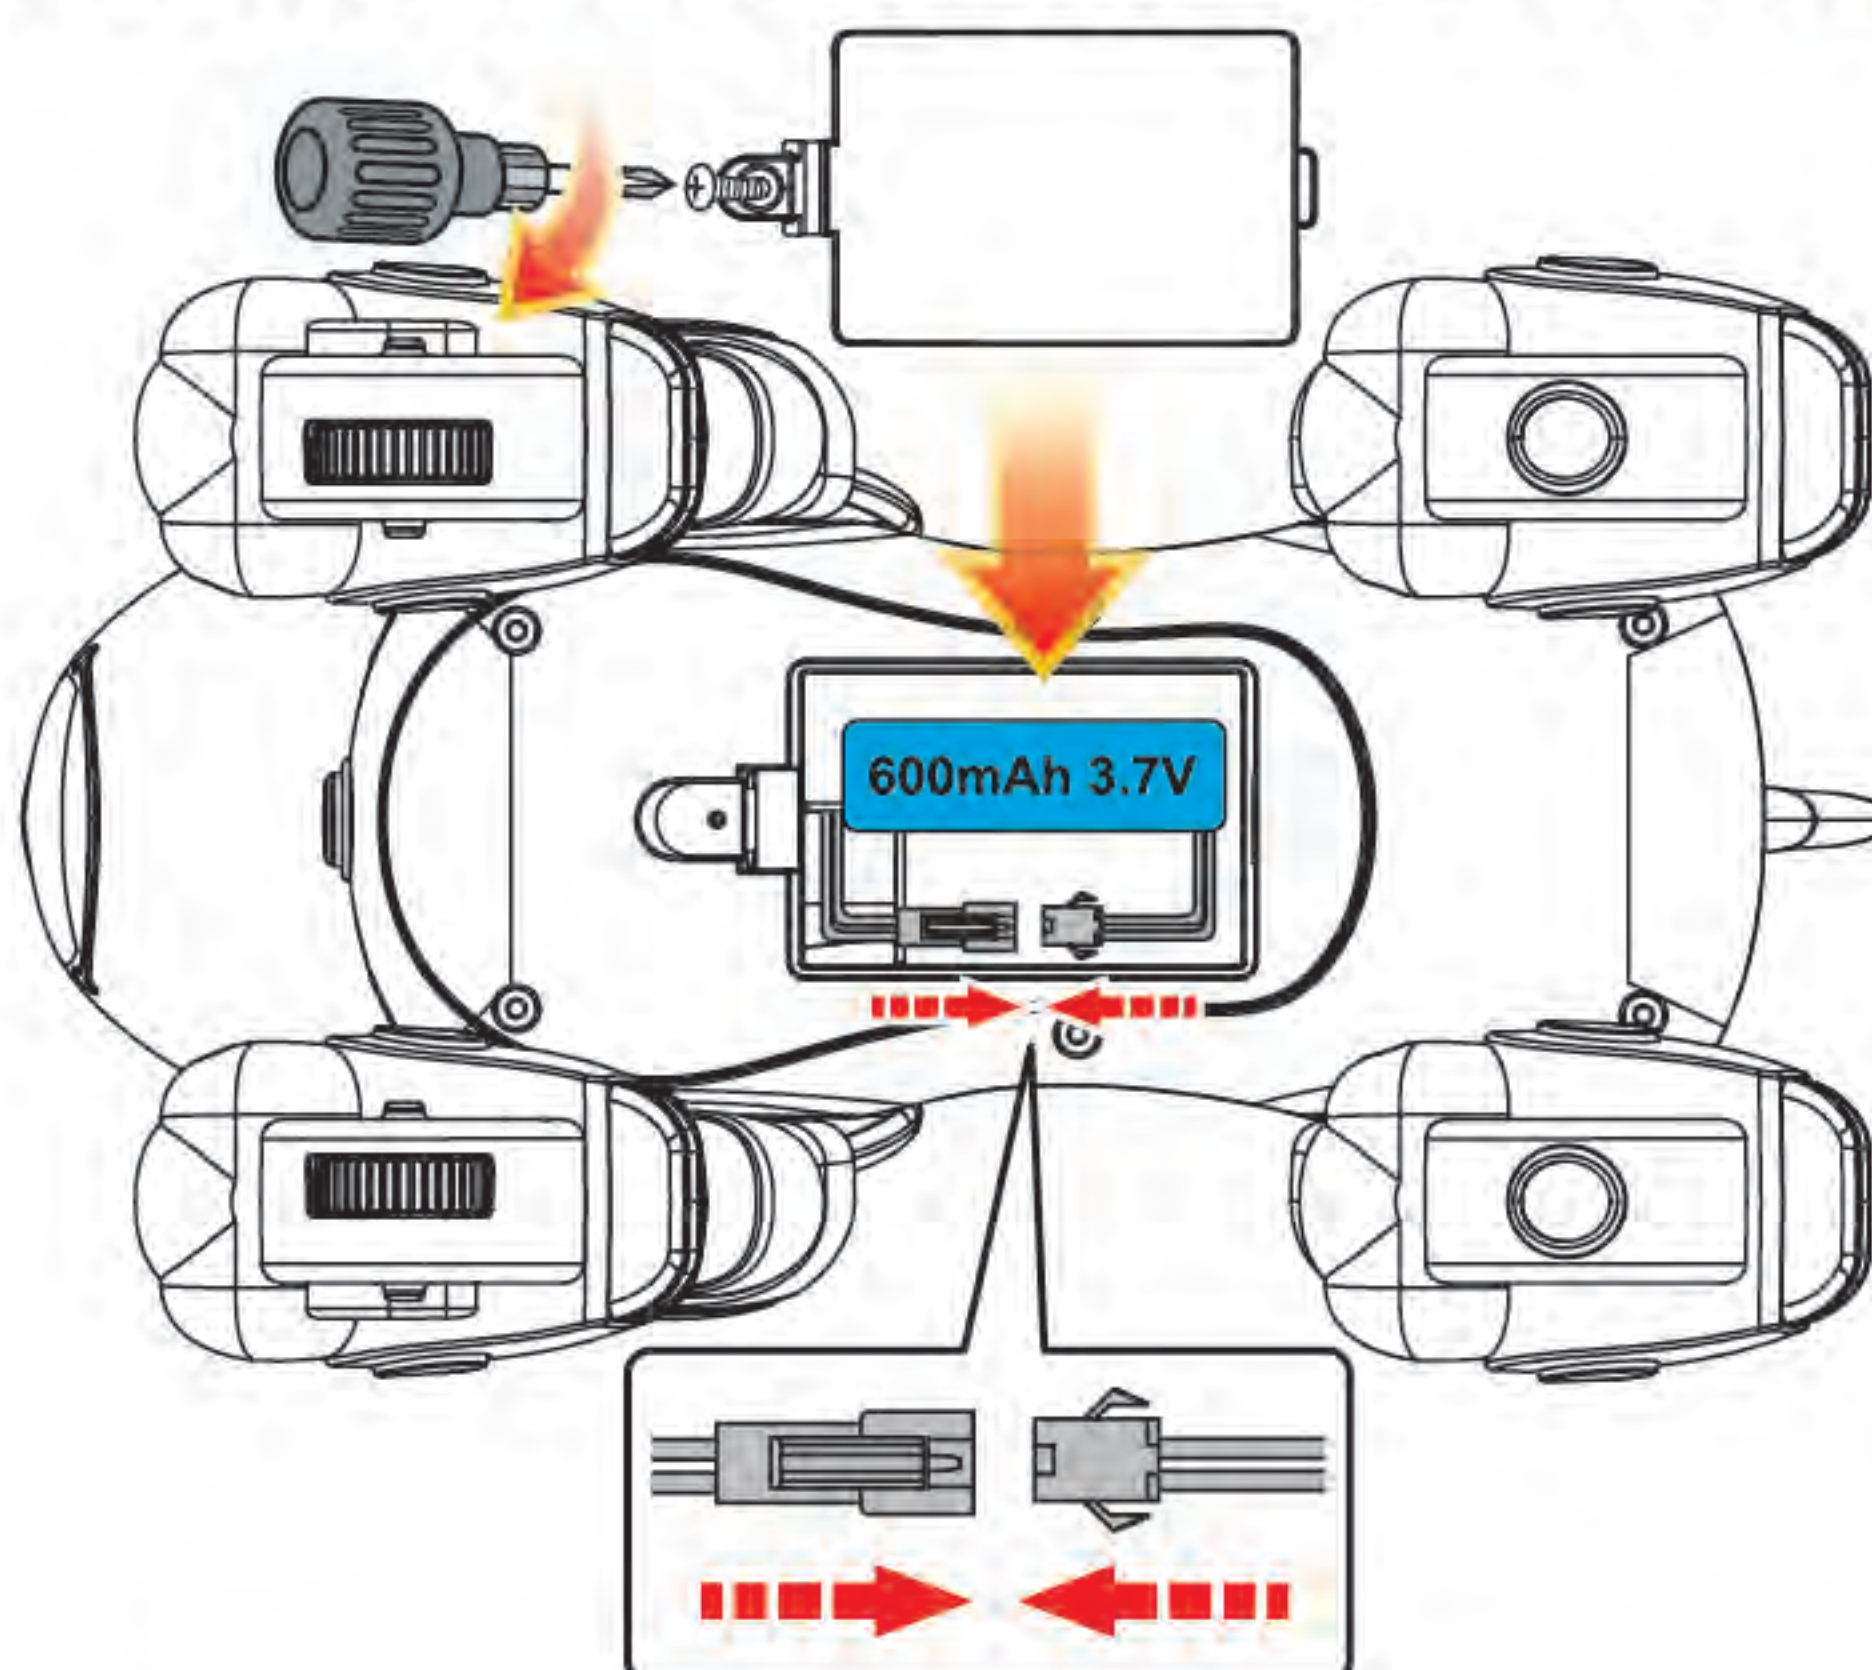


## ! Notice:

1. Only use the USB charging cable provided by our factory to recharge the product.
2. The recharging process must be supervised by an adult.


## 2 Name of Functions
  
### 1. Remote control function diagram

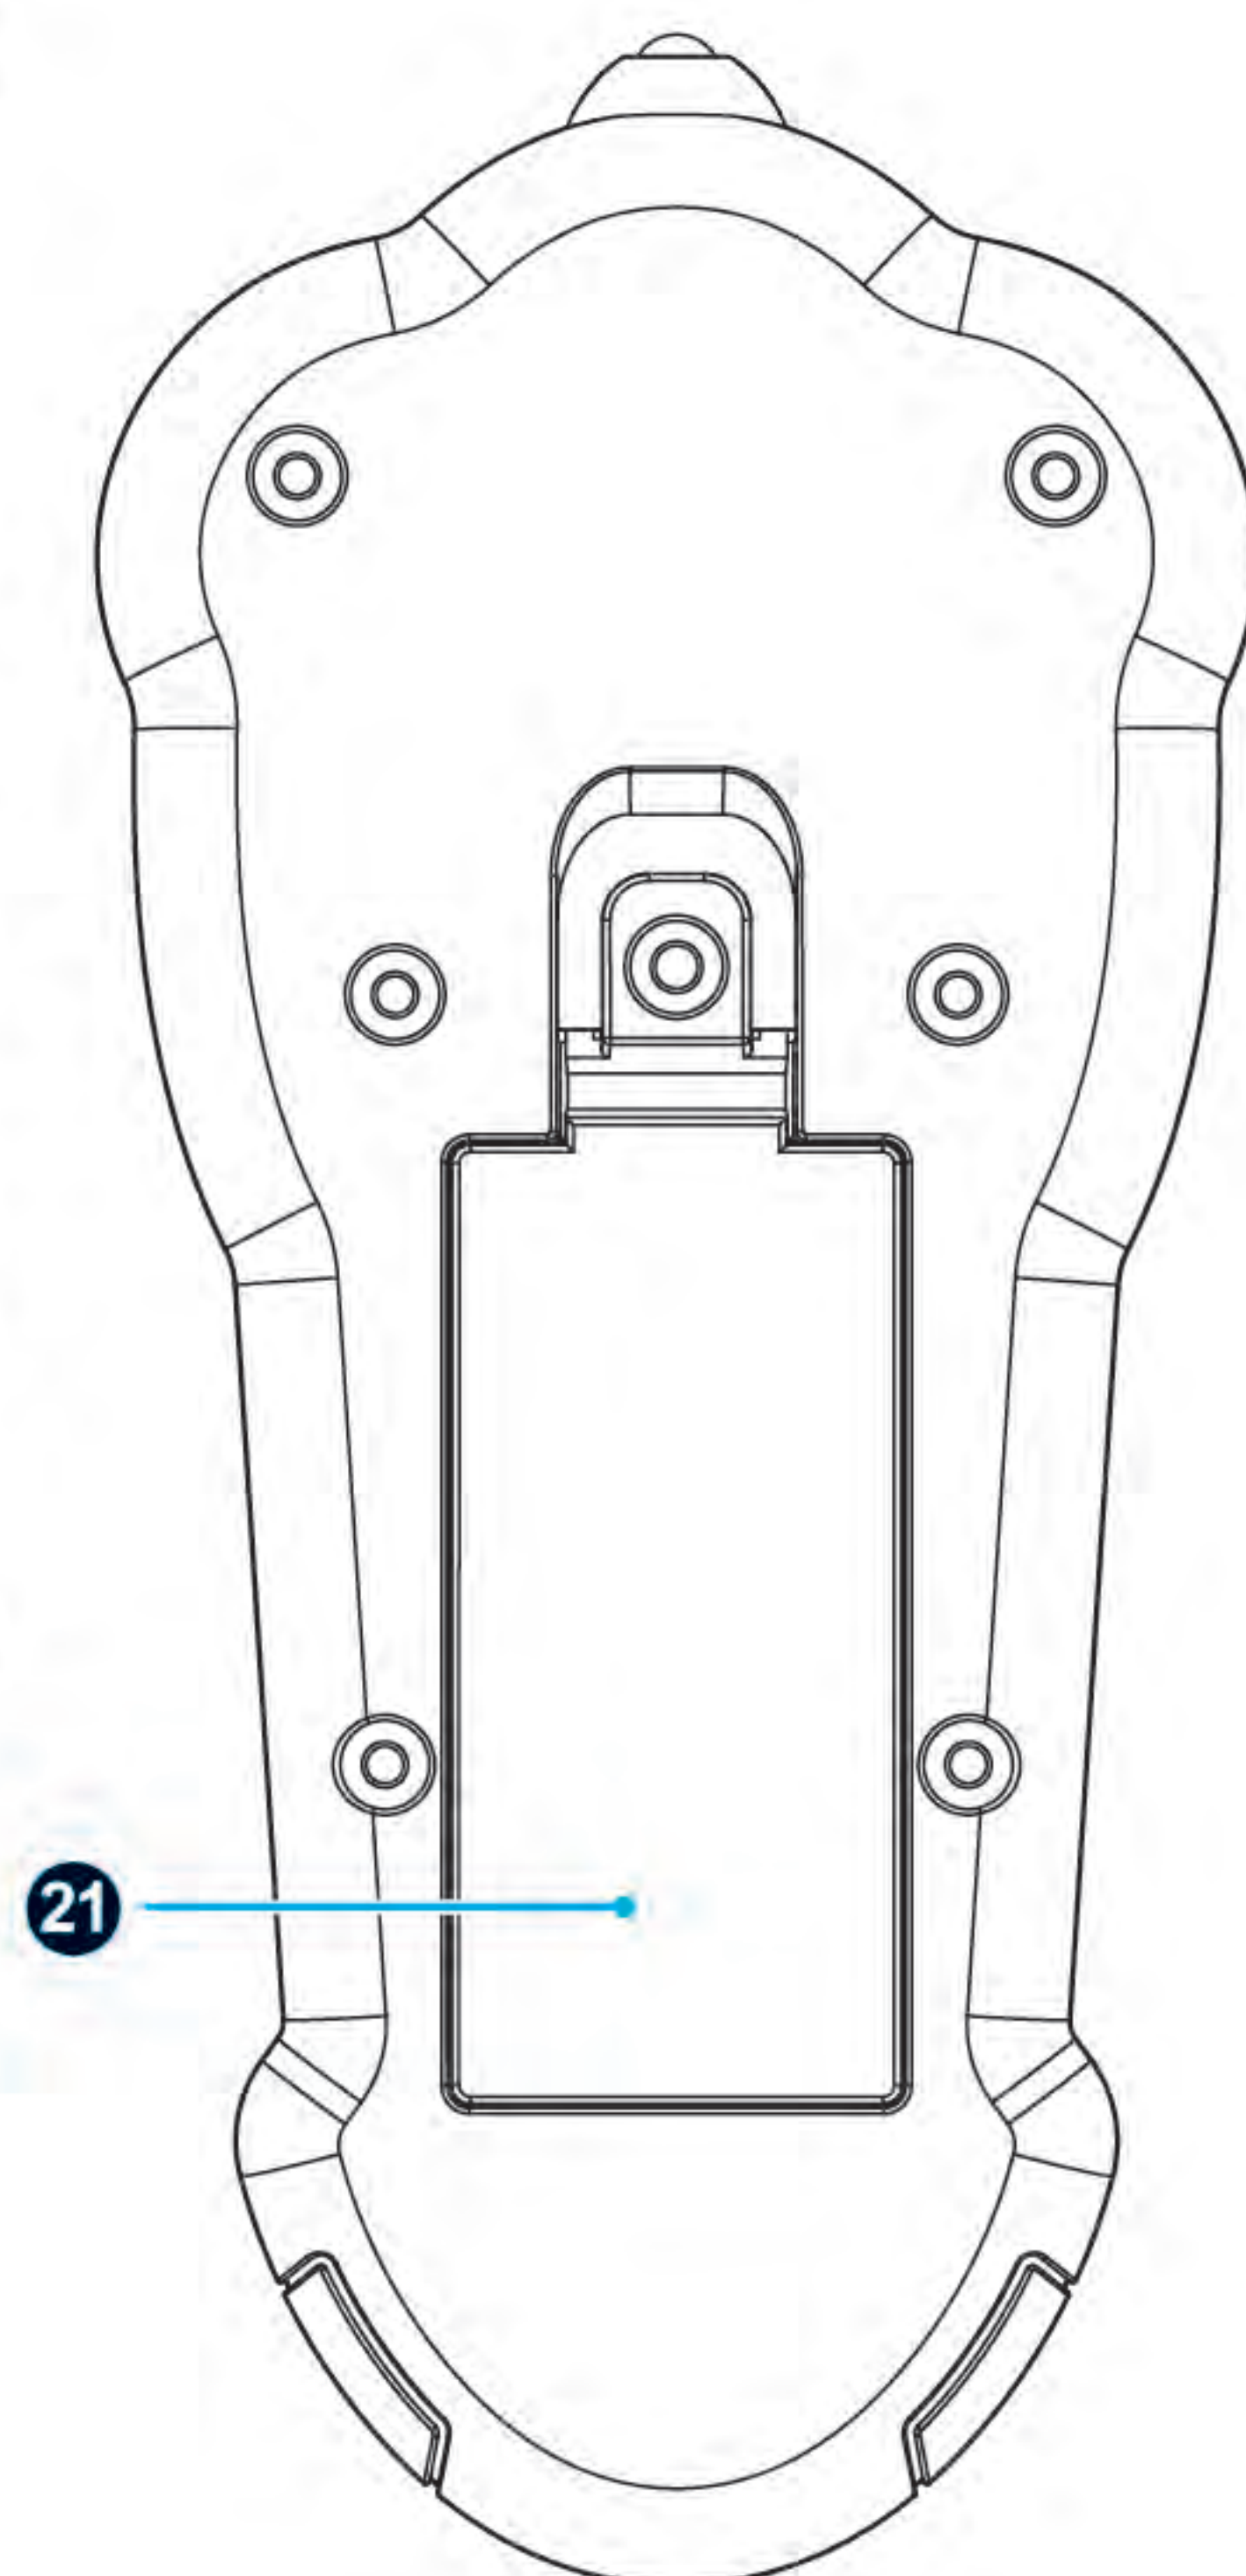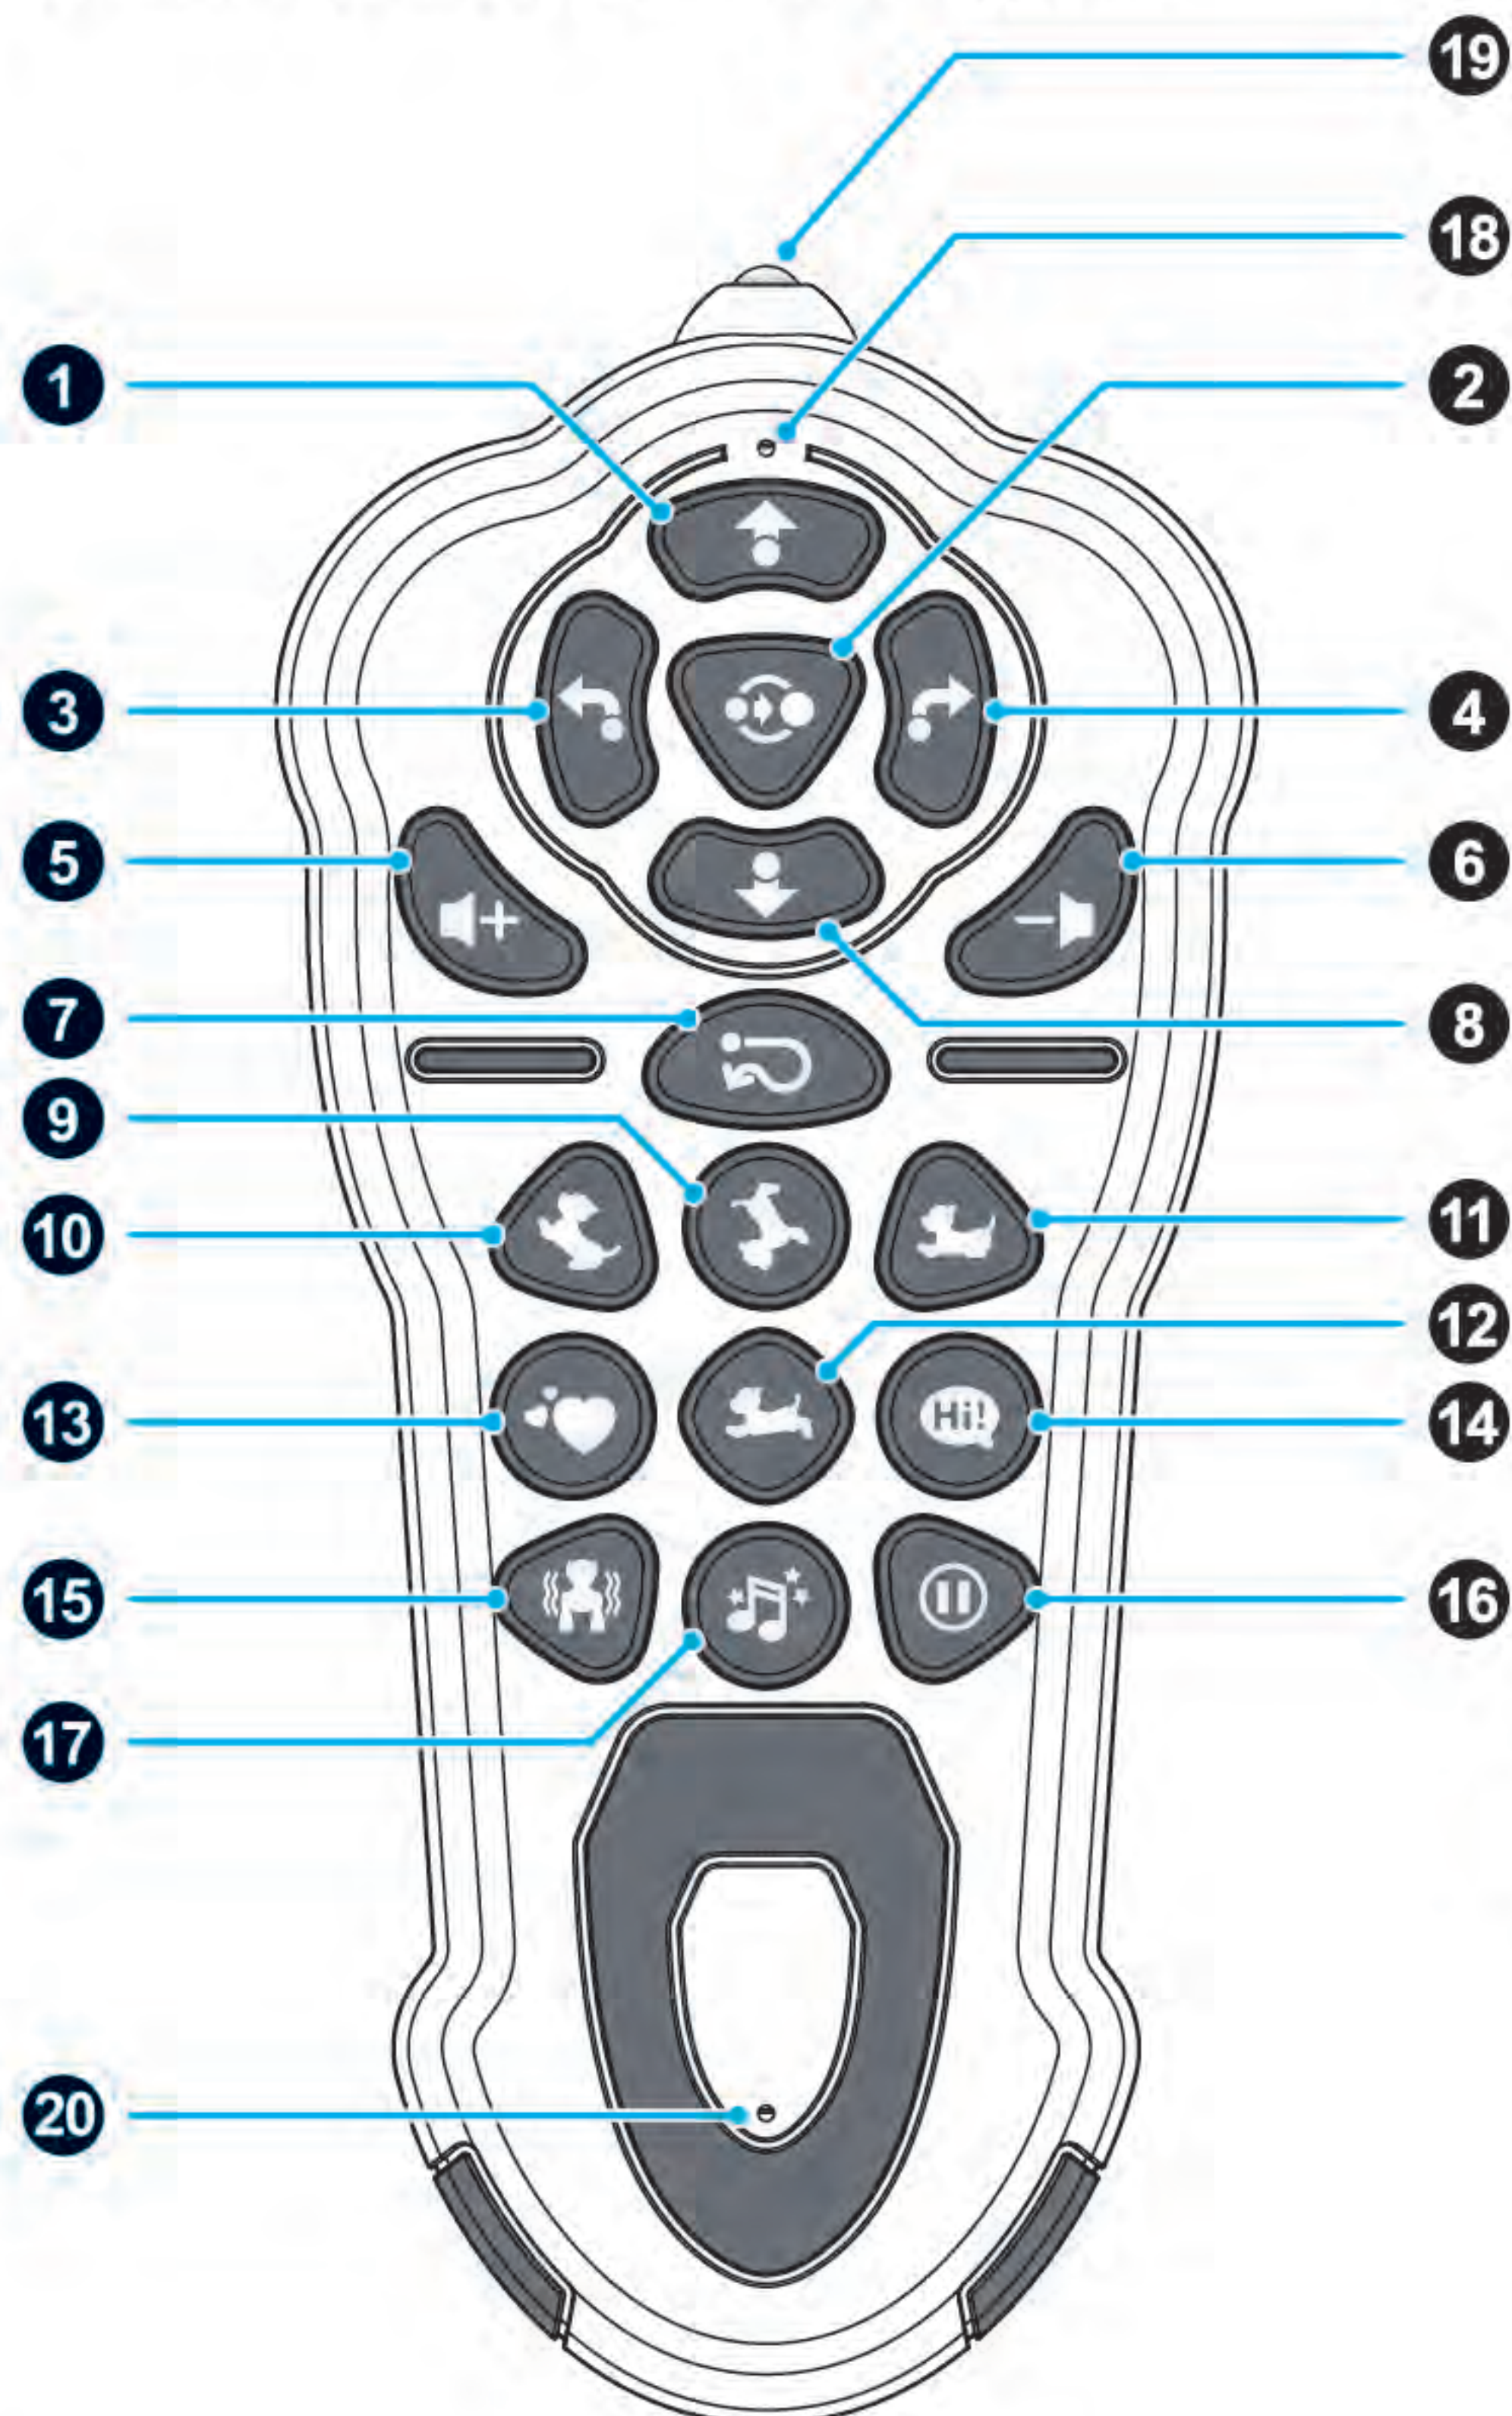


- |                         |                           |                                    |                        |
|-------------------------|---------------------------|------------------------------------|------------------------|
| <b>1</b> Forward        | <b>2</b> Manual follow    | <b>3</b> Turn left                 | <b>4</b> Turn right    |
| <b>5</b> Volume +       | <b>6</b> Volume -         | <b>7</b> Demo                      | <b>8</b> Back          |
| <b>9</b> Handstand      | <b>10</b> Sit down        | <b>11</b> Get down                 | <b>12</b> Push-up      |
| <b>13</b> Play cute     | <b>14</b> Voice control   | <b>15</b> Dancing                  | <b>16</b> Stop/standby |
| <b>17</b> Song          | <b>18</b> Indicator light | <b>19</b> Forward following seeker | <b>20</b> Voice sensor |
| <b>21</b> Battery cover |                           |                                    |                        |

## 2. Diagram of functions

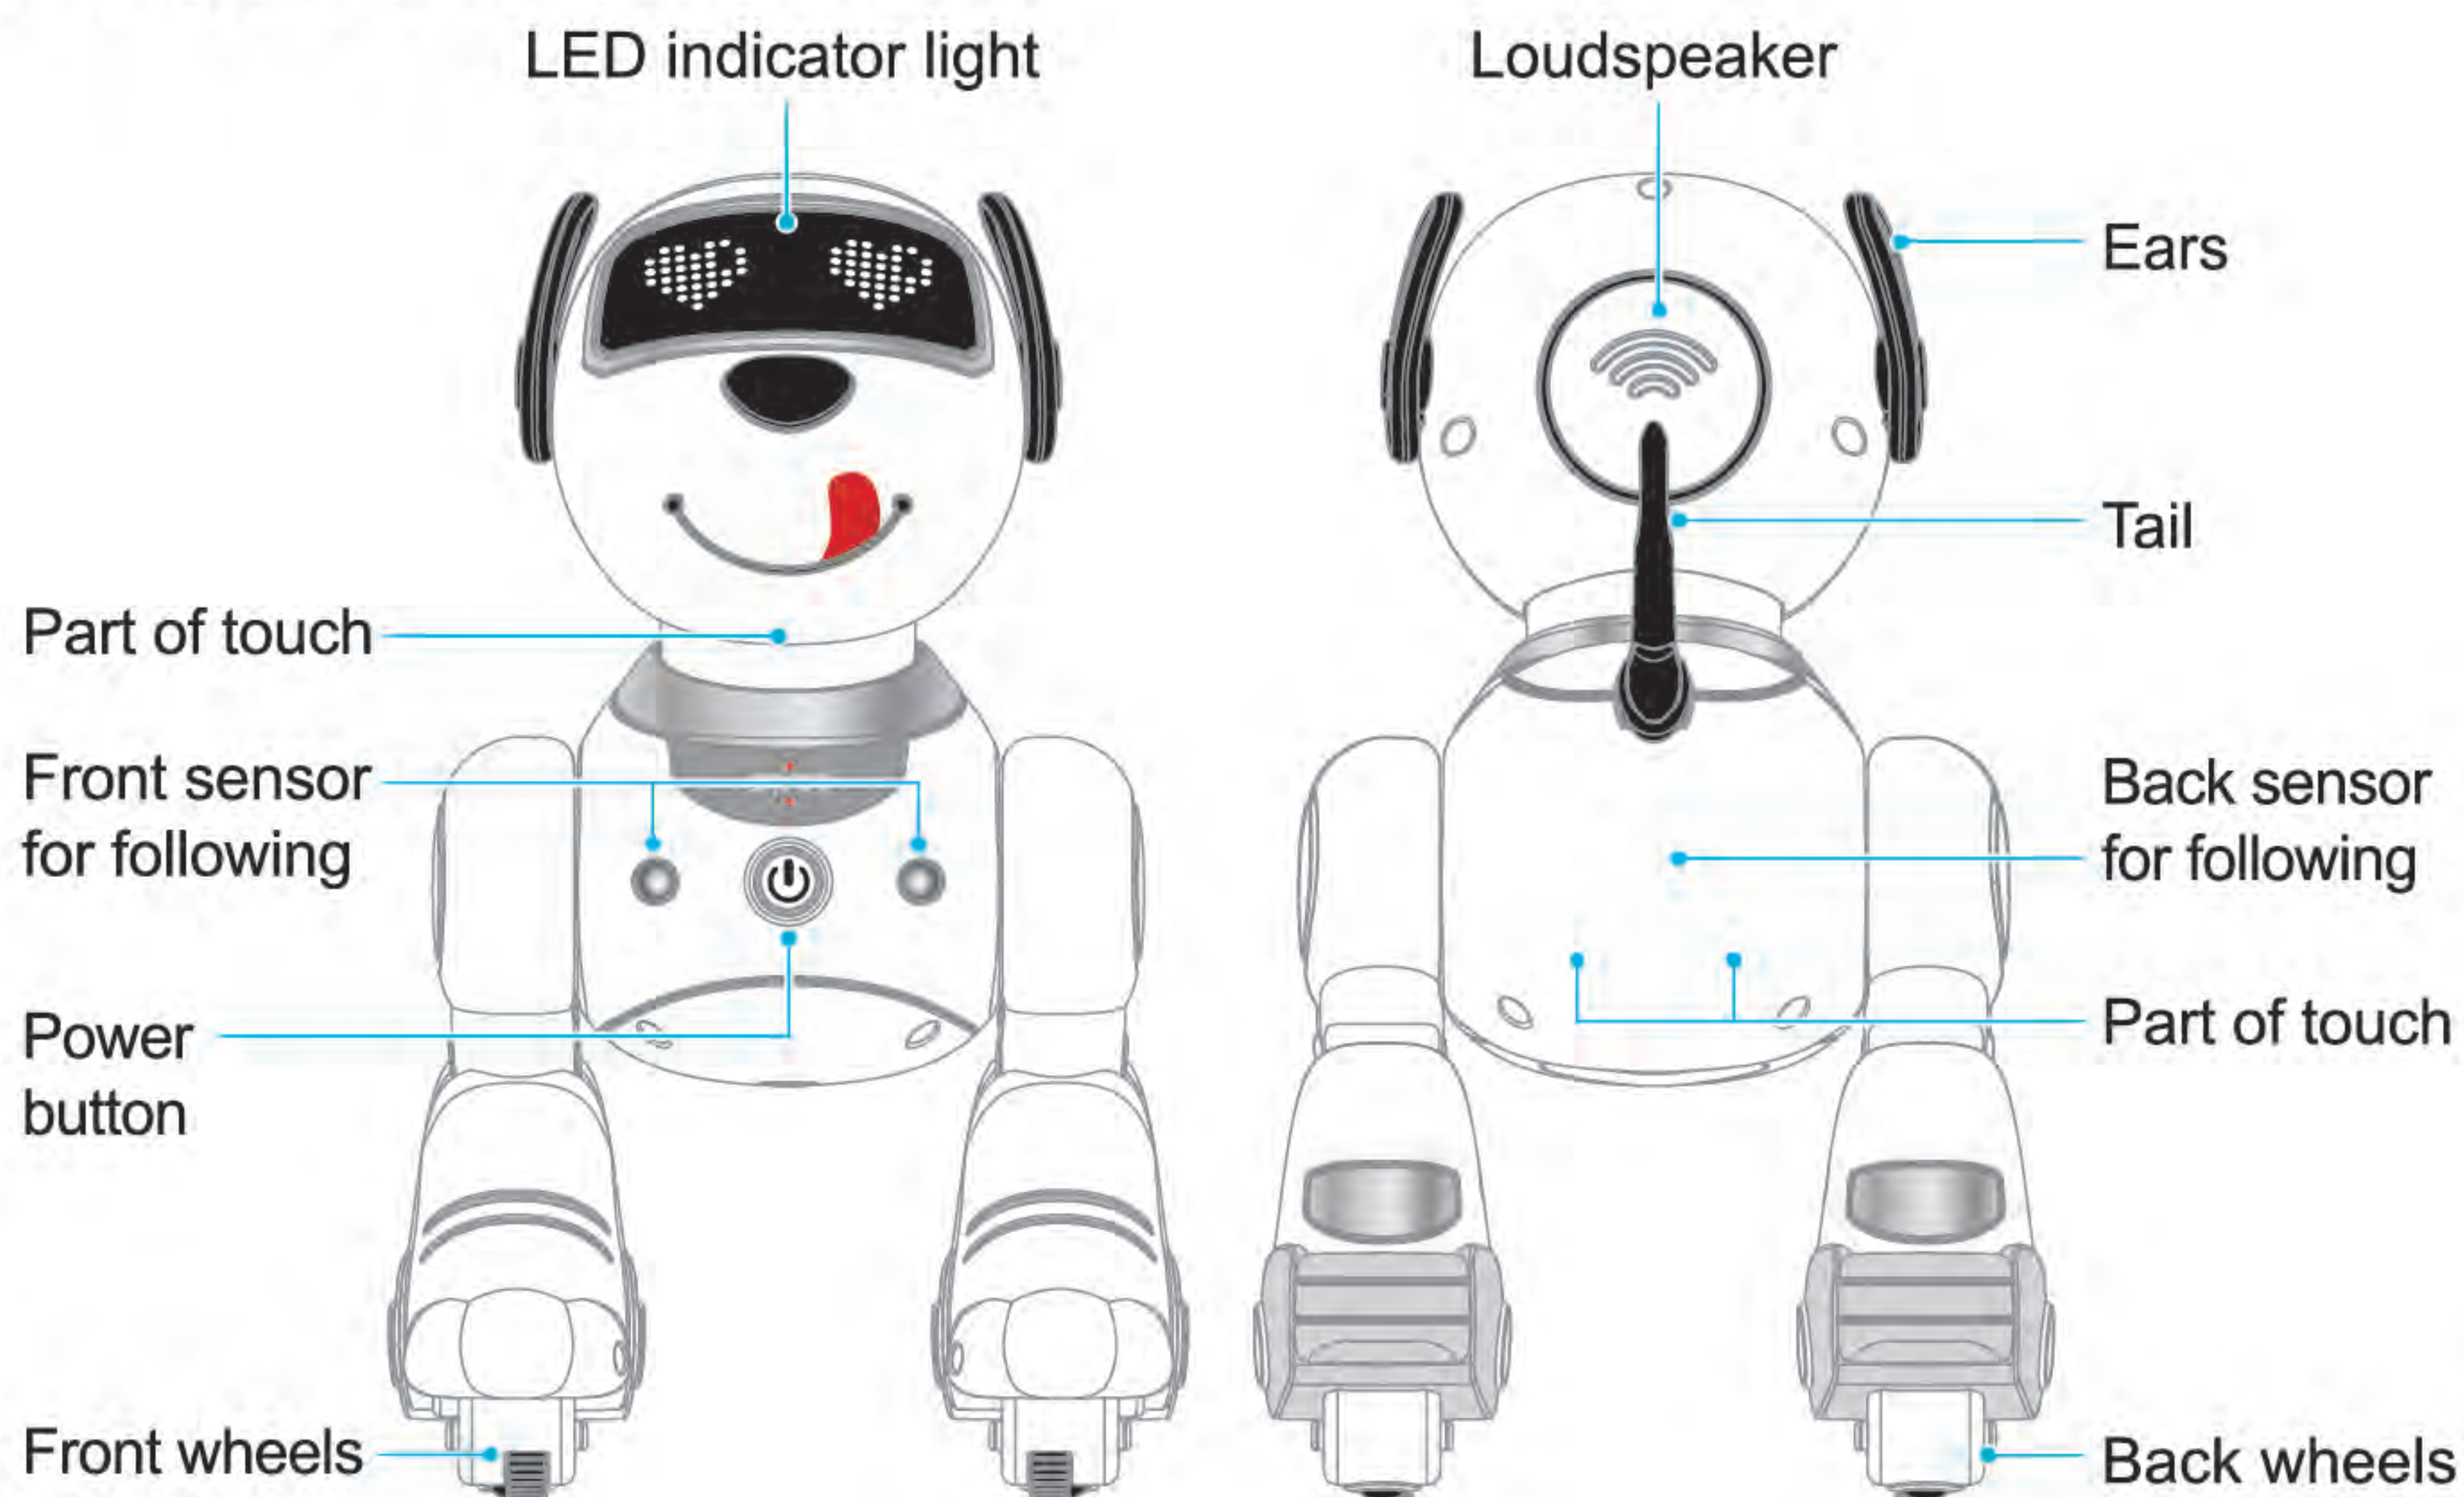 

## 3 Operating Instructions


 
1. Power-On: Press the switch button "  " on the robot, then it will enter the standby mode after playing a voice introduction and performing a series of motions.
2. Standby / Sleep Mode: When the standby mode is enabled, voice instructions will be played every 5 seconds for 5 times, with no motions or other sounds. After the 6th 5-second slot, the robot dog will play a voice instruction and fall into sleep mode. (Once it is in sleep mode, it can only be waked by rebooting. )
3. Power-Off: Press the power switch button "  " on the robot dog to power it off.


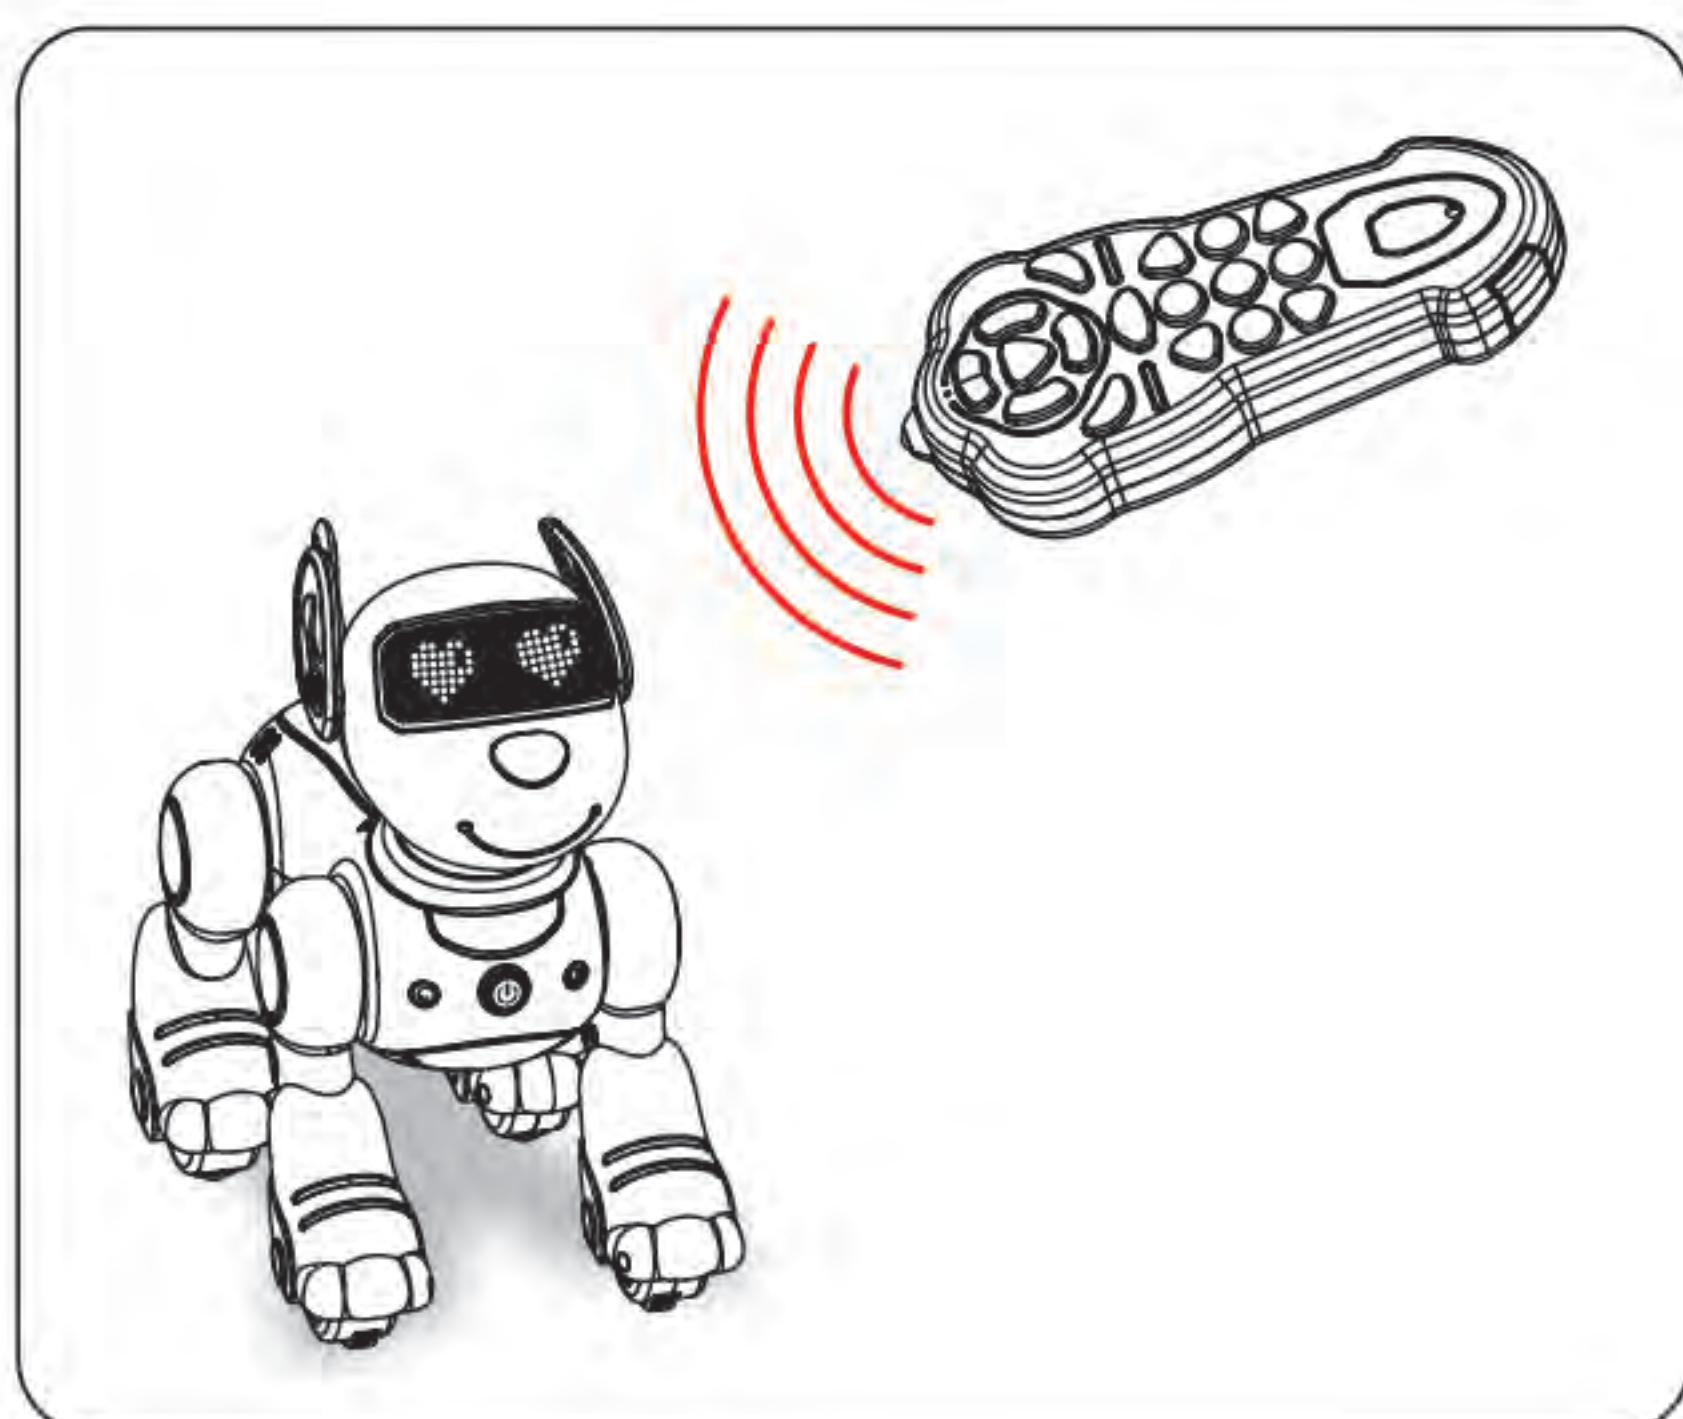




### Notice:



1. In order to achieve the best results in voice conversations, please aim the remote control directly at the robot dog within range (up to 3 meters or 9.84 feet), and use standard English. When the operation is not smooth, please recharge the robot dog.
2. For the best user experience, please avoid using the robot dog in noisy, distracting environments.
        
## (1). Intelligent dialogue

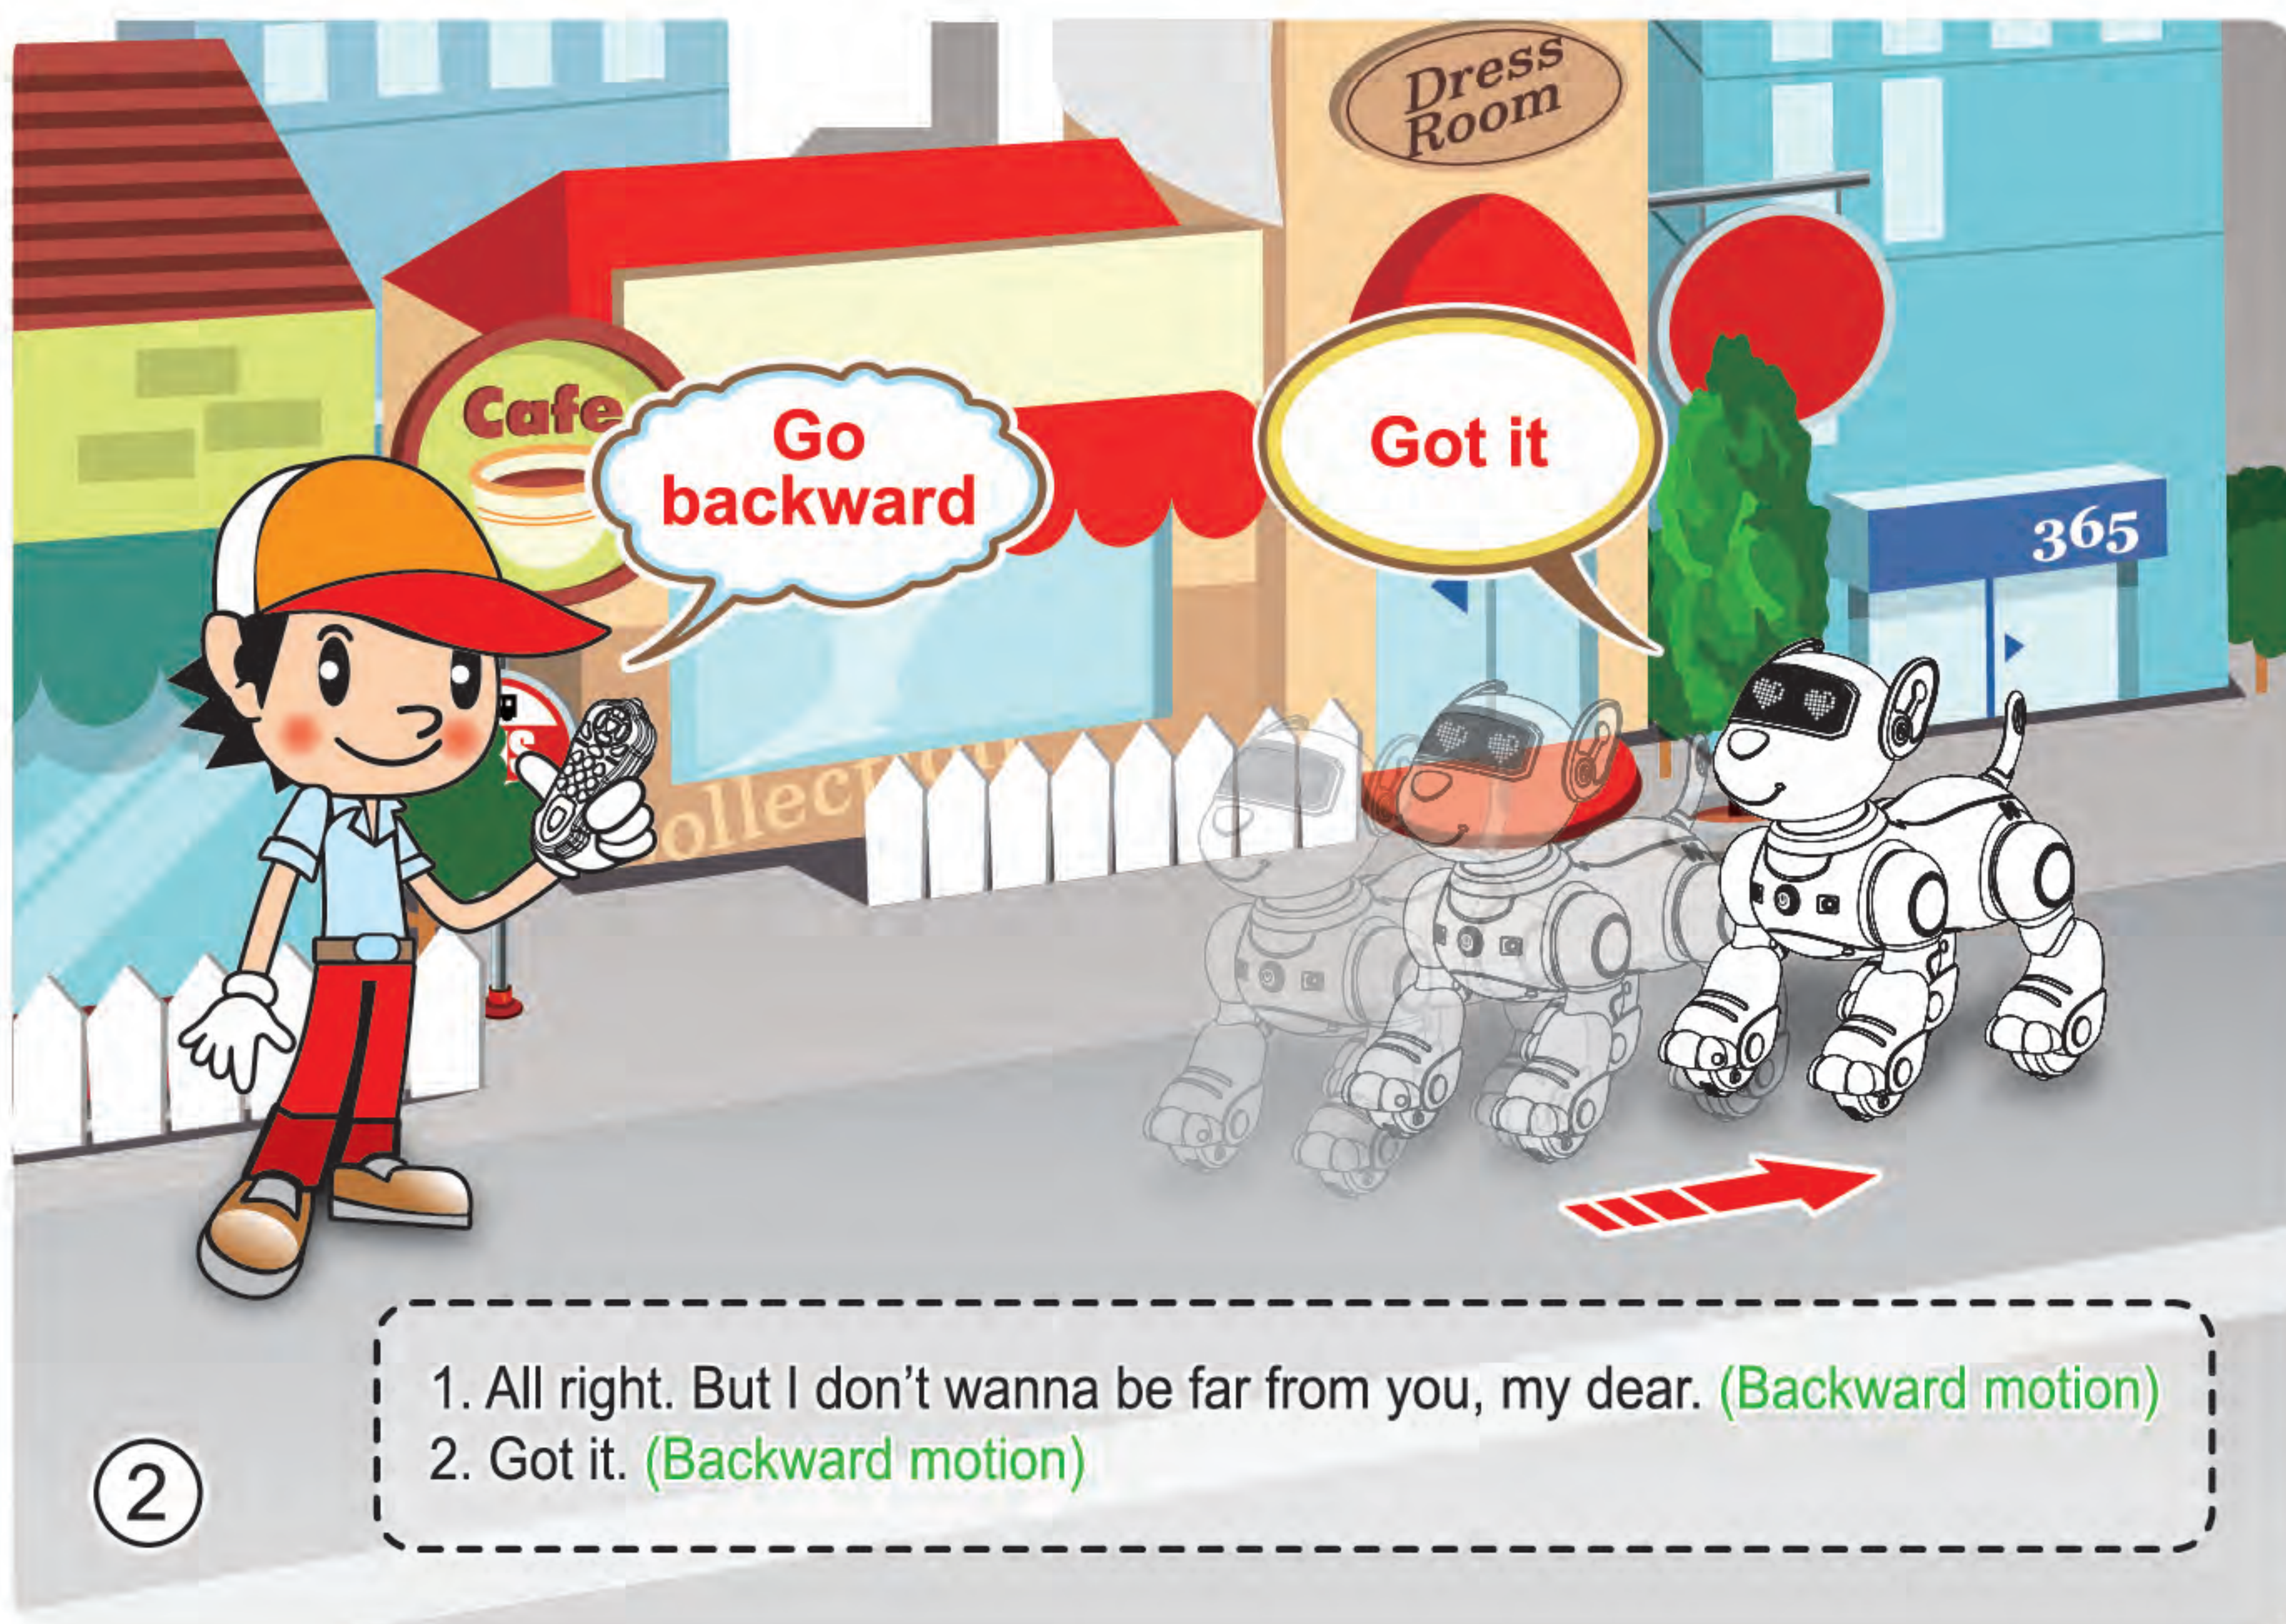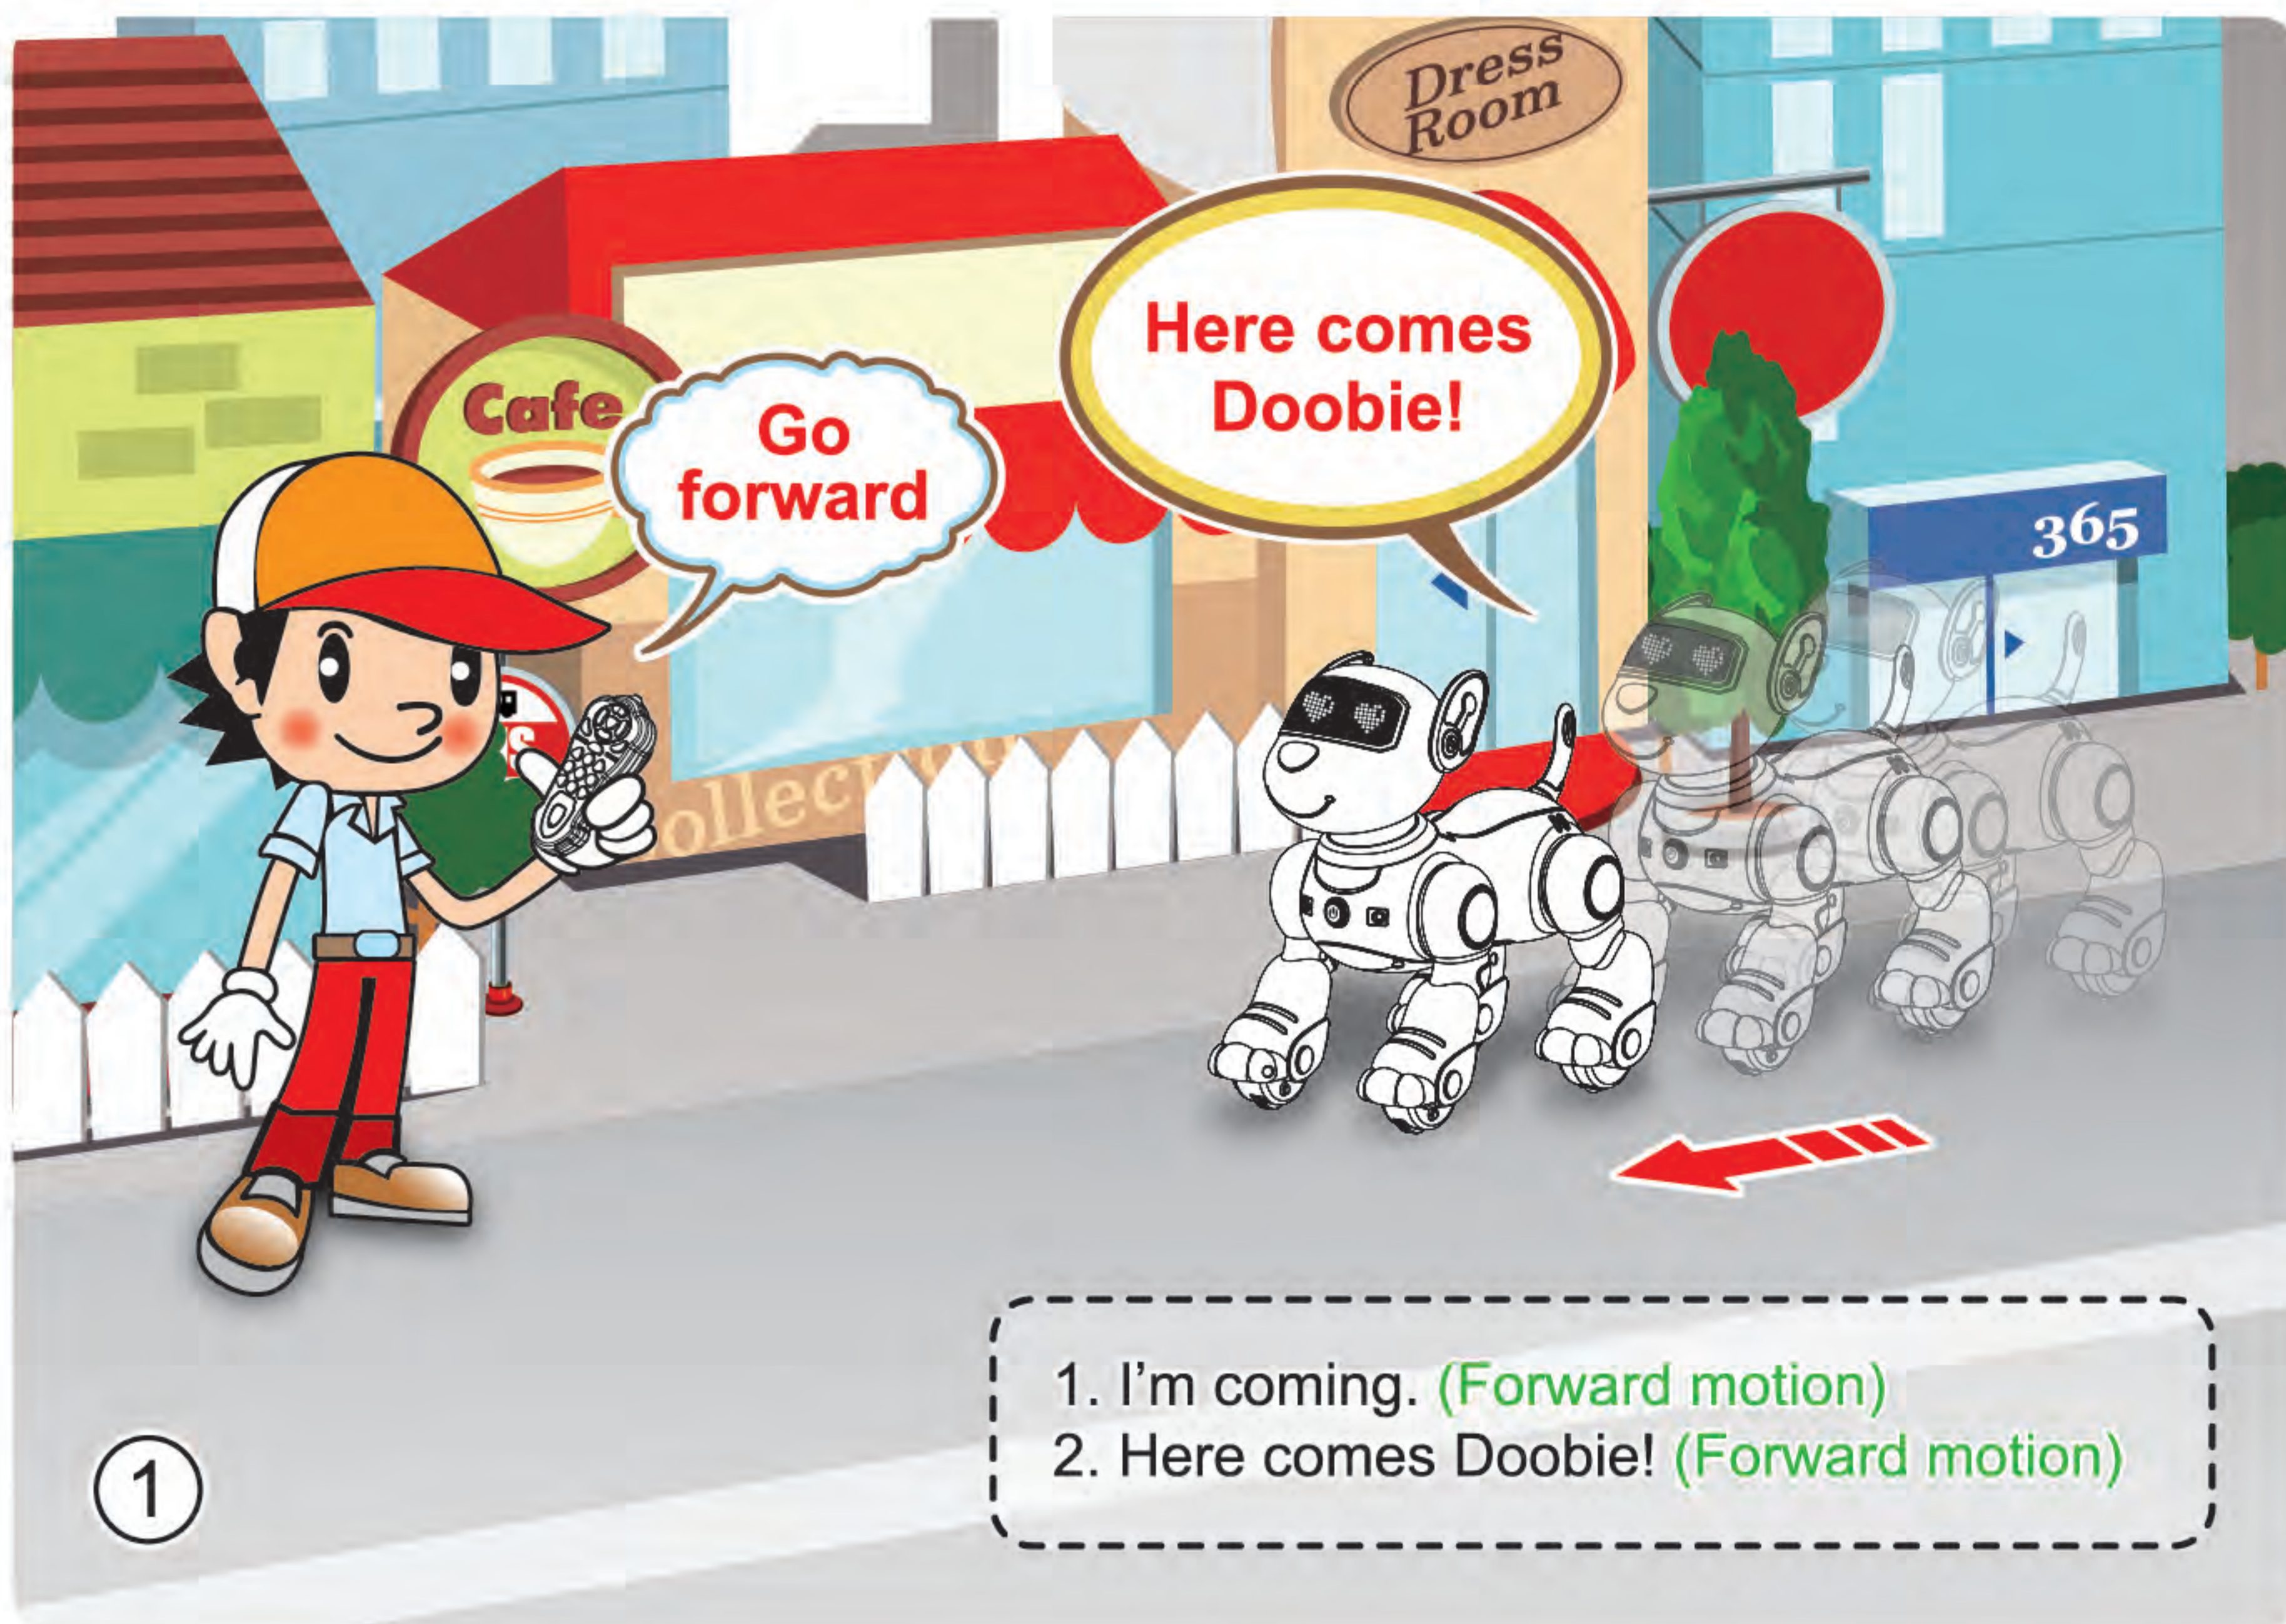

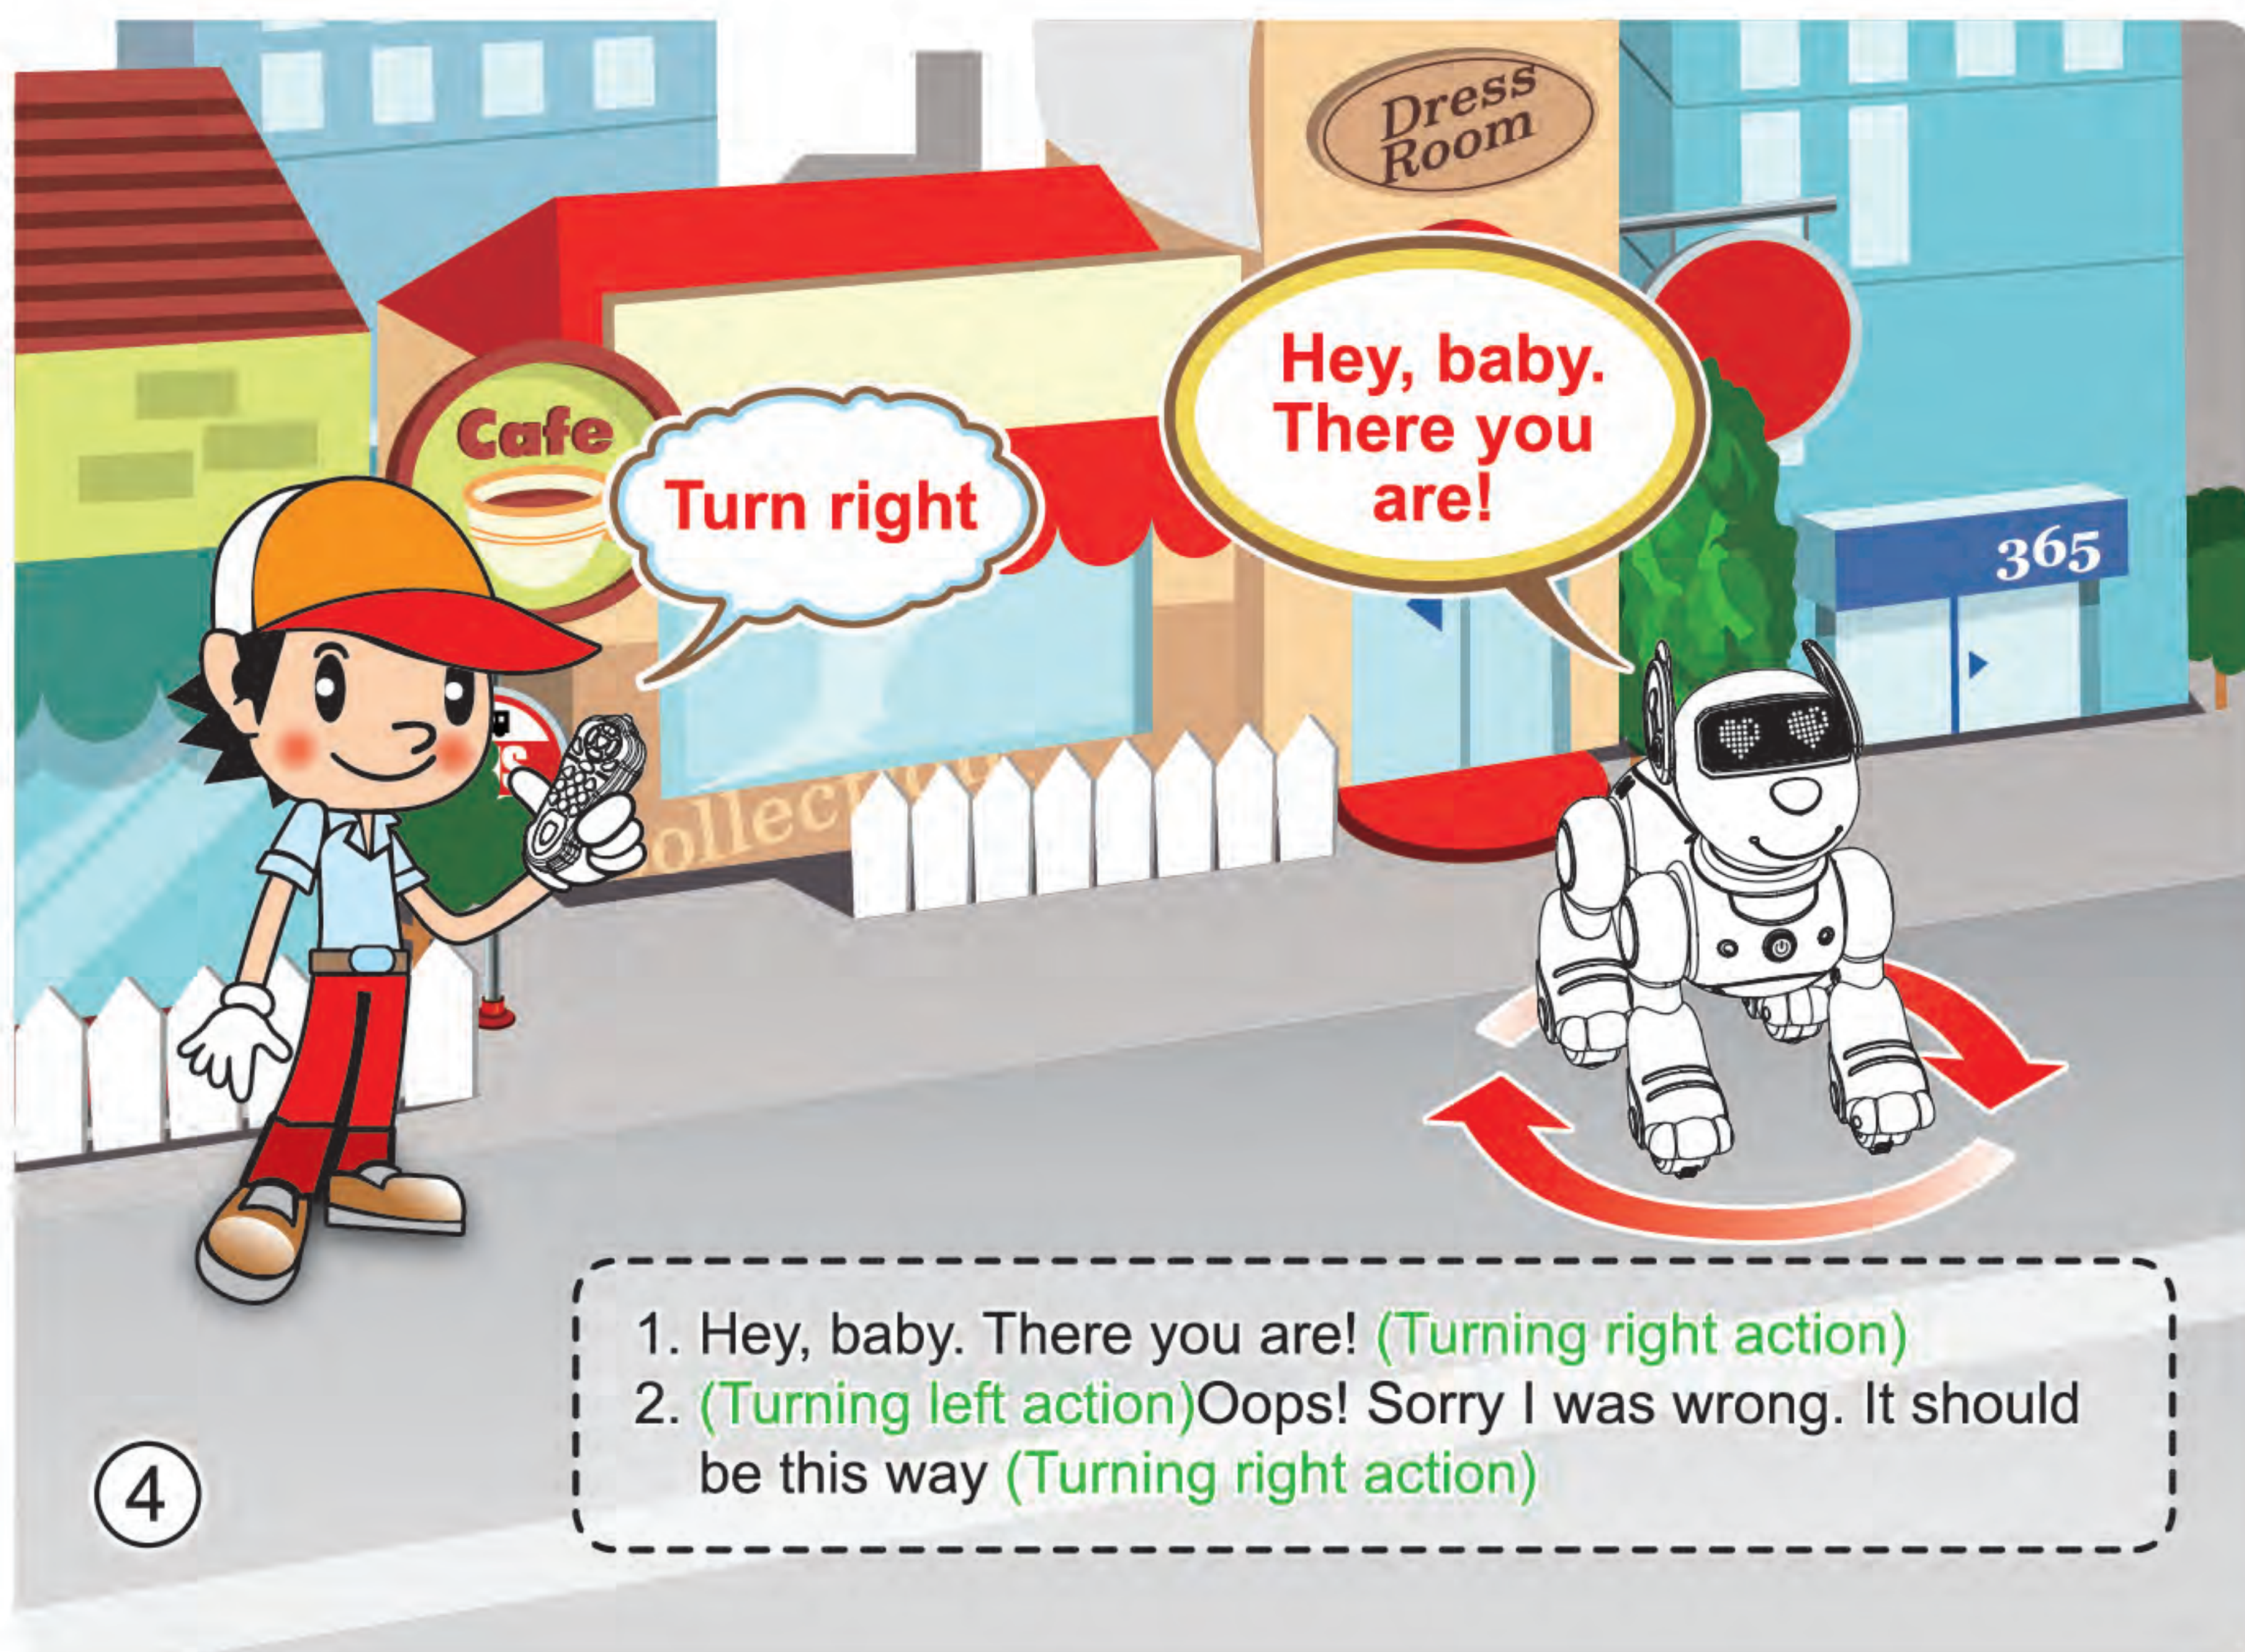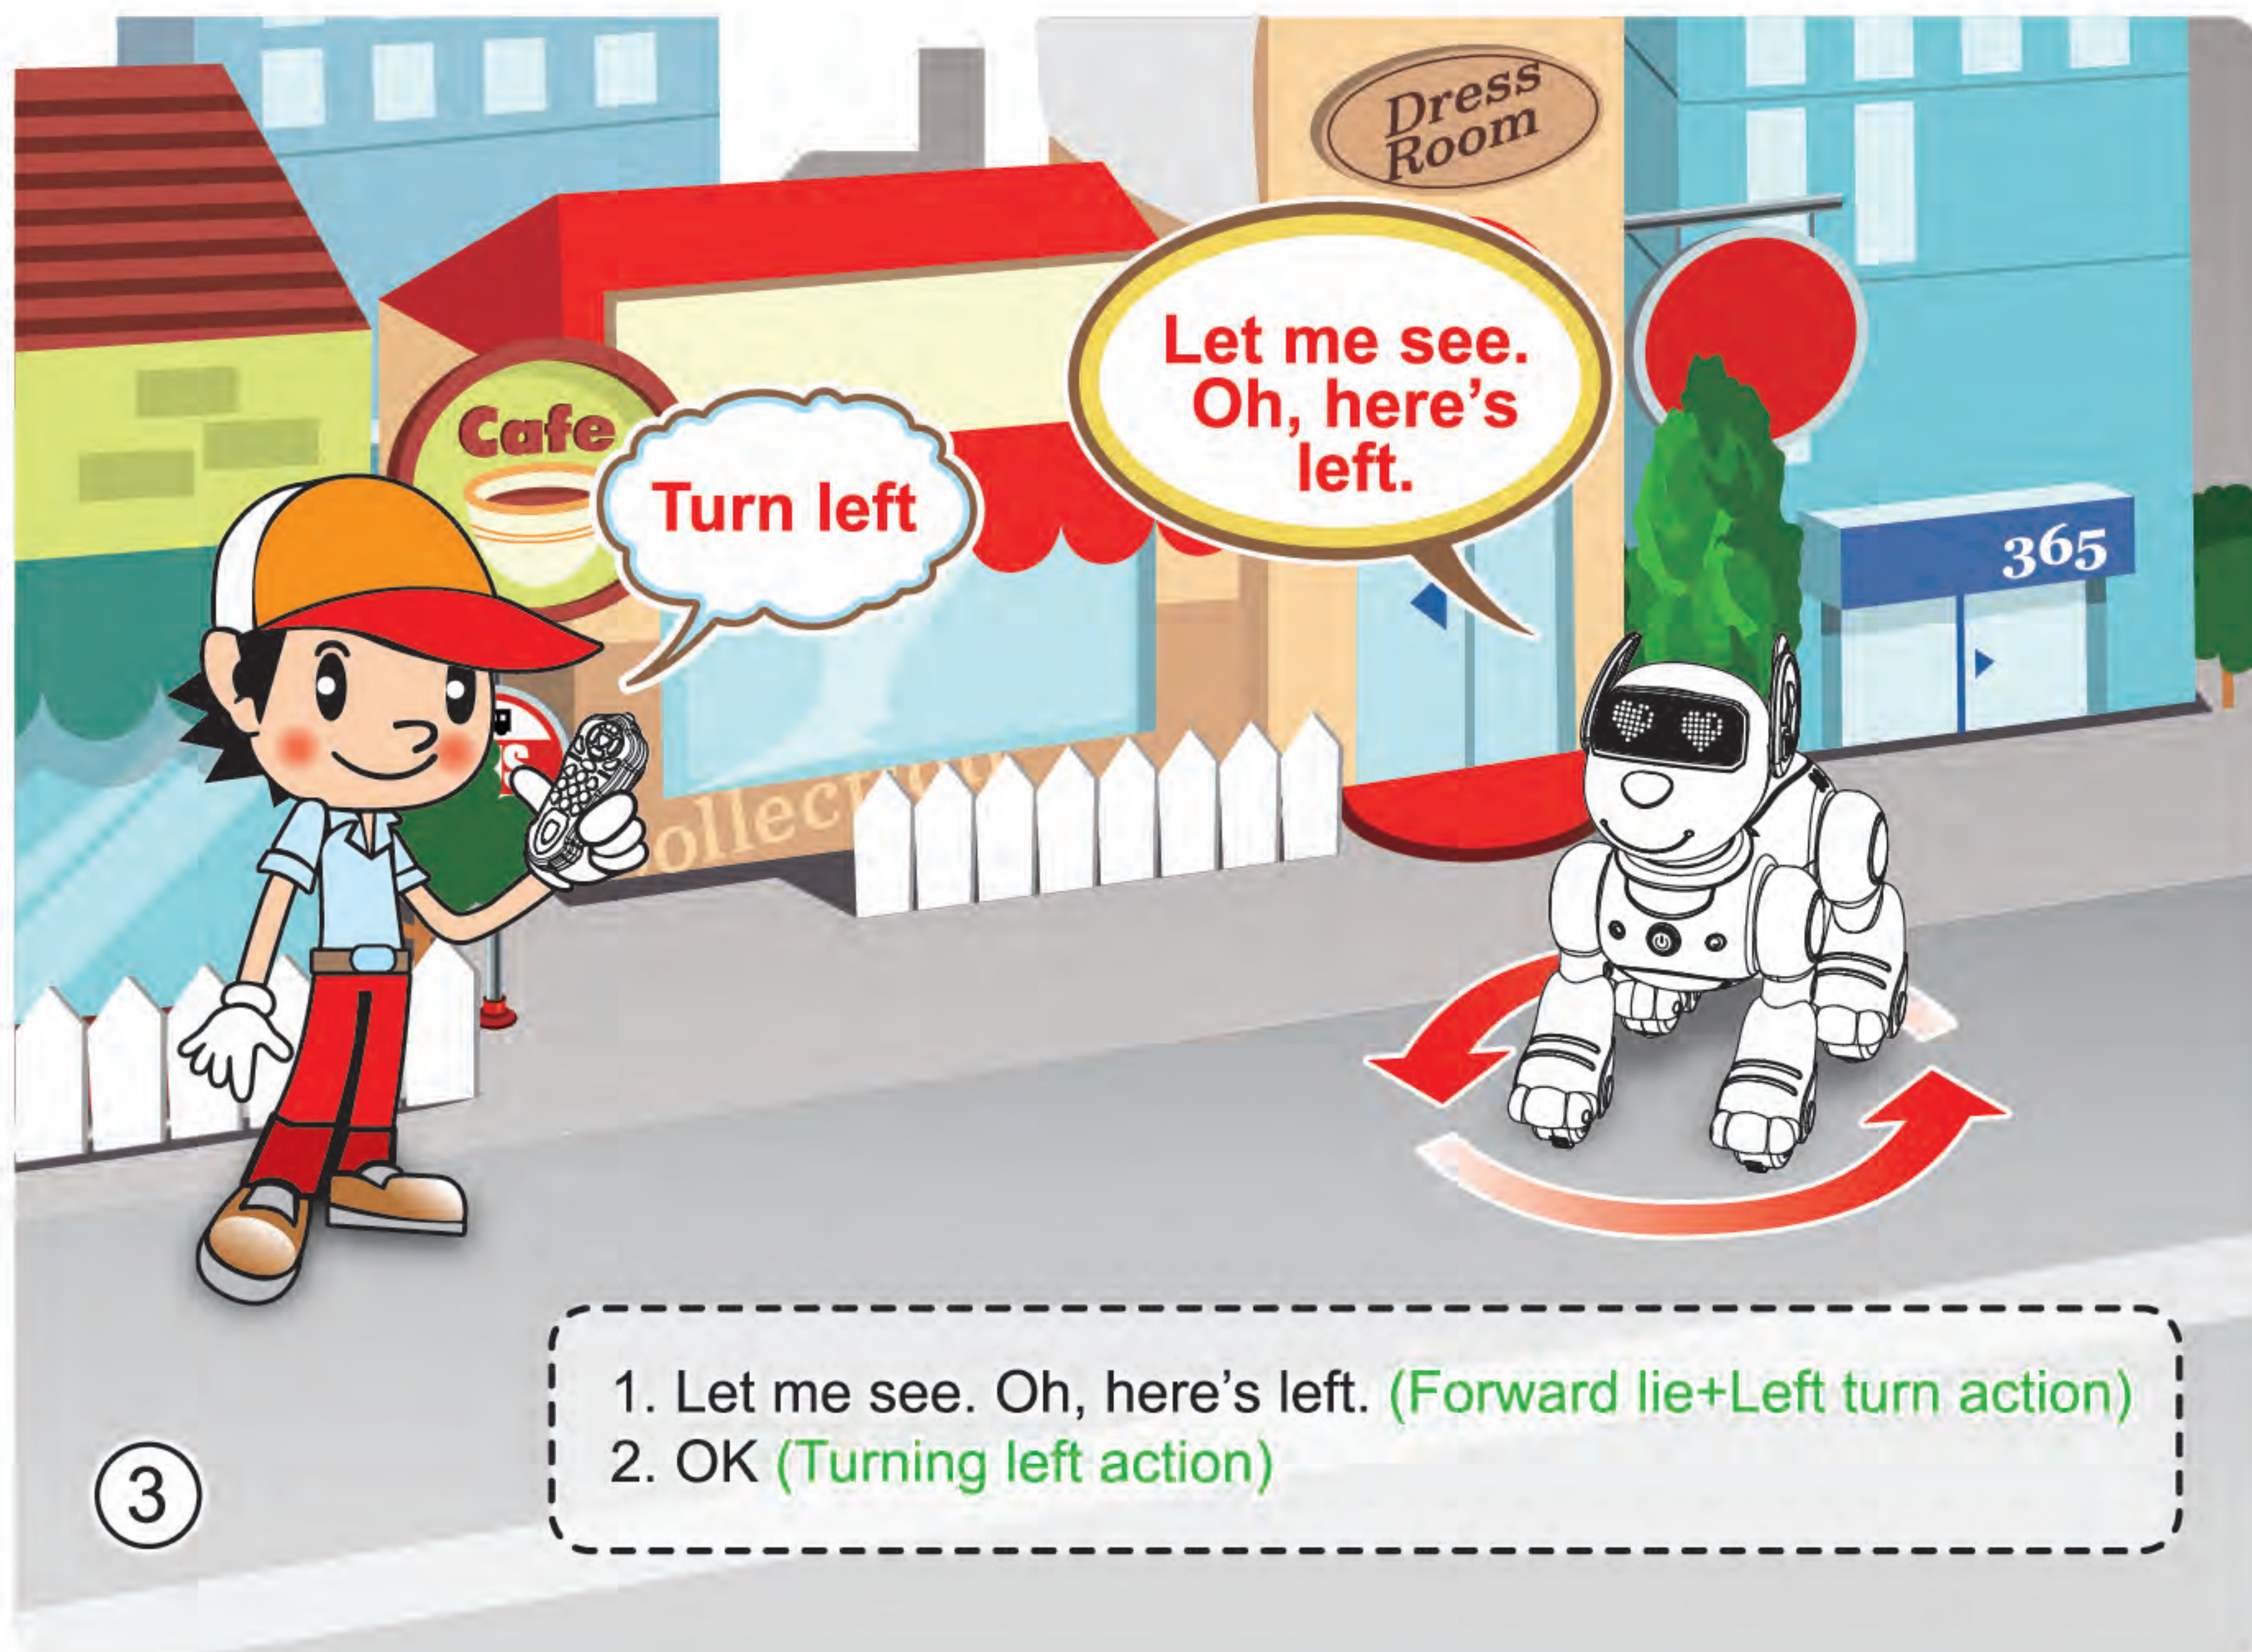

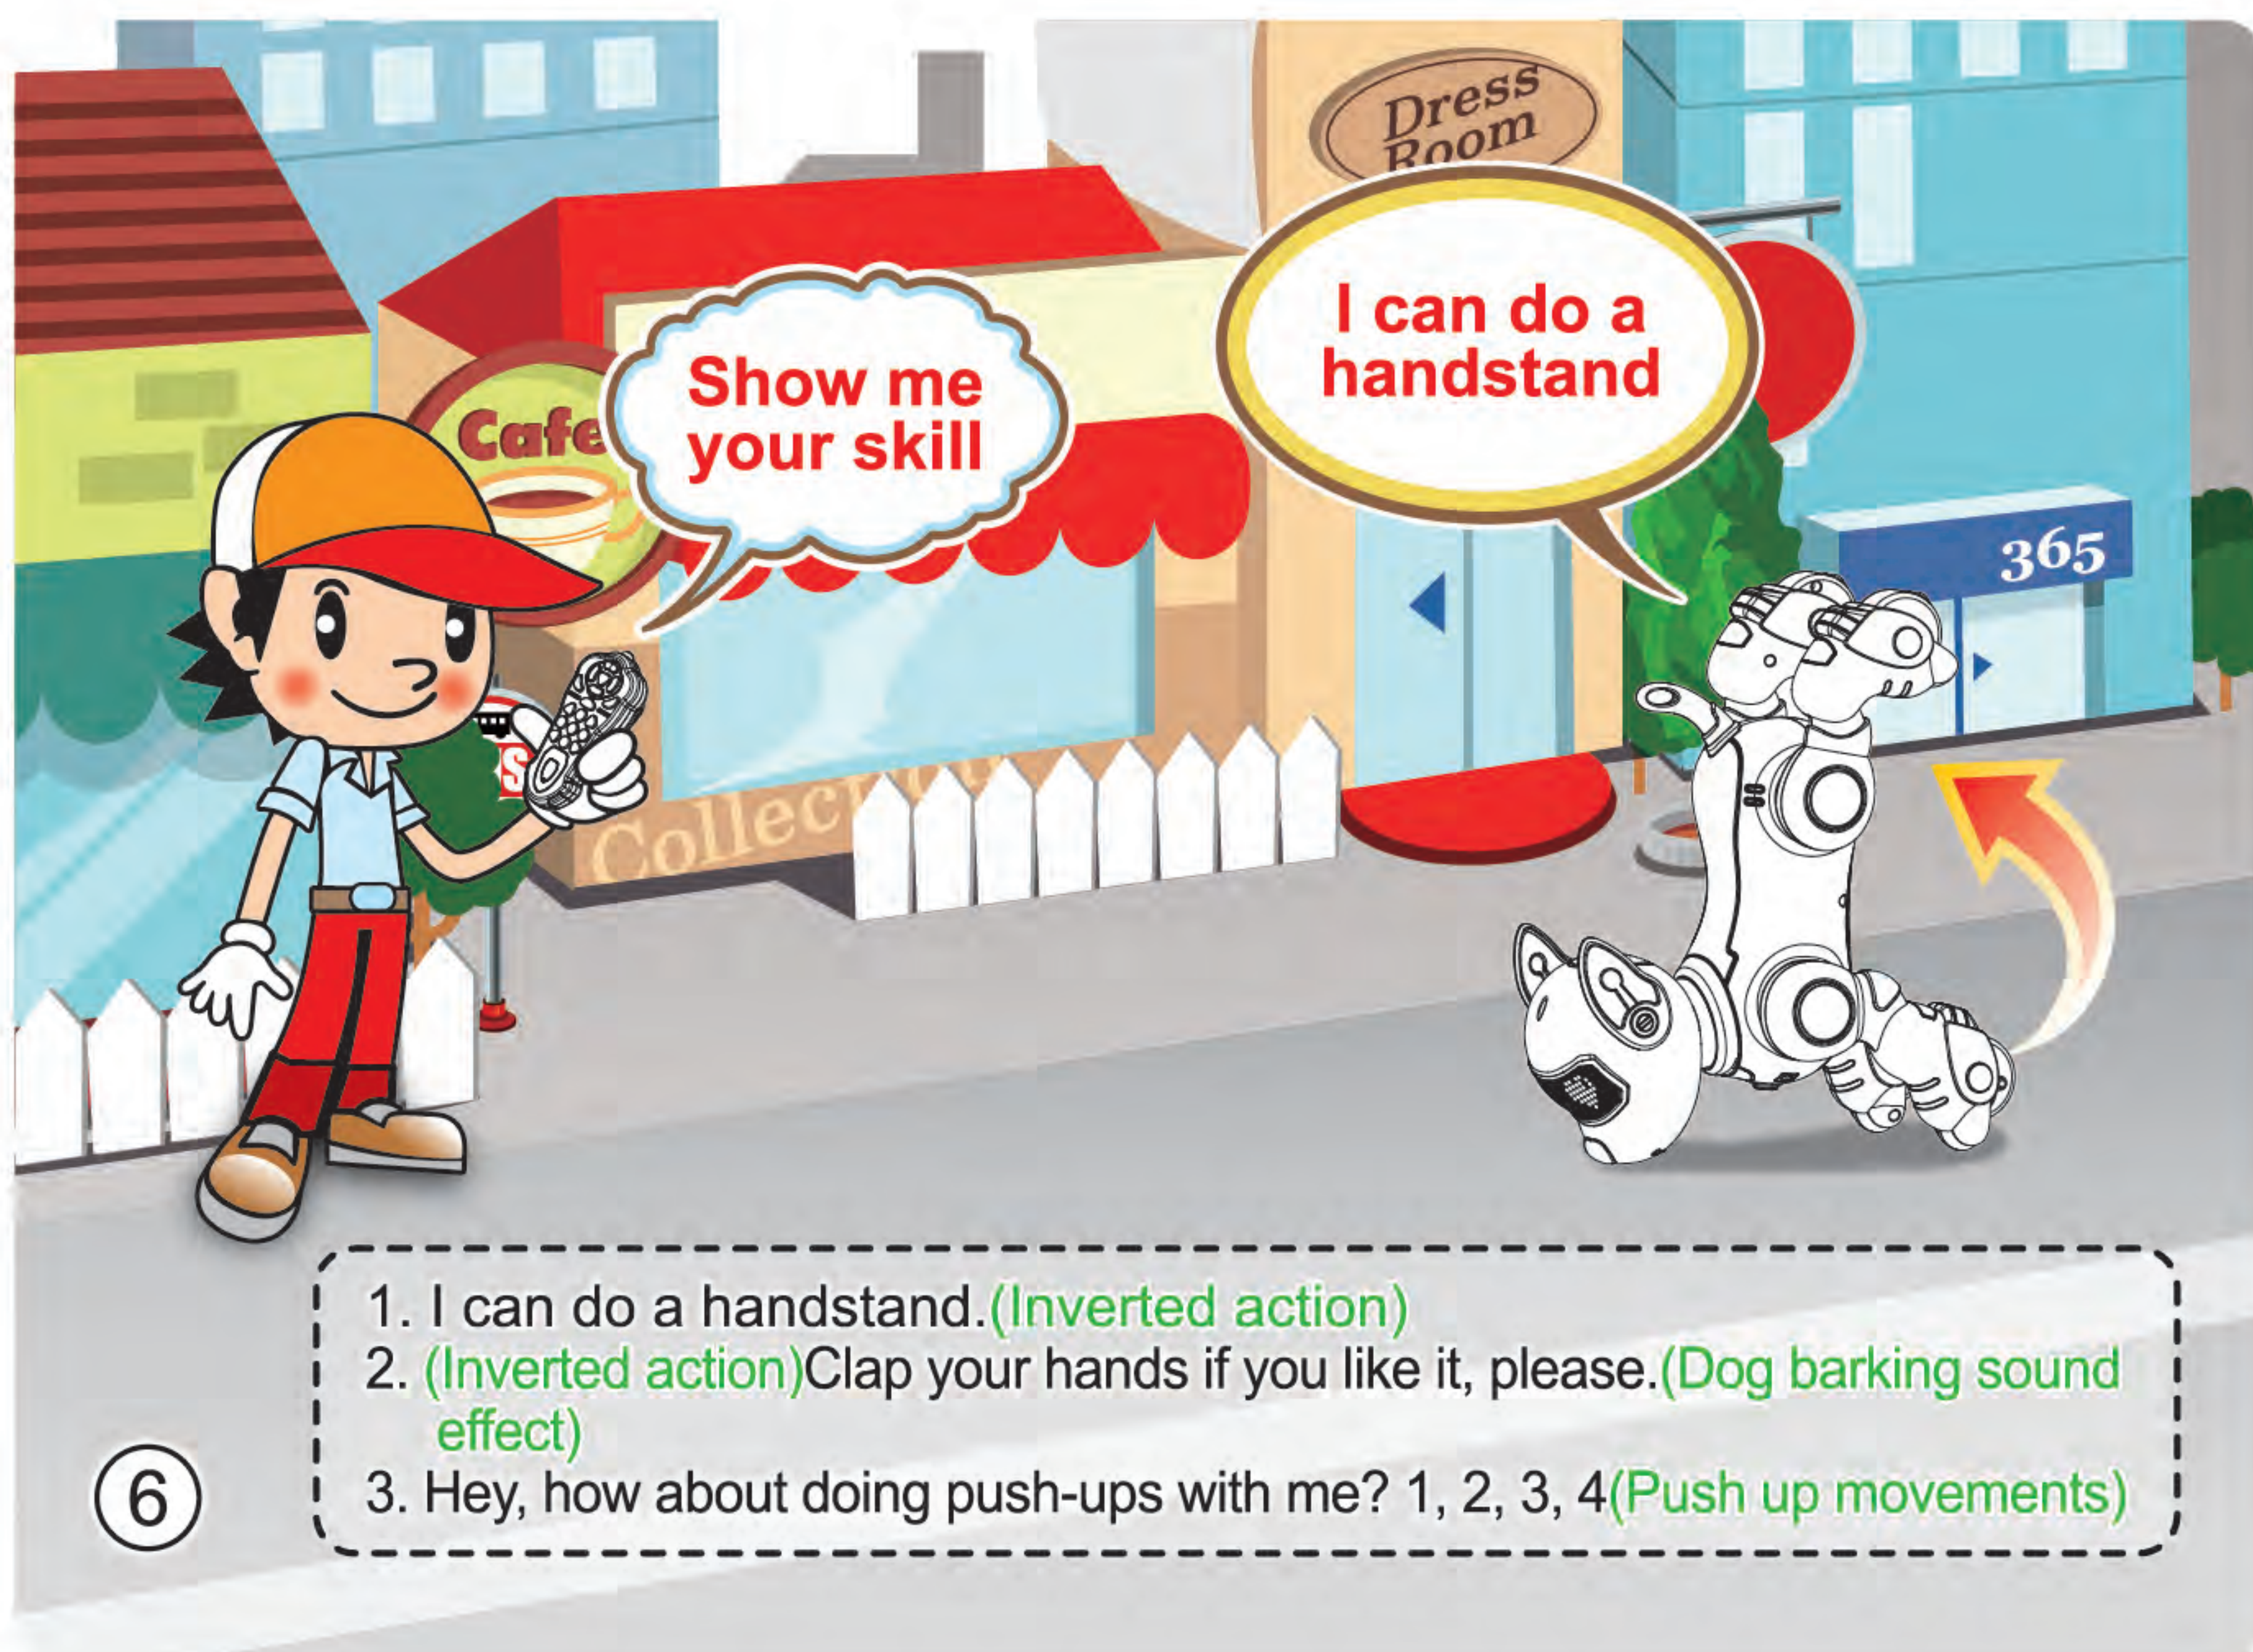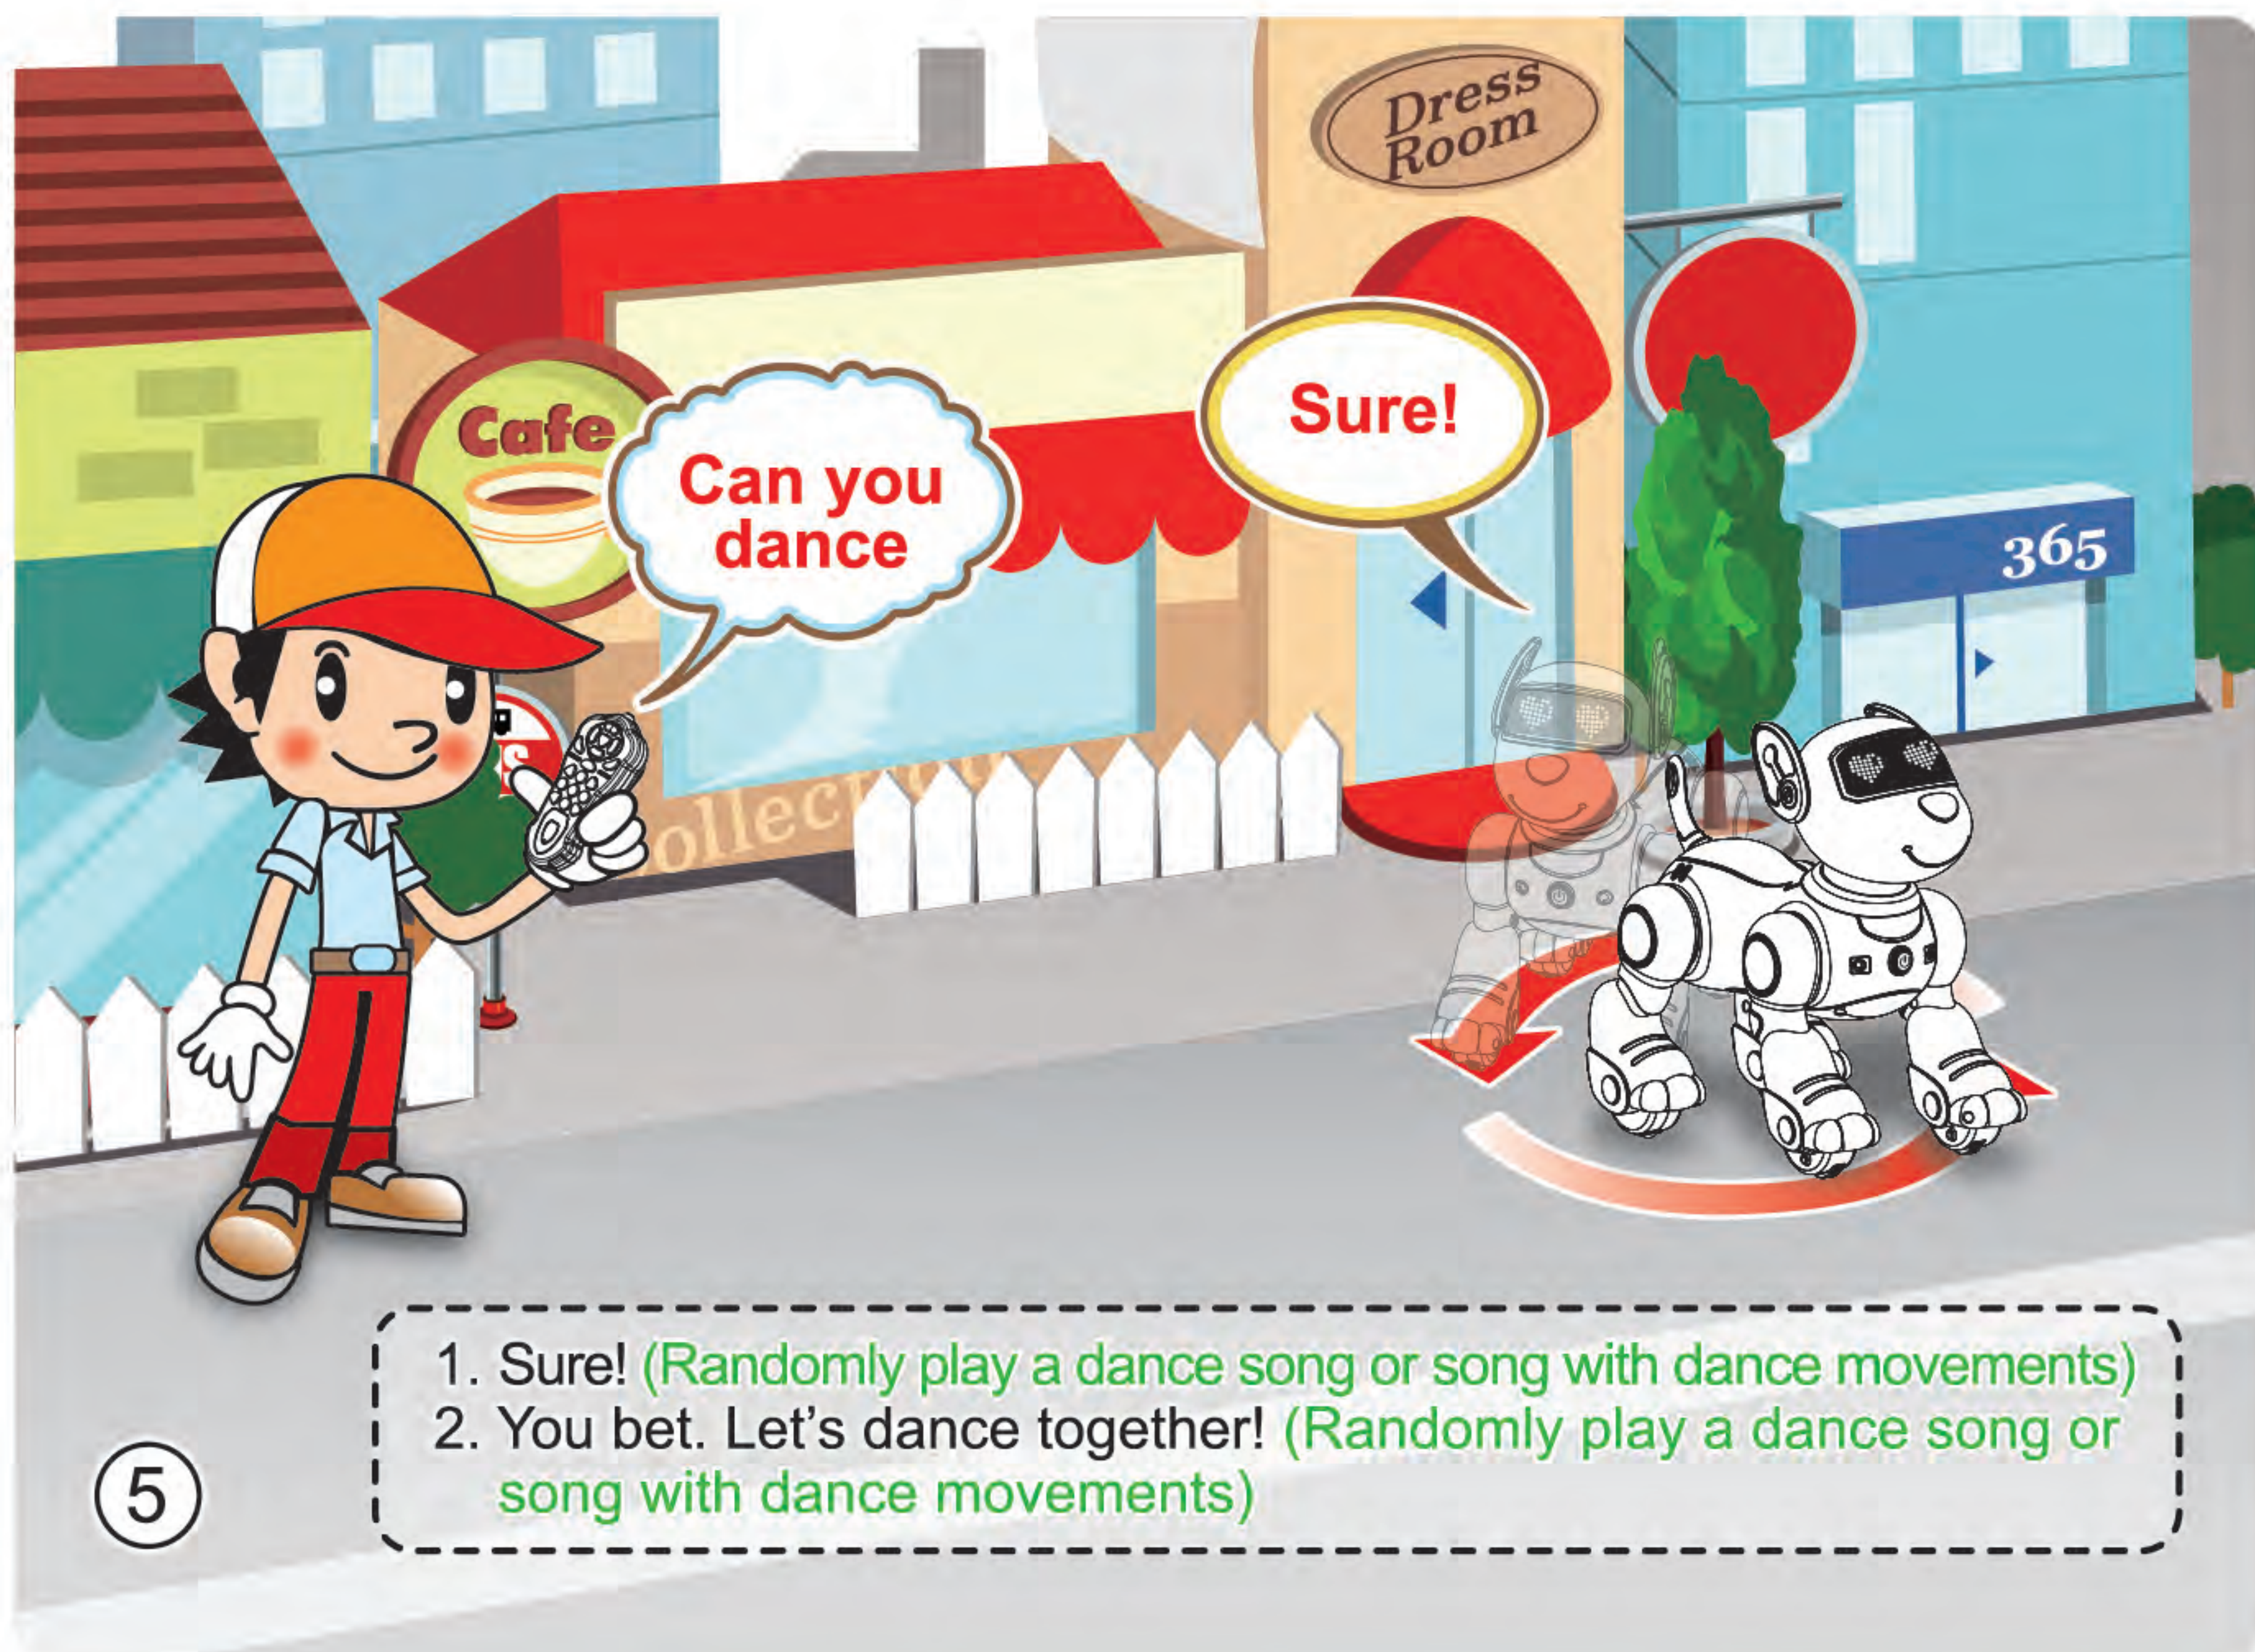

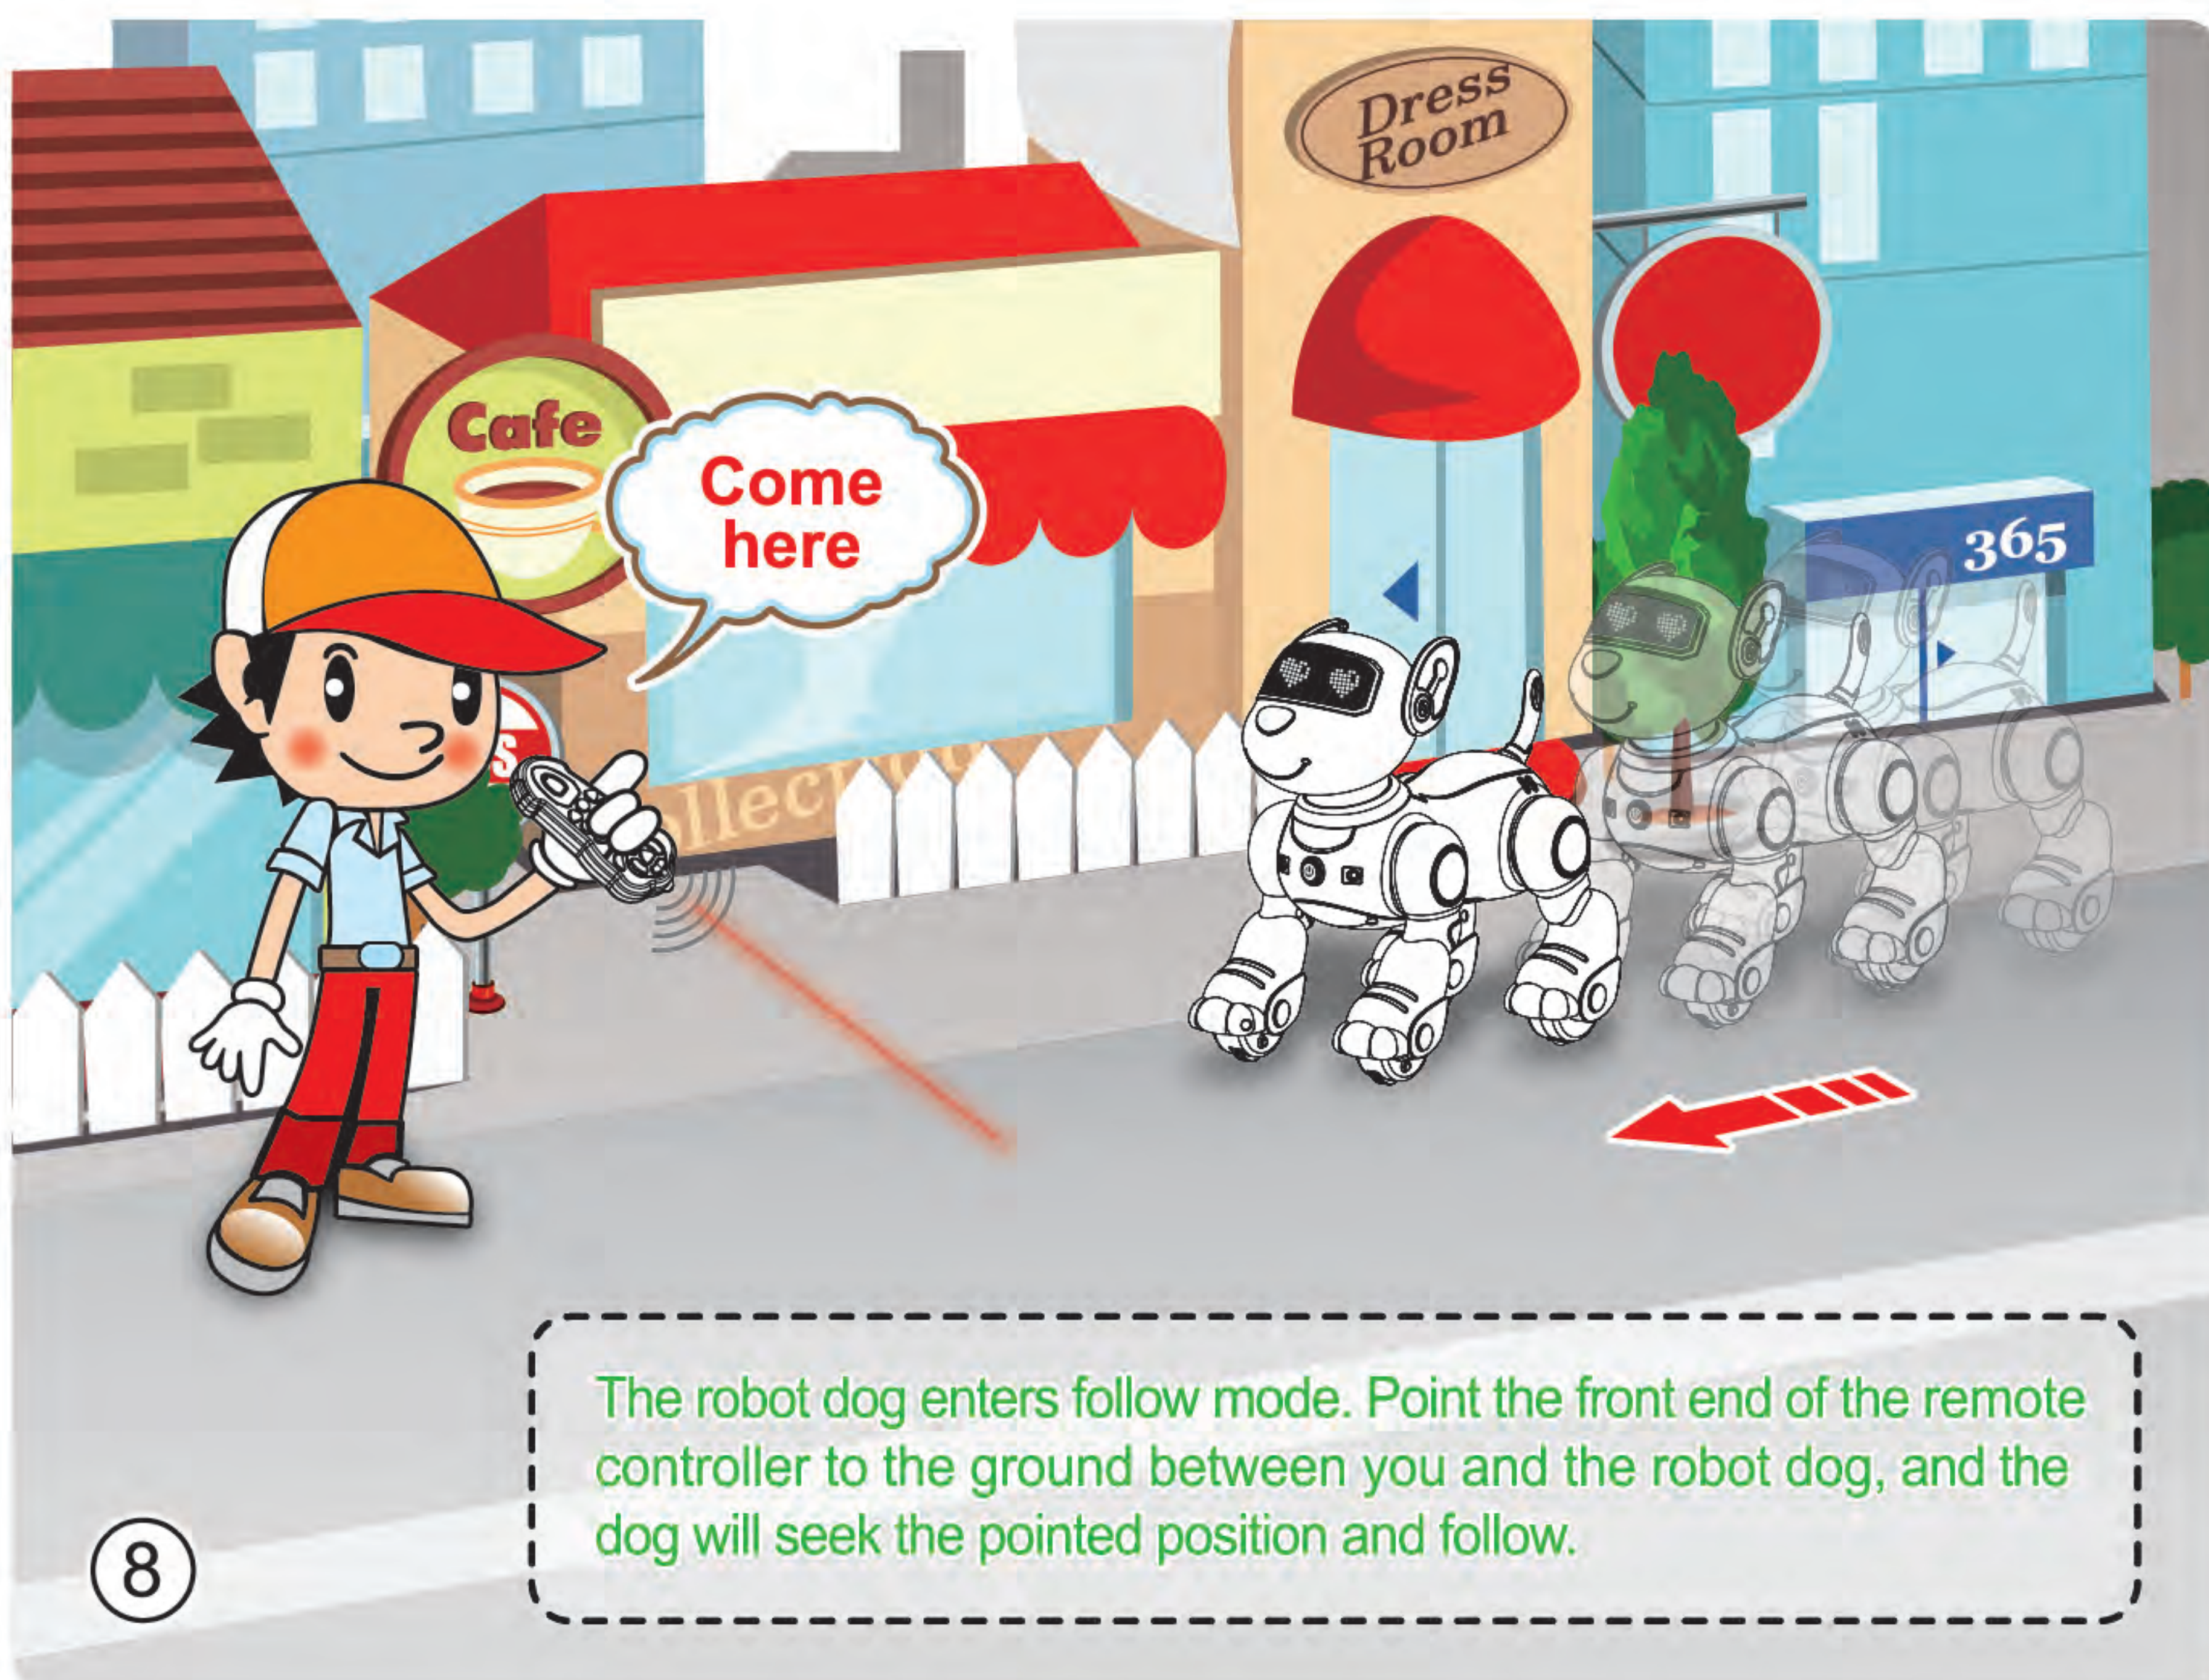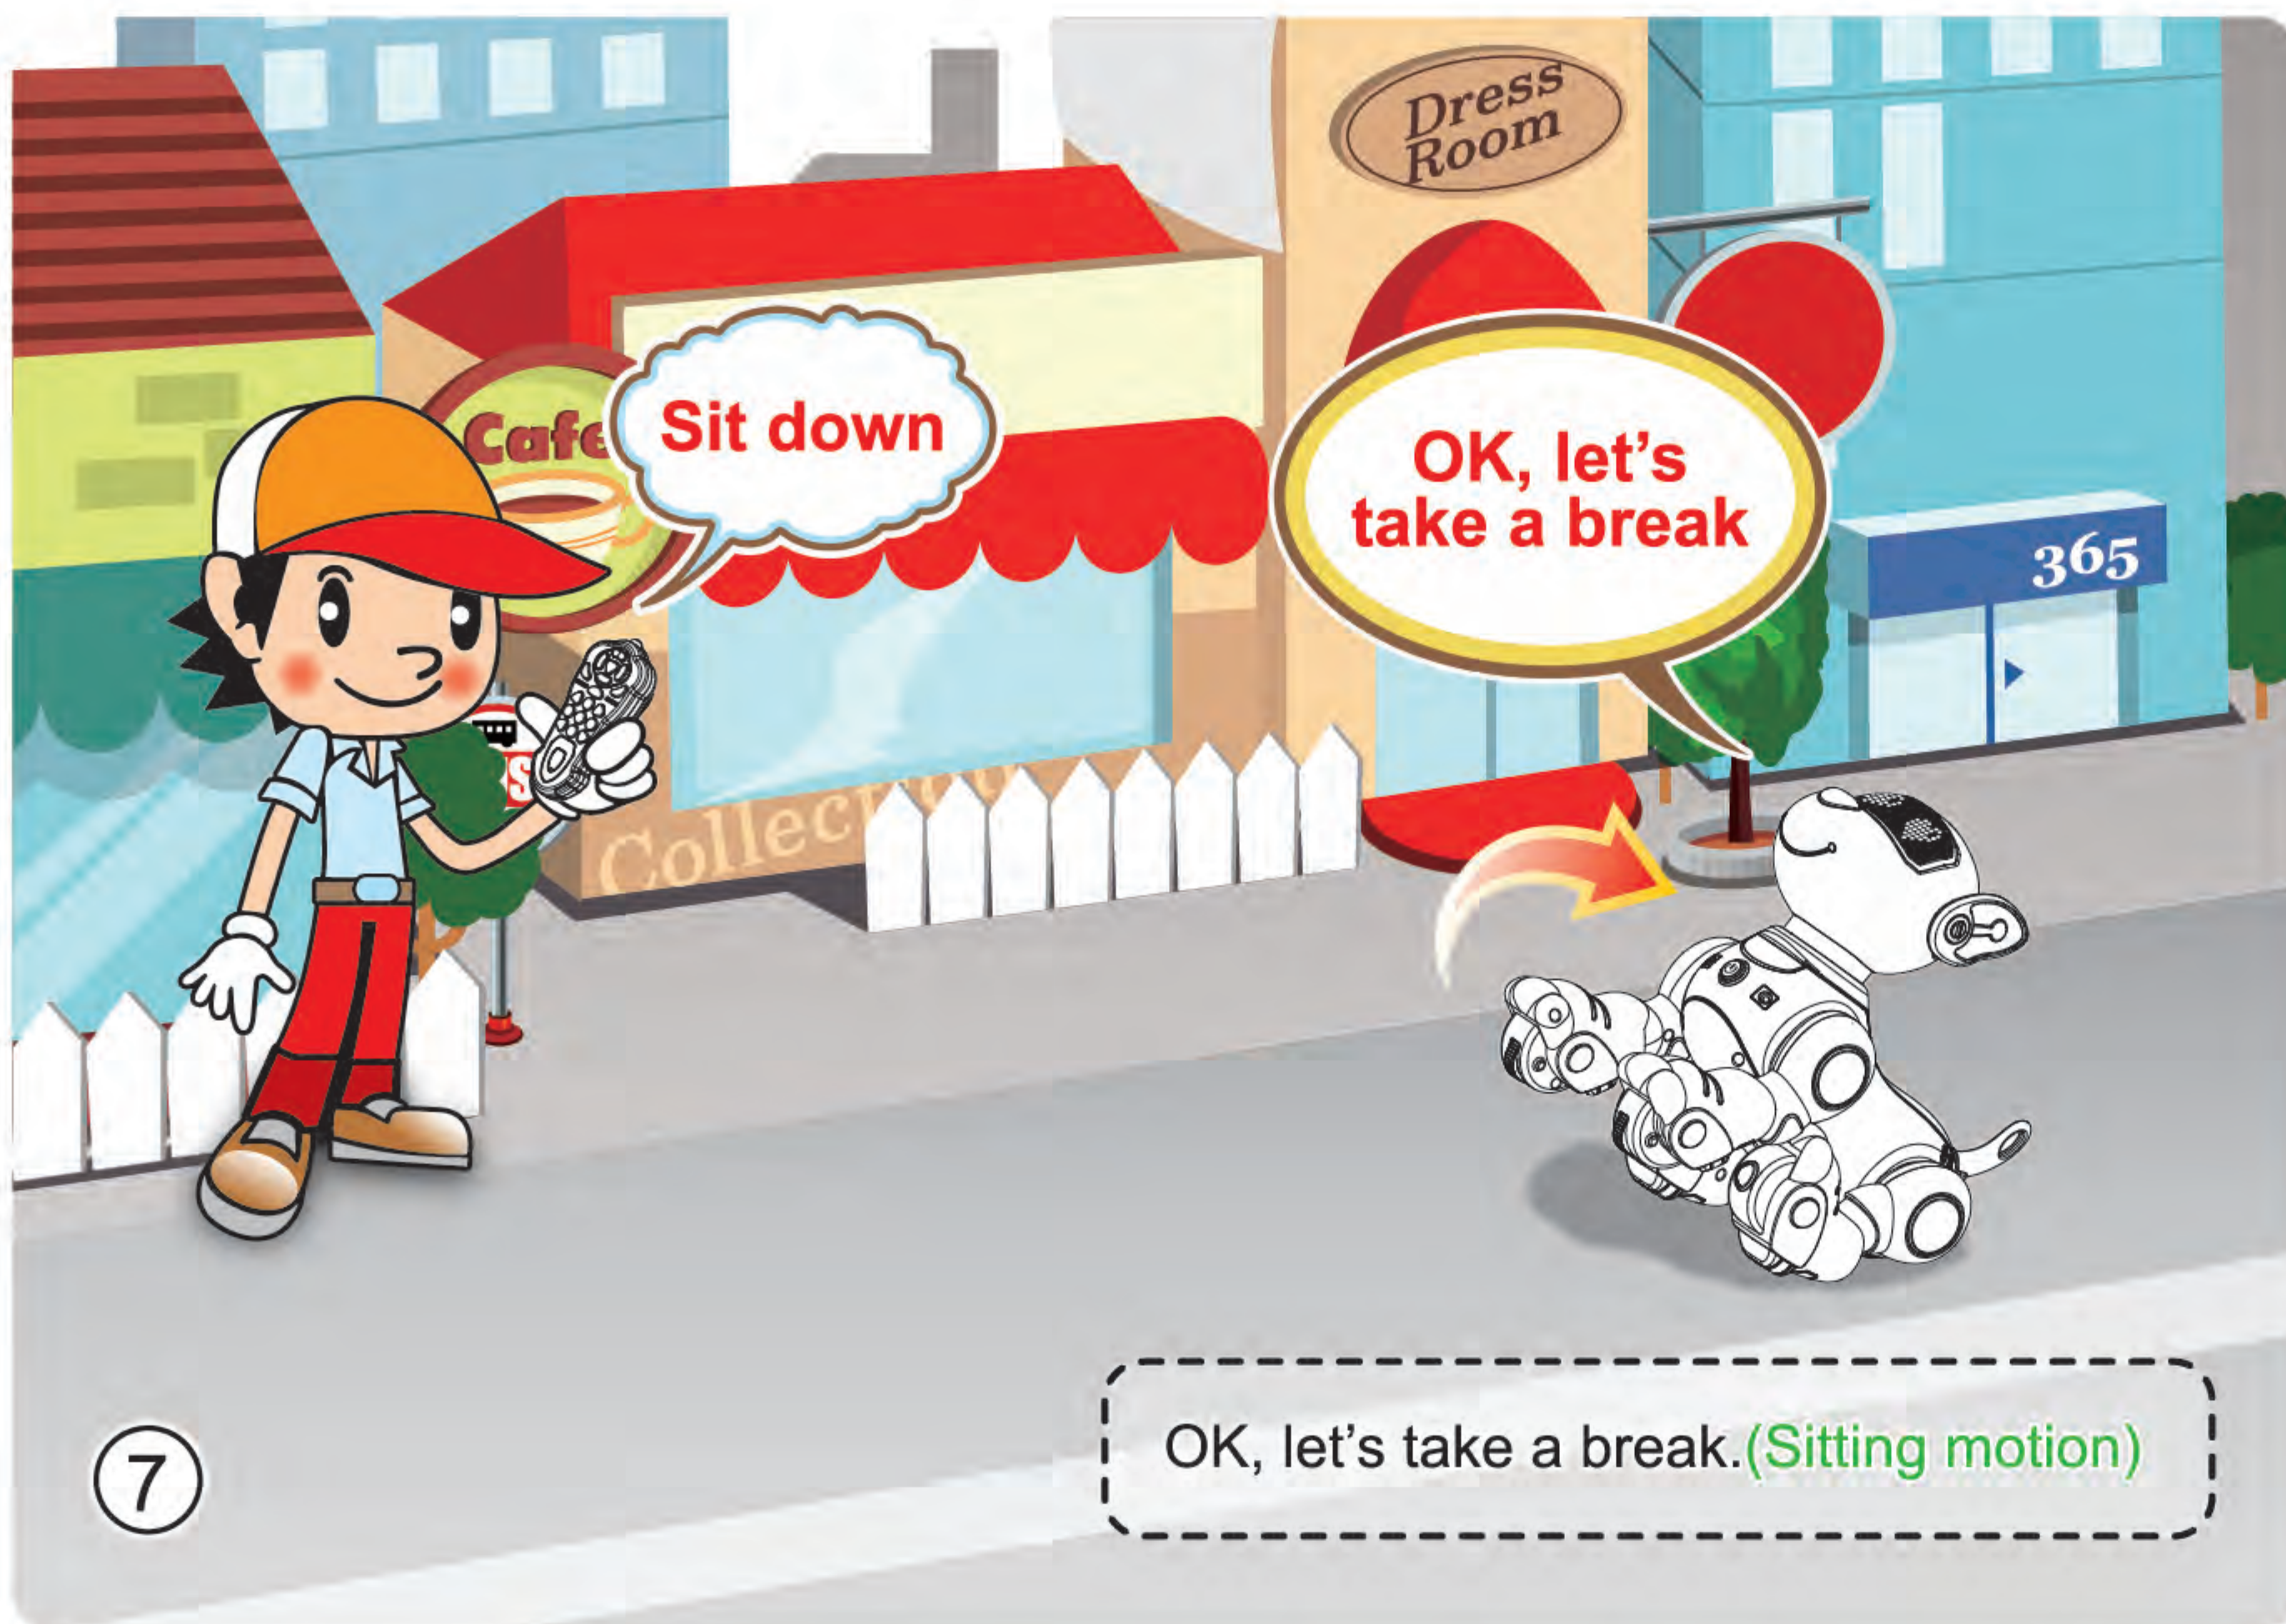

## (2). Intelligent function

### 1. Enter standby mode:

- ① I'm a brave puppy. (Inverted rolling motion)
- ② Are you playing hide-and-seek? I know where you are!  
(Forward action+Circle action+Forward)
- ③ If you get into trouble, shout out loud for help! (Dog barking sound effect)
- ④ (Dog barking sound effect) Hello! Anybody here? (Turn left circle action)

### 2. Enter sleep mode:

Nobody here. I'll go to sleep then. See you later!~(Snoring sound effect)

 
### 3. Low battery alert:

Alarm when the battery is low, the yellow eye light quickly flashes, and the voice prompt: "Hello there, I'll run out of battery soon. Please help me recharge" (Repeat three times in a row, with an interval of 20 seconds)

## (3). Remote control operating instructions


### 1. Forward:

Press the button "" on the remote to make the robot dog move forward. Hold down the button "" to keep it moving forward.

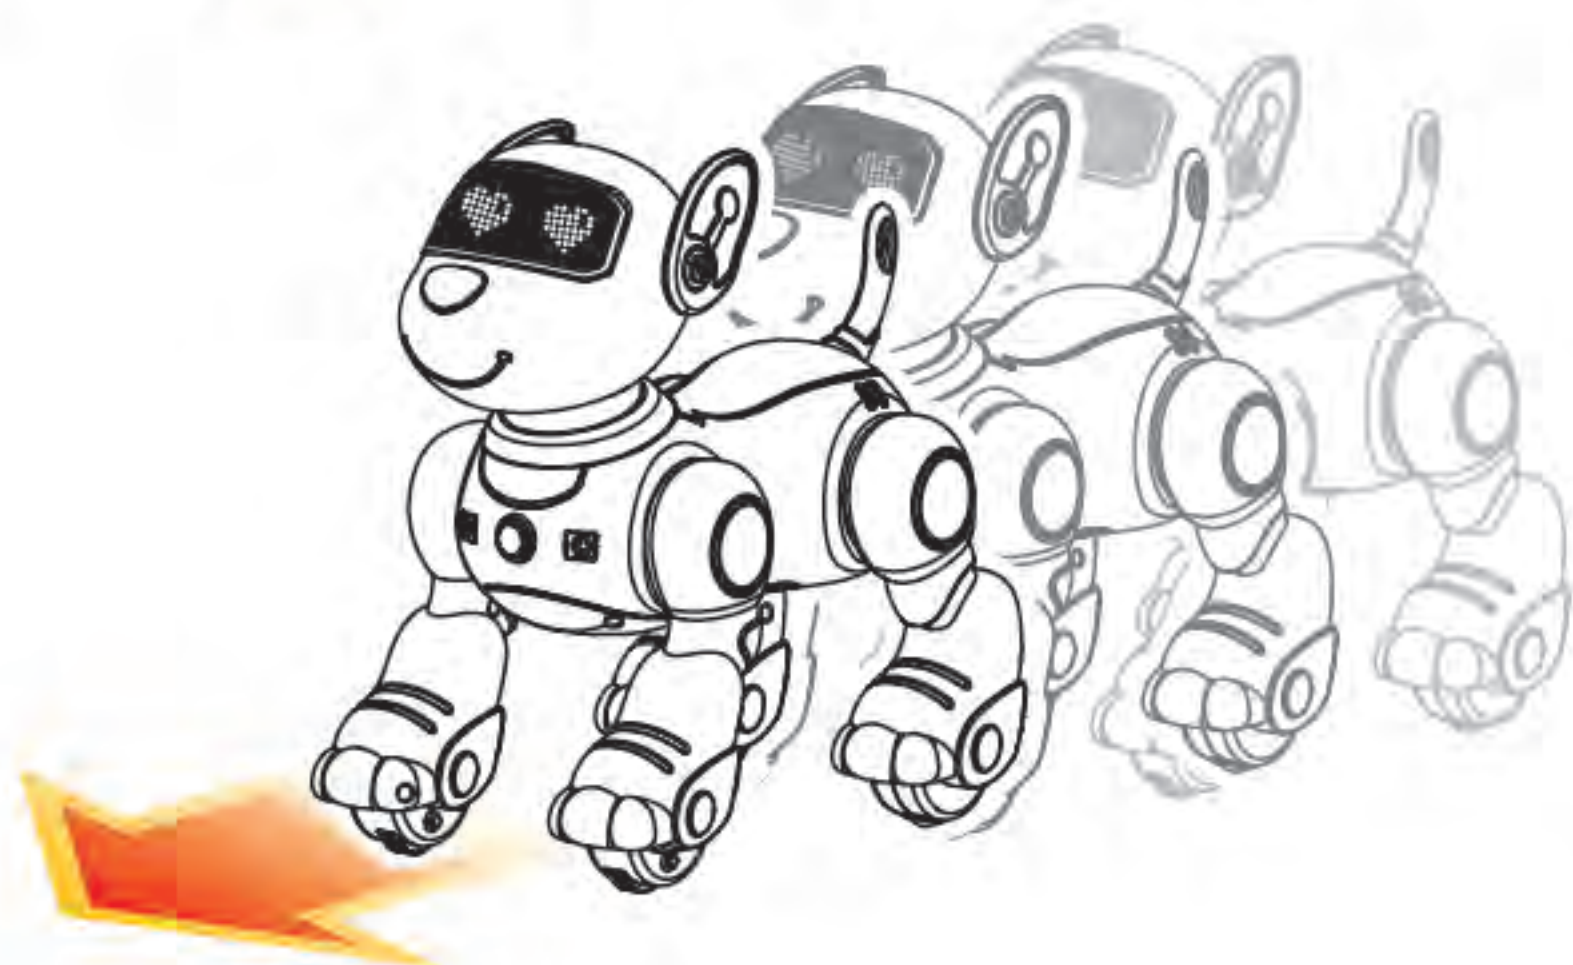


### 2. Backward:

 Press the button "" to make it move backward. Hold down the button "" to keep it moving backward.

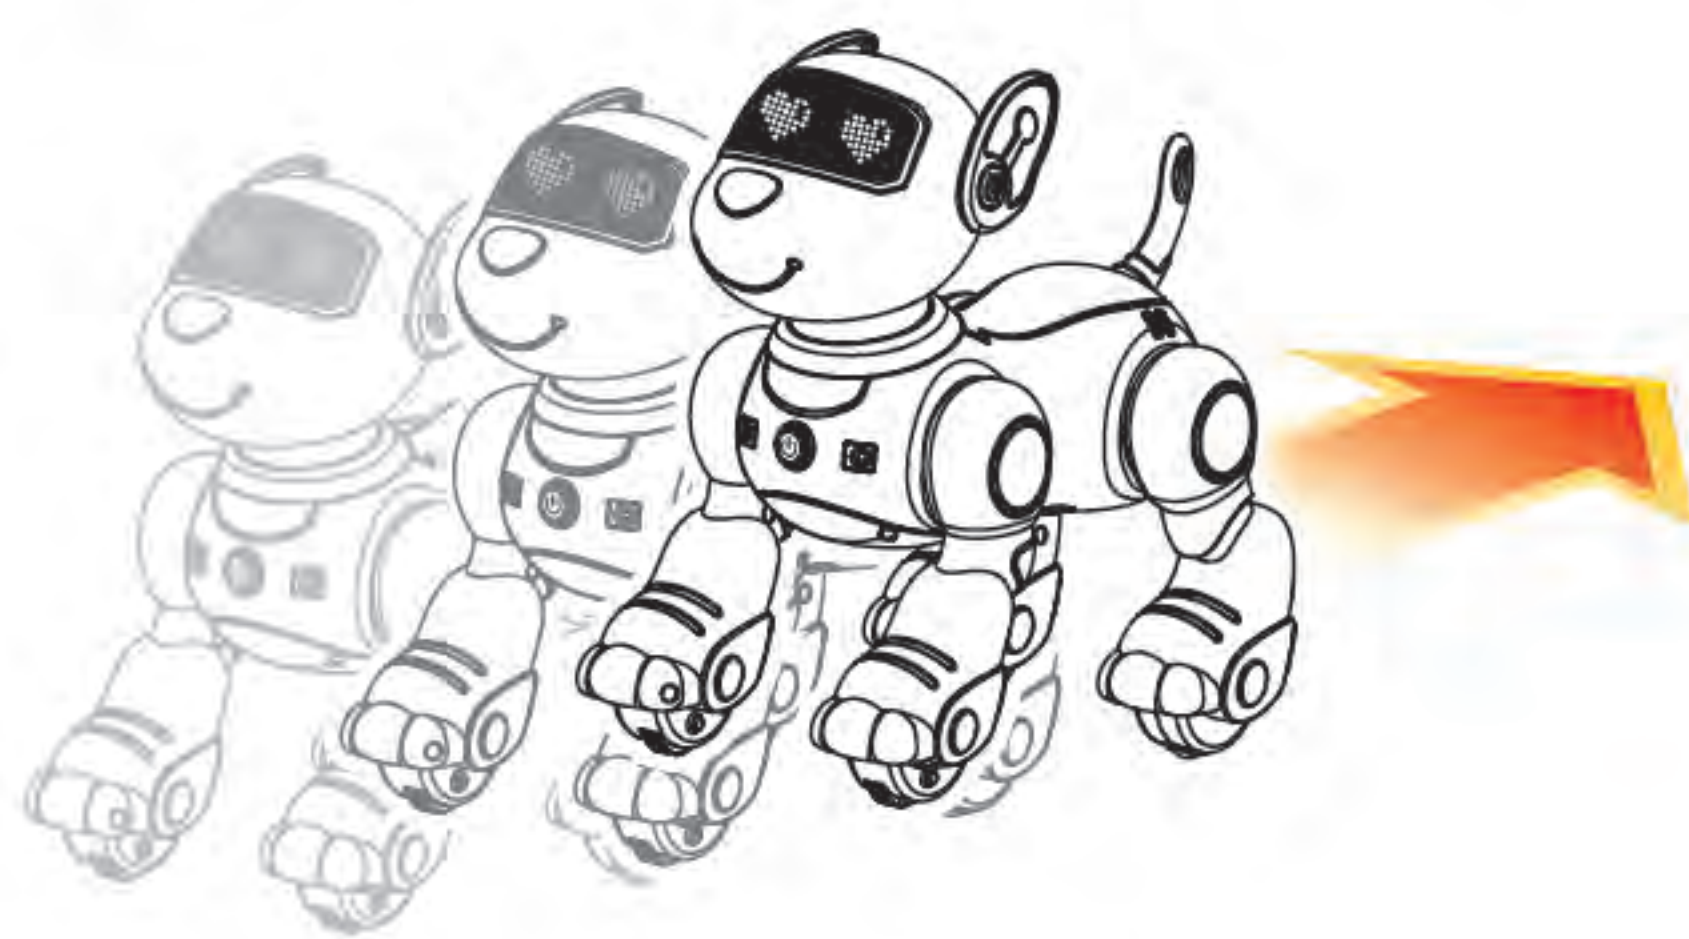


### 3. Turn left

 Long press the left turn button "" on the remote control, the machine dog is turned left. Loosen the left turn button, the machine dog is turned left.

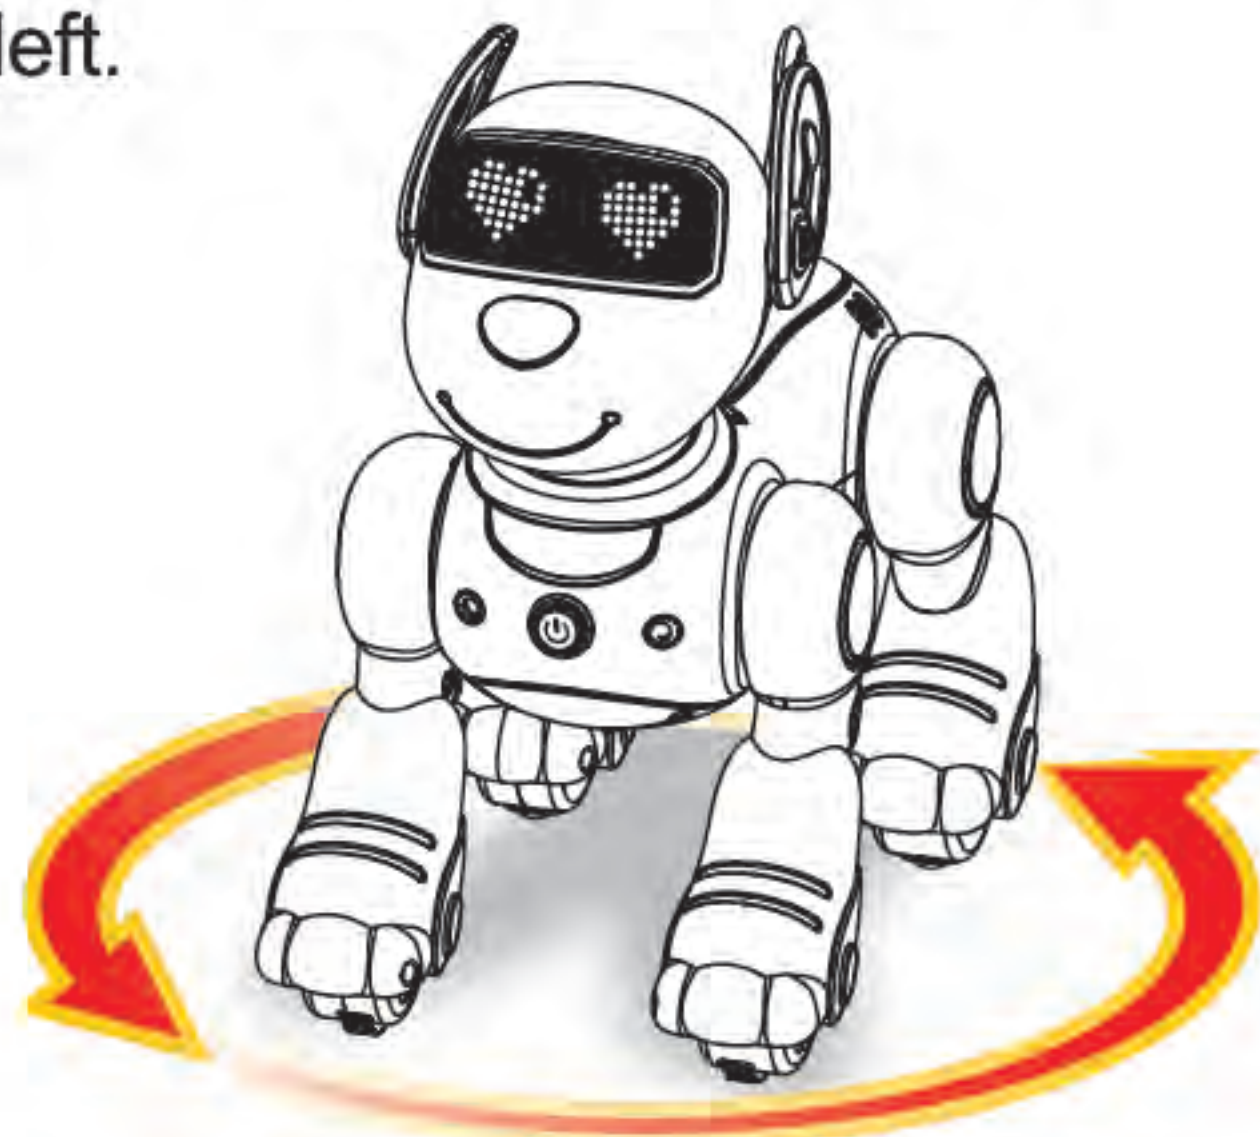

### 4. Turn right

 Long press the right turn button "" on the remote control, the machine dog is turned right. Loosen the right turn button, the machine dog is turned right.

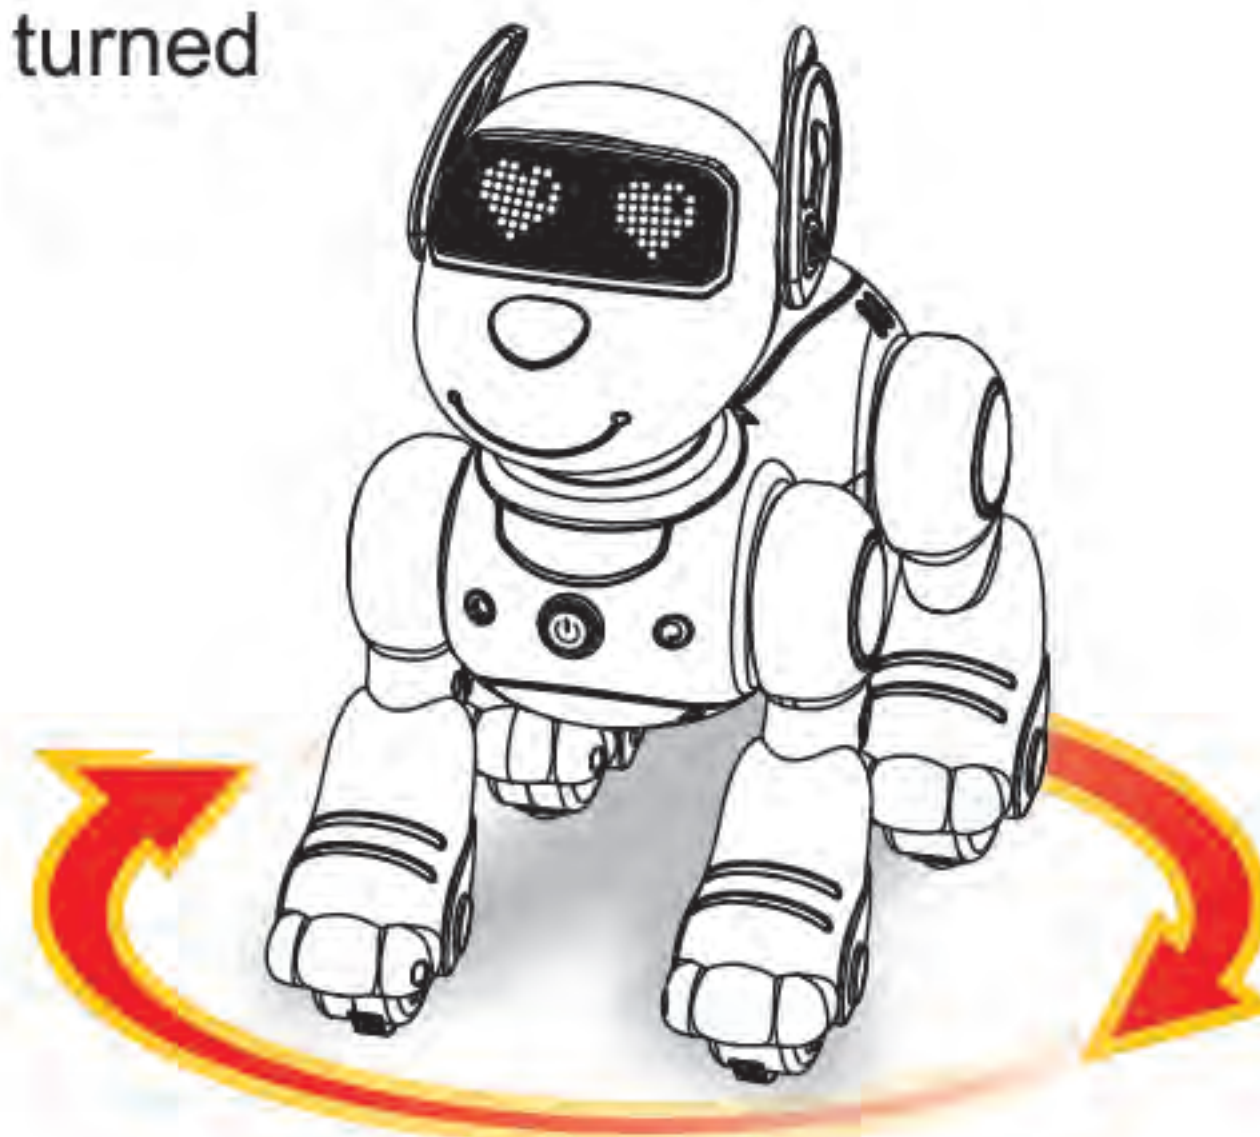

### 5. Demo:

Press the button "  " to switch into programming mode. Press the buttons on the remote to program. Press again the button "  ", and the robot dog will execute the program by following the sequence of the pressed buttons.

---

### 6. Volume +:

Press this key "  " to increase the volume, with a total of four levels of volume. When turned on, it defaults to three levels. When the volume increases, the voice prompt is "Volume up". When the volume is at its maximum, the voice prompt is "It's the maximum volume".

---

 
### 7. Volume -:

Press this key "  " to reduce the volume, with a total of four levels of volume. When turned on, it defaults to three levels. When the volume decreases, the voice prompt is: "Volume down". When the volume is at its maximum, the voice prompt is: "It's the minimum volume".

---

### 8. Sit Down:

Press the sit down button "  ", and the robot dog will sit down immediately. (With sound)

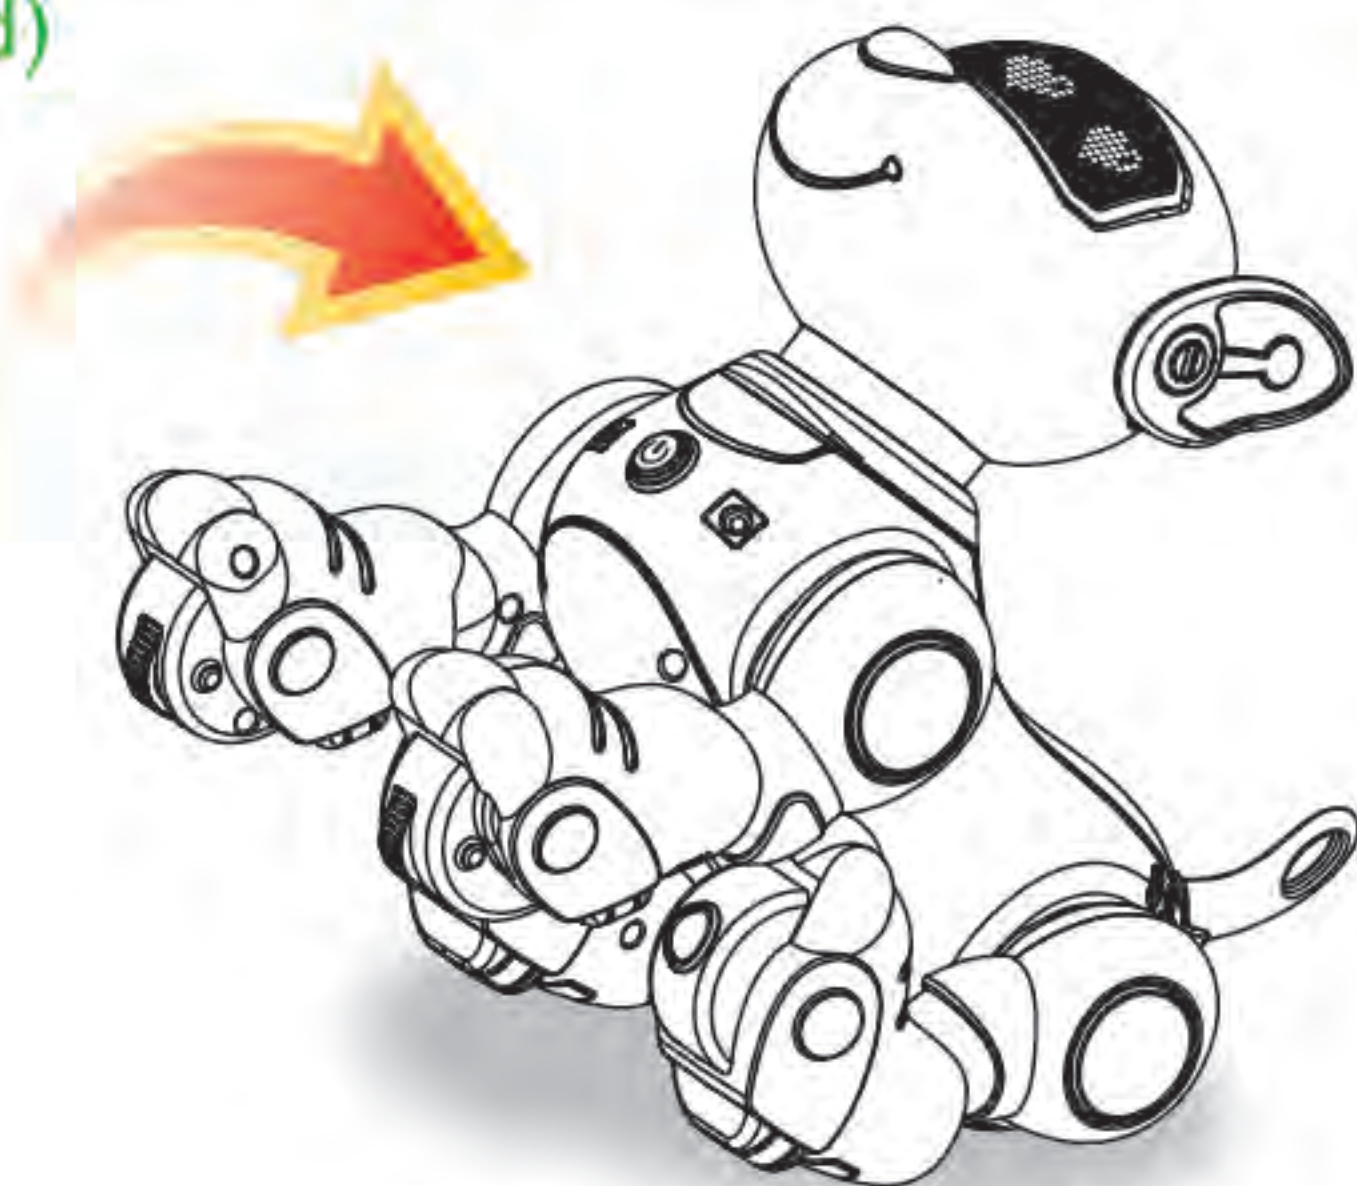


### 9. Handstand:

Press the button "  ", and the robot dog will stand upside down and roll over immediately. (With sound)




### 10. Get down:

 Press the down button "  " on the remote control, and the robot dog will perform "Get down" (Action+barking sound+panting sound).

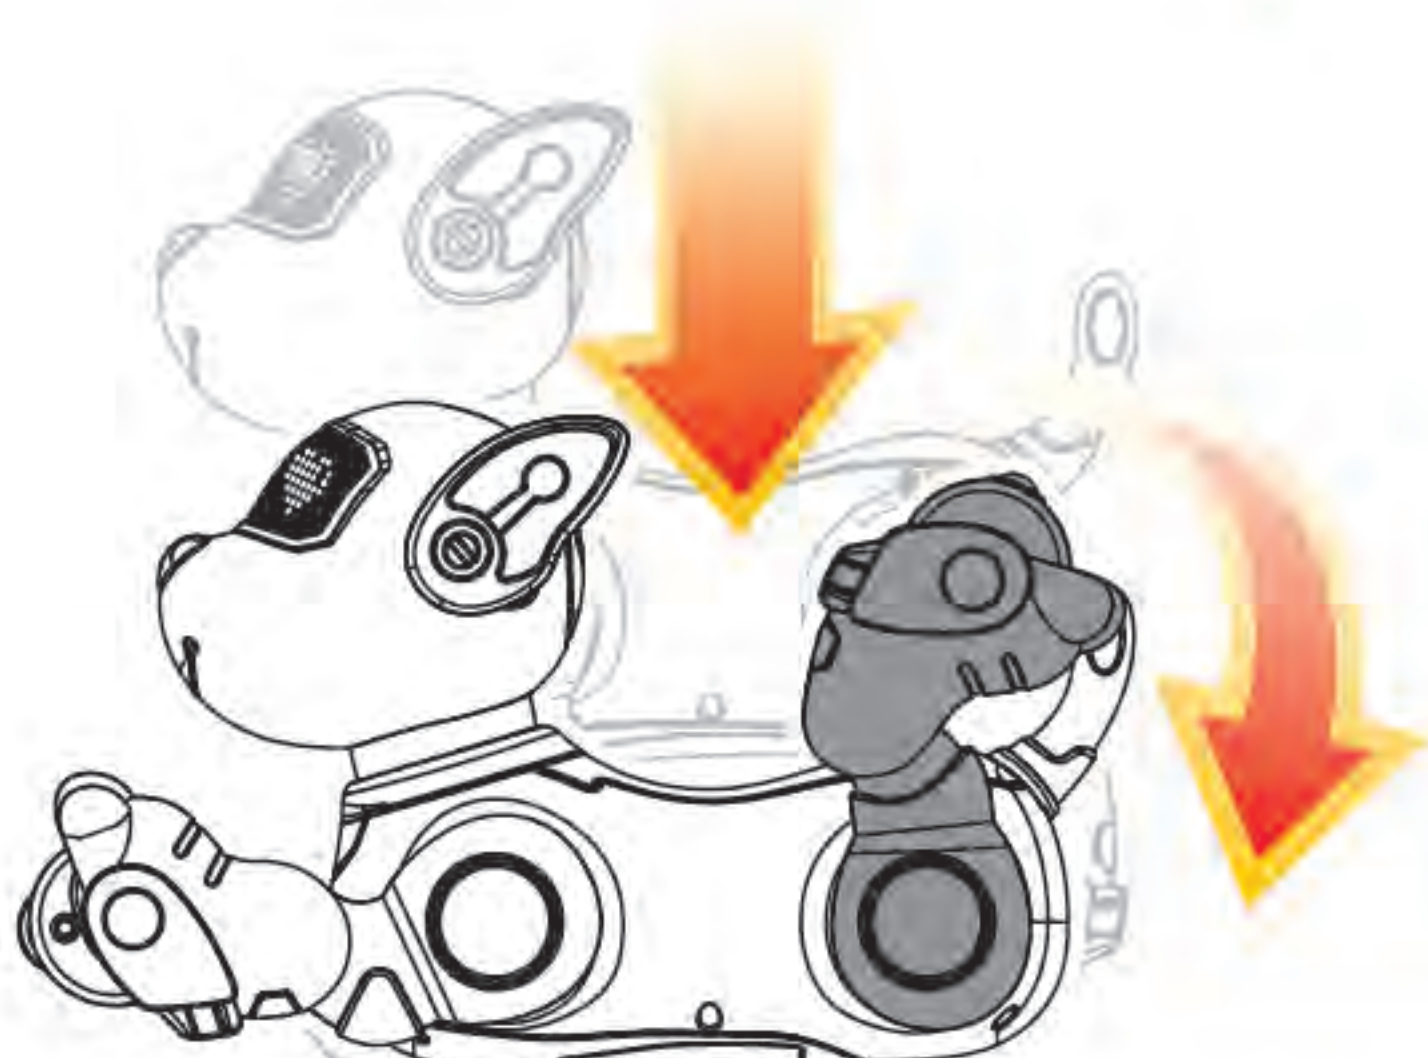

### 11. Push-up:

 Press the button "  ", and the robot dog will lie down immediately. (With sound)

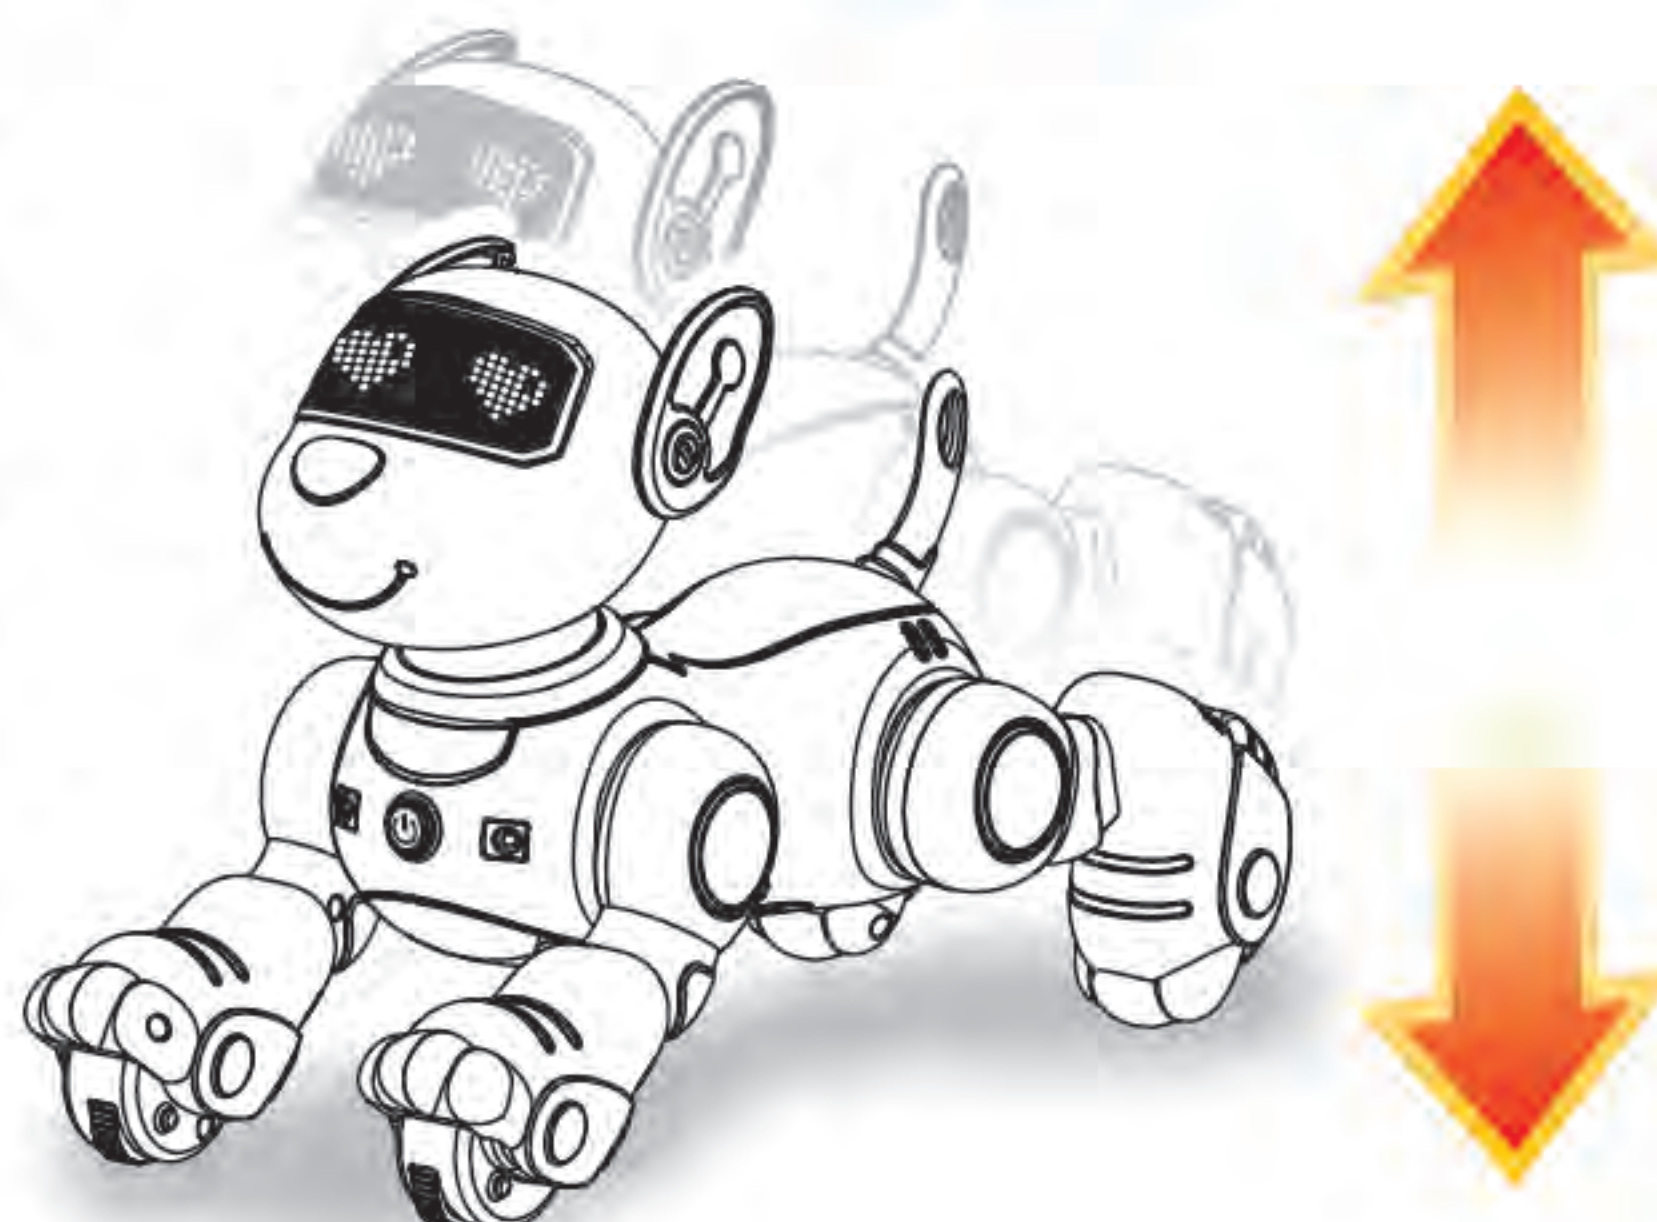

## 12. Play cute:

Press the cute selling button " " on the remote control, and the robot dog will perform the cute selling actions and sound effects.

-----

## 13. Voice control:

Press the speech recognition button " " on the remote control, and the indicator light on the remote control will remain on. Players can say voice commands to the remote control, and when the corresponding voice commands are detected, the robot dog executes the corresponding voice and actions (see intelligent dialogue); Press the voice recognition mode again to turn off, and the indicator light on the remote control will turn off.

-----

## 14. Dancing:

Press the dance button " " on the remote control, and the robot dog will randomly play a dance song and dance movements.

-----

## 15. Song:

Press the song button " " on the remote control, and the robot dog will randomly play a song+song actions.

-----

## 16. Manual follow:

Manual follow: After long pressing the follow button " " on the remote control, the voice prompt is "Hi, dear. Shall we go for a walk? I'm ready!" The robotic dog receives a follow signal and follows the walk. 20 seconds without receiving the following signal voice prompt: "Oh, darling. Could you slow down a little bit? I can't keep up with you". Release this key to automatically exit follow mode.

-----

## 17. Stop/standby:

During the operation or playback of the robot dog, press the stop button " " on the remote control, and the voice will "Attention!". The robot dog will terminate the operation or playback and enter a static standby state.

-----

## (4) Touch function

### 1. Chin (Touch to randomly play the following voice):

- a) Wow, it feels so good. (Twisting the body)
- b) Ha-ha, please don't tickle me.(Swing left and right)
- c) Hi, dear. What are you eating today?(Sit down and say hello)

 
## 2. Butt (Touch to randomly play the following voice):

- a) (Farting sound effect) Hee-hee. (Front crouching)
- b) I'm sorry—my bad. (Playing coquettish)
- c) Oh, it made me angry. (Ferocious dog barking+right turn)

## (5) Follow signal

### ⚠ Notice:

In order to achieve the best results in the operation of this product, use manual and voice control to follow at any time. The following guide of the remote control must be aimed at the ground between the robot dog and the operator. If the operation is not sensitive, please replace the battery

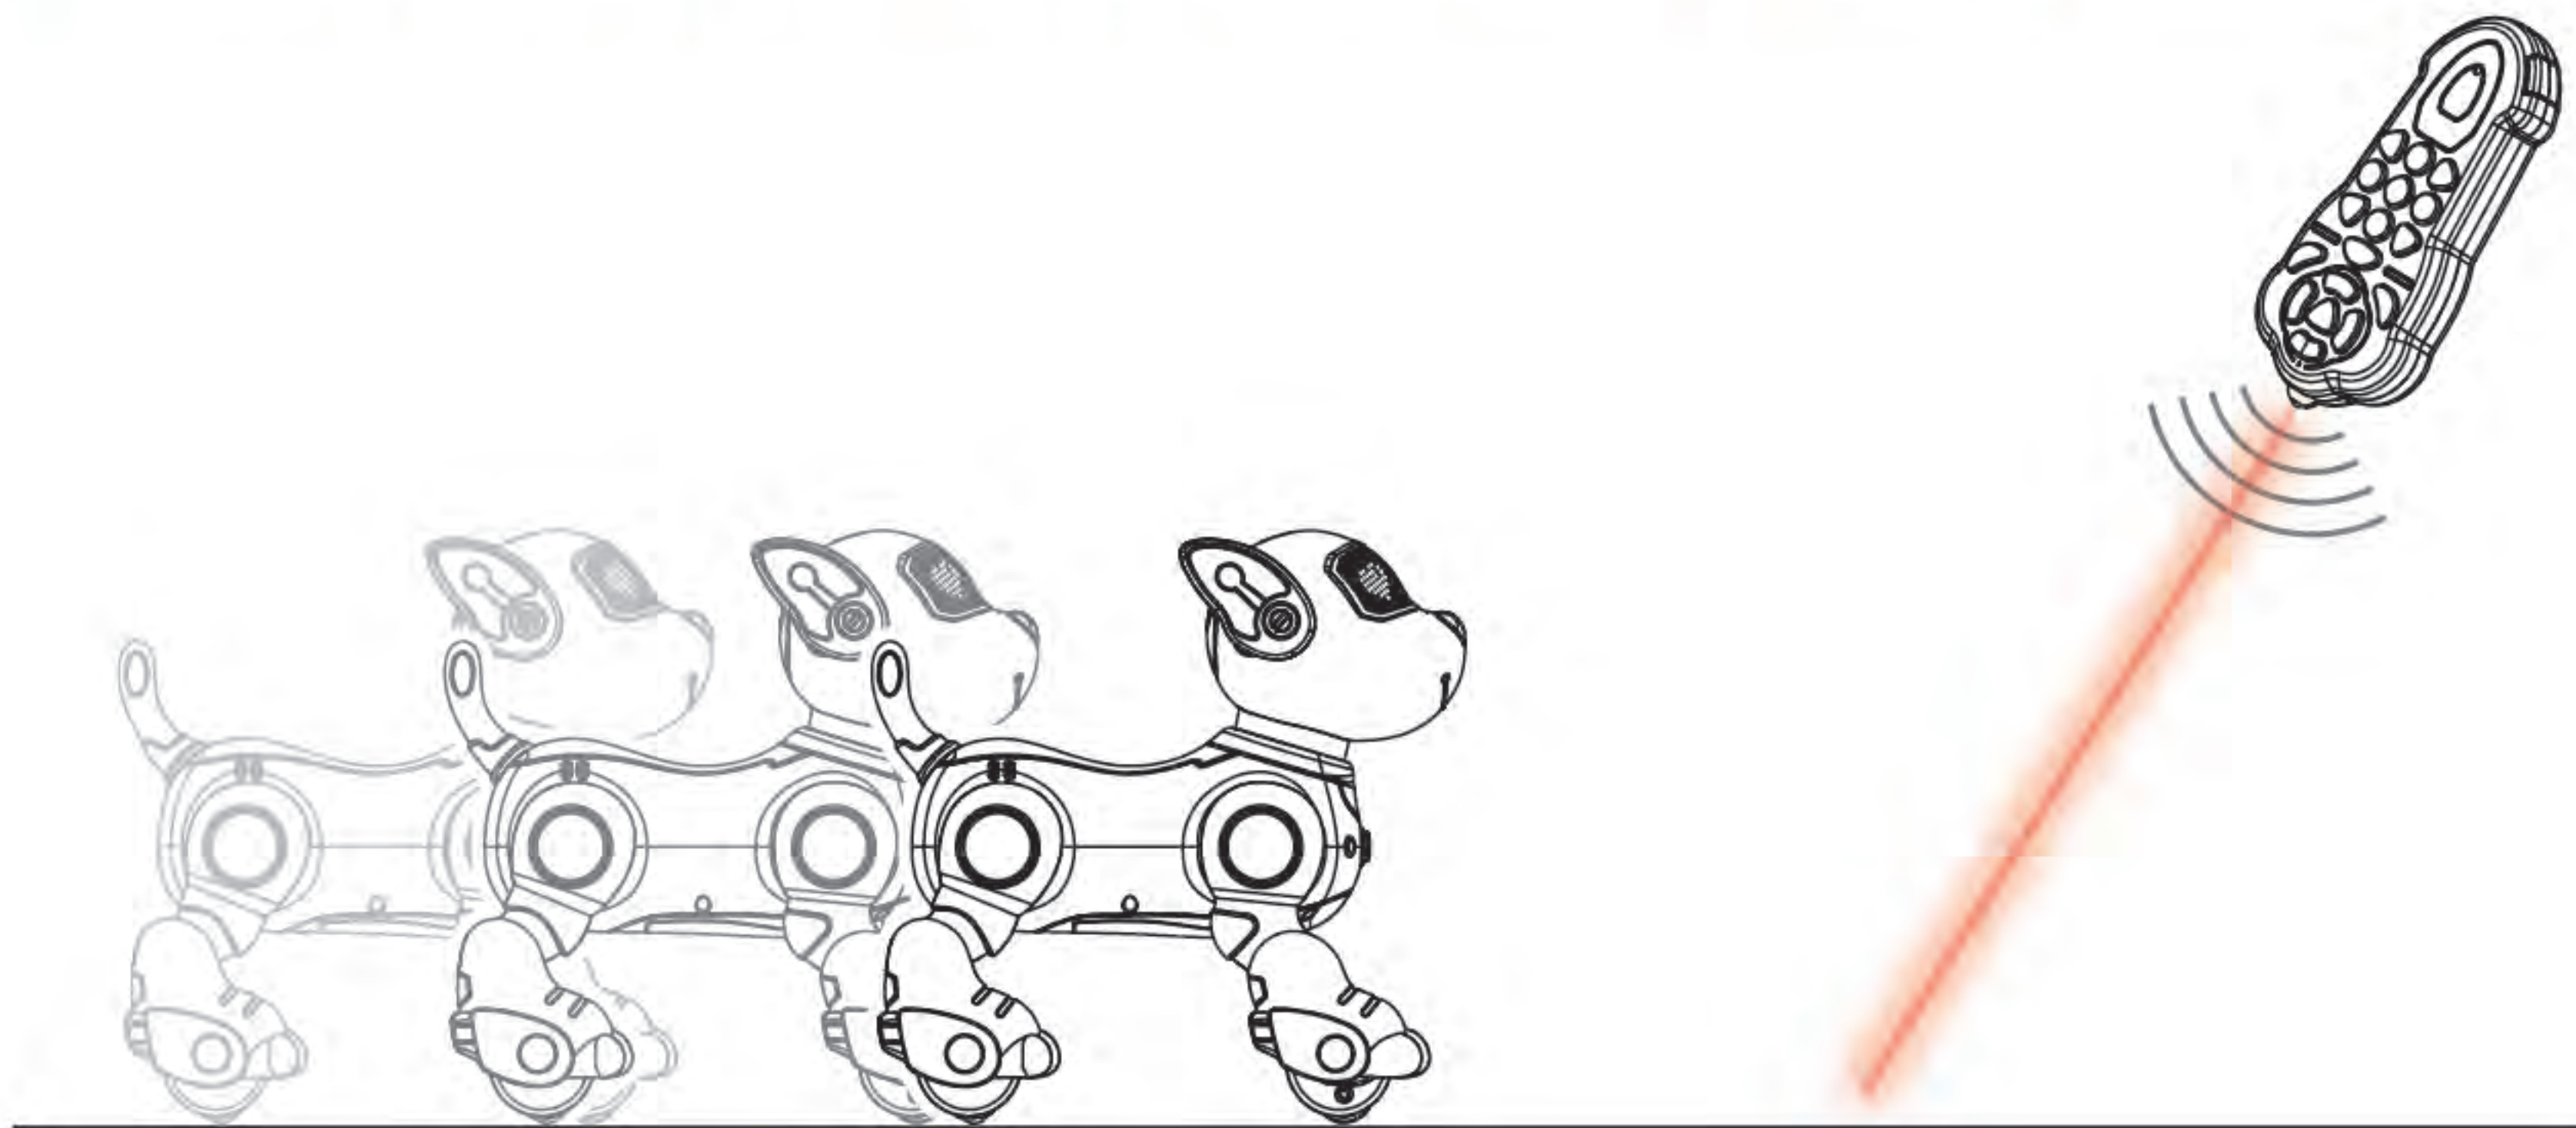

## (6) Section Content

### 1. Song:

- a) Twinkle Twinkle Little Star
- b) Old MacDonald Had A Farm
- c) It's a small world after all

### 2. Dance music:

- a) Music without lyrics 1
- b) Music without lyrics 2
- c) Music without lyrics 3

### ⚠ WARNING:

The contained small parts have the risk of suffocation and are not suitable for children under 3 years old. Adults must be present when using them for supervision and guidance. The manual contains important information and cannot be discarded for query.

## 4 Solutions to possible problems

| Symptom                                                            | Cause                                                                                   | Correction                                                                                                                                                               |
|--------------------------------------------------------------------|-----------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| The remote control fails to function                               | 1. Fail to put the battery into the right electrodes.                                   | 1. Check and make sure that the battery is put in according to the signs of the electrodes on the battery box.                                                           |
|                                                                    | 2. Low battery.                                                                         | 2. Replace with new batteries.                                                                                                                                           |
|                                                                    | 3. Control distance exceeded.                                                           | 3. Control the remote control distance within 3 meters.                                                                                                                  |
| The robot dog's manual and voice tracking are not sensitive enough | 1. The control distance is exceeded or the remote control is not pointing correctly.    | 1. The effective straight-line distance of the remote control following the function command is 2-3m. Do not point the remote control to the high side or left to right. |
|                                                                    | 2. When the battery of the remote control is low, the follow function will also fail.   | 2. Replace with new batteries.                                                                                                                                           |
|                                                                    | 3. Uneven roads will also affect the follow function.                                   | 3. Please use the follow function on flat and even surface.                                                                                                              |
| The robot dog does not react to commands.                          | 1. The robot dog is not turned on.                                                      | 1. Press the power switch button on the machine dog to turn on the power.                                                                                                |
|                                                                    | 2. Mis-connection between the electrodes of the rob dog and the rechargeable batteries. | 2. Check to make sure the rechargeable batteries are properly connected to the electrodes of the robot dog.                                                              |
|                                                                    | 3. Low battery.                                                                         | 3. Replace with new batteries.                                                                                                                                           |
|                                                                    | 4. Slurred voices and dim lights.                                                       | 4. Recharge the batteries or replace them with fully charged ones.                                                                                                       |

## **FCC Statement**

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

## **RF warning for Portable device:**

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Note : This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates,uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.