



3

5



- Thank you very much for purchasing our company's products this time.
- Be sure to read the instruction manual and use it correctly before using it.
- After reading, be sure to keep it where the user can see it everywhere.

A portable electronic device, possibly a small amplifier or a portable music player, with a silver and black design. It features a carrying handle on top, a speaker grille on the front, and a control panel with several buttons. A microphone is connected to the device via a cable, and another cable is plugged into a port on the side.

Turn on the kids karaoke machine and enter Bluetooth mode by default . Turn on Bluetooth on the phone, just search"ats-2020" connection. When we connect successfully, we can play music.

When insert in TF card and machine changed as TF mode , we can play music .

When insert in USB and machine changed as USB mode ,we can play music .

Charging by inserting a power supply (5V1A).

The diagram illustrates the Karaoke Machine from three perspectives: front, left side, and right side. Numbered callouts identify the following components:

- Front View:**
 - 1: Mic1 (first microphone port)
 - 2: Mic2 (second microphone port)
 - 3: USB port
 - 4: TF port
 - 5: Voice changer button
 - 6: Next/Vol+ button
 - 7: Origin/Accompaniment button
 - 8: Play/Pause button
 - 9: Mode button
 - 10: Previous/Vol- button
 - 11: Cheer/Booing button
- Left Side View:**
 - 12: DC5V port
 - 13: On/Off switch
- Right Side View:**
 - 1: Mic1
 - 2: Mic2
 - 3: USB port
 - 4: TF port

105*148.5

Open the backpack



Take out the strap



The straps are fastened at both ends of the handle




The microphone is inserted in the microphone hole of the singing machine



ats-2020 Kids Karaoke Machine Manual



- Thank you very much for purchasing our company's products this time.
- Be sure to read the instruction manual and use it correctly before using it.
- After reading, be sure to keep it where the user can see it everywhere.

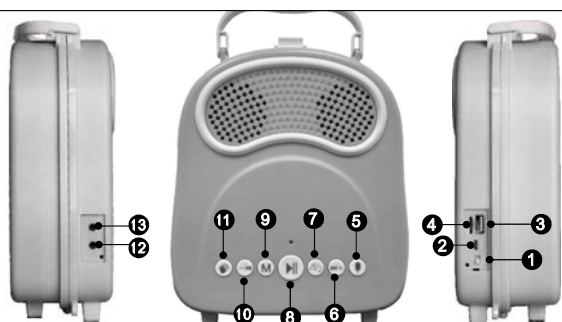

No.	Name	Show	Function
1	on/off		turn on or turn off
2	DC5V port		DC5V charging in port
3	USB port		insert in USB to play music
4	TF port		insert in TF card to play music
5	voice changer		you can press 3 different voice when insert in microphone to sing songs
6	next/vol+		long press to next song/short press to increase volume
7	origin / accompaniment		short press the key to enter the karaoke origin/accompaniment mode
8	play/pause		short press the key to play/pause
9	mode		Change models with BT/USB/TF card when insert in USB/TF card
10	previous/vol-		Long press to previous song /short press to decrease volume
11	cheer/booing		short press to cheer/long press to booing when insert in microphone to sing
12	mic1		first microphone hole
13	mic2		second microphone hole


Bluetooth Connection

Turn on the kids karaoke machine and enter Bluetooth mode by default . Turn on Bluetooth on the phone, just search "ats-2020" connection. When we connect successfully, we can play music.



TF card Mode

When insert in TF card and machine changed as TF mode , we can play music .

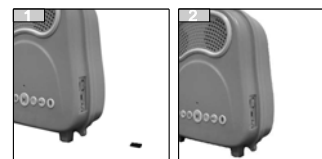


USB Mode

When insert in USB and machine changed as USB mode ,we can play music .



Charge

Charging by inserting a power supply (5V1A).

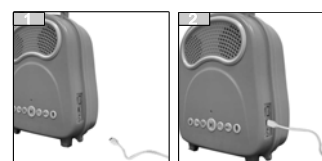

250.0 mm*176.86

125*176.86

バックパックを開きます



ストラップを取り出します



ストラップをハンドルの両端に固定します



マイクをカラオケマシンのマイク差込口に挿入します



ats-2020キッズカラオケマシン取扱説明書



- 当社の製品をご購入いただきありがとうございます。
- 本取扱説明書を必ず読んでから、本製品を正しくお使いください。
- 本取扱説明書はすぐに参照できる場所に保管してください。


ブルートゥース コネ

デフォルトでは、キッズカラオケマシンをオンにすると、Bluetoothモードになります。モバイル端末のBluetoothをオンにして、"ats-2020"を検索します。接続が成功すると、音楽が演奏されます。



TF カード モード

TFカードを挿入すると、マシンはTFモードになり、音楽の再生が可能になります。

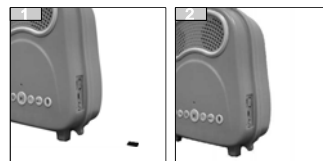



USB モード

USBを挿入すると、マシンはUSBモードになり、音楽の再生が可能になります。



チャージ

電源 (5V1A) について、充電を開始します。

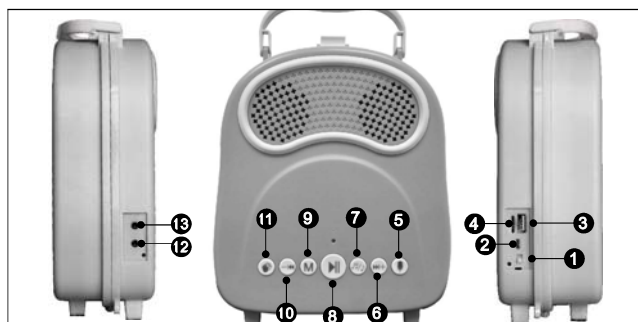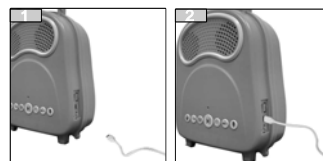

No.	名前	ショー	機能
1	オン/オフ		電源のオンまたはオフ
2	DC5Vポート		ポートでDC5V充電
3	USBポート		USBを挿入して音楽を再生
4	TFポート		TFカードを挿入して音楽を再生
5	ボイスチェンジャー		マイクで歌うときに、3種類の音声から選択可能
6	次へ/音量アップ		長押しで次の曲に移動、短押しで音量アップ
7	オリジナル/アカンパニメント		キーの短押しでカラオケ オリジナル/アカンパニメント・モードに遷移
8	前へ/一時停止		キーの短押しで再生/一時停止
9	モード		USB/TFカード挿入時、BT/USB/TFカードのモードを変更
10	前の曲/音量ダウン		長押しで前の曲に移動、短押しで音量ダウン
11	拍手/ブーイング		マイクで歌うときに、短押しで拍手、長押しでブーイング
12	マイク1		マイク差込口1
13	マイク2		マイク差込口2

250.0 mm*176.86

125*176.86

FCC Statement

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- >Reorient or relocate the receiving antenna.
- >Increase the separation between the equipment and receiver.
- >Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- >Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.