
User's Manual

For Exclusive Remote Control RC802V

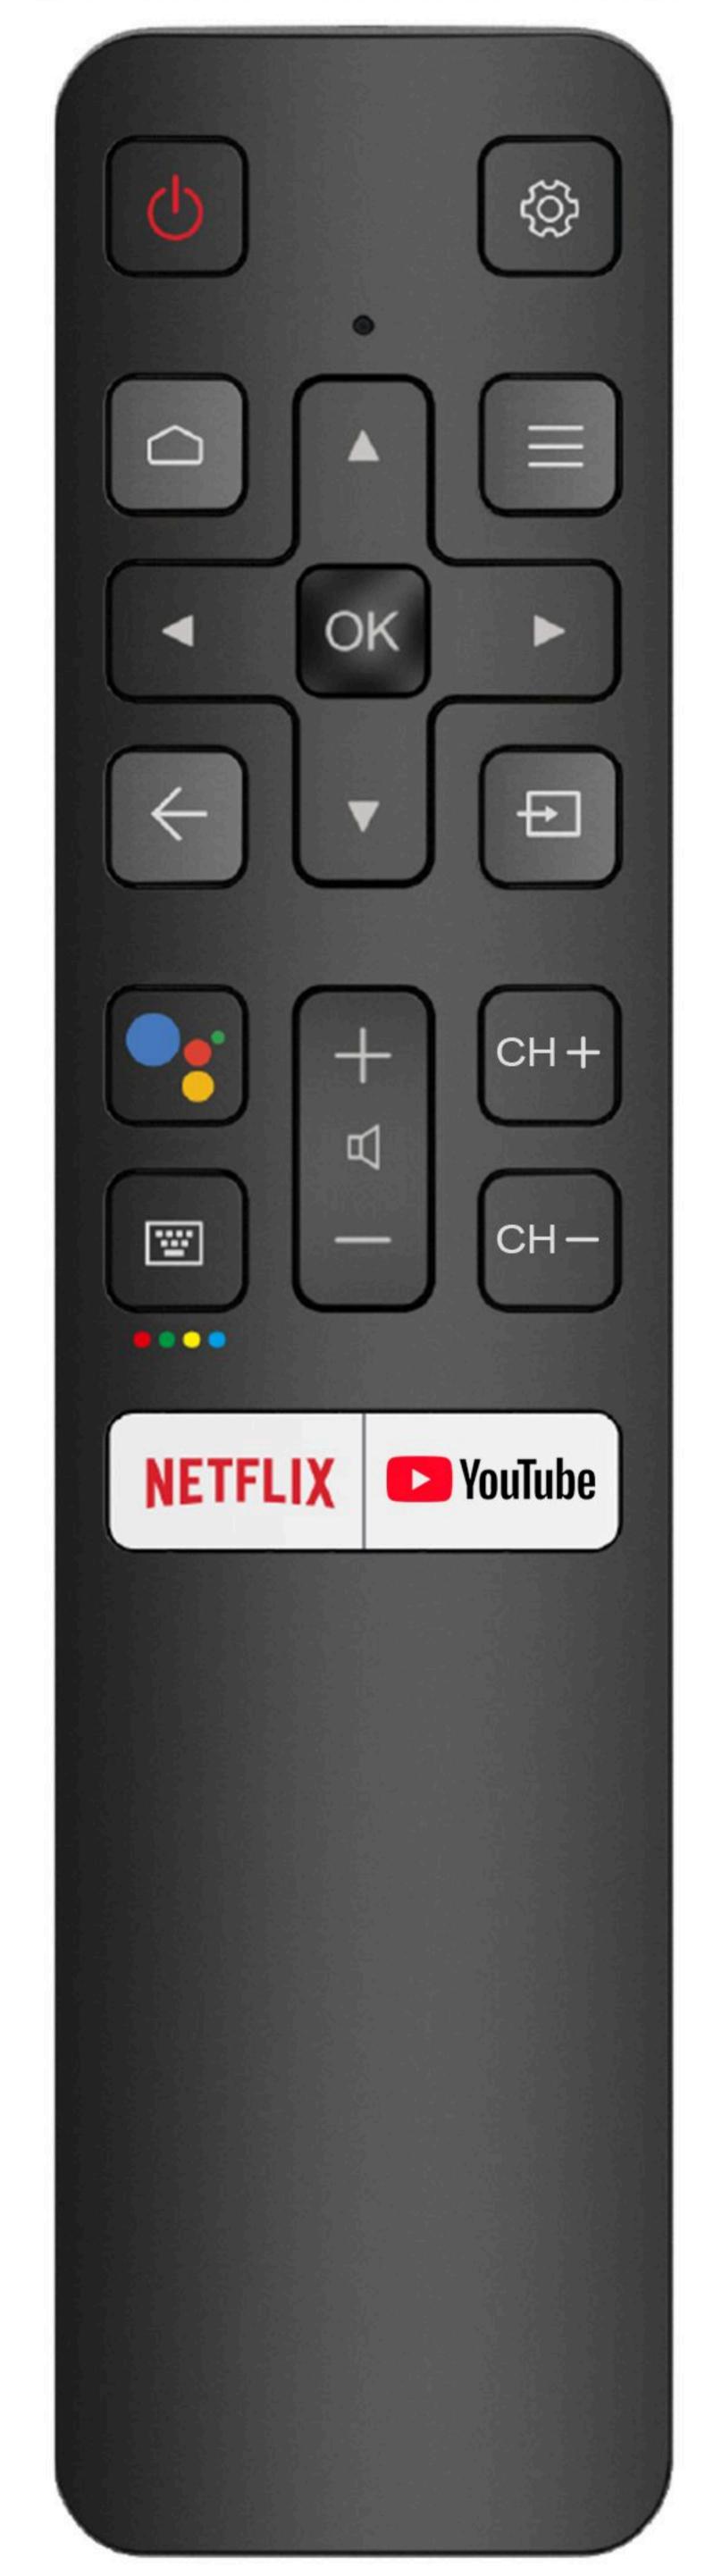

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the

- following measures:
 Reorient or relocate the receiving antenna.
- Reorient or relocate the receiving antenna.
 Increase the separation between the equipment and receiver.
- · Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- · Consult the dealer or an experienced radio/TV technician for help.
 Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.
- This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

RF Exposure Information

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Remote Control Functions

Ф	Standby / quit standby.
₩	To display the Settings menu.
	To access the Smart TV homepage.
	To display the Option menu.
oĸ	To confirm an entry or selection. This button is also used to display the channel list in TV mode.
▲/▼/	Navigation direction buttons. The ▲/▼ buttons are also used to change channels in TV mode.
-	To return to the previous menu or quit an App.
Ð	To select input source.
•	To turn on the Google Assistant/Google Voice Search function. (Available only when the network connection works normally.)
I :	To pop up the virtual remote control keyboard when available.
4+/-	To control the volume.
P+/-	To control the channels.
1	To access T recommended Apps.
NETFLIX	To access Netflix.(Not available for some models.)

How to use the remote control

When using button for the first time, you will be prompted to pair the remote with the TV. Please follow the on-screen guide for paring instructions.

- a. Keep the remote control and TV in 1 meter, press OK and ← button on the remote at the same time. You can use ● after activiating successfully.
- b. This voice search function si is only available for content search from certain apps.
- c. Set language in the TV settings to your local language or official language to enhance voice search successfully.
- d. When the voice search does not work, check if your remote control has been successfully paired with your TV, if the language setting is correct, if Google server is available and stable.

Installing Batteries

- 1. Push to open the back cover as illustrated.
- Insert two AAA batteries according to the polarities marked on the battery case.
- 3. Replace the back cover as illustrated.

Warning

Batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.

For the purpose of performance improvement, design and specifications are subject to change without notice.

