

# P02 WIRELESS CONTROLLER



Instruction Manual

## ***Product Descriptions***

- Wireless controller is compatible with PS4/PS4 Pro/PS4 Slim/PC (Windows 7/8.1/10).
- The PS4 controller adopts new wireless Bluetooth 5.0 transmission technology, can be easily and quickly paired.
- The PS4 controller supports a touchpad, 3.5mm earphone jack, Built-in LED light and speaker, so you can plug your headset to completely immerse yourself in a gaming world.
- Up to 4 PS4 controllers can be connected to a PS4 simultaneously, you could invite more friends and family to play the game together.
- We have equipped you with a Micro USB cable, switch controller built-in 1000mAh battery, which plays for 8-10 hours, fully charged for about 2~3 hours.

## ***Product Parameters***

Battery: Lithium battery

Battery capacity: 600mAh

Working current: 20-100mA

Using time: 8-10H

Charging current: <270mA

Charge time: 2-4H

Charging port: Micro USB

USB length: 80 CM

Charging method: USB DC 5V

Bluetooth transmission distance: 10M

# Product Button Introductions



D-pad button \*4: Up, Down, Left, Right  
Function button \*8: x,AQ,□, L1,L2,R1,R2  
Menu button - HOME "SHARE"-  
SHARE  
"OPTIONS"- OPTIONS



Charging indicator white light\*1, User-defined blue light\*1 L3  
Stick & R3 Stick: the new design 360° offet joystick makes the  
game operate

## ***To Pair Connect***

### **1. Connect To PS4 Console:**

STEP 1: If the controller is connected to the current PS4 Console for the first time, you need to use a USB cable to connect to the PS4 Console.

STEP 2: Press the "HOME" button for 3-4 seconds and the white LED indicators will flash quickly, then release the "HOME" button and wait for pairing. The white indicator is always on, indicating a successful pairing.

### **2. Connect To PC:**

Access one end of the USB cable to the Controller, access the other end of the USB cable to the Console, the controller can be used for wired operation on the PC.

## ***To Pair Connect***

User-defined buttons to restore the default:

STEP1: Disconnect the controller and PS4 console.

STEP 2: Put the controller on a flat table, Press the reset hole on the back to reconnect.

STEP 3: you need to use a USB cable to connect to the PS4 Console, then press the "HOME" button. When the blue light is on, the connection is successful. After that, just press HOME to connect.

## ***Upgrade***

### **1. Low Voltage Indication:**

when the battery voltage of the PS4 controller is lower than 3.6V, the indicator will flash; when it is lower than 3.4V, the PS4 controller will not be turned on.

### **2. Charging Indication:**

Connect the USB cable to charge the PS4 controller, the indicator light turns yellow and flashes like a breathing light. If the controller is fully charged, the indicator light will go out.

### **3. Upgrade:**

We promise to provide sustainable upgrade services for this controller; if the controller can not pair the newest version of the switch console, please go to our official website to get the newest upgrade firmware.

#### **4. Warranties:**

We guaranty a 30-day return and replacement if the product has any quality issues. All of our products are covered by a 1-year warranty and lifetime technical support. If you have any problems or questions when you use this controller; please feel free to contact our customer service.

# Common Problems And Solutions

Problem	Reasons	Solutions
Can't connect to PS4	May be that the console's cache is not enough so the controller can't be recognized	1.Need to clear the Bluetooth device in the console first 2.Access one end of the USB cable to the controller, access the other end of the USB cable to the console. First connect via USB cable to make the console remember the controller, and then unplug the cable for wireless connection.
Can't connect to PC	May the PC model is not compatible	This controller only supports PC with a wired connection Windows 7/8/8.1/10
Connect to the Console or PC does not show any response	Insufficient battery power so can't work	Please charge the controller for 1 hour before connecting.
Buzzing when head set is plugged in	The headset model does not match the controller	Please use National standard headphones to access the headphone jack, do not use American standard headphones.
The controller keeps shaking and cannot be stopped	Maybe use the controller vigorously	Just press the joystick down gently until hearing a boom, and the rocker is reset successfully.
The joystick is stuck	It may be an incorrect operation that caused the handle crash	Press the "Reset" button for 5-8seconds, then restart the controller
Access USB cable to the controller, the indicator light will not light up	The controller battery is full	when the controller battery is full, the light will be on once and go out if the battery is not full, the controller will charging and the indicator light will always be on.
Other questions or problems		The controller enjoys a 1-year warranty. Any quality problems within one 1-year of purchase can be replaced with a new product for free. Please contact the email.

**FCC Caution:**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures

:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

P02 XVXS ト 口



取扱説明書

製品<0 説明

• 17-rv^=l> ト口 一万一 《:PS4/PS4 Pro / PS4 Slim / PC (Windows

7 / 8.1/io) 乙互換性力十勤 urr。

- PS4H>b-n-7-tts 新 1A'^fVlxXB Bluetooth 5.0 伝送千? ノ口 少一' &採用 1/CS5I9、簡単力匕) 迅速
- PS4=l>t'n-^7-ttx 夕': /刊包 R3.5mm4 切久内蔵 LED X ト一力一^y-^bLSTo ^yK-tz^F^^LXxy- △ CD 世界 I; :完全 ic: 没頭
- 最大 4 台 0PS4=l>bn-^5: 同時 U1PS4U: 接続 Tg<fc>2 多 (CD 友人會 家族在招待 IX-緒 ( ; : 伏一△
- Micro USB<r-7Jk^<y^zi>bn-7 一内蔵 1000mAh/K'y^U 一在裝備 LXfcDx8~10 時間再生。、約 2~3 時間完全記充電

## ***Product Parameters***

ノ一: I 方刀 5' 刀^ノ一 /  
切子 I ノ一容量: 600mAh 動作  
電流: 20~100mA 使用時間:  
8-10H 充電電流: <270mA  
充電時間: 2-4H

充電一ト: Micro USB  
USBCD 長苴 80CM  
FT 充電方法: USBDC5V  
Bluetooth 伝送距離: 10 M

# 製品术夕 K 紹介



十字夕: >\*4: 上、下、左、右

機能犬夕>\*8: x、A、O、口、L1、L2、R1、R2

X-ZL-7if 夕: /「」-HOME

「才 才



充電一夕一白色光\* 1、ZL-+f-定義青色光\* 1 久新 5、戶 f 00)360° 才 ト  
テ'、'巾文，一ム在操作

## 1. ps43>v-jndg^Lsr:

ト口 一万一專現在 CDPS4Z1W—J 141 初接続寸為場 合 (Ss Micro USB? 一夕<r 一力憶使用 1/CPS4Z1W-J14; Z 接続" T 為必要 \*?£DSTo

^7^2: 「HOME」TK 夕: ^3~4 秒間押^■七白色 LEDOir^ir 一夕一力十 T(i^< 点滅 Lx rHOMEj<K^>S 放 待方京乳白 130

▽夕一夕一似常点灯 1/CJ5 久/>?刀力 t 成功 5; : : : ^?: 示 L^t。

## 2. PCKg^LST:

USB<z■—力成> 一方 <0 端 : zi> ト口一万 TC^;o、uSB<r—力 WD t>5—方 <0 端—J 14; : , " | 2; ^。京克: ] : > ト口一为一 (1 丶(.: 0 有線操作 1C®ffl-C5STo

«□» ト口一 ト

^^JUblc 虎诛 isbgT 一定義术夕:>:

^T>71: =I> ト口一万一 ±PS4=1W—J I/?:取。外 Lsr» ^T>72: =I> ト口一万一? : 平于一力 14; : 置&背面 0U-tZ>> ト穴? : 押 L/C 再接続 LST=

: PS42 >y-JKC 接続実 50d:、Micro USB^—夕 <r 一力 使用 实 5 必要力< 苏 0 来克次记「HOME」^>?:WLST=青色<DK ト方陳灯 京呂接続记 成功 HOMES 押接続来玄。

]. 低軍圧表示:

PS4=l>bn-7-CDA'y7^U- 電圧方 G3.6V 未満一夕 一方, 点滅 LSTo 3.4V<kD 低。'場合、PS4Z!; / ト口一万一才

”。

2. 充電表示:

USB<r-力 接続 LXPS4ZI>bn-J7-£ 充電" T5 七 一夕  
—” ト力用黄色 II 变 t>久呼吸万彳®<fc5(Z 点滅 LtTo =1 : > ト口 一万力< 完全记充電一夕 X ト力任消灯 1^实

3 曰

C0Z1> ト口一万一 I; : 持続可能:&, ' : /: /久 1^— Ft»— 仁  
is?約束 LSTo=l>l'

^TJ 場合 (i' 公式 Web^d MCT^—tZXLX 最新 <0 Ty7  
^>-F7r-△^1入手 LT</ci?l'o

#### 4. 保証:

製品品質上 CD 問題力廟 ■ § 場合底 30 日間 CD 反品乙交換^fiBELST= 当社  
(Df/kCfiD 製品 (ix 1 年間<0 保証已生涯卜<0 對 象 7?实; 1(0=1 卜口一  
万一 <0 使用時 K1 問題\*質問\*<\$5 場合仏、力人夕 V—t- 輕 l; Zi?問 s 合  
t>-tt<yc5l'o

# 一般的4問題H解決策

問題	理由	yUzL-\$/a>
PS41 □接続	=!>*—JHD 牛 不足 lz Tl^/cfts □> 卜口一 ■—在認識 可能性駅苏”京 t	1. 最初 IZ=I >y-JU0 Bluetooth^ 必要 2. USB<7■—力庖) 一方 (D 端 ^=>b 口一 为一 U: ?^7 勿tz^lz、 USB<7■—力 lz 0) ^5 — 3. 最初 YUSB<T—力介 L/C 接続 L.=i>y-ju^zi> 卜口一 为一在記憶 接続 O fc 的 k: <r 一力 Li 抜芝虽卖
PC □i: 接続京封公	PC=E 先応互換性工机、可能 性	C0=l>卜口一为一味有礙統 OPC0^^+l-<K-卜 Windows 7/8/8.1/10
=l>y-Jl/^/rfiPCIe^L 応答书表 示古	/^y7y-<7) « 力駅不足 LTS 為/t 虹機能由 U	接続寸為前仁、=l>卜口 一万一時 間 充電 LT</cl"l
OHHZj/卜狀接続	2/阡、外火力治 S 卜口 -7-t_致 L^^-A,	2 阡?才 >^V'y<7 (r7<7-tzxT« (ctis 国内標準卜'7 才 X 割使 用米国 標準^7 才: 44 使用
	b 口一万一在精力的 记使*5	決一ム”聞 <X7^ 光押 L・下成 5 個, 玄口 '油/ 一仏正常 U: LJ4r、b^n^To
□>b 口一 5T 埔 iW、停 止*興 Zu	/^> 原因 能性<tJST	nj-fz*y T 力、5、口 一为一在再起動 L^T 秒間押。
USB<r一力 丈 05 次 r_夕_万 4 卜駅点灯 lz^ti/u.	D > ( 卜口 —50/ 包戸 ) —	□>b 口一万一 (Z) 冷 ) 一 就/女冬 5<匕卜 31 回点灯 L/C 消灯 1^丈/鍵戸 ) 一序。」亂氣 為 X、場合、=l>H 口 一为一或充電古 ti、4 方, 一夕一 X 卜宙;常点灯 L^To
質問+問題		卜 口 一 胡 由 年 間 費 証 的 ^<b'STo 購入力、&年以内 CD 品質上 O 問題 1 女無料。新製品交換 x-ji/k: 已連絡