

5.9 Other requirements Frequency Hopping Spread Spectrum System

Test Requirement:	47 CFR Part 15C Section 15.247 (a)(1), (h) requirement:
	The system shall hop to channel frequencies that are selected at the system hopping rate from a Pseudorandom ordered list of hopping frequencies. Each frequency must be used equally on the average by each transmitter. The system receivers shall have input bandwidths that match the hopping channel bandwidths of their corresponding transmitters and shall shift frequencies in synchronization with the transmitted signals. Frequency hopping spread spectrum systems are not required to employ all available hopping channels during each transmission. However, the system, consisting of both the transmitter and the receiver, must be designed to comply with all of the regulations in this section should the transmitter be presented with a continuous data (or information) stream. In addition, a system employing short transmission bursts must comply with the definition of a frequency hopping system and must distribute its transmissions over the minimum number of hopping channels specified in this section. The incorporation of intelligence within a frequency hopping spread spectrum system that permits the system to recognize other users within the spectrum band so that it individually and independently chooses and adapts its hopsets to avoid hopping on occupied channels is permitted. The coordination of frequency hopping systems in any other manner for the express purpose of avoiding the simultaneous occupancy of individual hopping frequencies by multiple transmitters is not permitted.
Compliance for section 15.247(a)(1)	
	According to Bluetooth Core Specification, the pseudorandom sequence may be generated in a nine-stage shift register whose 5th and 9th stage outputs are added in a modulo-two addition stage. And the result is fed back to the input of the first stage. The sequence begins with the first ONE of 9 consecutive ONES; i.e. the shift register is initialized with nine ones. • Number of shift register stages: 9 • Length of pseudo-random sequence: $2^9 - 1 = 511$ bits • Longest sequence of zeros: 8 (non-inverted signal) <i>Linear Feedback Shift Register for Generation of the PRBS sequence</i> An example of Pseudorandom Frequency Hopping Sequence as follow: Each frequency used equally on the average by each transmitter. According to Bluetooth Core Specification, Bluetooth receivers are designed to have input and IF bandwidths that match the hopping channel bandwidths of any Bluetooth transmitters and shift frequencies in synchronization with the transmitted signals.
Compliance for section 15.247(g)	
	According to Bluetooth Core Specification, the Bluetooth system transmits the packet with the pseudorandom hopping frequency with a continuous data and the short burst transmission from the Bluetooth system is also transmitted under the frequency hopping system with the pseudorandom hopping frequency system.

Compliance for section 15.247(h)

According to Bluetooth Core specification, the Bluetooth system incorporates with an adaptive system to detect other user within the spectrum band so that it individually and independently to avoid hopping on the occupied channels.

According to the Bluetooth Core specification, the Bluetooth system is designed not have the ability to coordinated with other FHSS System in an effort to avoid the simultaneous occupancy of individual hopping frequencies by multiple transmitter.

5.10 Radiated Spurious Emission & Restricted bands

Test Requirement:	47 CFR Part 15C Section 15.209 and 15.205				
Test Method:	ANSI C63.10: 2013				
Test Site:	Measurement Distance: 3m (Semi-Anechoic Chamber)				
Receiver Setup:	Frequency	Detector	RBW	VBW	Remark
	0.009MHz-0.090MHz	Peak	10kHz	30kHz	Peak
	0.009MHz-0.090MHz	Average	10kHz	30kHz	Average
	0.090MHz-0.110MHz	Quasi-peak	10kHz	30kHz	Quasi-peak
	0.110MHz-0.490MHz	Peak	10kHz	30kHz	Peak
	0.110MHz-0.490MHz	Average	10kHz	30kHz	Average
	0.490MHz -30MHz	Quasi-peak	10kHz	30kHz	Quasi-peak
	30MHz-1GHz	Peak	120 kHz	300kHz	Peak
	Above 1GHz	Peak	1MHz	3MHz	Peak
		Peak	1MHz	10Hz	Average
Limit:	Frequency	Field strength (microvolt/meter)	Limit (dBuV/m)	Remark	Measurement distance (m)
	0.009MHz-0.490MHz	2400/F(kHz)	-	-	300
	0.490MHz-1.705MHz	24000/F(kHz)	-	-	30
	1.705MHz-30MHz	30	-	-	30
	30MHz-88MHz	100	40.0	Quasi-peak	3
	88MHz-216MHz	150	43.5	Quasi-peak	3
	216MHz-960MHz	200	46.0	Quasi-peak	3
	960MHz-1GHz	500	54.0	Quasi-peak	3
	Above 1GHz	500	54.0	Average	3
Note: 15.35(b), Unless otherwise specified, the limit on peak radio frequency emissions is 20dB above the maximum permitted average emission limit applicable to the equipment under test. This peak limit applies to the total peak emission level radiated by the device.					

Test Setup:

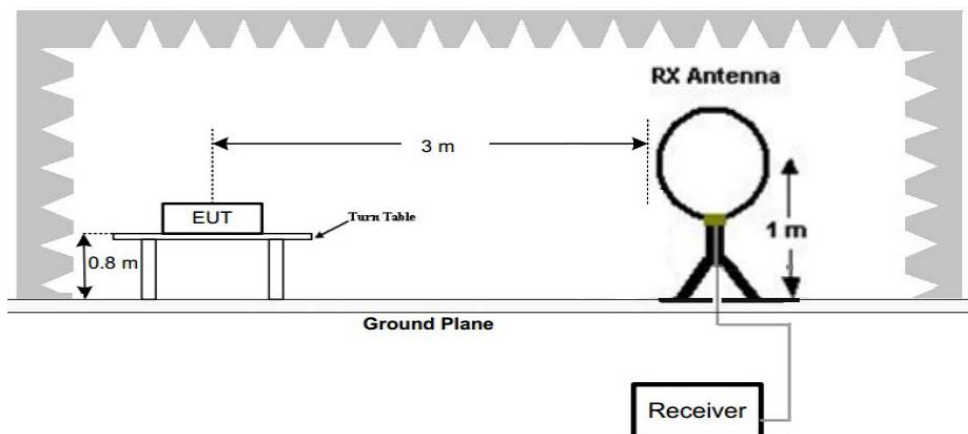


Figure 1. Below 30MHz

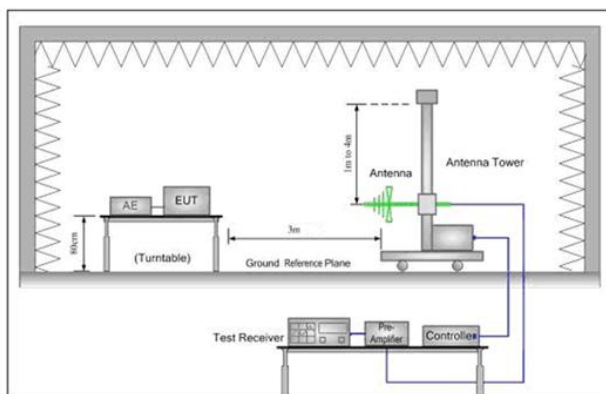


Figure 2. 30MHz to 1GHz

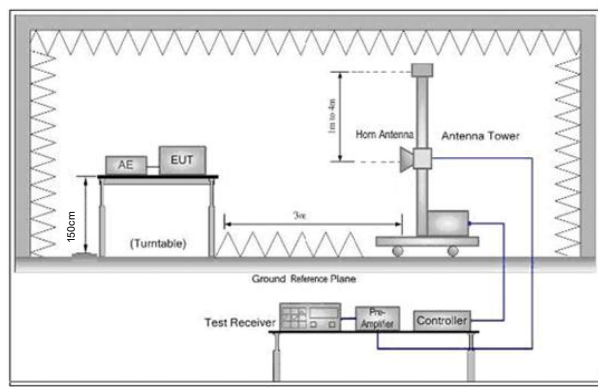


Figure 3. Above 1 GHz

Test Procedure:

- a. 1) Below 1G: The EUT was placed on the top of a rotating table 0.8 meters above the ground at a 3 meter semi-anechoic camber. The table was rotated 360 degrees to determine the position of the highest radiation.
2) Above 1G: The EUT was placed on the top of a rotating table 1.5 meters above the ground at a 3 meter semi-anechoic camber. The table was rotated 360 degrees to determine the position of the highest radiation.
Note: For the radiated emission test above 1GHz:
Place the measurement antenna away from each area of the EUT determined to be a source of emissions at the specified measurement distance, while keeping the measurement antenna aimed at the source of emissions at each frequency of significant emissions, with polarization oriented for maximum response. The measurement antenna may have to be higher or lower than the EUT, depending on the radiation pattern of the emission and staying aimed at the emission source for receiving the maximum signal. The final measurement antenna elevation shall be that which maximizes the emissions. The measurement antenna elevation for maximum emissions shall be restricted to a range of heights of from 1 m to 4 m above the ground or reference ground plane.
- b. The EUT was set 3 meters away from the interference-receiving antenna, which was mounted on the top of a variable-height antenna tower.
- c. The antenna height is varied from one meter to four meters above the ground to determine the maximum value of the field strength. Both horizontal and vertical polarizations of the antenna are set to make the measurement.

	d. For each suspected emission, the EUT was arranged to its worst case and then the antenna was tuned to heights from 1 meter to 4 meters (for the test frequency of below 30MHz, the antenna was tuned to heights 1 meter) and the rotatable table was turned from 0 degrees to 360 degrees to find the maximum reading. e. The test-receiver system was set to Peak Detect Function and Specified Bandwidth with Maximum Hold Mode. f. If the emission level of the EUT in peak mode was 10dB lower than the limit specified, then testing could be stopped and the peak values of the EUT would be reported. Otherwise the emissions that did not have 10dB margin would be re-tested one by one using peak, quasi-peak or average method as specified and then reported in a data sheet. g. Test the EUT in the lowest channel (2402MHz), the middle channel (2441MHz), the Highest channel (2480MHz) h. The radiation measurements are performed in X, Y, Z axis positioning for Transmitting mode, and found the X axis positioning which it is the worst case. i. Repeat above procedures until all frequencies measured was complete.
Exploratory Test Mode:	Non-hopping transmitting mode with all kind of modulation and all kind of data type Transmitting mode
Final Test Mode:	Through Pre-scan, find the DH5 of data type and GFSK modulation is the worst case. For below 1GHz part, through pre-scan, the worst case is the highest channel. Only the worst case is recorded in the report.
Test Results:	Pass

5.10.1 Radiated Emission below 1GHz


30MHz~1GHz

9071-F

Test mode:

Transmitting

Vertical

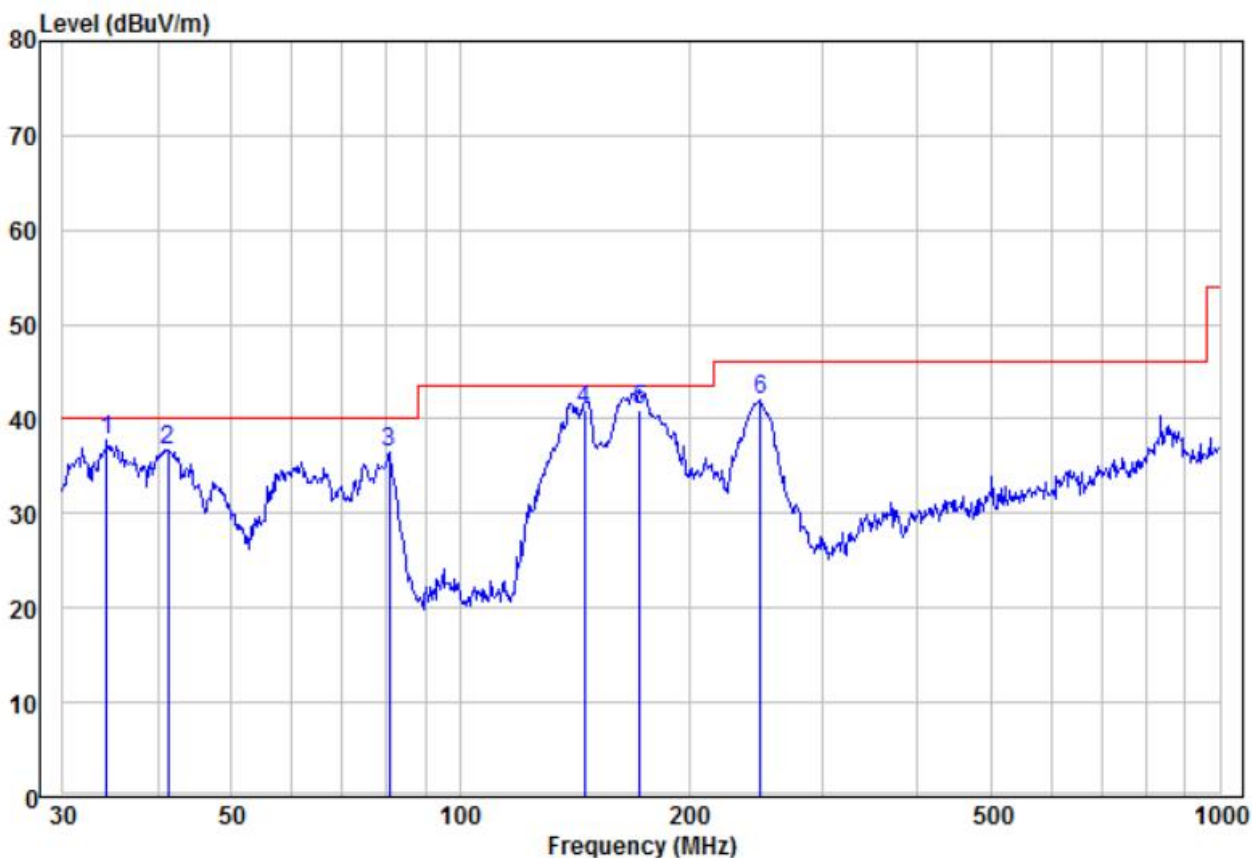

		Read		Limit	Over		
	Freq	Level	Factor	Level	Line	Limit	Remark
	MHz	dBuV	dB/m	dBuV/m	dBuV/m	dB	Pol/Phase
1	pp	34.28	27.53	10.24	37.77	40.00	-2.23 Peak
2		41.28	24.51	12.27	36.78	40.00	-3.22 Peak
3		80.64	27.68	8.72	36.40	40.00	-3.60 Peak
4		145.86	31.17	9.71	40.88	43.50	-2.62 QP
5	qp	172.60	30.16	10.87	41.03	43.50	-2.47 QP
6		248.55	25.73	16.33	42.06	46.00	-3.94 Peak

Remark:


The field strength is calculated by adding the Antenna Factor, Cable Factor & Preamplifier. The basic equation with a sample calculation is as follows:

Factor= Antenna Factor + Cable Factor – Preamplifier Factor,

Level = Read Level + Factor,

Over Limit=Level-Limit Line.

Test mode:	Transmitting	Horizontal
------------	--------------	------------

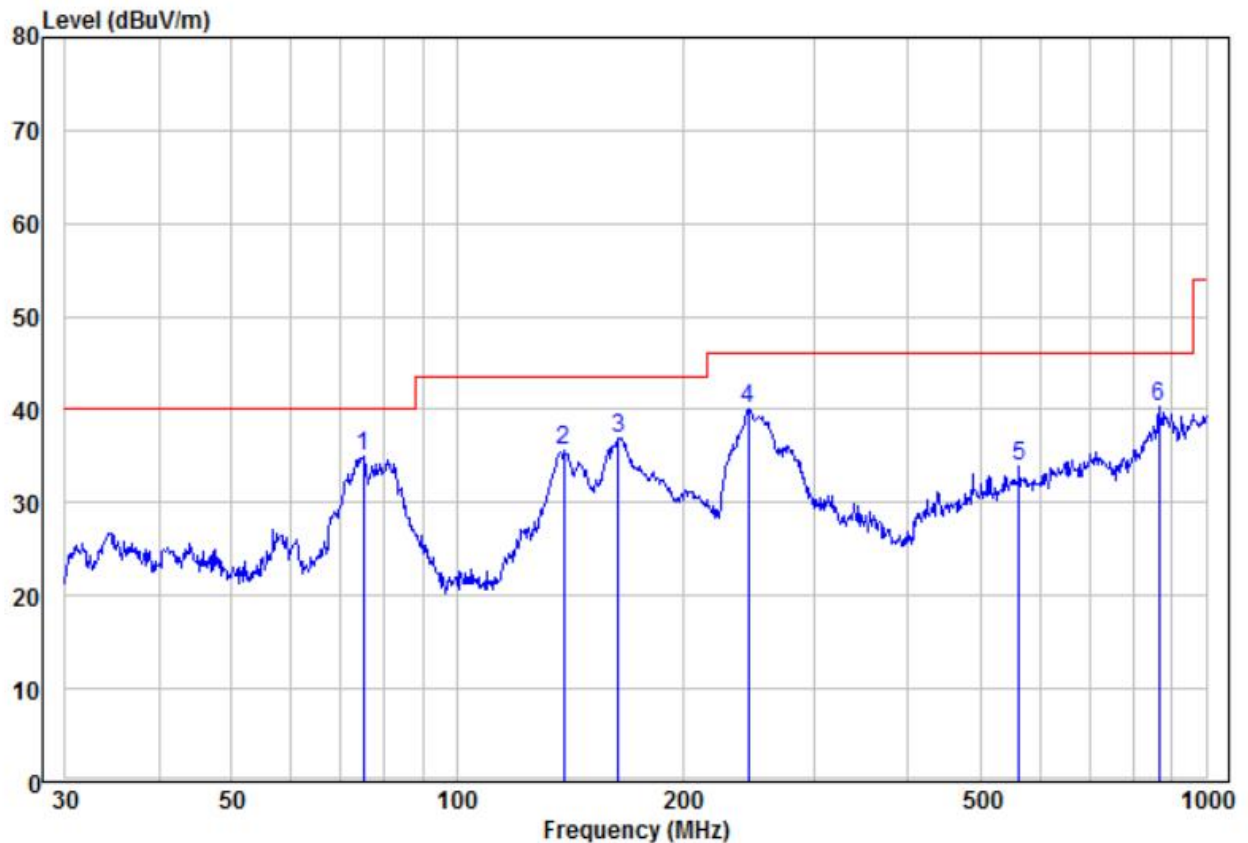

		Read			Limit	Over		
	Freq	Level	Factor	Level	Line	Limit	Remark	Pol/Phase
	MHz	dBuV	dB/m	dBuV/m	dBuV/m	dB		
1	pp	74.92	25.79	9.24	35.03	40.00	-4.97 Peak	HORIZONTAL
2		138.87	26.00	9.60	35.60	43.50	-7.90 Peak	HORIZONTAL
3		164.33	26.49	10.45	36.94	43.50	-6.56 Peak	HORIZONTAL
4		245.09	23.94	16.24	40.18	46.00	-5.82 Peak	HORIZONTAL
5		562.66	11.42	22.56	33.98	46.00	-12.02 Peak	HORIZONTAL
6		866.09	10.96	29.30	40.26	46.00	-5.74 Peak	HORIZONTAL

Remark:

The field strength is calculated by adding the Antenna Factor, Cable Factor & Preamplifier. The basic equation with a sample calculation is as follows:


Factor= Antenna Factor + Cable Factor – Preamplifier Factor,

Level = Read Level + Factor,

Over Limit=Level-Limit Line.

9090-F

Test mode:	Transmitting	Vertical
------------	--------------	----------

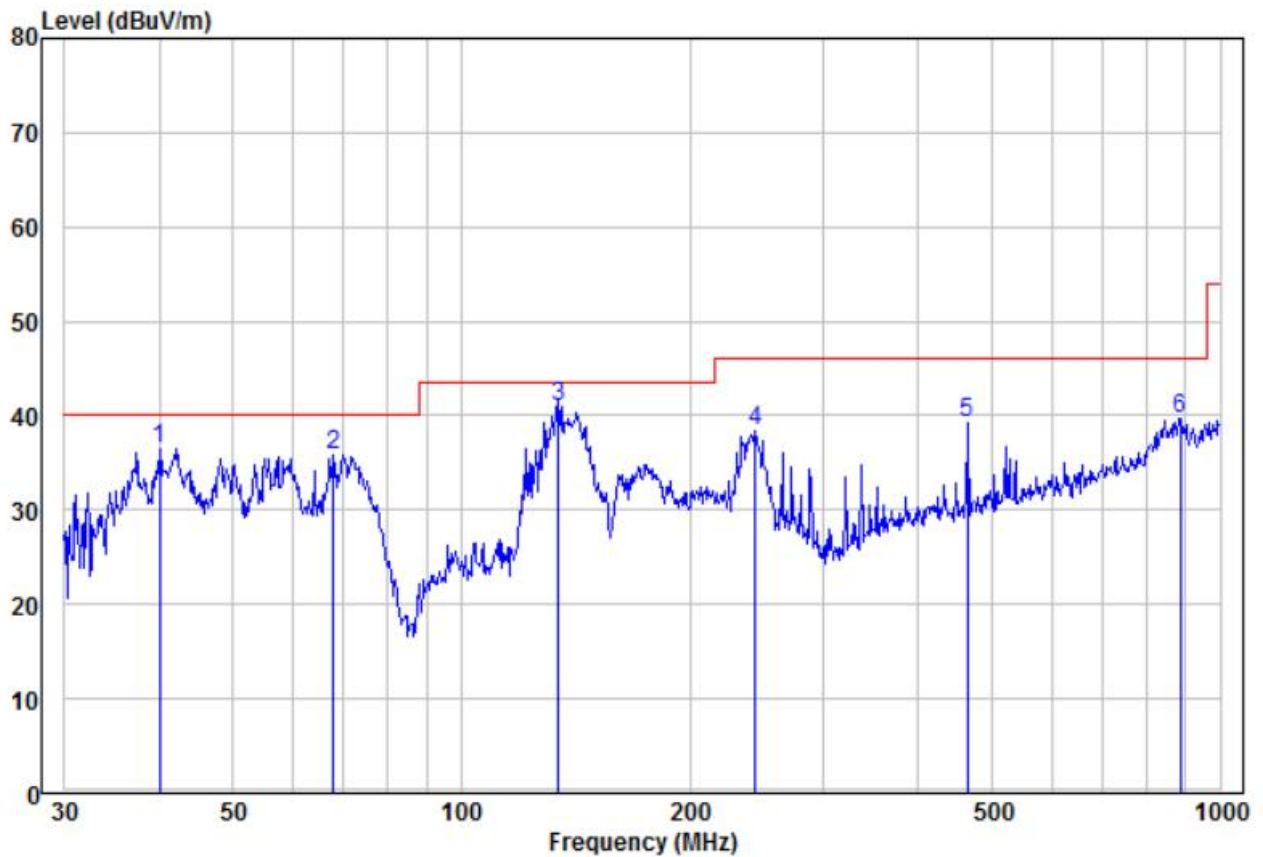

	Read			Limit	Over		
Freq	Level	Factor	Level	Line	Limit	Remark	Pol/Phase
MHz	dBuV	dB/m	dBuV/m	dBuV/m	dB		
1 pk	39.99	24.38	12.05	36.43	40.00	-3.57 Peak	VERTICAL
2	67.91	25.36	10.54	35.90	40.00	-4.10 Peak	VERTICAL
3 pp	134.09	31.09	9.81	40.90	43.50	-2.60 QP	VERTICAL
4	244.23	22.16	16.19	38.35	46.00	-7.65 Peak	VERTICAL
5	463.97	18.51	20.71	39.22	46.00	-6.78 Peak	VERTICAL
6	887.61	10.13	29.62	39.75	46.00	-6.25 Peak	VERTICAL

Remark:


The field strength is calculated by adding the Antenna Factor, Cable Factor & Preamplifier. The basic equation with a sample calculation is as follows:

Factor= Antenna Factor + Cable Factor – Preamplifier Factor,

Level = Read Level + Factor,

Over Limit=Level-Limit Line.

Test mode:	Transmitting	Horizontal
------------	--------------	------------

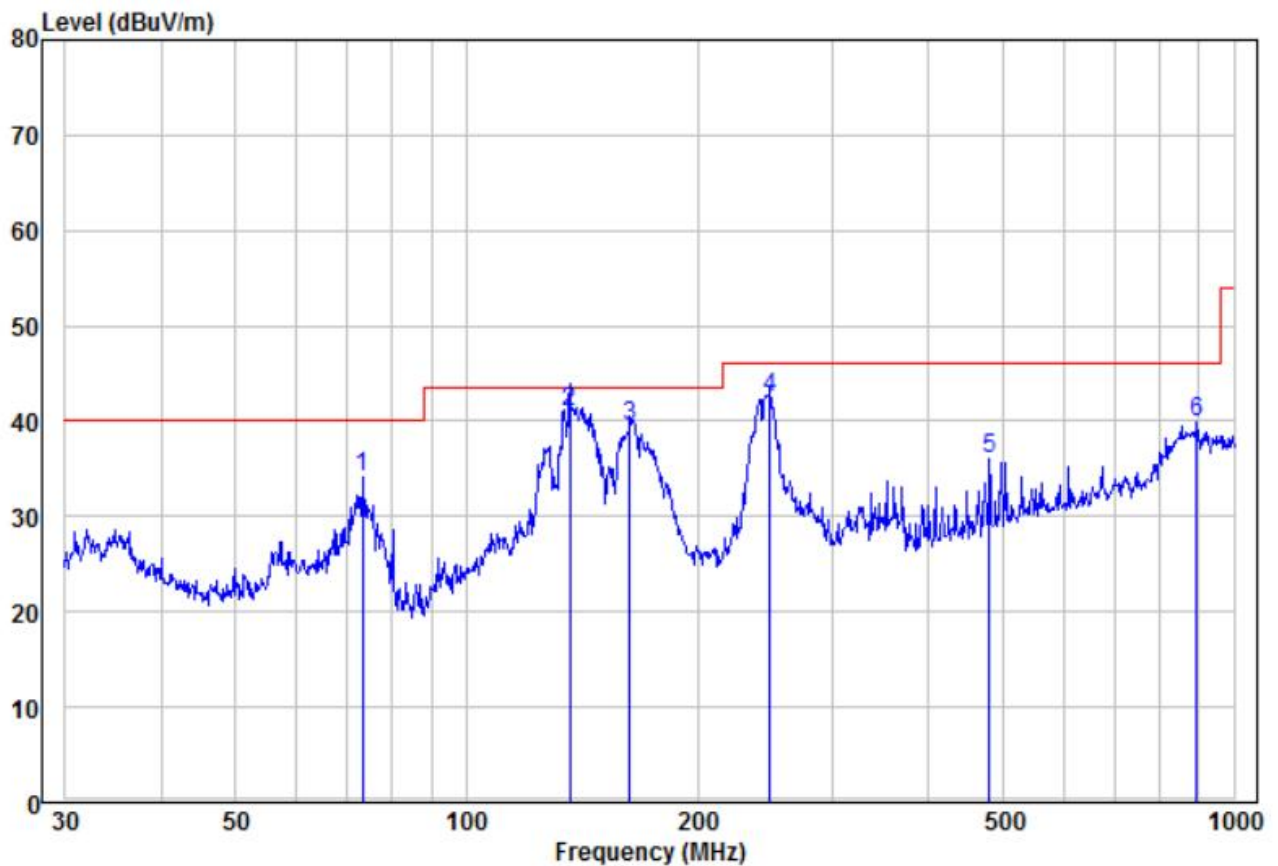

		Read		Limit	Over		
	Freq	Level	Factor	Level	Line	Limit	Remark
	MHz	dBuV	dB/m	dBuV/m	dBuV/m	dB	Pol/Phase
1	pk	73.10	24.66	9.50	34.16	40.00	-5.84 Peak
2	pp	136.46	31.27	9.71	40.98	43.50	-2.52 QP
3		163.18	29.16	10.40	39.56	43.50	-3.94 QP
4		248.55	26.15	16.33	42.48	46.00	-3.52 QP
5		480.53	14.82	21.22	36.04	46.00	-9.96 Peak
6		893.86	10.08	29.71	39.79	46.00	-6.21 Peak

Remark:

The field strength is calculated by adding the Antenna Factor, Cable Factor & Preamplifier. The basic equation with a sample calculation is as follows:


Factor= Antenna Factor + Cable Factor – Preamplifier Factor,

Level = Read Level + Factor,

Over Limit=Level-Limit Line.

9101-F

Test mode:	Transmitting	Vertical
------------	--------------	----------

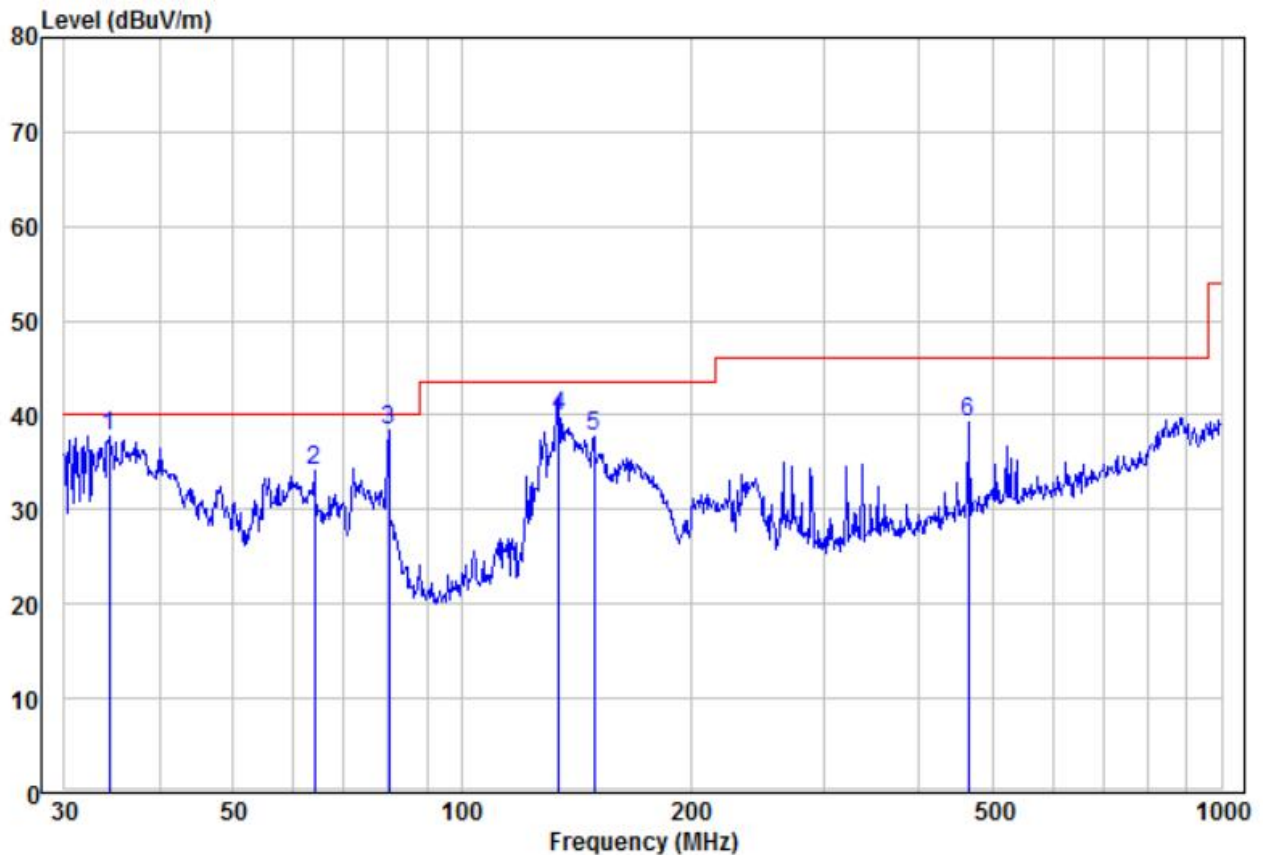

	Read		Limit	Over			
Freq	Level	Factor	Level	Line	Limit	Remark	Pol/Phase
MHz	dBuV	dB/m	dBuV/m	dBuV/m	dB		
1	34.40	27.43	10.29	37.72	40.00	-2.28 QP	VERTICAL
2	63.98	22.34	11.71	34.05	40.00	-5.95 Peak	VERTICAL
3 pp	80.08	29.92	8.56	38.48	40.00	-1.52 QP	VERTICAL
4	134.09	30.09	9.81	39.90	43.50	-3.60 QP	VERTICAL
5 pk	149.49	27.97	9.81	37.78	43.50	-5.72 Peak	VERTICAL
6	463.97	18.51	20.71	39.22	46.00	-6.78 Peak	VERTICAL

Remark:


The field strength is calculated by adding the Antenna Factor, Cable Factor & Preamplifier. The basic equation with a sample calculation is as follows:

Factor= Antenna Factor + Cable Factor – Preamplifier Factor,

Level = Read Level + Factor,

Over Limit=Level-Limit Line.

Test mode:	Transmitting	Horizontal
------------	--------------	------------

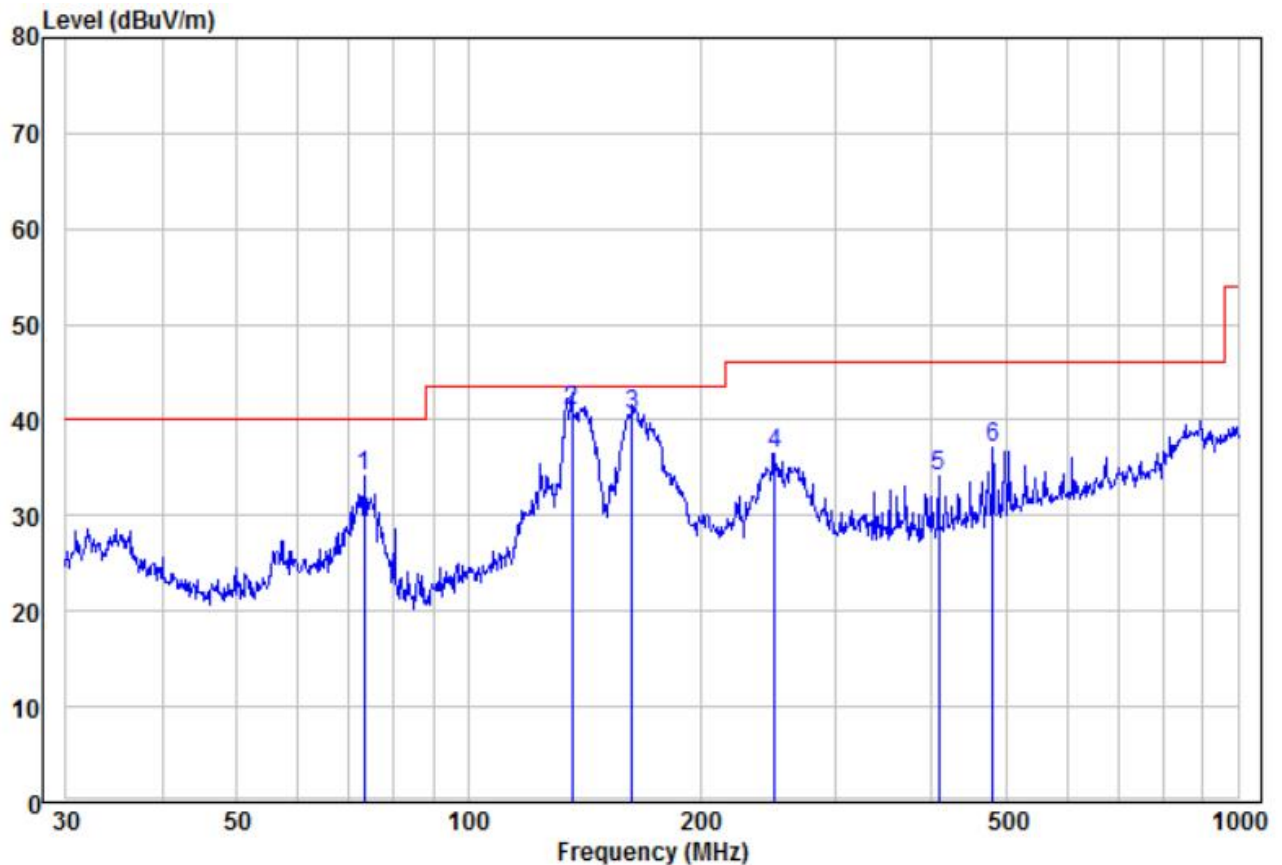

		Read		Limit	Over		
	Freq	Level	Factor	Level	Line	Limit	Remark
	MHz	dBuV	dB/m	dBuV/m	dBuV/m	dB	Pol/Phase
1	pk	73.10	24.66	9.50	34.16	40.00	-5.84 Peak
2	pp	136.46	31.27	9.71	40.98	43.50	-2.52 QP
3		163.18	30.16	10.40	40.56	43.50	-2.94 QP
4		250.30	20.13	16.38	36.51	46.00	-9.49 Peak
5		408.95	14.68	19.38	34.06	46.00	-11.94 Peak
6		480.53	15.82	21.22	37.04	46.00	-8.96 Peak

Remark:

The field strength is calculated by adding the Antenna Factor, Cable Factor & Preamplifier. The basic equation with a sample calculation is as follows:


Factor= Antenna Factor + Cable Factor – Preamplifier Factor,

Level = Read Level + Factor,

Over Limit=Level-Limit Line.

9210-F

Test mode:	Transmitting	Vertical
------------	--------------	----------

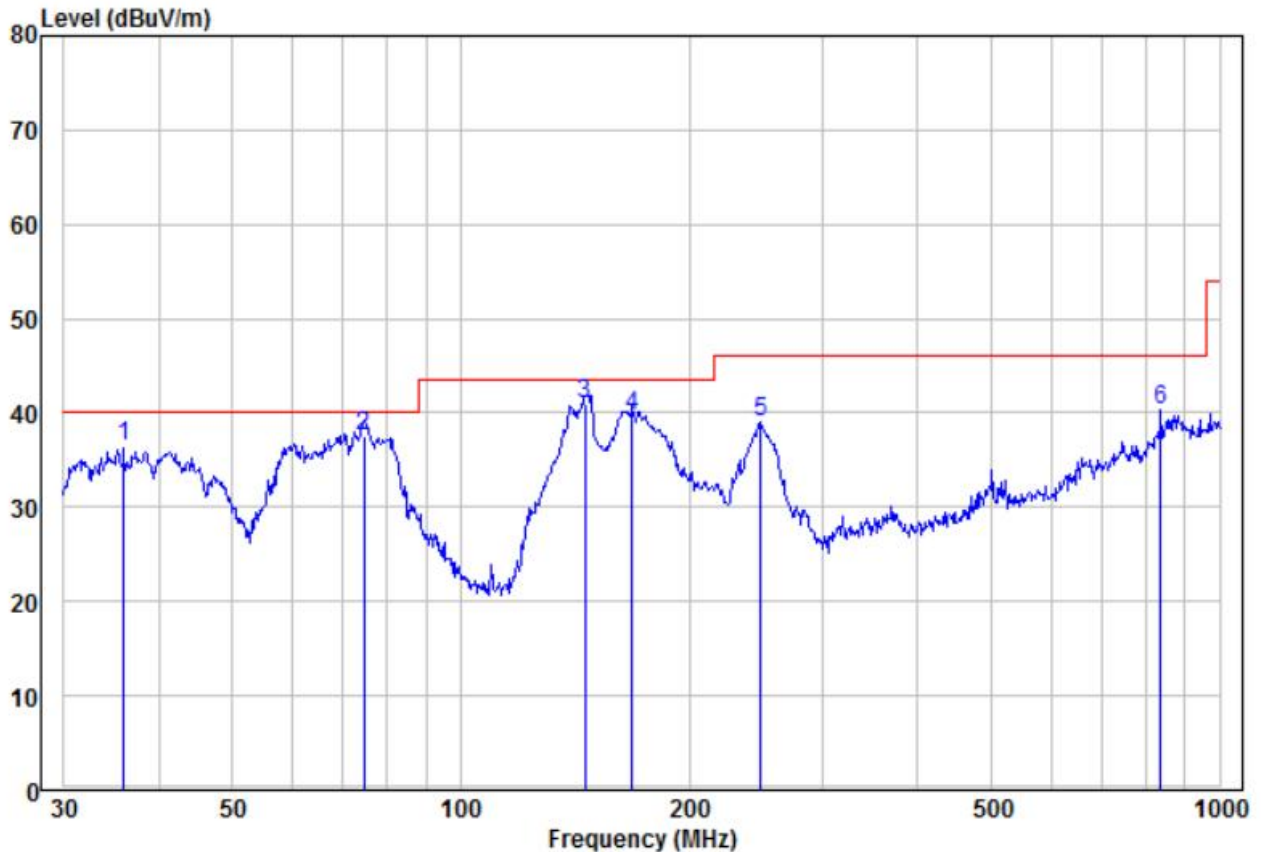

		Read		Limit	Over		
	Freq	Level	Factor	Level	Line	Limit	Remark
	MHz	dBuV	dB/m	dBuV/m	dBuV/m	dB	Pol/Phase
1	pk	36.00	25.71	10.83	36.54	40.00	-3.46 Peak
2	pp	74.66	28.30	9.28	37.58	40.00	-2.42 QP
3		145.86	31.17	9.71	40.88	43.50	-2.62 QP
4		168.41	29.11	10.63	39.74	43.50	-3.76 QP
5		248.55	22.73	16.33	39.06	46.00	-6.94 Peak
6		836.24	11.56	28.84	40.40	46.00	-5.60 Peak

Remark:


The field strength is calculated by adding the Antenna Factor, Cable Factor & Preamplifier. The basic equation with a sample calculation is as follows:

Factor= Antenna Factor + Cable Factor – Preamplifier Factor,

Level = Read Level + Factor,

Over Limit=Level-Limit Line.

Test mode:	Transmitting	Horizontal
------------	--------------	------------

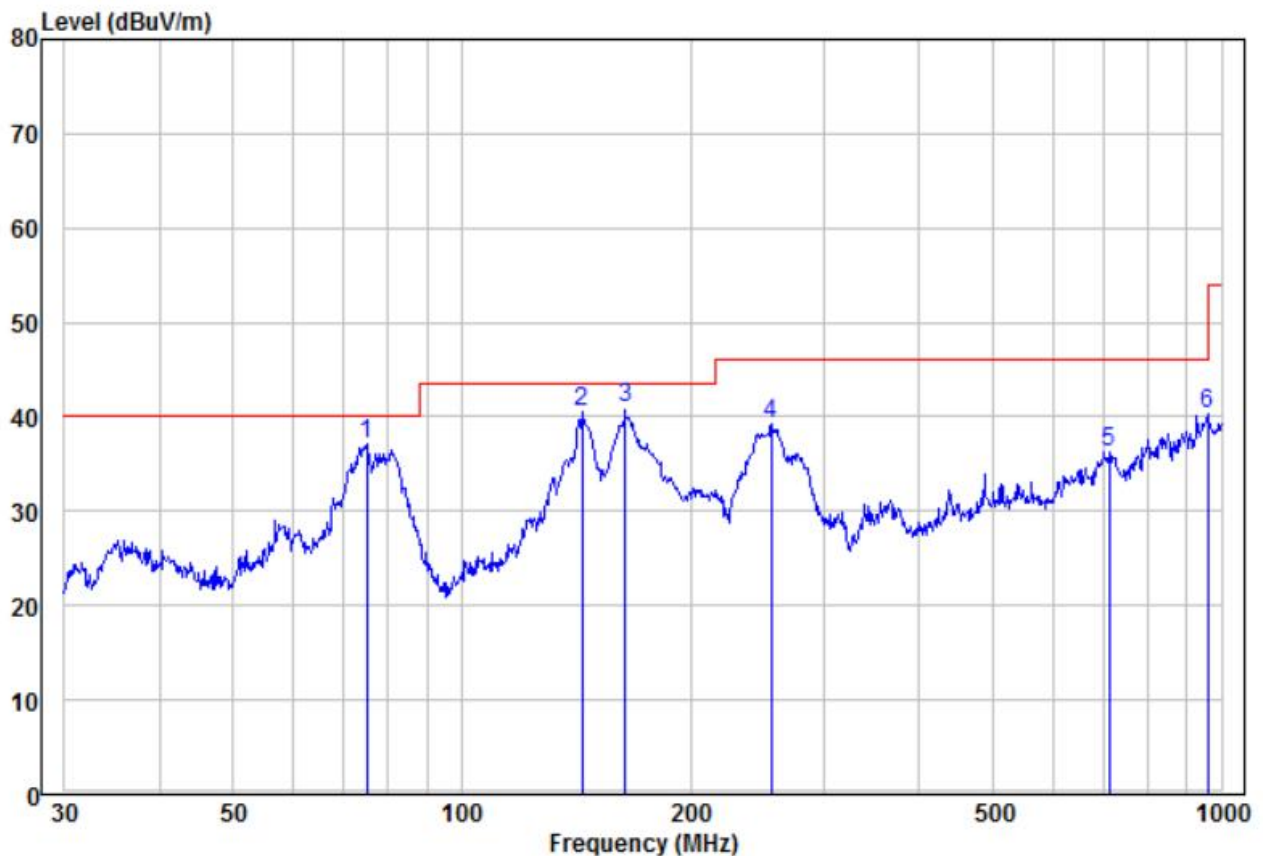

	Read	Limit	Over				
	Freq	Level	Factor	Level	Line	Limit	Remark
	MHz	dBuV	dB/m	dBuV/m	dBuV/m	dB	Pol/Phase
1	74.92	27.79	9.24	37.03	40.00	-2.97	QP
2	143.83	30.97	9.66	40.63	43.50	-2.87	QP
3 pp	164.33	30.49	10.45	40.94	43.50	-2.56	QP
4	255.62	22.71	16.53	39.24	46.00	-6.76	Peak
5	711.67	11.83	24.49	36.32	46.00	-9.68	Peak
6 pk	958.79	11.62	28.78	40.40	46.00	-5.60	Peak

Remark:

The field strength is calculated by adding the Antenna Factor, Cable Factor & Preamplifier. The basic equation with a sample calculation is as follows:


Factor= Antenna Factor + Cable Factor – Preamplifier Factor,

Level = Read Level + Factor,

Over Limit=Level-Limit Line.

FYT01

Test mode:	Transmitting	Vertical
------------	--------------	----------

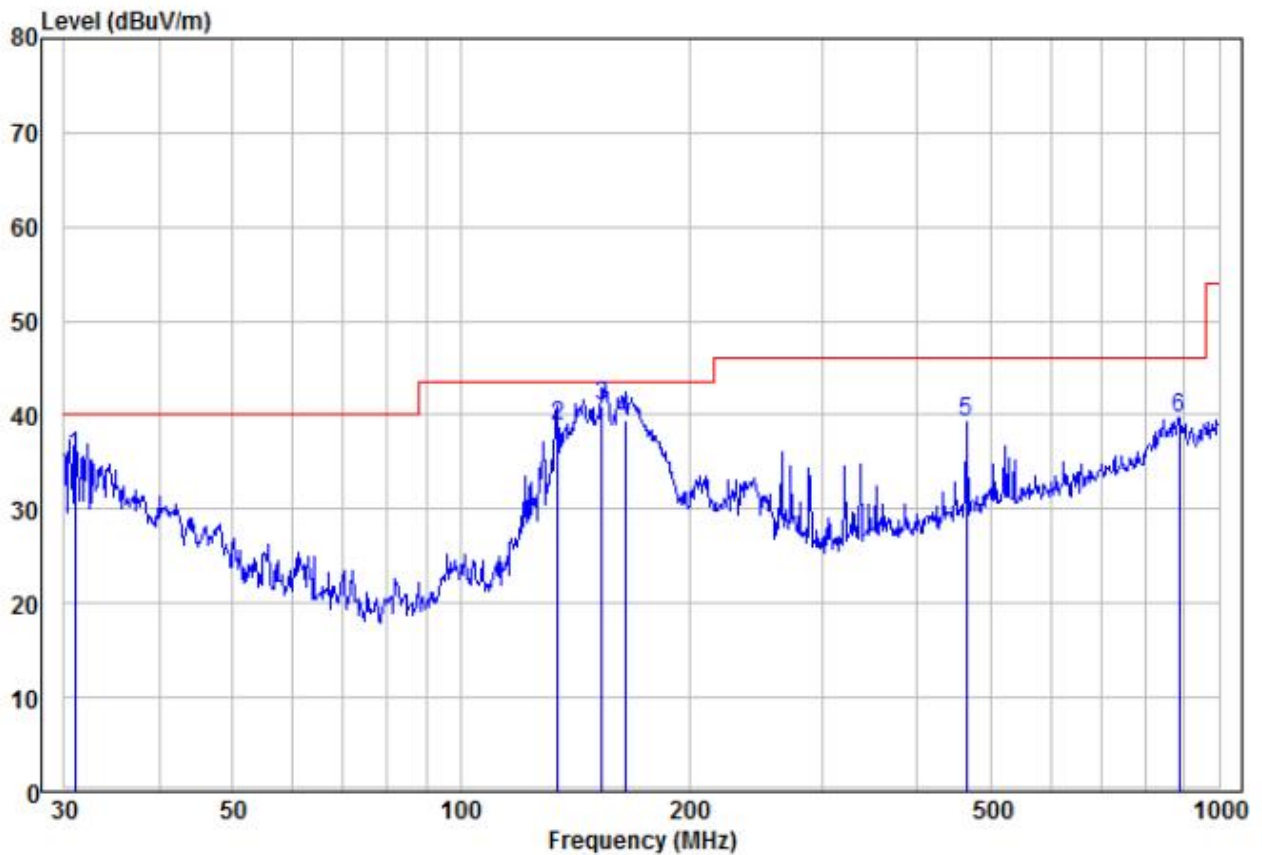

	Freq	Read Level	Factor	Level	Limit Line	Over Limit	Remark	Pol/Phase
	MHz	dBuV	dB/m	dBuV/m	dBuV/m	dB		
1	30.96	26.64	8.90	35.54	40.00	-4.46	QP	VERTICAL
2	134.09	29.09	9.81	38.90	43.50	-4.60	QP	VERTICAL
3 pp	153.74	30.88	9.98	40.86	43.50	-2.64	QP	VERTICAL
4	164.91	28.90	10.48	39.38	43.50	-4.12	QP	VERTICAL
5	463.97	18.51	20.71	39.22	46.00	-6.78	Peak	VERTICAL
6 pk	887.61	10.13	29.62	39.75	46.00	-6.25	Peak	VERTICAL

Remark:


The field strength is calculated by adding the Antenna Factor, Cable Factor & Preamplifier. The basic equation with a sample calculation is as follows:

Factor= Antenna Factor + Cable Factor – Preamplifier Factor,

Level = Read Level + Factor,

Over Limit=Level-Limit Line.

Test mode:	Transmitting	Horizontal
------------	--------------	------------

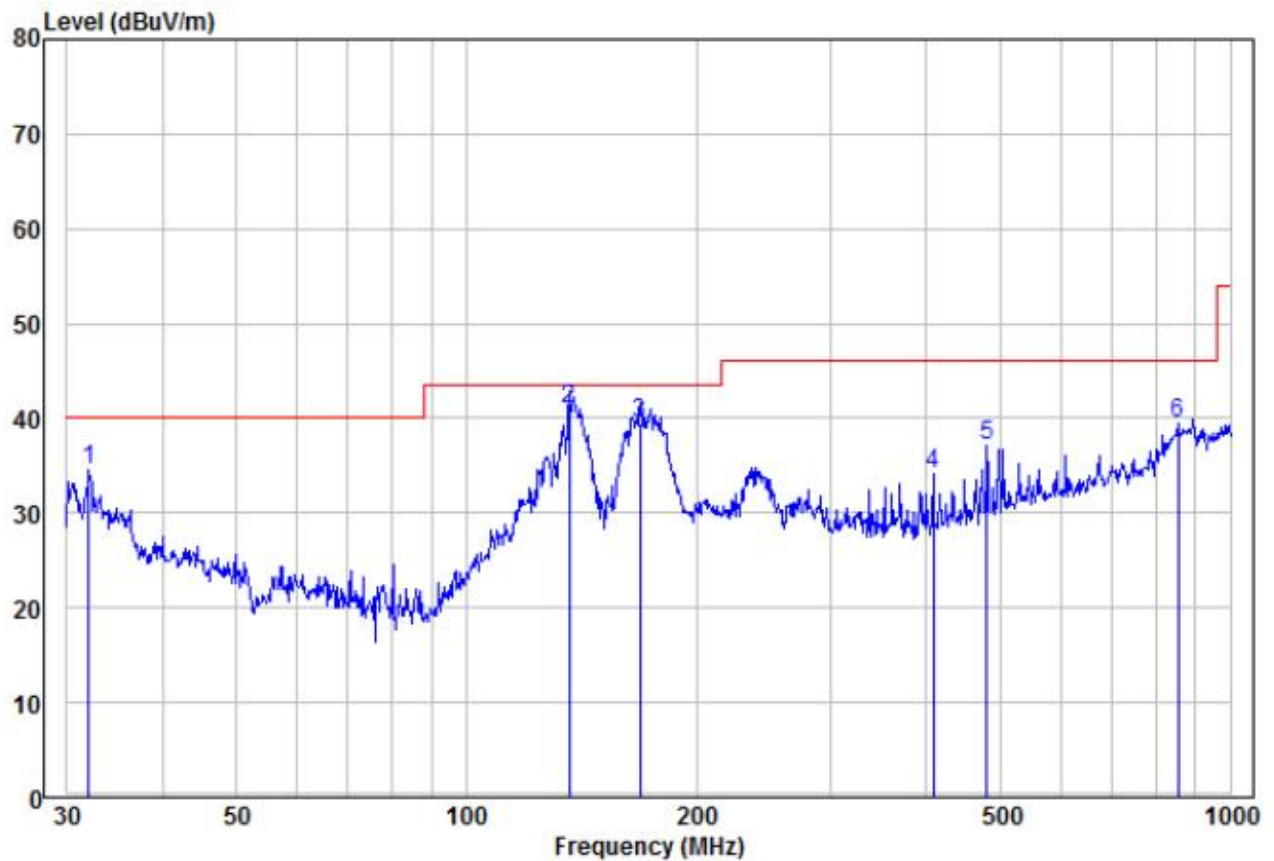

		Read			Limit	Over		
	Freq	Level	Factor	Level	Line	Limit	Remark	Pol/Phase
	MHz	dBuV	dB/m	dBuV/m	dBuV/m	dB		
1 pk	32.07	25.19	9.35	34.54	40.00	-5.46	Peak	HORIZONTAL
2 pp	136.46	31.27	9.71	40.98	43.50	-2.52	QP	HORIZONTAL
3	169.01	28.85	10.66	39.51	43.50	-3.99	QP	HORIZONTAL
4	408.95	14.68	19.38	34.06	46.00	-11.94	Peak	HORIZONTAL
5	480.53	15.82	21.22	37.04	46.00	-8.96	Peak	HORIZONTAL
6	854.02	10.43	29.12	39.55	46.00	-6.45	Peak	HORIZONTAL

Remark:

The field strength is calculated by adding the Antenna Factor, Cable Factor & Preamplifier. The basic equation with a sample calculation is as follows:


Factor= Antenna Factor + Cable Factor – Preamplifier Factor,

Level = Read Level + Factor,

Over Limit=Level-Limit Line.

FYT03

Test mode:	Transmitting	Vertical
------------	--------------	----------

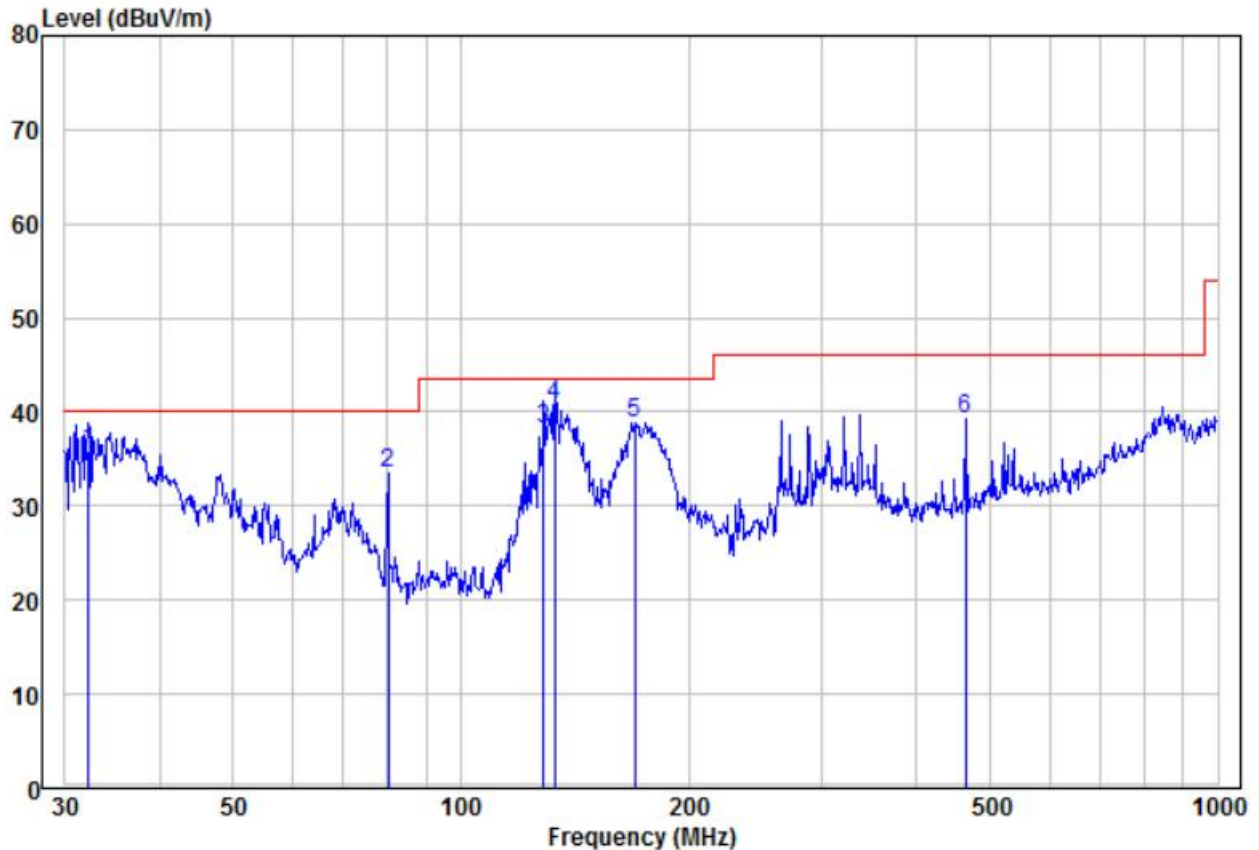

	Read			Limit	Over		
	Freq	Level	Factor	Level	Line	Limit	Remark
	MHz	dBuV	dB/m	dBuV/m	dBuV/m	dB	Pol/Phase
1	32.18	26.43	9.39	35.82	40.00	-4.18	QP
2	80.08	24.92	8.56	33.48	40.00	-6.52	Peak
3	128.56	27.99	10.16	38.15	43.50	-5.35	QP
4 pp	133.15	30.95	9.85	40.80	43.50	-2.70	QP
5 pk	169.60	28.18	10.68	38.86	43.50	-4.64	Peak
6	463.97	18.51	20.71	39.22	46.00	-6.78	Peak

Remark:


The field strength is calculated by adding the Antenna Factor, Cable Factor & Preamplifier. The basic equation with a sample calculation is as follows:

Factor= Antenna Factor + Cable Factor – Preamplifier Factor,

Level = Read Level + Factor,

Over Limit=Level-Limit Line.

Test mode:	Transmitting	Horizontal
------------	--------------	------------

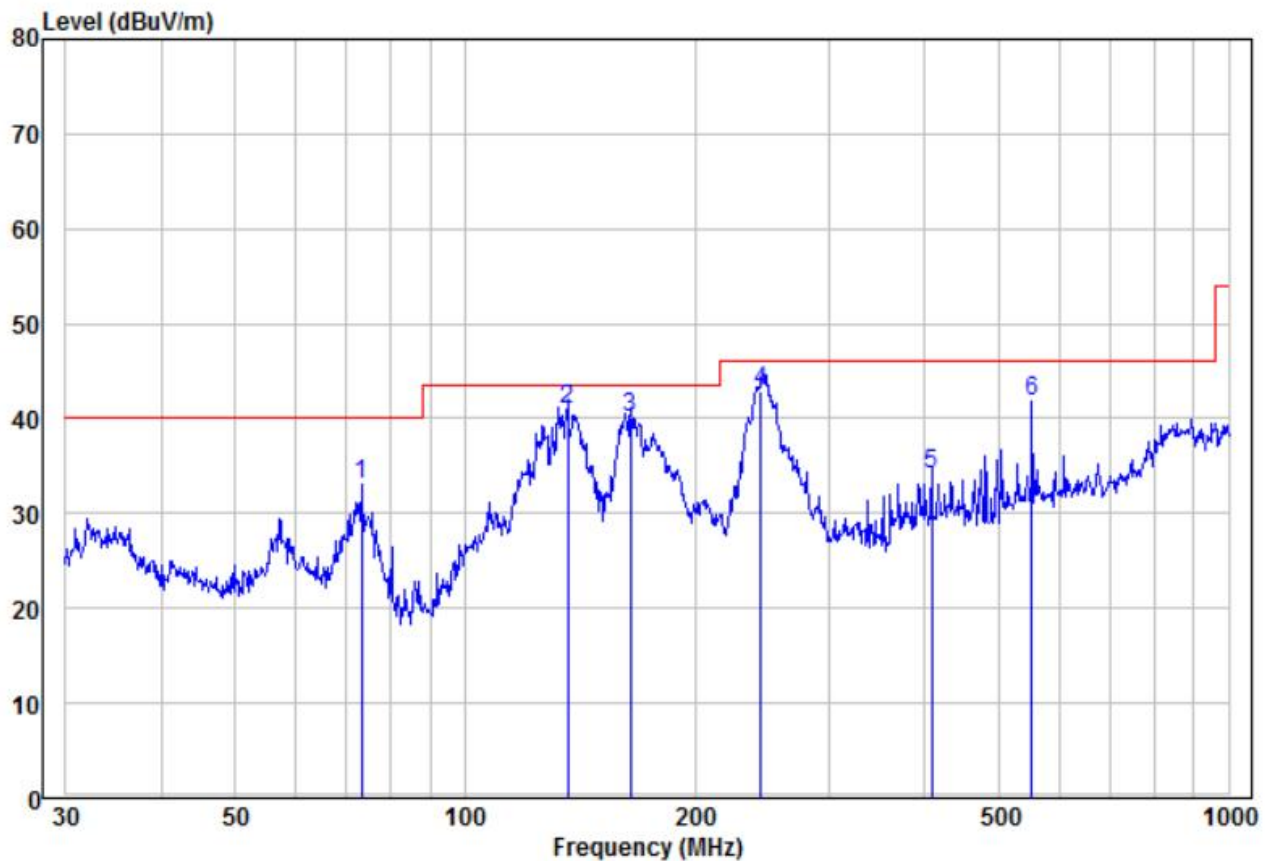

		Read		Limit	Over		
	Freq	Level	Factor	Level	Line	Limit	Remark
	MHz	dBuV	dB/m	dBuV/m	dBuV/m	dB	Pol/Phase
1	73.10	23.66	9.50	33.16	40.00	-6.84	Peak
2	pp 136.46	31.27	9.71	40.98	43.50	-2.52	QP
3	164.91	29.60	10.48	40.08	43.50	-3.42	QP
4	244.23	26.69	16.19	42.88	46.00	-3.12	QP
5	408.95	14.68	19.38	34.06	46.00	-11.94	Peak
6	pk 552.88	19.43	22.37	41.80	46.00	-4.20	Peak

Remark:

The field strength is calculated by adding the Antenna Factor, Cable Factor & Preamplifier. The basic equation with a sample calculation is as follows:


Factor= Antenna Factor + Cable Factor – Preamplifier Factor,

Level = Read Level + Factor,

Over Limit=Level-Limit Line.

LN001

Test mode:	Transmitting	Vertical
------------	--------------	----------

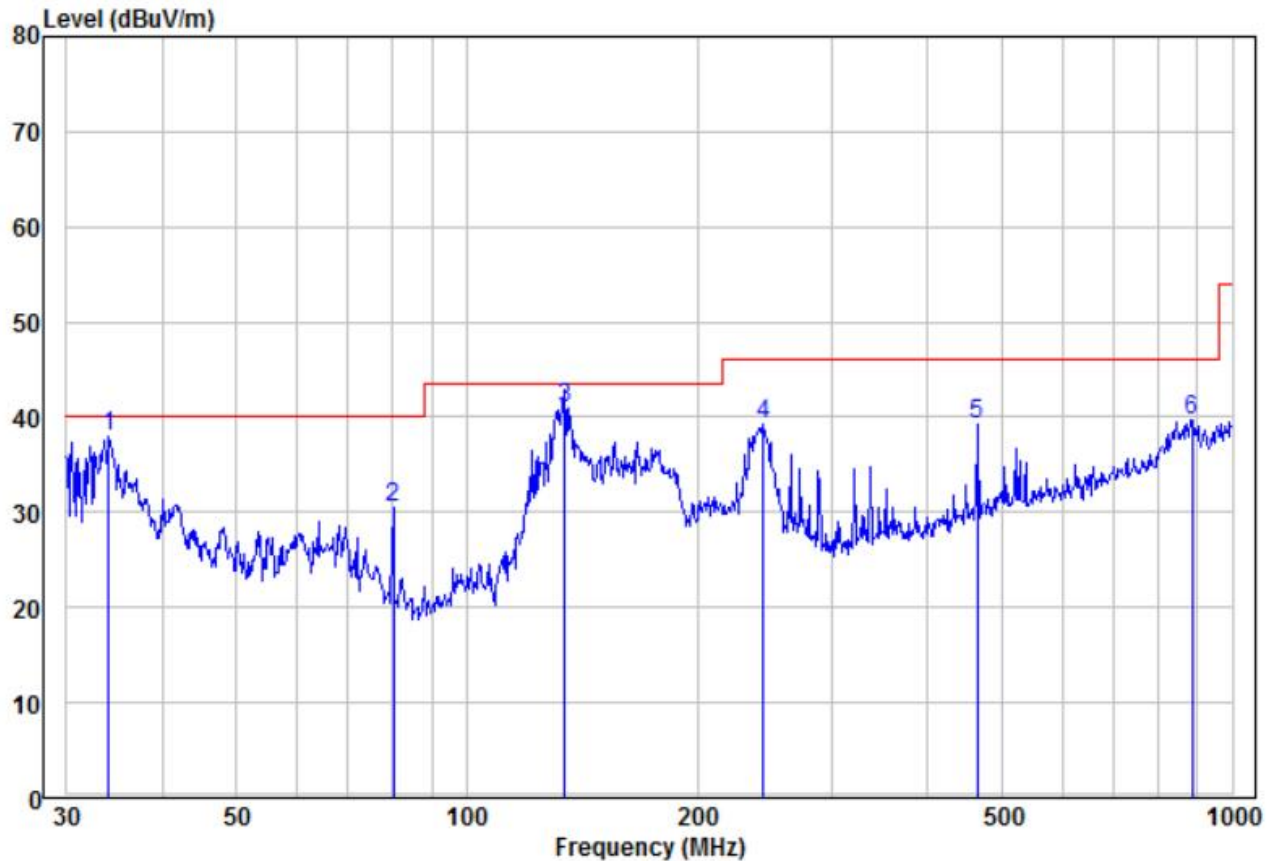

		Read		Limit	Over		
	Freq	Level	Factor	Level	Line	Limit	Remark
	MHz	dBuV	dB/m	dBuV/m	dBuV/m	dB	Pol/Phase
1	pp	34.04	27.74	10.14	37.88	40.00	-2.12 Peak
2		80.08	21.92	8.56	30.48	40.00	-9.52 Peak
3	qp	134.09	31.10	9.81	40.91	43.50	-2.59 QP
4		244.23	23.16	16.19	39.35	46.00	-6.65 Peak
5		463.97	18.51	20.71	39.22	46.00	-6.78 Peak
6		887.61	10.13	29.62	39.75	46.00	-6.25 Peak

Remark:


The field strength is calculated by adding the Antenna Factor, Cable Factor & Preamplifier. The basic equation with a sample calculation is as follows:

Factor= Antenna Factor + Cable Factor – Preamplifier Factor,

Level = Read Level + Factor,

Over Limit=Level-Limit Line.

Test mode:	Transmitting	Horizontal
------------	--------------	------------

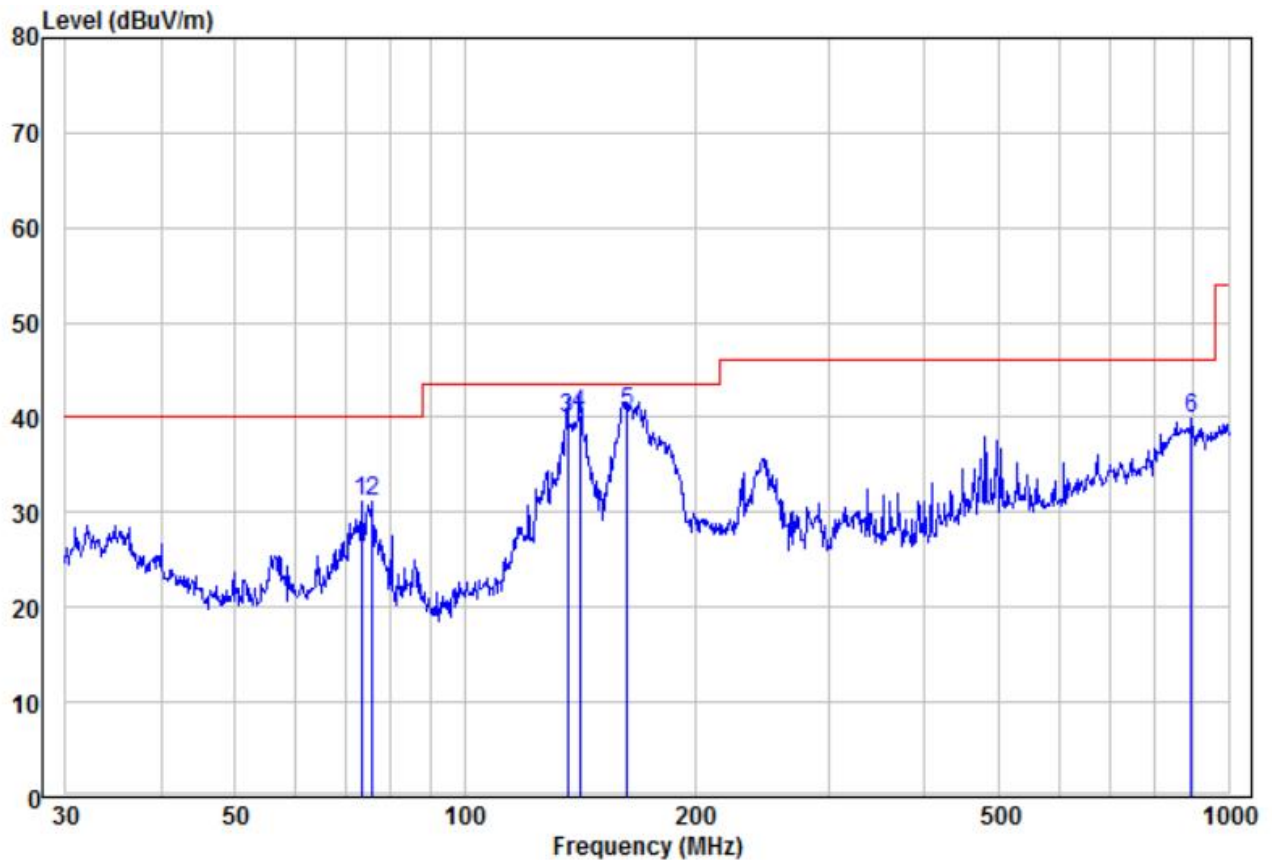

	Read			Limit	Over		
Freq	Level	Factor	Level	Line	Limit	Remark	Pol/Phase
MHz	dBuV	dB/m	dBuV/m	dBuV/m	dB		
1	73.10	21.66	9.50	31.16	40.00	-8.84 Peak	HORIZONTAL
2	75.71	22.00	9.13	31.13	40.00	-8.87 Peak	HORIZONTAL
3	136.46	30.27	9.71	39.98	43.50	-3.52 QP	HORIZONTAL
4	141.33	30.79	9.59	40.38	43.50	-3.12 QP	HORIZONTAL
5 pp	163.18	30.16	10.40	40.56	43.50	-2.94 QP	HORIZONTAL
6 pk	893.86	10.08	29.71	39.79	46.00	-6.21 Peak	HORIZONTAL

Remark:

The field strength is calculated by adding the Antenna Factor, Cable Factor & Preamplifier. The basic equation with a sample calculation is as follows:


Factor= Antenna Factor + Cable Factor – Preamplifier Factor,

Level = Read Level + Factor,

Over Limit=Level-Limit Line.

OB001-Black

Test mode:	Transmitting	Vertical
------------	--------------	----------

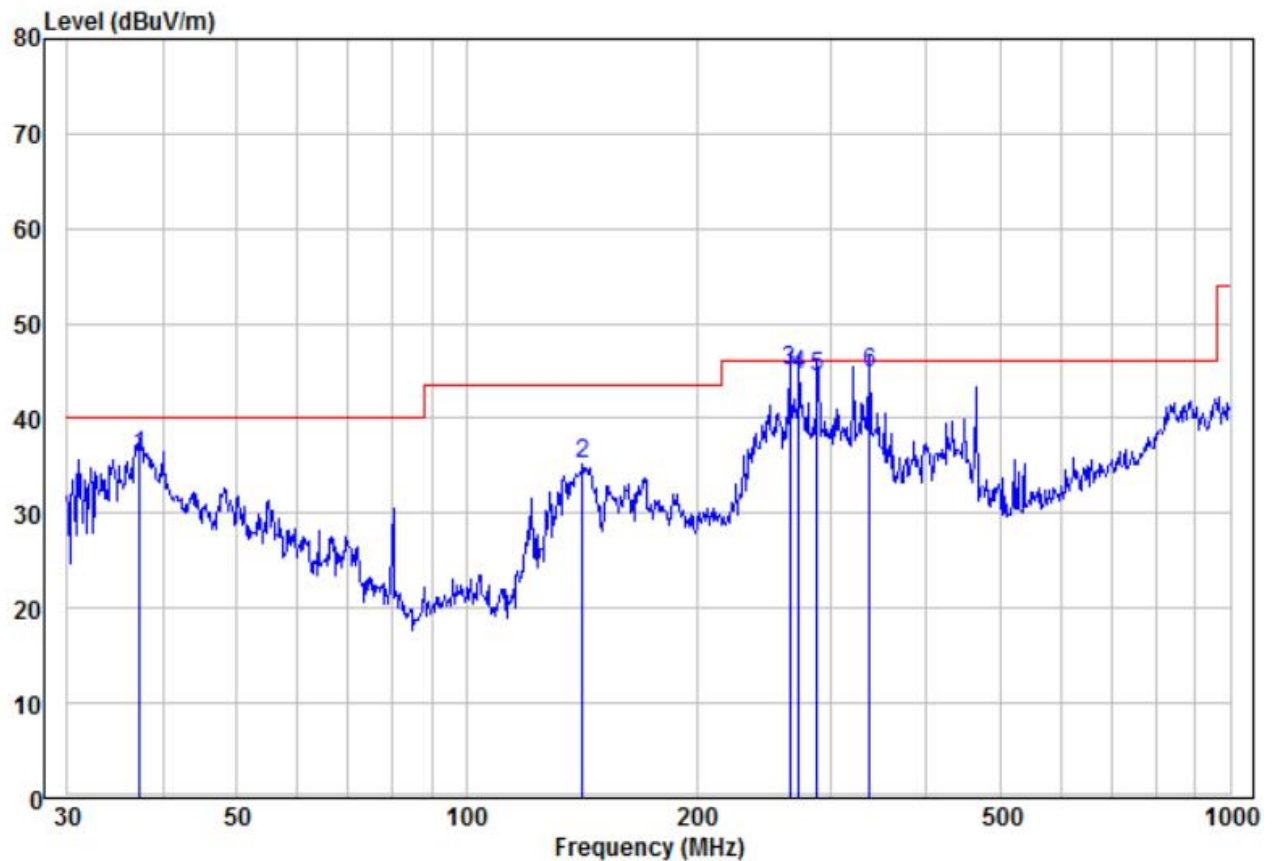

	Read			Limit	Over		
Freq	Level	Factor	Level	Line	Limit	Remark	Pol/Phase
MHz	dBuV	dB/m	dBuV/m	dBuV/m	dB		
1	37.29	24.80	11.22	36.02	40.00	-3.98 QP	VERTICAL
2 pk	141.83	25.61	9.60	35.21	43.50	-8.29 Peak	VERTICAL
3 pp	264.75	28.20	16.78	44.98	46.00	-1.02 QP	VERTICAL
4	272.28	27.50	17.00	44.50	46.00	-1.50 QP	VERTICAL
5	287.99	26.95	17.43	44.38	46.00	-1.62 QP	VERTICAL
6	337.22	26.03	18.68	44.71	46.00	-1.29 QP	VERTICAL

Remark:


The field strength is calculated by adding the Antenna Factor, Cable Factor & Preamplifier. The basic equation with a sample calculation is as follows:

Factor= Antenna Factor + Cable Factor – Preamplifier Factor,

Level = Read Level + Factor,

Over Limit=Level-Limit Line.

Test mode:	Transmitting	Horizontal
------------	--------------	------------

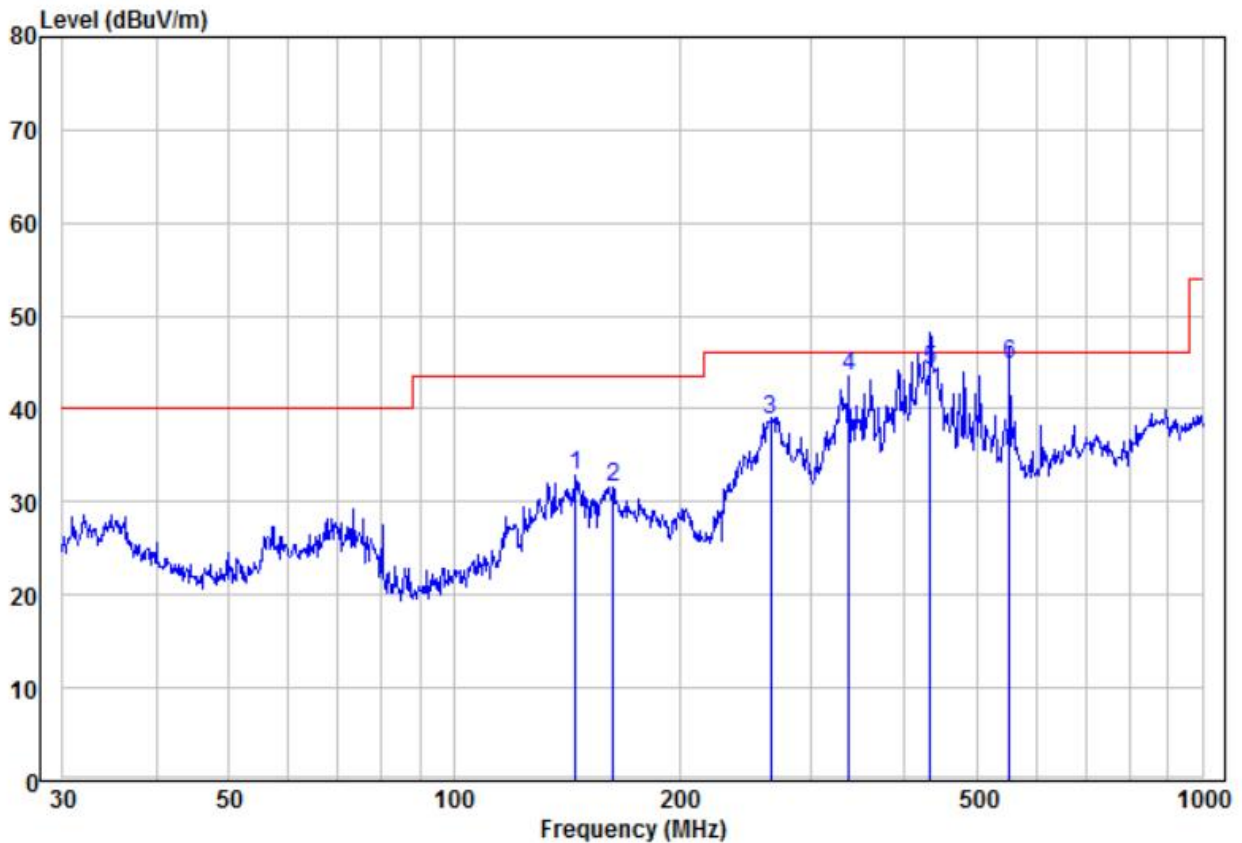

	Freq	Read Level	Factor	Level	Limit Line	Over Limit	Remark	Pol/Phase
	MHz	dBuV	dB/m	dBuV/m	dBuV/m	dB		
1	145.35	23.10	9.70	32.80	43.50	-10.70	Peak	HORIZONTAL
2	163.18	21.16	10.40	31.56	43.50	-11.94	Peak	HORIZONTAL
3	264.75	22.05	16.78	38.83	46.00	-7.17	Peak	HORIZONTAL
4 pk	337.22	24.74	18.68	43.42	46.00	-2.58	Peak	HORIZONTAL
5	432.55	24.29	19.89	44.18	46.00	-1.82	QP	HORIZONTAL
6 pp	552.88	22.43	22.37	44.80	46.00	-1.20	QP	HORIZONTAL

Remark:

The field strength is calculated by adding the Antenna Factor, Cable Factor & Preamplifier. The basic equation with a sample calculation is as follows:

Factor= Antenna Factor + Cable Factor – Preamplifier Factor,

Level = Read Level + Factor,

Over Limit=Level-Limit Line.

5.10.2 Transmitter Emission above 1GHz

Worse case mode:		GFSK(DH5)		Test channel:		Lowest	
Frequency	Meter Reading	Factor	Emission Level	Limits	Over	Detector Type	Ant. Pol.
(MHz)	(dBμV)	(dB)	(dBμV/m)	(dBμV/m)	(dB)		H/V
2390	53.62	-9.2	44.42	74	-29.58	Peak	H
2400	56.47	-9.39	47.08	74	-26.92	Peak	H
4804	52.38	-4.33	48.05	74	-25.95	Peak	H
7206	48.28	1.01	49.29	74	-24.71	Peak	H
2390	55.60	-9.2	46.40	74	-27.60	Peak	V
2400	56.67	-9.39	47.28	74	-26.72	Peak	V
4804	52.41	-4.33	48.08	74	-25.92	Peak	V
7206	50.49	1.01	51.50	74	-22.50	Peak	V

Worse case mode:		GFSK(DH5)		Test channel:		Middle	
Frequency	Meter Reading	Factor	Emission Level	Limits	Over	Detector Type	Ant. Pol.
(MHz)	(dBμV)	(dB)	(dBμV/m)	(dBμV/m)	(dB)		H/V
4882	50.49	-4.11	46.38	74	-27.62	peak	H
7323	49.72	1.51	51.23	74	-22.77	peak	H
4882	53.38	-4.11	49.27	74	-24.73	peak	V
7323	49.09	1.51	50.60	74	-23.40	peak	V

Worse case mode:		GFSK(DH5)		Test channel:		Highest	
Frequency	Meter Reading	Factor	Emission Level	Limits	Over	Detector Type	Ant. Pol.
(MHz)	(dBμV)	(dB)	(dBμV/m)	(dBμV/m)	(dB)		H/V
2483.5	56.33	-9.29	47.04	74	-26.96	Peak	H
4960	52.64	-4.04	48.60	74	-25.40	Peak	H
7440	50.36	1.57	51.93	74	-22.07	Peak	H
2483.5	54.63	-9.29	45.34	74	-28.66	Peak	V
4960	48.58	-4.04	44.54	74	-29.46	Peak	V
7440	50.15	1.57	51.72	74	-22.28	Peak	V

Worse case mode:		π /4DQPSK (2DH5)		Test channel:		Lowest	
Frequency	Meter Reading	Factor	Emission Level	Limits	Over	Detector Type	Ant. Pol.
(MHz)	(dB μ V)	(dB)	(dB μ V/m)	(dB μ V/m)	(dB)		H/V
2390	54.17	-9.2	44.97	74	-29.03	Peak	H
2400	55.93	-9.39	46.54	74	-27.46	Peak	H
4804	52.11	-4.33	47.78	74	-26.22	Peak	H
7206	49.59	1.01	50.60	74	-23.40	Peak	H
2390	56.22	-9.2	47.02	74	-26.98	Peak	V
2400	55.67	-9.39	46.28	74	-27.72	Peak	V
4804	52.79	-4.33	48.46	74	-25.54	Peak	V
7206	51.05	1.01	52.06	74	-21.94	Peak	V

Worse case mode:		π /4DQPSK (2DH5)		Test channel:		Middle	
Frequency	Meter Reading	Factor	Emission Level	Limits	Over	Detector Type	Ant. Pol.
(MHz)	(dB μ V)	(dB)	(dB μ V/m)	(dB μ V/m)	(dB)		H/V
4882	51.13	-4.11	47.02	74	-26.98	peak	H
7323	49.30	1.51	50.81	74	-23.19	peak	H
4882	53.13	-4.11	49.02	74	-24.98	peak	V
7323	48.81	1.51	50.32	74	-23.68	peak	V

Worse case mode:		π /4DQPSK (2DH5)		Test channel:		Highest	
Frequency	Meter Reading	Factor	Emission Level	Limits	Over	Detector Type	Ant. Pol.
(MHz)	(dB μ V)	(dB)	(dB μ V/m)	(dB μ V/m)	(dB)		H/V
2483.5	57.03	-9.29	47.74	74	-26.26	Peak	H
4960	52.41	-4.04	48.37	74	-25.63	Peak	H
7440	49.05	1.57	50.62	74	-23.38	Peak	H
2483.5	56.22	-9.29	46.93	74	-27.07	Peak	V
4960	49.77	-4.04	45.73	74	-28.27	Peak	V
7440	48.28	1.57	49.85	74	-24.15	Peak	V

Worse case mode:		8DPSK (3DH5)		Test channel:		Lowest	
Frequency	Meter Reading	Factor	Emission Level	Limits	Over	Detector Type	Ant. Pol.
(MHz)	(dBμV)	(dB)	(dBμV/m)	(dBμV/m)	(dB)		H/V
2390	55.81	-9.2	46.61	74	-27.39	Peak	H
2400	55.68	-9.39	46.29	74	-27.71	Peak	H
4804	53.50	-4.33	49.17	74	-24.83	Peak	H
7206	48.55	1.01	49.56	74	-24.44	Peak	H
2390	55.90	-9.2	46.70	74	-27.30	Peak	V
2400	55.31	-9.39	45.92	74	-28.08	Peak	V
4804	54.05	-4.33	49.72	74	-24.28	Peak	V
7206	49.21	1.01	50.22	74	-23.78	Peak	V

Worse case mode:		8DPSK (3DH5)		Test channel:		Middle	
Frequency	Meter Reading	Factor	Emission Level	Limits	Over	Detector Type	Ant. Pol.
(MHz)	(dBμV)	(dB)	(dBμV/m)	(dBμV/m)	(dB)		H/V
4882	53.14	-4.11	49.03	74	-24.97	peak	H
7323	50.39	1.51	51.90	74	-22.10	peak	H
4882	53.00	-4.11	48.89	74	-25.11	peak	V
7323	49.55	1.51	51.06	74	-22.94	peak	V

Worse case mode:		8DPSK (3DH5)		Test channel:		Highest	
Frequency	Meter Reading	Factor	Emission Level	Limits	Over	Detector Type	Ant. Pol.
(MHz)	(dBμV)	(dB)	(dBμV/m)	(dBμV/m)	(dB)		H/V
2483.5	56.20	-9.29	46.91	74	-27.09	Peak	H
4960	51.43	-4.04	47.39	74	-26.61	Peak	H
7440	49.73	1.57	51.30	74	-22.70	Peak	H
2483.5	54.67	-9.29	45.38	74	-28.62	Peak	V
4960	50.06	-4.04	46.02	74	-27.98	Peak	V
7440	49.48	1.57	51.05	74	-22.95	Peak	V

Remark:

- The field strength is calculated by adding the Antenna Factor, Cable Factor & Preamplifier. The basic equation with a sample calculation is as follows:
Final Test Level = Receiver Reading + Antenna Factor + Cable Factor – Preamplifier Factor
- Scan from 9kHz to 25GHz, the disturbance above 10GHz and below 30MHz was very low. As shown in this section, for frequencies above 1GHz, the field strength limits are based on average limits. However, the peak field strength of any emission shall not exceed the maximum permitted average limits specified above by more than 20 dB under any condition of modulation. So, only the peak measurements were shown in the report.

6 Photographs - EUT Test Setup

6.1 Radiated Emission

9KHz~30MHz:

9071-F




9090-F




9101-F




9210-F

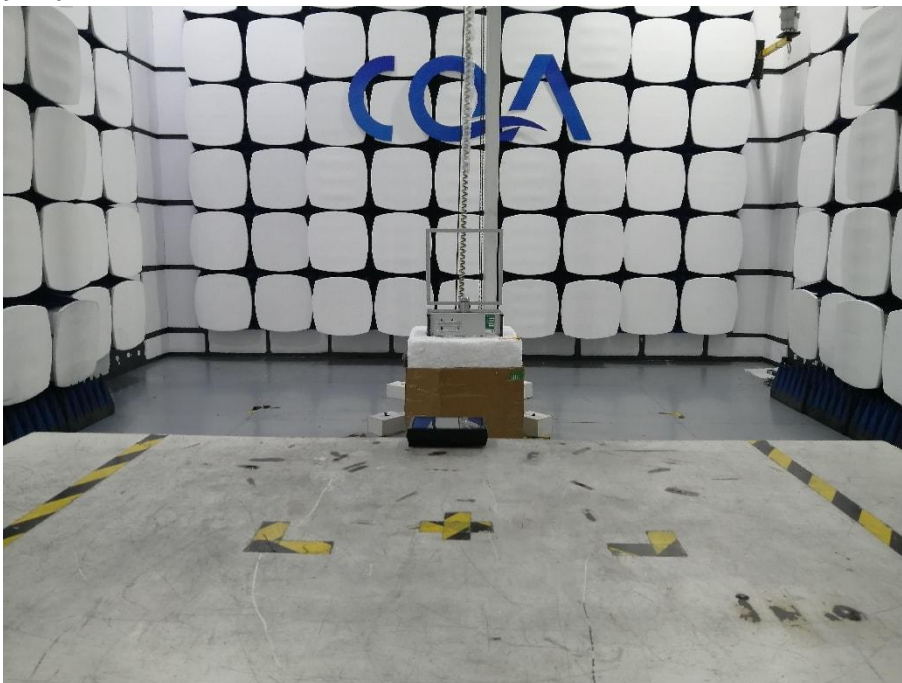


FYT01

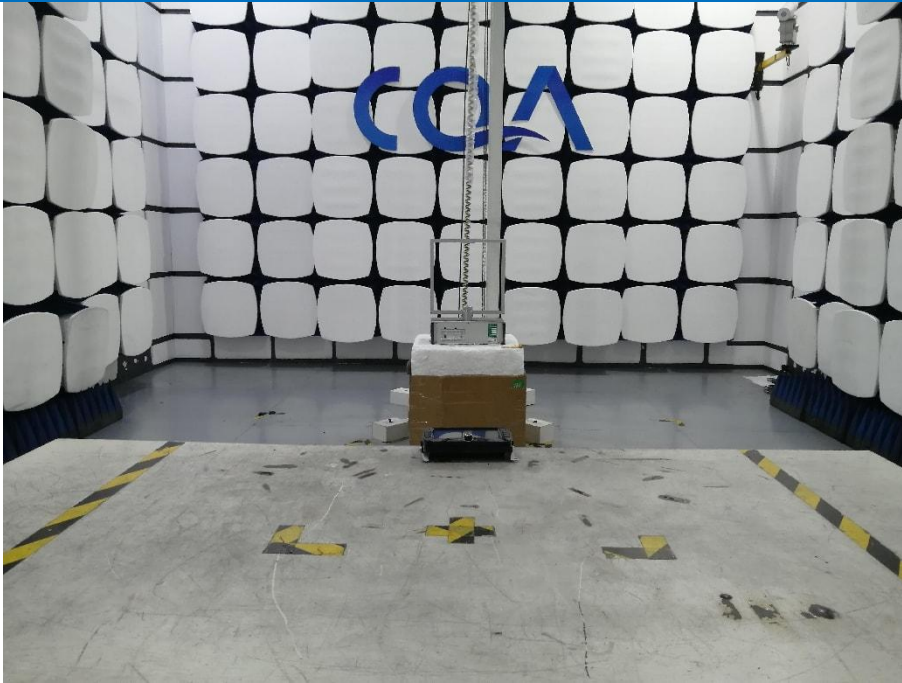


FYT03

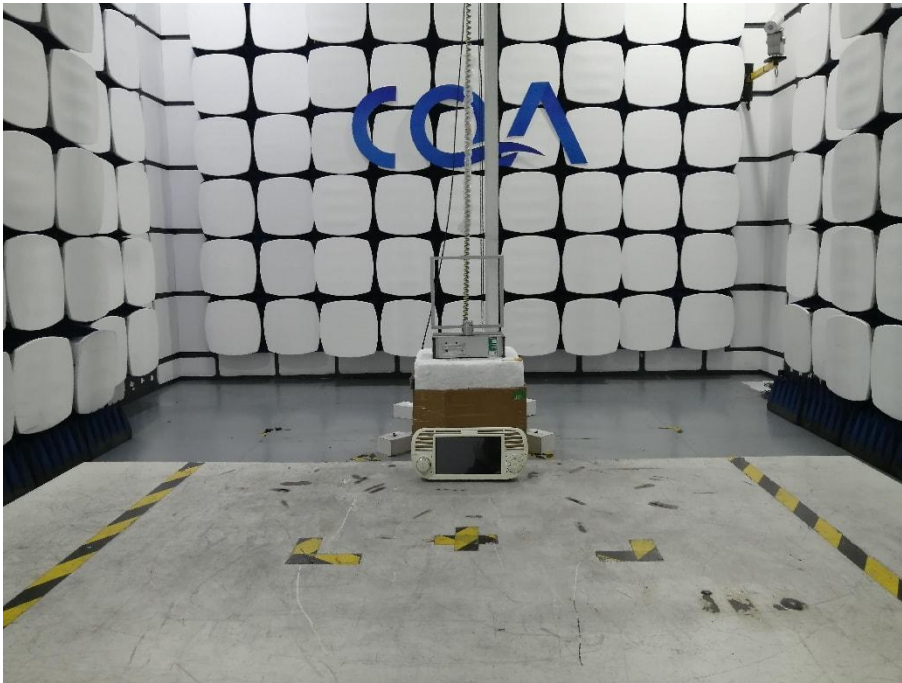

LN001

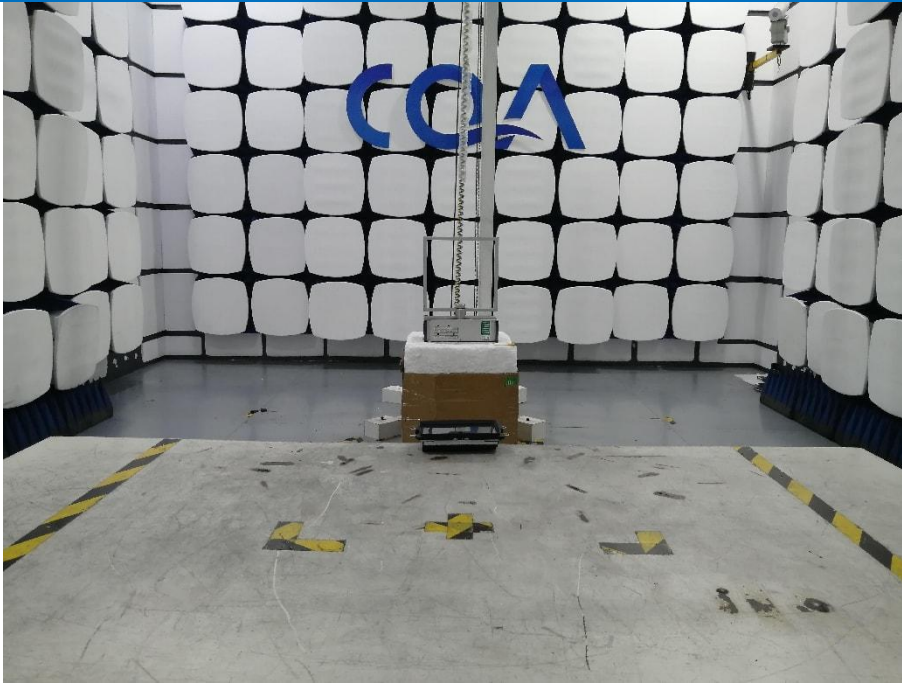

OB001

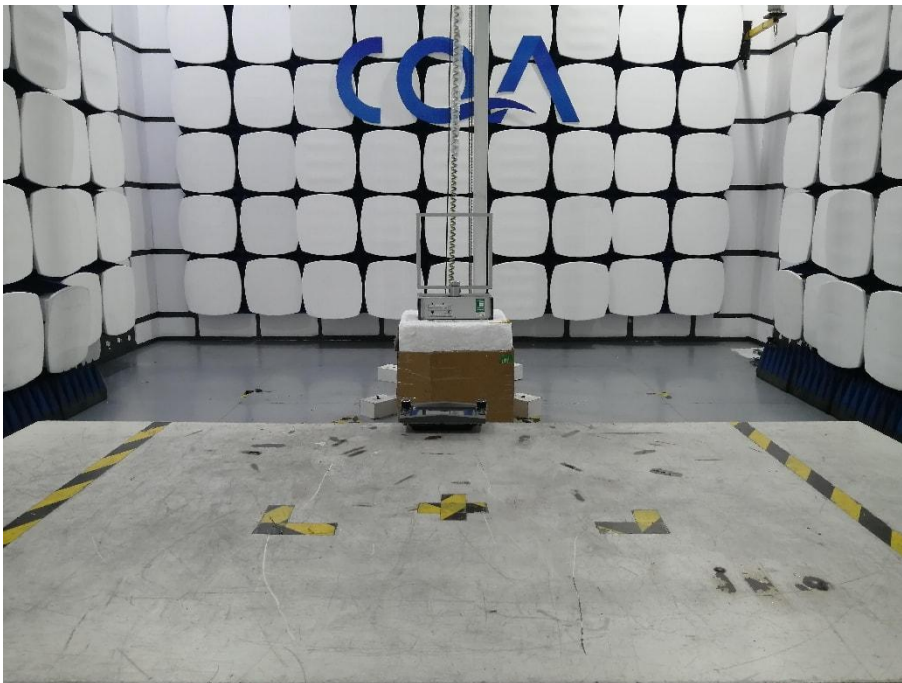

30MHz~1GHz:

9071-F




9090-F




9101-F




9210-F

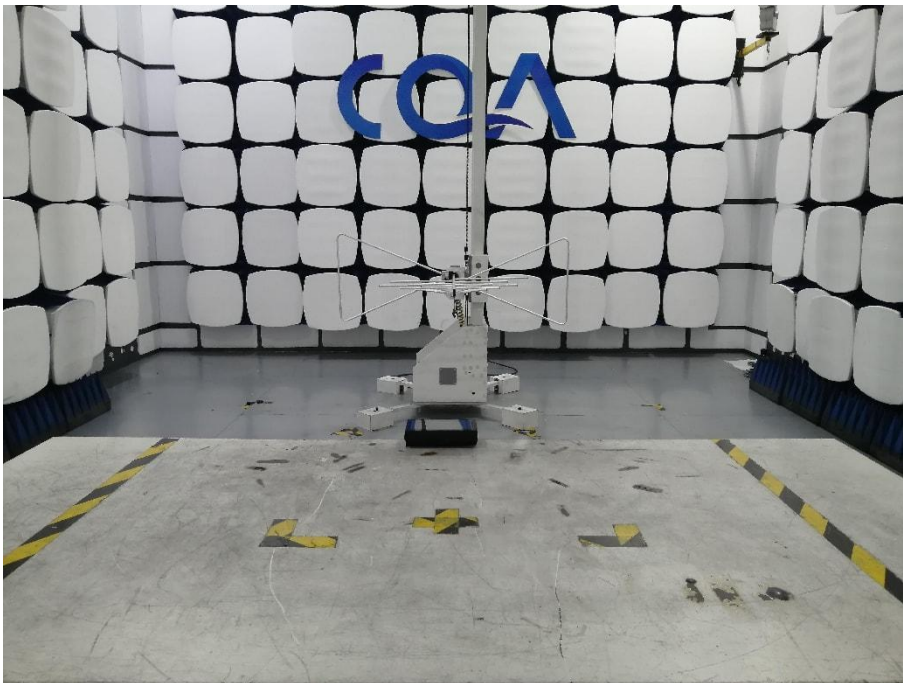


FYT01

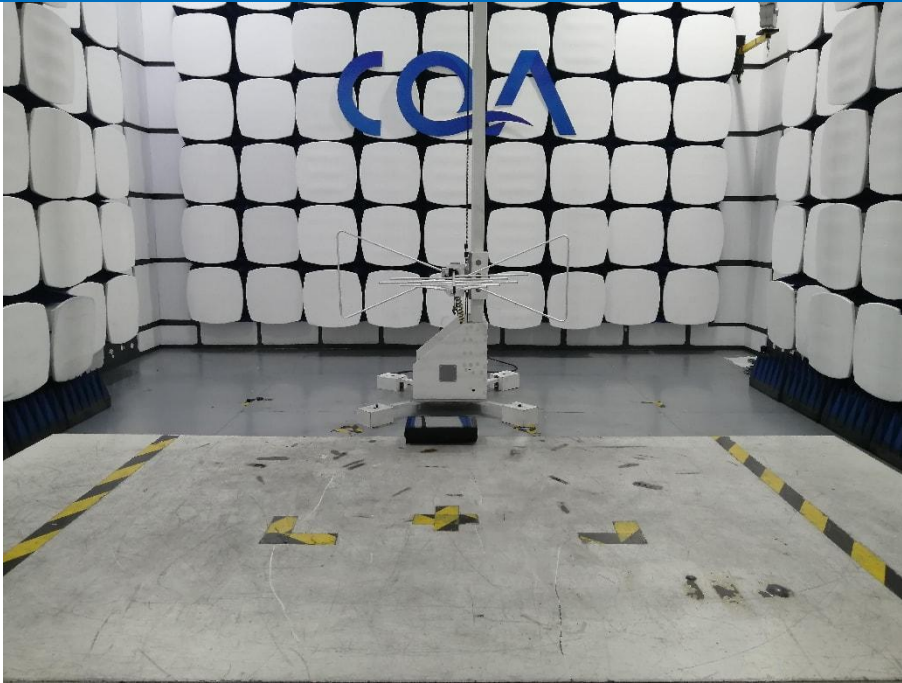

FYT03

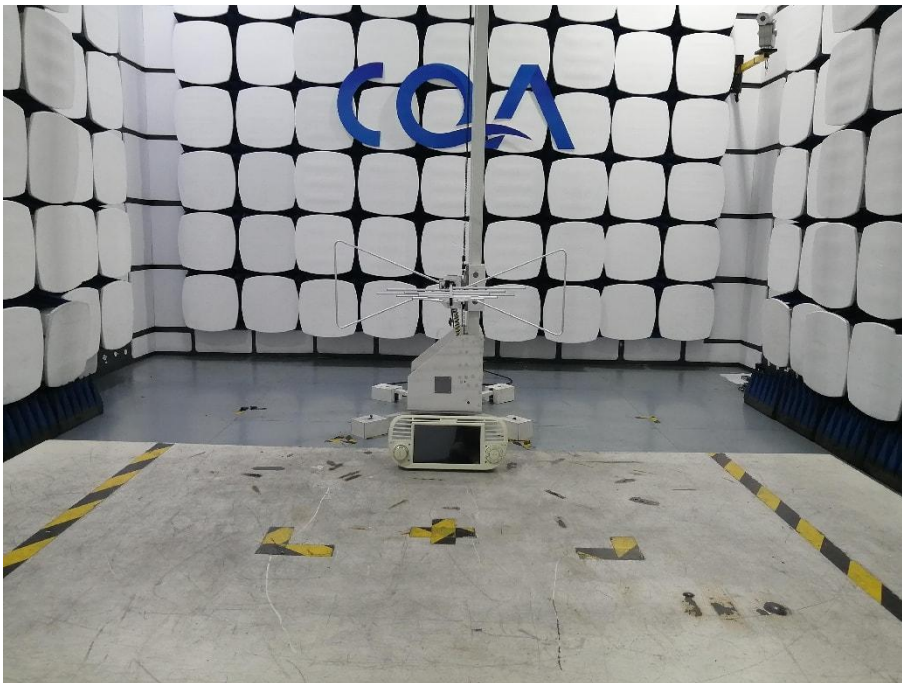

LN001

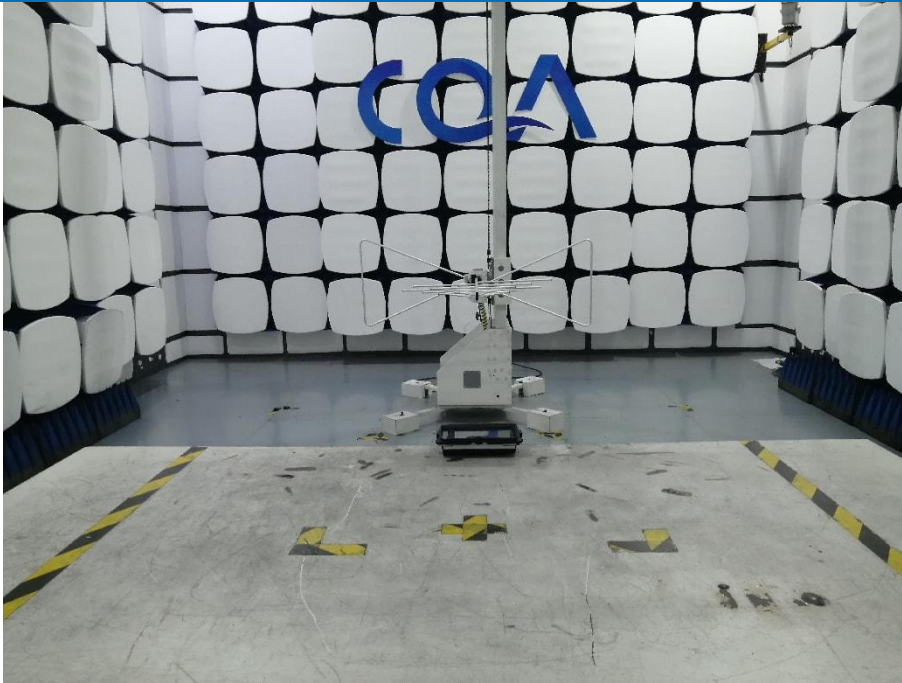

OB001



Above 1GHz:

9071-F



9090-F



9101-F



9210-F



FYT01



FYT03



LN001



OB001



7 Photographs - EUT Constructional Details

Refer to PHOTOGRAPHS OF EUT for Photographs of The EUT.

*** END OF REPORT ***