


95.00 mm

Instruction Manual

SW-Q7-US



Before using the product, please read the manual carefully and operate the product according to the instructions Please keep the manual properly for reference

Reminder

* The company is constantly committed to improving product quality and function. If the product design is updated Without notice

* The instructions have been carefully checked. If there is any error, the company will not bear any consequences

* Do not open or disassemble or repair the product components by yourself

* The purchase shall be subject to the physical specifications

The schematic diagram is for reference only. The company reserves the right to The right to interpret the relevant contents of this information

Charging instructions


* Please use a 5V-2A power adapter!

* Do not use the machine under high temperature humidity

* When it is not used for a long time, it is recommended to charge the machine once a month to ensure that the When it needs to be used, the battery is sufficient and the machine can be used normally!

* Do not carry out any maintenance by yourself. If the product has quality problems, please contact Distributor or manufacturer

Function Introduction

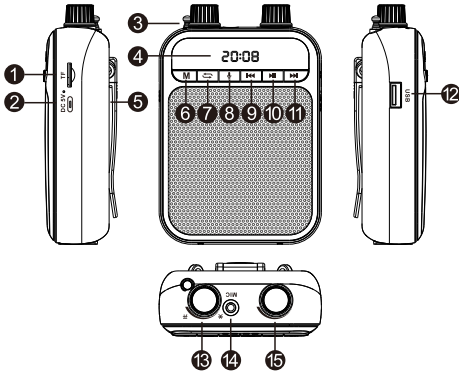

1 TF Card slot

2 Charging port

3 Radio antenna

4 Digital tube display

5 Portable back clip

6 Mode switch

7 Loop playback

8 Microphone/Recording

9 Short press to next/
Long press to fast-forward

10 Play/Pause

11 Short press to previous/
Long press to fast-backward

12 USB port

13 Power switch/Volume control

14 MIC/Accompaniment

15 Reverb knob

70.00 mm

Operating instructions

* Mobile Bluetooth connection method

(1) Boot to enter Bluetooth mode

 
(2) Turn on Bluetooth, search, connect and pair


* USB / TF Card playback


(1)Insert the USB / TF card with music files into the speaker to play

(2) Support MP3 format and 64G maximum capacity

* Loop Playback

Short press keys to switch single / all round play.


(1)Short press  key. When < one > is displayed on the screen, it is a single cycle

(2)Short press  key. When < all > is displayed on the screen, it is all cycle


* Recording function playback

Be careful! Preparation before recording

1. Insert mark Kefeng 2. Insert TF / USB

Press  to start recording, and then press play recording

Mode key

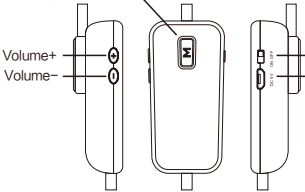

Power switch

Charging interface

Battery capacity: 400 Ma

Service time: 8-10 hours

* Usage of UHF wireless microphone (some machines do not have this function)


Connection method between wireless microphone and loudspeaker

(1)Factory default automatic connection (no pairing, direct use)

(2)Turn on the wireless microphone and the Bluetooth light will be on for a long time. Press and hold the < **M** > key for 5 seconds and the blue light will be on Release it when flashing, and then turn on the loudspeaker to enter automatic pairing, Wait a few seconds and the wireless MAC blue light will be on. After successful pairing, you can use it.

Technical parameter

Bluetooth version	5.0
Charging input	5V-2A
Peak power	10W
S/N Ratio	≥75dB
Degree of distortion	2-5%
Frequency response	150Hz-20KHz
Bluetooth connection distance	10M barrier-free



Safety requirements

Please read this manual carefully before use

Please use this product under normal temperature

Please do not use this product in an environment where the relative temperature is higher than 85%

Please do not expose this product to the sun or near a stove where the temperature is too high, dusty, and corrosive gas

Please do not hit or drop the product, if it is damaged, do not disassemble

When the exterior is dirty, wipe the dirty area with a clean soft cloth, but please pay attention to water stains on the soft cloth to prevent it from flowing into the product and causing damage

Troubleshooting

Problem points	Causes and Solutions
Bluetooth pairing failed	<div>* Reboot pairing</div> <div>* There are too many Bluetooth devices around, which makes it difficult to search. Turn off other Bluetooth devices and search again</div>
Low or distorted sound	<div>* Low battery</div> <div>* Adjust the volume to a suitable level</div>
Interruption of Bluetooth music	<div>* Whether it exceeds the effective connection distance of the speaker (10 meters effective distance)</div> <div>* There are obstacles between speaker and mobile phone</div>
Unable to read USB/TF Card playback	<div>* Please check whether the USB and TF cards have audio files</div> <div>* Is the audio file format supported</div> <div>* Does the USB and TF Card exceed the maximum supported capacity</div>
There is a whistling sound when amplifying	<div>* The microphone is too close to the loudspeaker</div> <div>* The microphone cannot be amplified directly against the loudspeaker</div>

Note: If the above method fails to eliminate the fault, please contact the dealer, do not disassemble and repair the machine by yourself, otherwise the warranty will not be provided

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Statement: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which

can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

—Reorient or relocate the receiving antenna.

—Increase the separation between the equipment and receiver.

—Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

—Consult the dealer or an experienced radio/TV technician for help.