

# Record Player


Model : TT270




**Instruction Manual**

## BEFORE USE

1. Choose a safe and horizontal location and avoid placing the unit in direct sunlight or near any heat source.
2. Avoid environments subject to vibration, excessive dust, cold or moisture.
3. Due to the risk of electrical shock, do not open the cabinet. Should a foreign object accidentally find its way into the interior of the unit, contact your local dealer.
4. Do not attempt to clean the unit with chemical solvents as this might damage the finishing. A clean, dry cloth is recommended for cleaning.
5. Keep this manual for future reference.

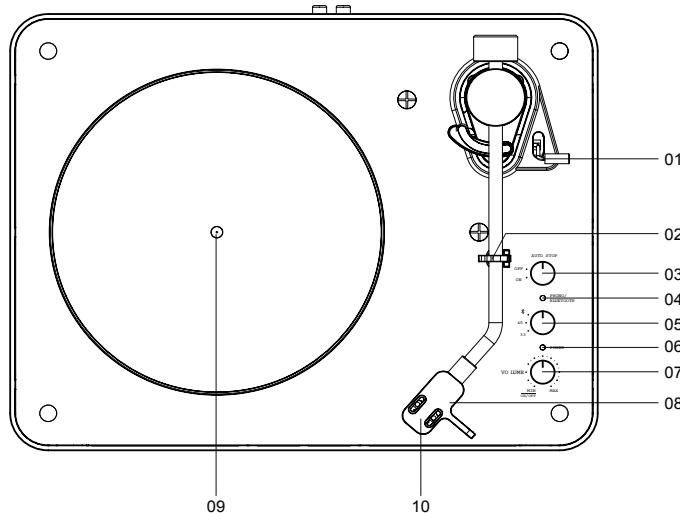

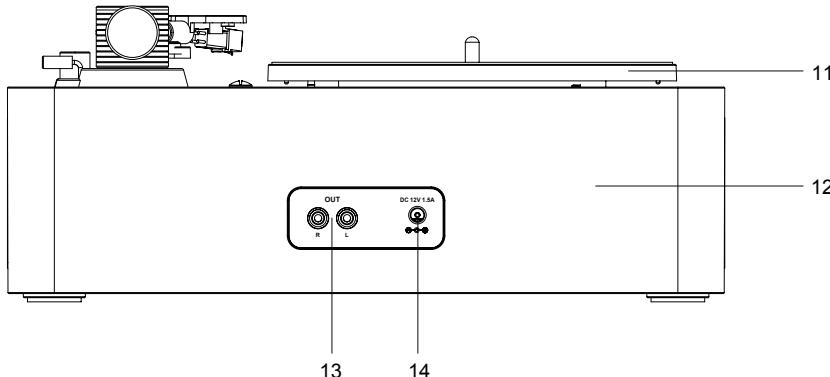

## TURNTABLE PARTS:

01. Lift Lever	08. Tonearm head
02. Tonearm lock	09. Spindle
03. Auto-stop ON/OFF Switch	10. MM cartridge
04. Function Indicator	11. Platter
05. Speed/Function Switch Knob	12. Unit housing
06. Power Indicator	13. RCA output jack
07. Power ON/OFF and Volume	14. DC IN Jack



## Getting Started

Firmly and securely insert the DC plug of the adaptor to the DC IN Jack on the back of the unit. Plug the adaptor's AC plugs into a power outlet.

Open the two locks at the two sides of the unit and lift the cover.

**Remark: there are several power plugs included in the package, please select the correct plug for your use.**

## Bluetooth Mode

1. Turn on the power switch knob. Turn the Speed/Function Switch Knob to BT. The function indicator will become blue color with flashing.
2. Turn on your Bluetooth function on your mobile phone or tablet PC and then search the turntable player with its name MPK TT270. After pairing and connection, the function indicator will become blue color without flashing, and you can play your music of your mobile phone or tablet PC on this turntable player.

**Turn the VOLUME CONTROL KNOB to adjust the volume. The mobile phone or tablet PC's volume control also impact the overall volume level. Please adjust that as well if necessary.**

## Phono Mode

1. Turn the Speed/Function Switch Knob to 33 or 45.
2. Place a record on the turntable platter and select the desired speed (33/45) according to the record.  
NOTE: when playing a 45RPM record, use the included 45RPM adaptor.
3. Remove the stylus protector and unlock the tonearm lock. Push the lift lever backward to raise the tone-arm and gently move the tone-arm to the desired position over the record. The turntable will begin to spin when the arm is moved toward the record. Push the lift lever forward to lower the tone-arm slowly onto the desired position on the record to begin playing the record. Please note: The record will begin to spin only when the tone-arm is moved toward the record if the Auto Stop is turned on.
4. If the Auto Stop Control Switch is turned ON, the record will stop automatically when finished. If Auto Stop Control Switch is turned OFF, the record will NOT stop automatically when finished.



4. If the Auto Stop Control Switch is turned ON, the record will stop automatically when finished. If Auto Stop Control Switch is turned OFF, the record will NOT stop automatically when finished.

**Remark:** *AUTO STOP function applies to most 33RPM vinyl records. However, for very few vinyl records, it will stop when it does not come to the end, or it will not stop when it comes to the end when AUTO STOP is ON.*

5. Turn the VOLUME CONTROL KNOB to adjust the volume.

## TIPS FOR BETTER TURNTABLE PERFORMANCE

1. When opening or closing the turntable cover, handle it gently, gripping it either at the centre or at each side.
2. Do not touch the needle tip with your fingers; avoid bumping the needle against the turntable platter or record edge.
3. Gently wipe the dust cover and turntable housing with a soft dry cloth. Never apply harsh chemicals or solvents to any part of the turntable system.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.