

Record Player



MODEL: VMO-008

INSTRUCTION MANUAL

BEFORE USE

1. Choose a safe location and avoid placing the unit in direct sunlight or near any heat source.
2. Avoid locations subject to vibrations, excessive dust, cold or moisture.
3. Do not open the cabinet as this may result in electrical shock. If a foreign object is inserted accidentally contact your dealer.
4. When removing the power plug from the wall outlet, pull directly on the plug, NOT the cord.
5. Do not attempt to clean the unit with chemical solvents as this might damage the finishing. A clean, dry cloth is recommended for cleaning.
6. Keep this manual for future reference.

Briefcase Turntable Parts & Features

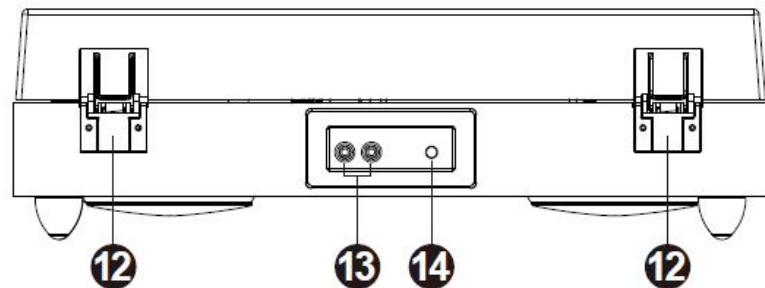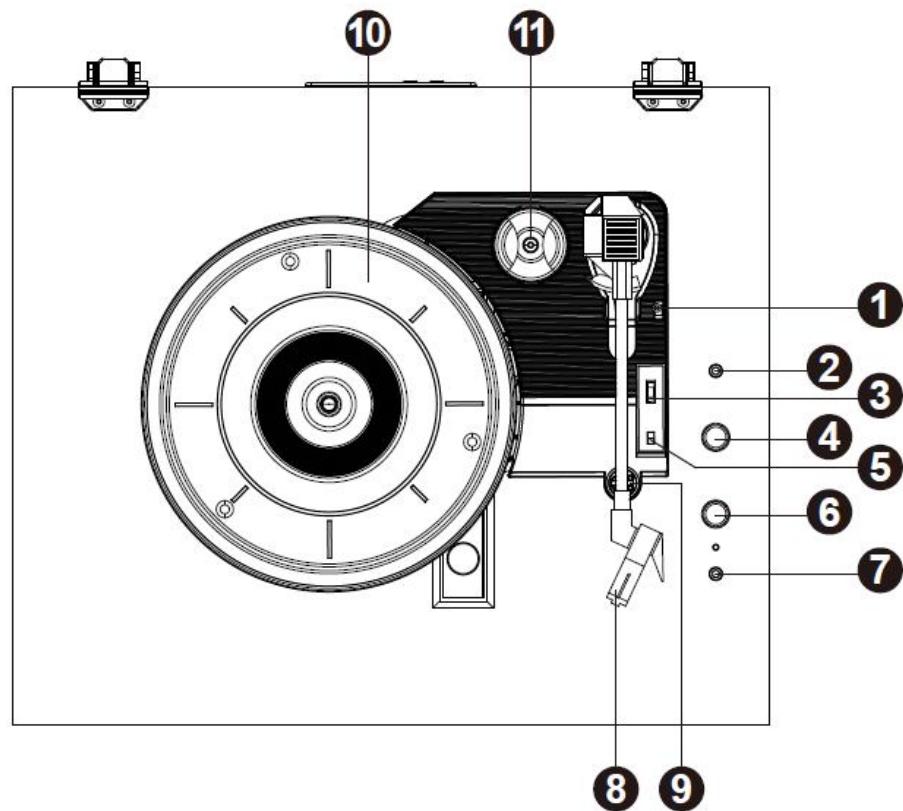

1. Lift lever
2. AUX IN jack
3. 33/45/78 RPM switch – This switch controls the RPM of the turntable platter.
4. Mode selection knob
5. AUTO STOP ON/OFF switch
6. Power on/off and volume control knob
7. Headphones jack —to connect headphones or earphones to enjoy music privately
8. Cartridge
9. Tone arm clip
10. Platter – Place your record here.
11. 45 RPM adapter –used for 45RPM vinyl records
12. Hinge
13. RCA output – Used to connect to external speakers (not included)
14. DC port – Used to connect power adapter

PHONO MODE---VINYL RECORD PLAYBACK

Turn the mode selection knob to **PH/LINE IN**.

(Remark: please make sure that the AUX IN jack is not plugged in with any cable)

1. Connect the power adapter to the unit and mains socket.
2. Turn the power & volume control knob clockwise. The indicator light will illuminate red.
4. Place a record on the turntable platter and select the desired speed (33/45/78) according to the record.

NOTE: when playing a 45 rpm record, use the included 45 rpm adapter located in the holder near the tone arm.

5. Open the tone arm clip to release the tone arm. Push the lift lever backward to raise the tone arm and gently move the tone arm to the desired position over the record.

Push the lift lever forward to lower the tone arm slowly onto the desired position on the record.

6. AUTO STOP feature applies to most 33RPM vinyl records.

If the AUTO STOP ON/OFF Switch is turned ON, the record will stop automatically when finished(For some few vinyl records, it will stop when it does not come to the end or it will not stop when it comes to the end). If Auto Stop Control is turned OFF, record will NOT stop automatically when finished.

LINE IN MODE

1. Connect your iPod, MP3 player, mobile phones etc. to the AUX IN port with a

3.5mm-3.5mm audio cable(not included).

2. Turn the mode selection knob to **PH/LINE IN**. You can play music from an auxiliary device through the unit. Turn the VOLUME CONTROL KNOB to adjust the volume. (The iPod, MP3 player, mobile phones' volume control may also impact on Volume Level so ensure this is also turned up).

BLUETOOTH MODE

1. Turn the mode selection knob to **BT**

The indicator light will become blue color flashing.

(Remark: please make sure that the AUX IN jack is not plugged in with any cable)

2. Turn on Bluetooth function of your smart phone and search the name VMO-008.
3. After connection is successful, the indicator light will become blue color without flashing.

Then start to playback your device.

Turn the VOLUME CONTROL KNOB to adjust the volume. (The mobile phone or tablet PC's volume control may also impact on Volume Level so ensure this is also turned up).

MUSIC playback on your own speaker system

1. Connect your own speaker system to the RCA port with a RCA-3.5mm audio cable (not included).
2. You can enjoy the music of the vinyl records at your own speaker system.

How to Replace the Turntable Stylus (Needle)

Removing the Stylus from the Cartridge

1. Place a screwdriver at the tip of the stylus and push downward as shown in direction "A".
2. Remove the stylus by pulling the stylus forward and pushing downward.

Installing the Stylus

1. Hold the tip of the stylus and insert the stylus by pressing as shown in direction "B".
2. Push the stylus upward as in direction "C" until the stylus locks into the tip position.



TIPS FOR BETTER TURNTABLE PERFORMANCE

1. When opening or closing the turntable cover, handle it gently, gripping it either at the centre or at each side.
2. Do not touch the needle tip with your fingers; avoid bumping the needle against the turntable platter or record edge.
3. Frequently clean the needle tip-use a soft brush in a "back-to-front'motion only.
4. If you must use a needle cleaning fluid, use very sparingly.
5. Gently wipe the dust cover and turntable housing with a soft cloth. Use only a small amount of mild detergent to clean the turntable and dust cover.
6. Never apply harsh chemicals or solvents to any part of the turntable system.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.