

Limited Warranty Information

Thank you for choosing an Alpine product! We aim to please with our wide range of products including Fountains, Birdbaths, Statuary, Pond Supplies & More. All of our products are constructed from the highest quality materials. In the event that we have not achieved our usual standard of excellence, we will repair or replace, at our discretion, within the warranty period. A valid proof of purchase, with the purchase date clearly indicated, must be provided. Photos of defective merchandise will also be required to help distinguish the actual cause of the defect. Please read below for a detailed description of warranty coverage.

• Water Damage

Alpine products are not manufactured to withstand extreme temperatures. Improper storage that allows water to freeze within a product may cause damage and is considered negligence and will, therefore not be covered under this warranty. The use of "hard water" and/or caustic cleaners can affect the paint or other finishes. Failure to keep the unit clean, and use of such additives/cleaners, will also void the warranty. Please note: for fountains, it is normal for some splashing to occur and protecting the immediate surfaces is not the responsibility of Alpine Corporation

• Paint & Color (Retention and/or Loss)

The use of water will cause natural erosion to the color. This area can be touched up using standard paint. The paint is designed to protect the entire finish against breakdown of color. As with any product, all finishes with time will gradually fade and discolor. The warranty will only cover against severe or complete fading within the first year from date of purchase with the above exclusion.

• Procedure/Service

Should a warranty/claim be needed, you should contact the retailer from whom you purchased the product. If that is not an option, you can contact Alpine Corporation at www.alpine4u.com. When contacting Alpine Corporation, you must be prepared to show proof of purchase, provide photographs and any other information needed to validate your claim. This may be necessary to distinguish between a partial or complete replacement of a defective product. The warranty does not cover any items with multiple parts; the warranty will ONLY cover the individual component of the unit/item that may be defective. Replacement parts can be made available to a consumer through the original selling party, or an approved parts retailer. If this is not an option, contact our customer service department. **Item is covered under one year limited warranty from the date of purchase. If your purchase was after our 30-day grace period, payment information will be requested for shipping charges.**

• Not Covered Under Warranty

The limited warranty will NOT cover cases of damages due to

1. Inadequate care and/or neglect
2. Environmental and/or natural elements
3. Immersion in water, unless specified
4. Improper Installation/Storage and/or Maintenance


This warranty is void if the product has been damaged by accident, misuse, negligence, improper installation and/or modifications have occurred. This includes any and/or all defects arising out of freezing water damage, hard water damage, failure to keep the unit clean and free of harmful additives such as bleach, chlorine, etc.... which affects the paint and/or parts. This warranty also does not cover any additional charges or installation, removal, disposal and/or shipping costs or consequential damage associated with any warranty claim.



Owner's Manual
Item # LTJ133L-CC



Foil Christmas Tree with White/Multicolor LEDs and Bluetooth Speaker

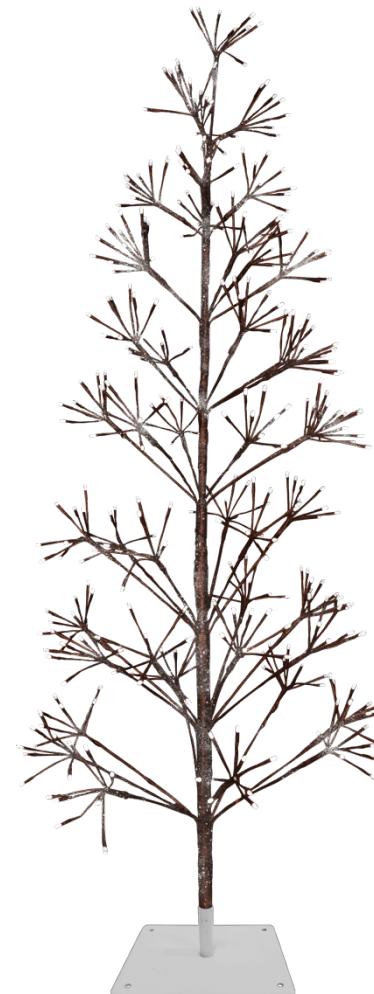

Assembling & Using Your Product


Unpack all components carefully. Please check to ensure all parts have been removed from the packaging. Components for outdoor and indoor installations are included.

Components:




Assembly:

- Find a clean level surface either indoors or outdoors to display your tree. Either insert the Ground Stake (E) firmly into the ground outdoors or place the Base Plate (F) on a clean level surface indoors.

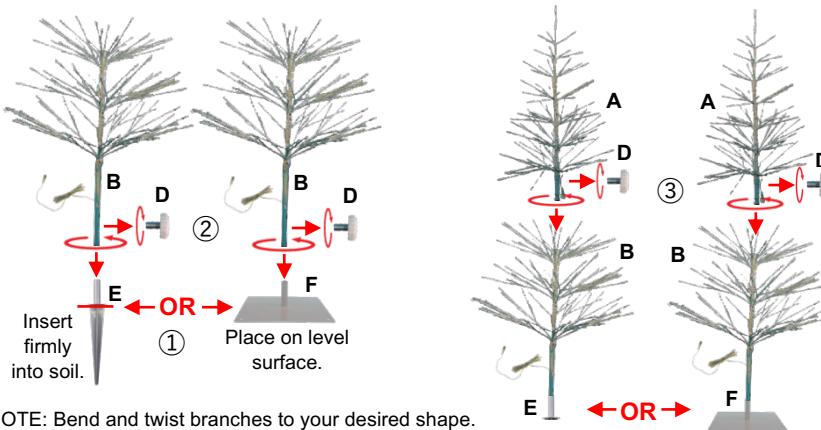

NOTE: Bend and twist branches to your desired shape.

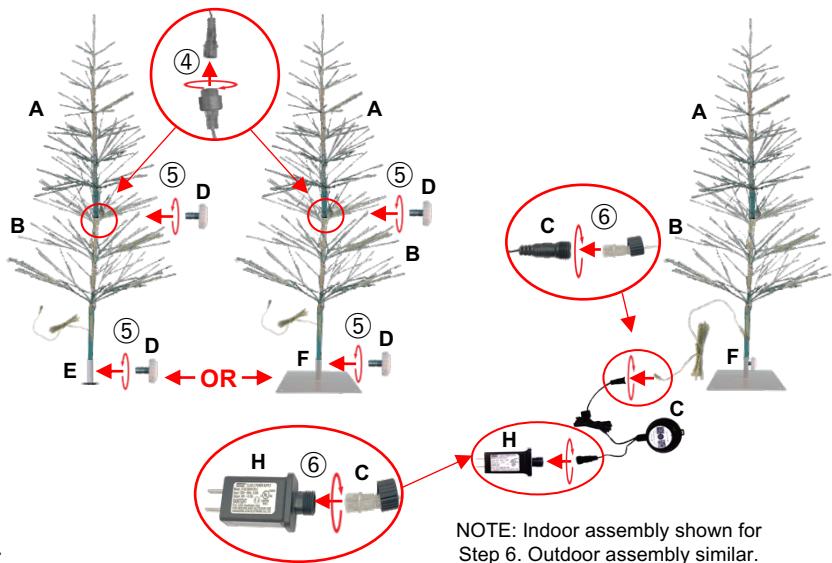

NOTE: Indoor assembly shown for Step 6. Outdoor assembly similar.

NOTE: You can use the Base Plate (F) outdoors as well and anchor at each corner with the included Base Stakes (G).

- Remove the Screw (D) at the bottom of the Tree Bottom (B) by turning it counter clockwise. Insert the Tree Bottom (B) into the Ground Stake (E) or the Base Plate (F) and turn counter clockwise until secure.
- Turn the Screw (D) at the bottom of the Tree Top (A) counter clockwise to remove. Insert the Tree Top (A) into the top of the Tree Bottom (B) and turn counter clockwise until secure.
- Connect the LED light cord at the bottom of the Tree Top (A) and with the one at the top of the Bottom Tree (B) and turn clockwise until secure.
- Insert the Screws (D) into the top and bottom of the Tree Bottom (B) and turn clockwise until secure.
- Connect the one end of the Bluetooth Speaker (F) to the light cord at the bottom of the Tree Bottom (B) and the other end to the Transformer (H). Screw clockwise until secure.
- Plug the Transformer (H) into the nearest outlet. Press the button on the back of the speaker to cycle through the lighting modes.

Operation

Setting Up Your Bluetooth-Enable Device

Use the "Musical Light" app to customize the eight light modes (Combination, In Waves, Sequential, Slo-Glow, Chasing/Flash, Slow fade, Twinkle/Flash and Steady), set a timer and play music.

- Search for the "Musical Light" app in your app store or scan the QR Code for your operating system with your device's camera.
- Download and install the "Musical Light" app for your Bluetooth device.



NOTE: Keep the speaker and Bluetooth-enabled device within 3 feet of each other during the pairing process.

- Press and hold the button on the center of the back of the Bluetooth Speaker (C). You will hear "Bluetooth Speaker is Reset".
- Set your Bluetooth-enabled device to search for Bluetooth devices.

Pairing an iOS Phone/Device:

- Go to Settings > Bluetooth. Make sure Bluetooth is ON.


Pairing an Android Phone/Device:

- Go to Settings > Bluetooth > Search for devices. Make Sure Bluetooth is ON.

- Select MUSIC D-9ACC or MUSIC S-5AEA from the list of discovered Bluetooth devices.
- After a successful pairing, you will hear "Connected" and your device will automatically pair whenever it is within 25 feet of the speaker.

Playing Music

To enjoy wireless music on your Bluetooth speaker, make sure that you are connected to a Bluetooth-enabled device. Open the "Musical Light" app and select either Music A or Music B. Use any media player on your device and press PLAY. Once playback begins, you can control the music and volume from your connected device.

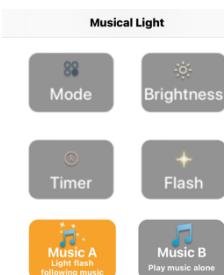

Controlling the Lights

Open the Musical Light app to select one of the eight lighting modes, adjust the brightness, set a timer, select flash mode, and play music with or without the lights.

Troubleshooting & Cautions

If you have any questions or problems, please contact the retail store where you purchased this décor.

If Your Speaker Doesn't Play:

- Ensure the speaker is plugged into a power outlet and is receiving power.
- Ensure your Bluetooth-enabled device is connected, turned on and within 25 feet of the speaker. If it is, follow steps 3 - 6 above to reset the speaker and then reconnect to your device.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

RF Exposure Information

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.