

# UEME®



## DESKTOP JUKEBOX

MODEL NUMBER: JK-01

**USER GUIDE**

✉ [service@ueme.online](mailto:service@ueme.online)

FC CE

**1**  
YEAR  
WARRANTY

EN

<b>Important Safety Instructions</b>	1
<b>Contents &amp; Features</b>	2
<b>Layout</b>	3-4
<b>Basic Operation</b>	
Connecting Power	5
Turning On/Off	5
Modes	5
Case Lights	5
EQ Presets	5
Volume Control	5
<b>FM Radio Operation</b>	6
<b>Bluetooth Operation</b>	7
<b>Aux Operation</b>	8
<b>Specification</b>	9
<b>Troubleshooting Guide</b>	10
<b>FCC Statement</b>	11
<b>IC Statement</b>	12
<b>Declaration Of Conformity CE</b>	12
<b>Disposal Information</b>	13

# Important Safety Instructions

EN

**CAUTION**  
RISK OF ELECTRIC SHOCK  
DO NOT OPEN

**ATTENTION**  
RISQUE D'ÉLECTROCUTION  
NE PAS OUVRIR


Warning: To reduce the risk of electric shock, do not remove cover (or back). No user-serviceable parts inside. Refer servicing to qualified service personnel.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

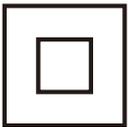

This symbol indicates that this product incorporates double insulation between hazardous mains voltage and user accessible parts.

1. Read these instructions.
2. Keep instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer’s instructions.
8. Do not install near any heat sources such as radiations, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding plug. A polarized plug has two blades with one wider than the other. A grounding plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at the plugs, convenience receptacles, and at the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart or rack is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug the apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.




## Contents

1 x Jukebox JK-01

1 x Mains Adaptor 9V/1.3A

## Features

- Bluetooth 5.0
- FM Band (87.5Mhz-108Mhz)
- 50 Presets FM Radio Stations
- Auto Scan & Store
- FM Manually Search
- Aux-in
- Telescopic Antenna
- Digital Display
- Color Changing Light
- 2 x Built-in Stereo Speakers
- 2 x 8W Power Output

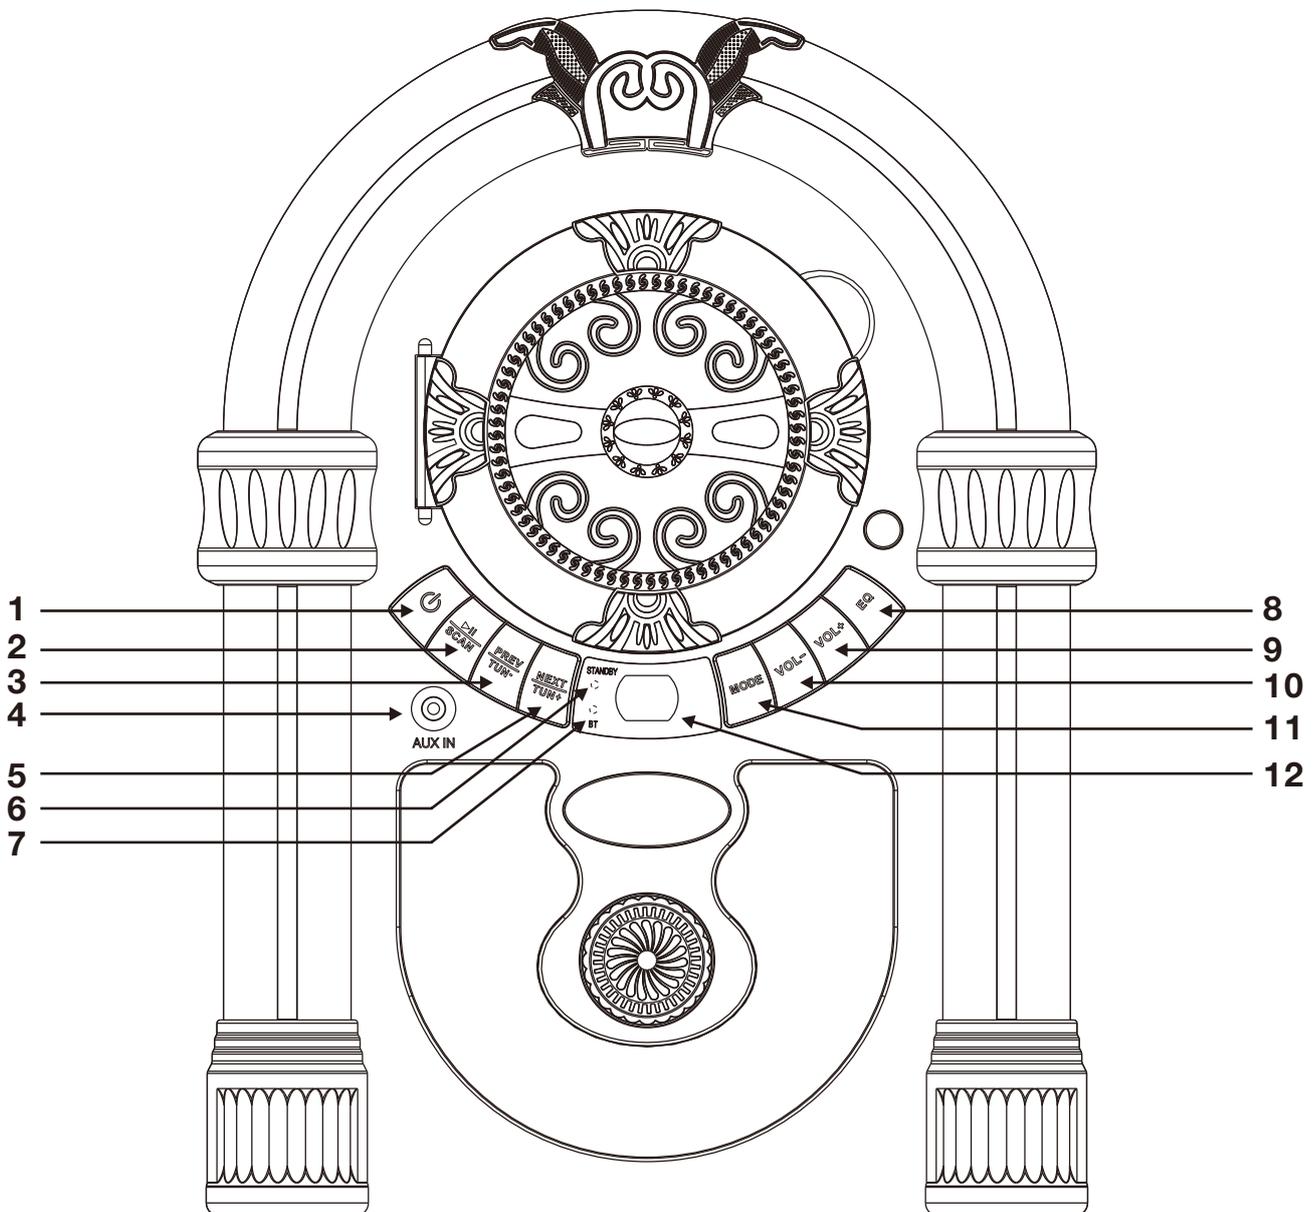

## 1. **STANDBY Button**

Press to turn the unit ON. / Press and hold to turn the unit OFF.

## 2. **/SCAN Button**

In Bluetooth mode, Quick press to play or pause playback, press and hold to disconnect the Bluetooth connection.

In FM mode, quick press to switch between **FM preset stations mode** ('CH' will flash on the digital display) and **FM manually search mode** ('FREQ' will flash on the digital display), press and hold to scan the station.

## 3. **PREV/TUN- Button**

In **FM preset stations mode**, press to select the preset station.  
In **FM manually search mode**, press to manually search a station.  
Press and hold to auto search a station.

## 4. **AUX IN Port**

Connect an external source to the AUX-IN port.

## 5. **NEXT/TUN+ Button**

In **FM preset stations mode**, press to select the preset station.  
In **FM manually search mode**, press to manually search a station.  
Press and hold to auto search a station.

## 6. **STANBY Indicator**

When the unit is in standby mode, the indicator will be solid red.

## 7. **BT Indicator**

When pairing, the indicator flashes blue, when connected, the indicator will be solid blue.

## 8. **EQ Button**

Quick press the EQ button to cycle through the equalizer presets.

## 9. **VOL+ Button**

Press to increase volume.

## 10. **VOL- Button**

Press to decrease volume.

## 11. **MODE Button**

Press to select a function mode: FM mode, Bluetooth mode or AUX In mode (AUX IN is only available when the aux cable is plugged in)

## 12. **Digital Display**

## Connecting Power

The JK-01 use a 9V 1.3A mains power lead (supplied). Plug the mains lead into a suitable mains socket and connect the lead to the mains input on the back of the jukebox.

## Turning On/Off

Press the  button to turn the unit ON.

Press and hold the  button to turn the unit OFF.

## Modes

The JK-01 has 3 function modes available: Radio, Bluetooth and AUX IN. You can select the desired function by pressing the “MODE” button to cycle through the 3 different functions available.

**Please Note:** The AUX IN is only available when you plug in an AUX cable (not supplied).

## Case Lights

To turn the lights On/Off simply press and hold the “MODE” button.

## EQ Presets

Quick press the EQ button to cycle through the equalizer presets: Jazz, Vocal, Flat, Classic, Pop, Rock.

EQ presets	Digital Display
Jazz	
Vocal	
Flat	
Classic	
Pop	
Rock	

## Volume Control

The unit's volume is set in a small adjusting stepped range in 0-32. Quickly press the VOL+ or VOL- buttons to adjust volume by one level, press and hold to adjust volume continuously.

Repeatedly press the MODE button to cycle through the functions until a radio frequency and FM are shown on the display.

Please ensure you have the telescopic antenna extended fully to receive the best signal available.

## ▶II/SCAN Button

Quick press to cycle through the **FM preset stations mode** ('CH' will flash on the digital display) and the **FM manually search mode** ('FREQ' will flash on the digital display) Press and hold this button to auto scan and store up to 50 stations that may be available in your area. Once the scan and store has finished it will automatically put you onto the first stored station. If you wish to end the scan and store before it has finished, simply press the button again.

## PREV/TUN- Button

In **FM preset stations mode**, quick press to skip back through the available stations.

In **FM manually search mode**, press to manually tune to a desired station, press and hold to auto scan for a station.

## NEXT/TUN+ Button

In **FM preset stations mode**, quick press to skip forward through the available stations.

In **FM manually search mode**, press to manually tune to a desired station, press and hold to auto scan for a station.

## Adjusting for Best Reception

FM broadcast: Extend and reposition the FM antenna located on the back of the unit.

In BT (Bluetooth) mode, this unit can play audio from external devices that have a built-in Bluetooth function.

## Connecting via Bluetooth

1. Repeatedly press the MODE button to cycle through the functions until 'bt' is displayed.  
The jukebox will then be in pairing mode indicated by the blue flashing indicator.
2. Turn ON the Bluetooth function on your external device.  
**NOTE:** The effective distance between your external device and this apparatus is 33 feet (10 m).
3. Wait a moment until '**UEME AUDIO**' appears on the paired devices list, then select '**UEME AUDIO**' to pair your device with the jukebox.
4. When you have successfully paired, the flashing indicator will turn solid.

## Playing Music via Bluetooth

1. Once your device is connected, open the music player application or program on your external device. If your device is not connected yet, see 'Connecting via Bluetooth'.
2. You can now control music playback with the **▶II/SCAN, PREV/TUN-, NEXT/TUN+, VOL-** and **VOL+** buttons on the Jukebox.

**PLEASE NOTE:** Some buttons may not work in certain music player applications or programs.

In AUX (auxiliary) mode, this unit can play audio from an external audio device (iPhone, MP3 Player, Portable CD Player, etc).

## Connecting via auxiliary

1. Plug one end of the AUX IN cable (not included) into the AUX IN jack located on the front of the unit.
2. Repeatedly press the MODE button to cycle through the functions until 'AUX' is shown on the display.
3. Plug the other end of the cable into the headphone jack of your external audio device.

### NOTE:

The AUX IN mode is only available when the AUX cable (not supplied) is plugged in.

Playback functions and operations are only available on your external device.

Jukebox with Bluetooth, FM radio and AUX IN features.

## General

Weight: 2.8kg (approx.)

Dimensions (W x H x D): 375mm x 270mm x 190mm (approx.)

Mains Adaptor: 9V 1.3A

## Bluetooth

Version: 5.0

Frequency Range: 2.4Ghz

Range: 10m

Bluetooth Name: UEME AUDIO

## Speaker

Channels: Stereo

2 x Speakers

Speaker Watts: 2 x 8W

## Radio

FM Frequency Range: 87.5Mhz-108Mhz

Aerial Type: Telescopic

Frequency power: 20mW

We reserve the right to make technical modifications and correct errors.

	Symptom	Possible Cause	Solution
GENERAL	• Unit will not power on	<ul style="list-style-type: none"> <li>• Unit is unplugged.</li> <li>• Unit isn't turned ON.</li> </ul>	<ul style="list-style-type: none"> <li>• Connect the unit to the AC power supply.</li> <li>• Press the  button to turn the unit ON</li> </ul>
	• No sound output from speakers	<ul style="list-style-type: none"> <li>• The volume level is set too low.</li> <li>• The input selector does not match the playback source.</li> </ul>	<ul style="list-style-type: none"> <li>• Adjust the volume.</li> <li>• Select the correct input source.</li> </ul>
	• Noise/Distortion in sound output	<ul style="list-style-type: none"> <li>• The unit is too close to a TV set or another interfering device.</li> </ul>	<ul style="list-style-type: none"> <li>• Turn off the TV or other appliance, and relocate the unit.</li> </ul>
	• Unit fails to respond	<ul style="list-style-type: none"> <li>• It might caused by external factors such as ESD (Electro-static discharge).</li> </ul>	<ul style="list-style-type: none"> <li>• Disconnect the power cord and external audio device. Re-plug the power cord after 1 minute.</li> </ul>
FM RADIO	<ul style="list-style-type: none"> <li>• Cannot listen to any station, or signal appears weak</li> </ul>	<ul style="list-style-type: none"> <li>• The station is not tuned-in properly.</li> <li>• A TV set is being used nearby and is interfering with the radio reception.</li> <li>• The antenna is not oriented properly.</li> </ul>	<ul style="list-style-type: none"> <li>• Properly tune-in the desired station.</li> <li>• Turn-off the interfering TV set.</li> </ul>
	• The sound is distorted	<ul style="list-style-type: none"> <li>• The antenna is not oriented properly.</li> </ul>	<ul style="list-style-type: none"> <li>• Re-orient the antenna until reception improves.</li> </ul>
AUX	• No sound output with external audio device plugged into front AUX-In socket	<ul style="list-style-type: none"> <li>• AUX-In jack is unplugged.</li> <li>• Unit is not in proper Mode.</li> </ul>	<ul style="list-style-type: none"> <li>• Make sure the Auxiliary Cable is plugged into both sources.</li> <li>• Select proper AUX mode.</li> </ul>
BLUETOOTH	• No sound	<ul style="list-style-type: none"> <li>• The unit is not switched to Bluetooth mode.</li> <li>• Your device's and/or the unit's volume is not turned up.</li> <li>• Your device is too far from the unit or there're some obstacle between your device and the unit.</li> </ul>	<ul style="list-style-type: none"> <li>• Ensure the unit is switched to Bluetooth mode.</li> <li>• Move your Bluetooth device closer to unit.</li> <li>• Turn OFF your Bluetooth device and unit. Then turn ON.</li> <li>• Increase the volume on your portable device and/or the unit.</li> </ul>
	• Sound has a lot of static	<ul style="list-style-type: none"> <li>• Your device is too far away.</li> </ul>	<ul style="list-style-type: none"> <li>• Bring your device closer to the Jukebox.</li> </ul>
	• Unable to pair with a Bluetooth device	<ul style="list-style-type: none"> <li>• Your device doesn't have Bluetooth connectivity.</li> <li>• The Bluetooth pairing is not successful.</li> </ul>	<ul style="list-style-type: none"> <li>• Confirm that your device is Bluetooth compatible.</li> <li>• Re-pair the unit and device again.</li> </ul>



## Federal Communications Commission (FCC) Compliance statement

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## Industry Canada (IC) Compliance Statement

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions:

(1) This device may not cause interference

Le présent appareil est conforme aux CNR d'ISDE Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

La bande 5150–5250 MHz est réservée uniquement pour une utilisation à l'intérieur afin de réduire les risques de brouillage préjudiciable aux systèmes de satellites mobiles utilisant les mêmes canaux.

## Declaration Of Conformity C E

Hereby, UEME Ltd declares that this product is in compliance with:  
Directive 2014/53/EU.



- Never throw batteries into a fire or expose to excessive heat sources.
  - If batteries are swallowed, please seek immediate medical attention.
  - Always ensure correct +/- battery polarity when installing batteries.
  - Do not recharge non-rechargeable batteries.
- Equipment, which is marked with the WEEE logo (as shown on the left), should not be thrown away with your household waste. Contact your local authority waste disposal department, as they will be able to provide details of the recycling options available in your area.



Electrical and electronic equipment (WEEE) contains materials, parts and substances, which can be dangerous to the environment and harmful to human health if the waste of electrical and electronic equipment (WEEE) is not disposed of correctly.

Equipment, which is marked with the WEEE logo (as shown on the left), should not be thrown away with your household waste. Contact your local authority waste disposal department, as they will be able to provide details of the recycling options available in your area.

## FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

### RF Exposure Information

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.