


1200Mbps

Repeater Installation Guide

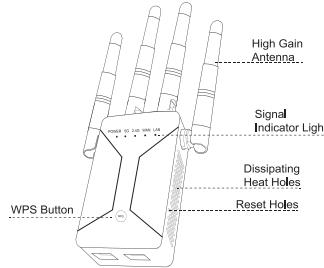

Tips: Please make sure that the router is turned on and able to access the Internet before setting!

Step1

Plug the Extender into a power outlet near your router.
(Recommended within 20 feet)



Step2

Go to your Phone settings. Open WiFi, and turn it on. Search for the network name "Repeater2.4G-xxxx" and click on it to connect.



Step3

Once connected to WiFi extender the configuration interface should pop up automatically. If not, please open a web browser and input:

192.168.11.1

Once the page loads, enter the default password, "admin" into the password box. Click the "Login" button to continue.



Step4

Once the page loads, enter the default password, "admin" into the password box. Click the "Login" button to continue.



Step5

Enter the software management interface and click "Repeater Mode".



Step6

Click on the name of the WiFi network you want to extend, e.g. **Office**.
If your home WiFi does not appear, please refresh it several times.

Step7

Type your WiFi password into the Password box. Click the "Save" button.

Please enter the password of the host router



Step8

The new WiFi SSID defaults to the "router name_Ext". Enter the same password as the main router to connect and access the network.
e.g. **Office_2.4G_Ext**

Congratulations! The WiFi extender has been set up and you can go online.

Settings Wi-Fi



Get✓✓✓

When the steps are complete, your Extender automatically reboots. Place it in the best location for better service(halfway between your router and the Poor signal area.)

!!!

The Extender's default name is your router name_Ext, e.g. **Office_2.4G_Ext**/**Office_5G_Ext**. The password remains the main router password.

METHOD #2 CONNECT WITH WPS (IF SUPPORTED BY YOUR ROUTER)

Step1

Plug your WiFi extender into an outlet near your router, then wait for the wireless LED to turn on and stay solid.



Step2

Press the WPS button on your main router for 1-2 seconds.



 
Step3

Within 30 seconds press the WPS button on the Extender for 1-2 seconds.



Step4

After 30 seconds, a network will appear. The new WiFi SSID defaults to the "router name_Ext". The network will have the same password as your current network.



Step5

Move the Extender to the best position which is halfway between your router and the area that has poor WiFi signal.

HOW TO RESET THE REPEATER

Please use the needle to press the RESET hole on the right side of the repeater for 5 seconds to restore the factory settings.(WHILE STILL PLUGGED IN)

OTHER MODES

Bridge Mode setting: The setting method of bridge mode is the same as the repeater mode. Please refer to the setting method of repeater mode. This mode is suitable for printers, IP cameras, smart TVs, etc.

Client Mode setting: The setting method of client mode is the same as the repeater mode. Please refer to the setting method of repeater mode. After the setting is successful, use the network cable to connect the extender with the wired equipment, and the wired equipment can access the Internet.

AP Mode setting: In order to facilitate management, this IP address and default gateway entered here should be the IP segment of the superior router, and the IP address cannot be the same as the superior, avoid IP conflict with router. After the setting is completed, the WAN port of the device can access the external network through the set IP address Network to access the management device.

Router Mode settings: Enter the software management page, click Router Mode, which can select "PPPoE", "StaticIP", "Dynamic IP" three ways to get online.

①PPPoE dial-up mode: This mode requires the Internet account provided by the network service provider to be filled in Number and password, below can set 2.4G and 5G wireless SSID name, wireless password.

②Static IP mode: This mode needs to fill in the IP address provided by the network service provider, Subnet mask, gateway, main DNS address, 2.4G and 5G wireless SSID can be set belowName wireless password.

③Dynamic IP mode: In this mode, the WAN port is assigned IP by the superior network device to access the Internet. The 2.4G and 5G wireless SSID name can be set below.

1. My WiFi says connected but I have no internet connection.

- If the WiFi is connected, but there is no internet, check that the router's WiFi is actively working. And try to restart the router.
- It might be more of an IP conflict. You can try to set it up in Bridge mode so that the devices connected to both routers can interact with each other.
- You may have entered the wrong password. It could also be for some other reasons, so try to restore factory settings. To do that, please use a needle to press the RESET hole for 5 seconds to restore the factory setting. Set up the extender.

2. Why does the internet speed drop when connecting to the extender?

- The WiFi Extender supports 2.4G and 5G.
- The WiFi Extender is used to extend the range of your WiFi (which your main router WiFi can't cover). It does not increase internet speed.
- Sometimes, the signal (coverage or speed) drops due to external influences - a microwave oven, nearby cell towers nearby, a neighbor's WiFi on the same channel, walls, and partitions in a building made of certain materials blocking a WiFi signal.
- Try the Extender in different positions: place it at different angles or locations for a better signal.

3. What is the user name and password for setting up the Extender?

- The user name and password for used during setup is admin
- After setting up, connect to the new WiFi name "router name_2.4G_Ext or router name_5G_Ext" The password is now the same as your WiFi main router.

4. Why are some devices at home (printer, CCTV camera, TV, iPhone) unable to connect to the Extender?

- This means the device does not recognize the Extender.
- The device should be in the same network as your router. You may set up the Extender in Bridge Mode to see if it will work.

5. How far should the Extender be from the router?

- It should be between the router and the area with a low signal. The position must be able to receive a good WiFi signal from the router.

6. Should the Ethernet cable be connected from the router to the extender?

- No, you should only plug the cable from the Extender to a computer.

7. Does the extender increase my internet speed?

- No, it increases the range of your WiFi.

8. Does the extender work with 5G?

- Extender supports 2.4G and 5G

9. Why am I unable to enter the web page?

If you cannot open the webpage, follow these steps:
● Open your browser on your cellphone/PC, and enter the digits "192.168.11.1" into the address bar. Enter user name and password "admin" then log in. You can also connect the WiFi extender to your PC with an Ethernet cable, then open your browser and enter the same digits "192.168.11.1". Enter the user name and password "admin" and follow same steps.

If you are still unable to open the webpage, please check and try these:
● Check if you are connected to the WiFi extender during setup. This is necessary because before connecting to the router, the WiFi Extender should have no internet access. Your mobile will usually auto-connect to the other WiFi or ask if it is connected to the present WiFi or not. You must be connected to the WiFi Extender during setup.
● Try to use a needle to press the RESET hole for 5 seconds to restore the factory setting. Set up the extender again.
● Disable your mobile's data during setup.
● Use another mobile phone to try.

WARNING

- Keep the device away from water, fire, humidity or hot environments.
- Do not attempt to disassemble, repair, or modify the device. If you need service, please contact us.
- Do not use the device where wireless devices are not allowed.
- The socket-outlet shall be installed near the equipment and shall be easily accessible.
- For pass-through devices, plug the power strips into the integrated electrical sockets of the devices, but devices of the same or another type not be stacked in normal use. Please read and follow the above safety information when operating the device. We cannot guarantee that no accidents or damage will occur due to improper use of the device. Please use this product with care and operate at your own risk.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

GUARANTEE

IMPORTANT: All WiFi extenders on the market are designed to increase or improve WiFi coverage. That means It can improve the locations which are getting weak signals from your router and **NOT TO INCREASE WIFI SPEED** According to the laws of physics, WiFi Extenders will always be slower than your existing router. This is because the WiFi extender has to split its bandwidth between the router.

Note! Based on 200 000+ sold units, the extender may not be effective or doesn't work in 2% of cases due to interference or incorrect setup.


After-sales Service

We always offer friendly customer service for every customer. If you find any initial defects or faults with your product, please go to "Account Services" -> "Order History" -> "Seller" -> "Ask a Question", we will reply all within 24 hours. We will do our best to satisfy our customers, so please buy with no worries..



1200 Mbit/s

Repeater-Installationsanleitung

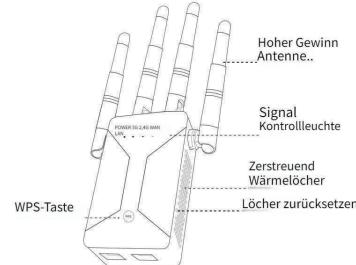

Tipps: Bitte stellen Sie sicher, dass der Router eingeschaltet ist und darauf zugreifen kann
Informieren Sie sich vor der Einstellung im Internet!

Schritt 1
Stecken Sie den Extender in eine Steckdose in der Nähe Ihres Routers. (Empfohlen innerhalb von 20 Fuß)



Schritt 2

Gehen Sie zu Ihren Telefoneneinstellungen. Öffnen WLAN und schalten Sie es ein. Suchen Sie nach dem Netzwerknamen „Repeater2.4G_xxxx“ und klicken Sie darauf, um eine Verbindung herzustellen.



Schritt 3
Sobald eine Verbindung zum WLAN-Extender besteht, öffnen Sie den Internetbrowser und klicken auf „Administrator“. Wenn nicht, öffnen Sie bitte einen Webbrowser und geben Sie Folgendes ein:

192.168.11.1

Die Seite sollte geladen sein, geben Sie das Standardkennwort „admin“ ein, klicken Sie auf die Schnellstart-Anmelden, um fortzufahren.

Benutzer-Anmeldung
(Englisch)
Administrator
Anmeldung

Schritt 4

Sobald die Seite geladen ist, geben Sie das Standardkennwort „admin“ ein, klicken Sie auf die Schnellstart-Anmelden, um fortzufahren.

Benutzer-Anmeldung
(Englisch)
Administrator
Anmeldung

Schritt 5

Betreten Sie die Softwareverwaltung Schnittstelle und klicken Sie auf „Repeater-Modus“.



Schritt 6

Klicken Sie auf den Namen des WLAN-Netzwerks, das Sie erweitern möchten, z. B. Büro. Wenn Ihr Helm-WLAN nicht angezeigt wird, aktualisieren Sie es bitte mehrmals.

Schritt 7

Geben Sie Ihr WLAN-Passwort in das Feld „Passwort“ ein. Klicken Sie auf die Schaltfläche „Speichern“.

Bitte geben Sie das Passwort des Host-Routers ein

SSID	Büro
Passwort	1234567890
Aktivieren Sie WLAN-Brücke	
SSID	Office_24_Ext
2.4G SSID	Office_24_Ext
Aktivieren Speichern	

Schritt 8

Die neue WLAN-SSID lautet standardmäßig „Routername Ext“*. Geben Sie dasselbe Passwort wie beim Hauptrouter ein, um eine Verbindung herzustellen und auf das Netzwerk zuzugreifen z.B. Office-2.4G_Ext/Office_5G_Ext

Glückwunsch! Der WLAN-Extender ist eingerichtet und Sie können online gehen.

Einstellungen W-lan

W-lan	ON
Office-2.4GExt	ON
Office_5G_Ext	ON

GetVVV

Wenn die Schritte abgeschlossen sind, wird Ihr Extender startet automatisch neu. Platzieren Sie es für einen besseren Service am besten Standort (auf halbem Weg zwischen Ihrem Router und Bereich mit schlechtem Signal.)

!!!

Der Standardname des Extenders ist Ihr Router name „Ext“, z.B. Office_24G_Ext/Office_5G_Ext. Das Passwort bleibt das Haupt-Router-Passwort.

METHODE Nr. 2: VERBINDEN SIE MIT WPS, WENN DIES VON IHREM ROUTER UNTERSTÜTZT WIRD

Schritt 1

Schließen Sie Ihren WLAN-Extender an eine Steckdose in der Nähe Ihres Routers an und warten Sie dann auf die WLAN-Verbindung. LED schaltet sich ein und bleibt dauerhaft leuchten



Schritt 2

Drücken Sie die WPS-Taste an Ihrem Hauptrouter 1-2 Sekunden lang.



Schritt 3

Drücken Sie innerhalb von 30 Sekunden 1-2 Sekunden lang die WPS-Taste am Extender.



Schritt 4

Nach 30 Sekunden erscheint ein Netzwerk. Die neue WLAN-SSID ist standardmäßig „Routername Ext“*. Ihr Netzwerk hat dasselbe Passwort wie Ihr aktuelles Netzwerk.

Einstellungen	W-lan
W-lan	ON
Office-2.4G-Ext	ON
Office-5G-Ext	ON

Schritt 5

Stellen Sie den Extender an die beste Position, also auf halbem Weg zwischen Ihrem Router und dem Bereich mit schlechtem WLAN-Signal.

SO SETZEN SIE DEN REPEATER ZURÜCK

Bitte drücken Sie mit der Nadel 5 Sekunden lang auf das RESET-Löch auf der rechten Seite des Repeaters, um die Werkseinstellungen wiederherzustellen. (Während Sie noch angeschlossen sind)

