



The second type: the operation step for hot point connection (slow flashing)
(with the operation of Android mobile phone as example)

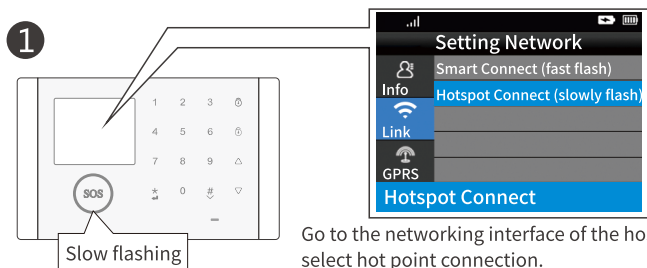


Go to the networking interface of the host and select hot point connection.

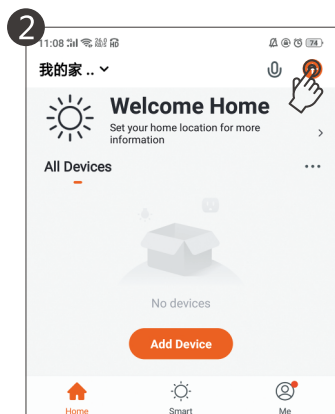

Open "Tuya Smart" and click + at the top right corner to add the hub.


3 Configuring the Hub to APP (two types)

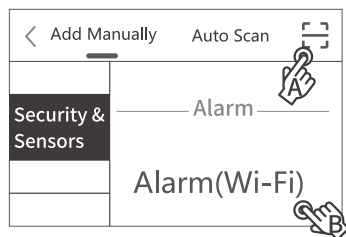


Two-dimension code of the hub

Scheme A: click [QR icon] on the top left corner to scan the hub code.


Scheme B: Go to the "Security & Sensors" and choose "Alarm (Wi-Fi)", click enter.

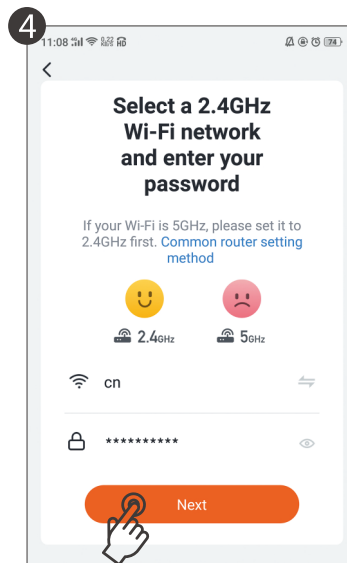


Input WIFI password and click next step.

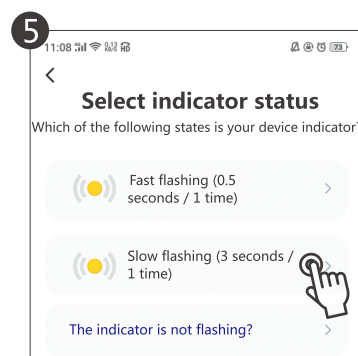


Click slow flashing (3 seconds/1 time)

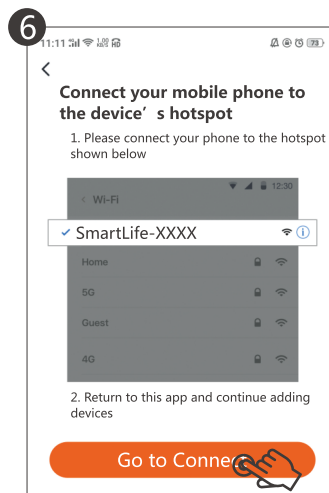


Click "go to connect".

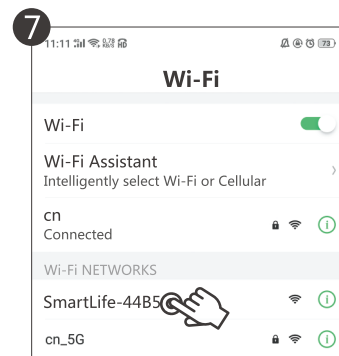

Select the hot point at the beginning of SmartLife.

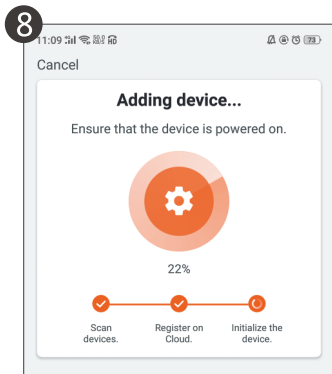


The Hub is connecting

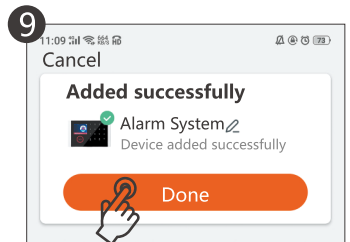


Connection Successful, click "Done".


Add wireless detectors through Tuya Smart

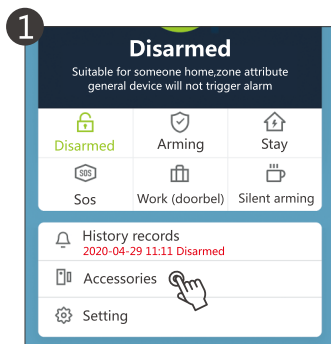


Click accessories

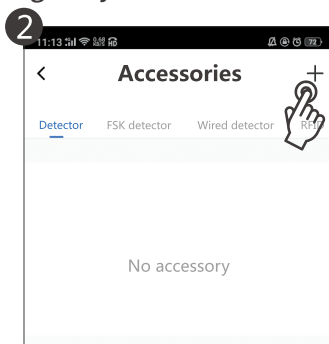

click the top right corner to add detector.

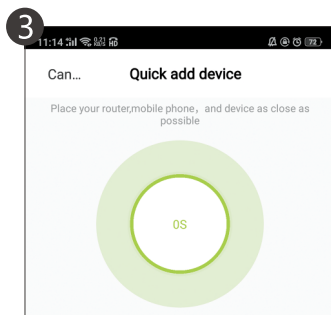


Trigger the detector during search

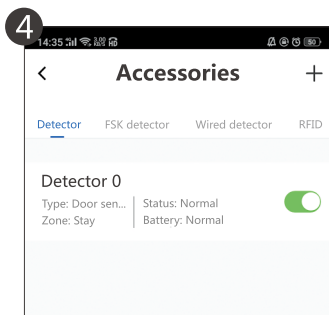


adding is successful.


Change the name attribute of the detector through Tuya Smart

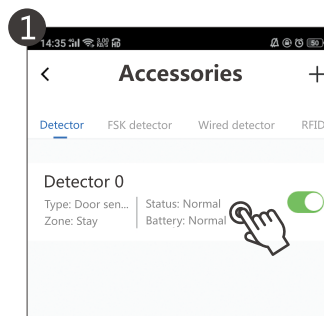


Click detector1

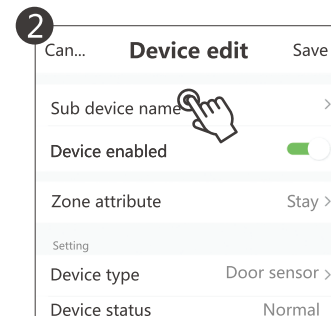

click the attribute to be changed with the name as an example.

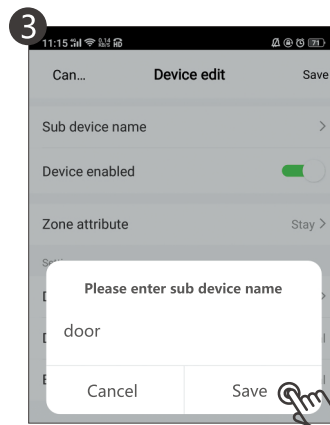


Input the name and click save

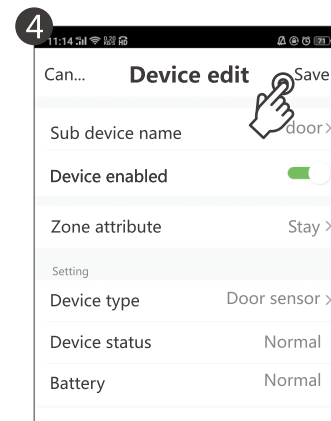


click save on top right corner.


Delete smart wireless detector through Tuya Smart

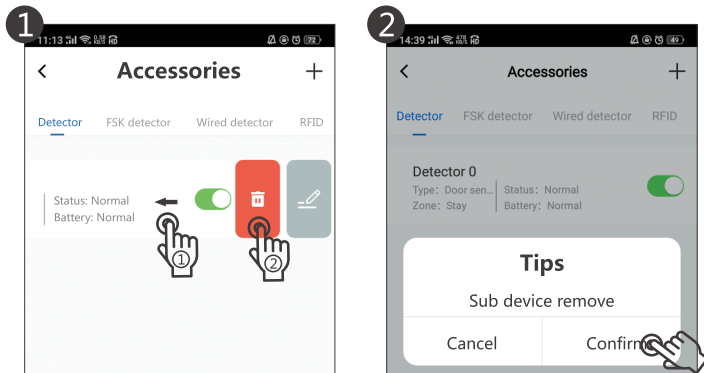


Timed arming and disarming through Tuya Smart setting (host online)

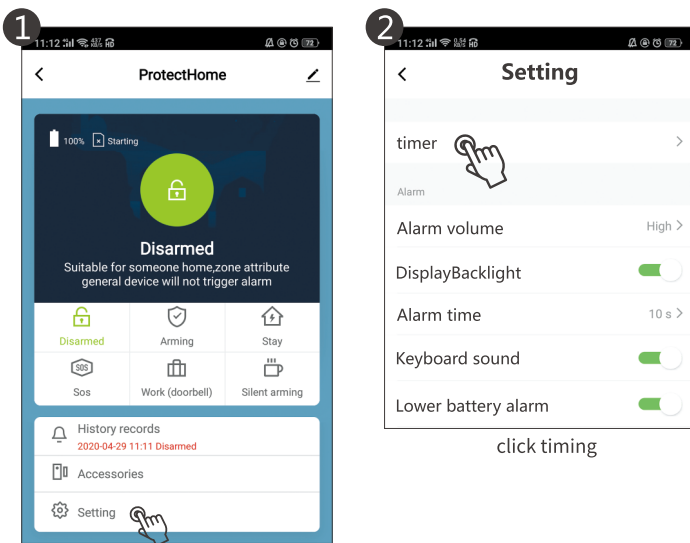

Click setting

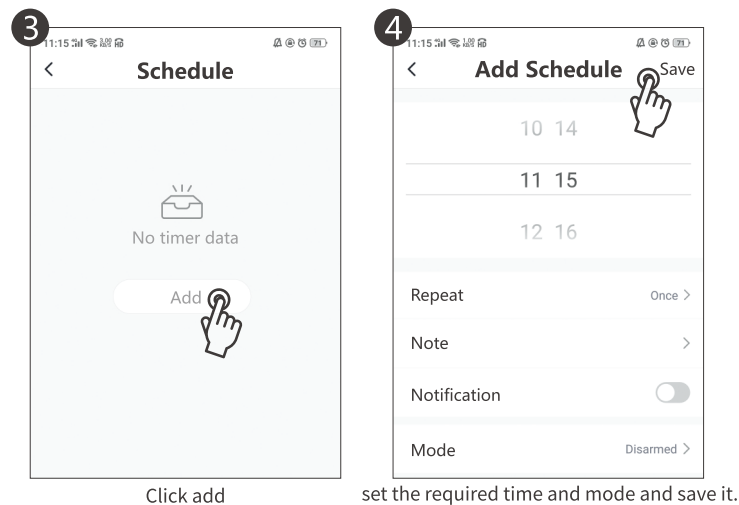

Tuya Smart remote arm/disarm

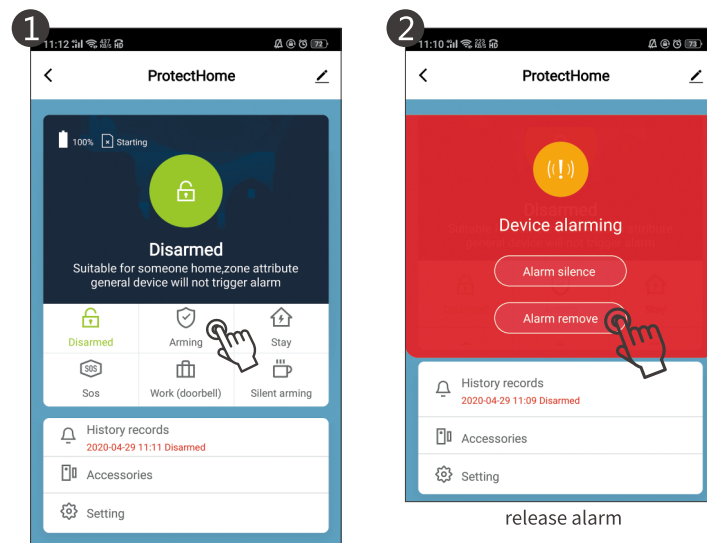

Arming