

EM-3315FT 2.1 V60087BT-BLK-076JG说明书

Date: 2022.12.05

P/N:

尺寸: L127xW88.9mm

材质: 80g书纸

工艺: 黑白印刷+打钉成册

VIVITAR®



# Wireless Home Theater System With Remote Control



# Important Safety Precautions

When using your Wireless Speaker System with Remote Control, basic safety precautions should always be followed, including the following:

1. READ ALL INSTRUCTIONS BEFORE USING YOUR SPEAKERS.
2. Clean using a soft cloth or paper towel.
3. Do not allow children or the infirm to play with your speakers without adult supervision.
4. Do not expose your speakers to excessive heat, flames or fire.
5. Always press all buttons or switches carefully. Do not manhandle your speakers.
6. Do not use in extremely dry environments, as this can lead to static discharge during usage.
7. Do not expose your speakers to temperatures above 40°C.
8. Do not attempt to repair this product yourself. Contact a qualified service center if your speakers are in need of service.
9. Do not drop, puncture or expose your speakers to excessive trauma.
10. Your speakers are not intended for commercial use.
11. Do not place near objects that generate a strong magnetic field.
12. Unplug this device when not in use for long periods of time or during lightning storms.
13. In order to avoid the risk of fire or electric shock, do not expose this unit to rain or moist environments.
14. Only use products indoors. Do not expose power plug to water or moisture.
15. Keep your speakers and power cable on a dry, cool even surface. Plugging in a power cord that has been exposed to water can cause fires or electrical shocks.



## WARNING:

In order to avoid the risk of fire or electric shock, do not expose this unit to rain or moist environments.

**\*Please note: this product is for indoor use ONLY.**



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

# Introduction

Thank you for purchasing the Vivitar Wireless Home Theater System, item V60087BT. Your speakers are designed specifically for indoor use. Please read this manual first before using your device.

## Package Contents

- 1 Subwoofer
- 2 Satellite Speakers
- Remote Control
- Audio Cable
- Satellite Speaker Connector
- User's Manual with Warranty Information

## Features

- Analog audio input
- Supports USB, SD/MMC card music player in Mp3 file format
- Full function remote control
- Bluetooth support
- Built in 3 channel power amplifier
- Compatible with LCD/LED TVs and Smartphones

## Specifications

Bluetooth Specification: Bluetooth V5.2

Bluetooth Range: Up to 33 feet (10 meters)

Output Power: 60W

Voltage: 110V 60Hz

Frequency Response: 40Hz-20KHz(-3dB)

S/N Ratio: ≥80dB

Impedance: 4 Ohm (all speakers)


Subwoofer Speaker Size: 5 inches

Satellite Speaker Size: 3 inches

Remote Control Range: 5 Meters

# A Look at Your Sound System Controls


Subwoofer Control Panel

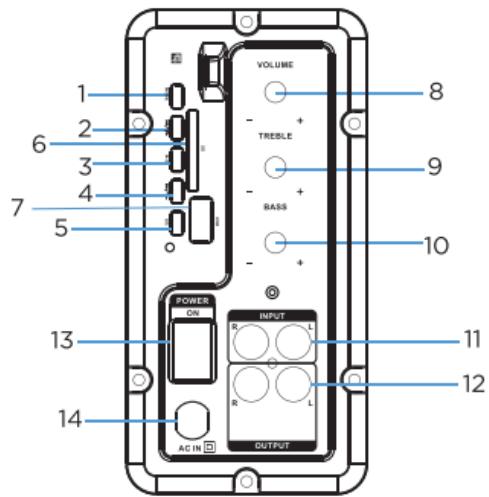

1. Mode
2. Previous Track (press and hold to increase volume)
3. Play/Pause
4. Next Track (press and hold to decrease volume)
5. EQ: Audio Output Sound Effect
6. SD/MMC Card Slot
7. USB Port
8. Volume Adjustment Knob
9. Treble Adjustment Knob
10. Bass Adjustment Knob
11. Input Jacks
12. Output Jacks
13. Power On/Off
14. AC Power Cord

# A Look at Your Remote Control

Remote Control

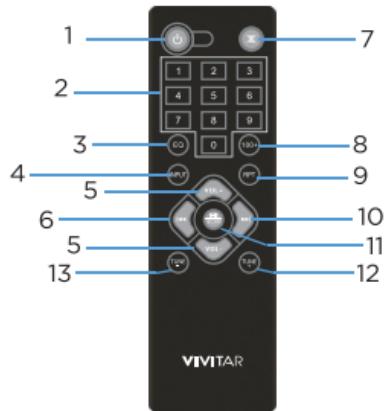


1. Power
2. Keypad
3. EQ Mode On/Off
4. Choose Input/Mode: USB/SD/FM/AUX/BT
5. Volume + (to increase volume)  
Volume - (to decrease volume)
6. Previous Track
7. Mute
8. Skip 100 Tracks
9. Repeat Audio Track
10. Next Track
11. Play/Pause
12. Next Channel (FM Mode)
13. Previous Channel (FM Mode)

# Powering Your Speaker System

Insert the AC Power Cord into a suitable power outlet. Power on the speaker system by pressing the Power On/Off button on the subwoofer or the remote.

## AC Power Cord WARNING

- Make sure that the power supply of your home corresponds with the voltage of this unit.
- Never handle the power cord or plug with wet hands.
- Ensure that the main power switch is in the "OFF" position before connecting the AC power cord to the power supply to avoid damage to this unit.
- A damaged power cord can easily cause an electric shock or fire hazard; never use a power cord after it had been damaged.

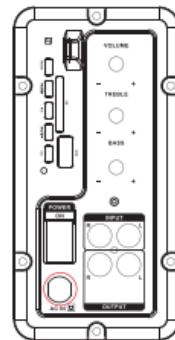


# Inserting Batteries In Your Remote

1. Slide open the battery case located on the back of your remote.
2. Insert 2 AAA batteries with the correct polarity (+, -).
3. Slide the battery case back into place.

## BATTERY WARNING:

- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
- Batteries are not to be inserted with the wrong polarity.
- Exhausted batteries are to be removed.
- The supply terminals are not to be short-circuited.


Please recycle or dispose of the battery properly.  
Contact local recycling facilities and/or the manufacturer of your battery for further information.

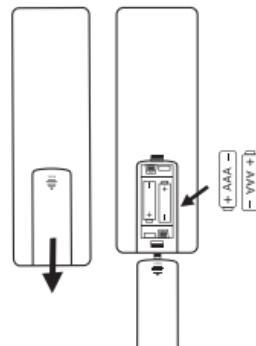


# Set Up Your Speaker System

- 1) First plug each of the satellite speakers' cables into the Output Jacks on the rear panel of the Subwoofer. Insert the plug of the left side speaker into the L jack and the right side speaker into the R jack.
- 2) Insert one end of the audio cord into the Input Jack on the rear panel and insert the other end into the output jack of a computer or any external audio source.
- 3) Make sure the AC Power Cord is plugged into a suitable power outlet.
- 4) Power on the unit with your remote control or through the Subwoofer control panel. An indicator light will illuminate while the device is powering on.

Note: The default mode is AUX mode. To change mode, continuously press the Mode button on the subwoofer or the Input button the remote control.

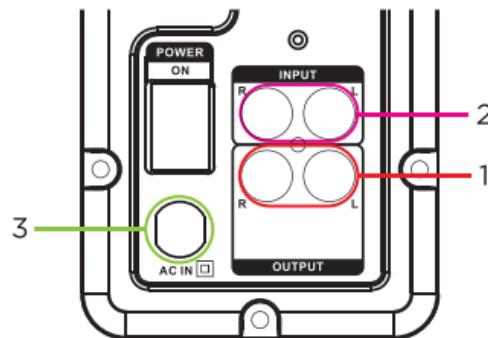

# Operating Your Speaker System

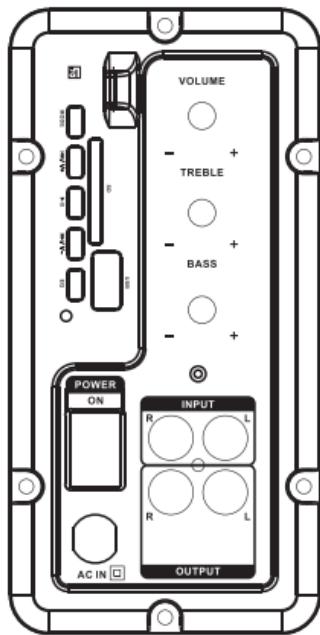

Power on your speaker by pressing the Power On/Off button.

Rotate the Volume knob to adjust the master volume.

Rotate the Bass knob to adjust the bass.

Rotate the Treble knob to adjust the treble.

To switch media source, press the Mode button to switch between USB, SD, FM, AUX and Bluetooth mode.

Pause and Play media by pressing the Play/Pause button.

Press the Previous Track button to go to the previous track, or press and hold to increase volume.

Press the Next Track button to go to the next track, or press and hold to decrease volume.

Press the EQ button to toggle through different output sound field effects, or to turn EQ on or off.

To turn off the device, press the Power On/Off button and unplug the AC Power Cord.

# Using Your Remote Control

Press the Power button to turn the device on or off.

Press the Previous and Next Track buttons to switch to the previous or next track.

Press the Volume - and Volume + buttons to adjust the volume.

Press the Mute button to mute audio.

Press the Play/Pause button to play or pause media, or press and hold to scan.

Press the EQ button to toggle through different output sound field effects, or to turn EQ on or off.

Press the Repeat Audio Track button to repeat track.

To switch media source, press the Input button to switch between USB, SD, FM, AUX and Bluetooth mode.

Press the Tune - or the Tune + buttons to go to the previous or next channels on FM mode.



# Pairing Your Speaker with a Bluetooth Device



1. After turning on your speaker system and making sure it's operating, switch the audio mode to Bluetooth by pressing the Mode button on the subwoofer control panel or the Input button on the remote control until the device goes into Bluetooth mode.




2. Turn on Bluetooth from the device you would like to connect. Then select pairing name "V60087BT" from the Bluetooth menu to pair.

**Note: Keep Bluetooth device within signal range (10 meters).**

# USB and SD/MMC Card

Insert USB thumb drive or SD/MMC memory Card into the appropriate slot or port to listen to .mp3 audio files.

Note: When inserting a USB thumb drive or SD/MMC memory card, the speakers will play from the device last inserted. If not, press the Mode button repeatedly until desired mode is activated.


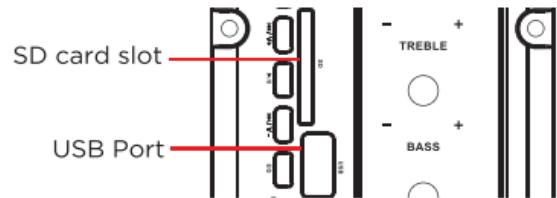


## Connecting Satellite Speakers

Build a soundbar by connecting both satellite speakers.

Lay the satellite speakers horizontally and place the connector piece in between.

 Attach both satellite speaker bottoms to the connector piece and twist the speakers twice or until they are locked into place.

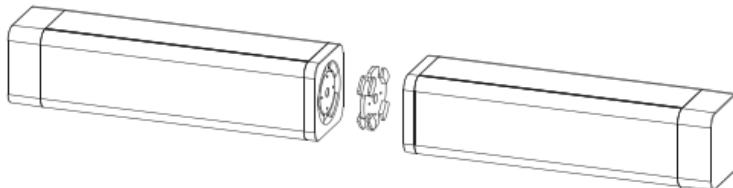

# Maintenance and Care

- Before using your speakers or before charging, inspect the ports to make sure that they are clear of dust and debris.
- Use a soft cloth to clean your speakers. Never use any harsh chemicals or detergents. Make sure your speakers are dry before charging.
- When your speakers are not in use, they should be stored in a cool, dry place.
- Never tug or yank on the AC power cable when it is connected to your speaker. Connect and disconnect cables as carefully as possible.
- Never expose your speaker to high temperatures or extreme cold.
- Please recycle or dispose of your speakers properly based on the laws and rules of your municipality. Contact local recycling facilities and/or the manufacturer of your speakers for further information.

# FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## RF Exposure Information

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.

# Maintenance and Care

- Before using your speakers or before charging, inspect the ports to make sure that they are clear of dust and debris.
- Use a soft cloth to clean your speakers. Never use any harsh chemicals or detergents. Make sure your speakers are dry before charging.
- When your speakers are not in use, they should be stored in a cool, dry place.
- Never tug or yank on the AC power cable when it is connected to your speaker. Connect and disconnect cables as carefully as possible.
- Never expose your speaker to high temperatures or extreme cold.
- Please recycle or dispose of your speakers properly based on the laws and rules of your municipality. Contact local recycling facilities and/or the manufacturer of your speakers for further information.

# Vivitar One Year Warranty

This warranty covers the original consumer purchaser only and is not transferable.

This warranty covers products that fail to function properly UNDER NORMAL USAGE, due to defects in material or workmanship. Your product will be repaired or replaced at no charge for parts or labor for a period of one year.

## What Is Not Covered by Warranty

Damages or malfunctions not resulting from defects in material or workmanship and damages or malfunctions from other than normal use, including but limited to, repair by unauthorized parties, tampering, modification or accident.

## To Obtain Warranty Service and Troubleshooting Information:

Call 1-800-592-9541 or visit our website at [www.vivitar.com](http://www.vivitar.com).

To receive Warranty service along with the name and address of an authorized product service center, the original consumer purchaser must contact us for problem determination and service procedures. Proof of purchase in the form of a bill of sale or receipted invoice, evidencing that the product is within the applicable Warranty period(s), MUST be presented in order to obtain the requested service. It is your responsibility to properly package and send any defective products along with a dated copy of proof of purchase, a written explanation of the problem, and a valid return address to the authorized service center at your expense. Do not include any other items or accessories with the defective product. Any products received by the authorized service center that are not covered by warranty will be returned unrepairs.

# Vivitar One Year Warranty (continued)

NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, OTHER THAN THOSE EXPRESSLY DESCRIBED ABOVE SHALL APPLY. DISTRIBUTOR FURTHER DISCLAIMS ALL WARRANTIES AFTER THE EXPRESS WARRANTY PERIOD STATED ABOVE. NO OTHER EXPRESS WARRANTY OR GUARANTY GIVEN BY ANY PERSON, FIRM OR ENTITY WITH RESPECT TO THE PRODUCT SHALL BE BINDING ON DISTRIBUTOR. REPAIR, REPLACEMENT, OR REFUND OF THE ORIGINAL PURCHASE PRICE - AT DISTRIBUTOR'S SOLE DISCRETION -ARE THE EXCLUSIVE REMEDIES OF THE CONSUMER. IN NO EVENT WILL DISTRIBUTOR, ITS MANUFACTURERS, OR SAKAR INT. BE LIABLE FOR ANY INCIDENTAL, DIRECT, INDIRECT, SPECIAL, PUNITIVE OR CONSEQUENTIAL DAMAGES (SUCH AS, BUT NOT LIMITED TO, DAMAGES FOR LOSS OF PROFITS, BUSINESS, SAVINGS, DATA OR RECORDS) CAUSED BY THE USE, MISUSE OR INABILITY TO USE THE PRODUCT. EXCEPT AS STATED HEREIN, NO OTHER WARRANTIES SHALL APPLY. NOTWITHSTANDING THE FOREGOING, CONSUMER'S RECOVERY AGAINST DISTRIBUTOR SHALL NOT EXCEED THE PURCHASE PRICE OF THE PRODUCT SOLD BY DISTRIBUTOR. THIS WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL CONSUMER WHO PURCHASED THE PRODUCT AND IS NOT TRANSFERABLE.

Some countries, states or provinces do not allow the exclusion or limitation of incidental or consequential damages or allow limitations on warranties, so limitation or exclusions may not apply to you. This warranty gives you specific legal rights, and you may have other rights that vary from state to state or province to province. Contact your authorized retailer to determine if another warranty applies. This product is manufactured, distributed and sold by SAKAR International, Inc. All other trademarks are the property of the respective owner, who has not sponsored, endorsed or approved this product.

# VIVITAR®

© 2023 Sakar International  
195 Carter Drive  
Edison, NJ 08817  
Support: 800 592 9541  
[www.vivitar.com](http://www.vivitar.com)