

# Manual

**product name: Remote control**

**Product model: Y-1**

**Instructions for use**

**1. Turn on:** Press and hold the switch button on the product for 3 seconds to turn on. The LED indicator will light up, indicating that the product is turned on.

After the product is turned on, short press the power button of the product to control the frequency switching of the product. The product has 10 vibration modes.

**2. Shut down:** long press the control key on the product

**3. Store in a clean and private place.**

Recharge for Receiver

1. Connect the USB cable to the adapter and the other one to the massager.
2. When charging, the on/off button LED indicator will flash. After charging is complete, the led light will stop flashing and stay on. Each charge takes about 2 hours.
3. If the red light of the on/off button flashes during use, it indicates that the battery is low, please charge it.
4. Please use only the original charging cable provided.
5. You can charge the device that connects the USB cable to the digital device. We do not provide USB power adapters.

**Caveat**

1. Please use only water-soluble lubricants when using. Hand cream or silicon-soluble lubricants may permanently damage the surface of the product. Please clean after use, especially after using lubricant.
2. Please read the instructions before use.
3. Keep away from children.
4. Pregnant women need to consult a doctor before using this product.
5. If the silicone layer is broken, do not use it.
6. Personal use of the product. We recommend not to share with others.

**Clean, storage and safety**

1. The product is waterproof.
2. Clean the product before and after each use. Use warm water (maximum temperature 80° C is recommended) and antibacterial soap. Rinse the residue with clean water, and finally wipe it with a dry towel or paper until it is completely dry.
3. Do not use cleaners containing alcohol, gasoline or acetone.
4. Please avoid exposing the product to high temperature or sunlight.
5. Please put the product in a clean, dry place and separate it from other massagers.

**packing list**

Manual, product, USB cable, remote control.

## Warranty

If necessary, please keep the warranty card and purchase invoice as proof of warranty.

The warranty does not include the following conditions:

1. Dysfunction caused by abuse.
2. Damage caused by manipulation.
3. Accidental damage or malfunction caused by improper storage.
4. Any product is a loss.
5. Problems caused by disassembling product parts.

## Scrap and recycling

When not working, do not throw this electronic device into the trash can. To minimize pollution and ensure maximum environmental protection, please dispose of it as electronic equipment and electronic waste. This product needs to be sent to the electronic product recycling deposit, and must not be treated as general waste.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction