

Automatic Pet Feeder

Smart Type Operation Guide



Please Read the Manual Carefully
Before Using the Product

Safety Instruction

- 1.Children need to be used in the company of adults;
- 2.Do not use the feeder for pets who cannot reach the food tray or have physical disabilities.
- 3.Do not immerse the base part in water, which will damage electronic components such as control panel.
- 4.Do not place any foreign objects in the pet feeder.
- 5.Do not put canned, wet or wet food in the feeder.
- 6.Do not disassemble the equipment by yourself.
- 7.Do not modify the pet feeder.
- 8.If the equipment has faults or damaged accessories, do not try to repair the pet feeder by yourself. Contact the seller immediately and solve it.
- 9.Be sure to unplug the power plug when not using the product or cleaning the product.
- 10.If the power plug of the equipment is damp, please turn off the power of the socket and do not try to unplug the power plug.

Notice

- 1.Do not let your pet chew or swallow any accessories. If you are worried about the power cord, please buy wire conduit (hard plastic protector) and protect the power cord at the hardware store.
- 2.Do not install or put the pet feeder in an exposed place.The temperature should be within the range of - 10 °C~40 °C.
- 3.Please use alkaline Size D battery for power supply. Do not use rechargeable batteries.
- 4.Check the battery regularly. If you travel or travel for a long time, be sure to replace the battery.
- 5.Do not lift the pet feeder directly with the cover, food bucket and food tray. Hold the base with both hands to lift and carry, while keeping the device in an upright position.
- 6.Only applicable to dry food with a diameter of 2-12mm. Larger foods may get stuck or block the Food Outlet.
- 7.Please carefully read and follow all important instructions listed on the pet feeder and package.

 
Product Image

Front View

1. Status Indicator
2. Food Tray Clips
3. Cover
4. Grain Bucket
5. Button
6. Food Plate



Reverse

7. Grain Bucket Unlock Switch
8. 5 Volt DC Power Jack

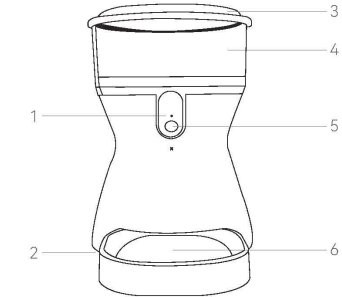

Bottom View

  - 9.Trumpet
- 10.Switch
- 11.Bottom Battery Compartment

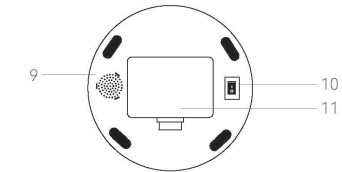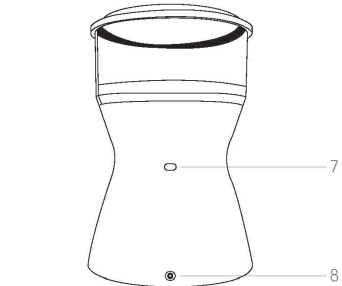

Button Description

Manual feeding: short press to eat 1 serving, and a recording will be played at the same time.

Recording button: Long press for 3s until you hear "di" and start recording.The recording time does not exceed 10s, After you release your hand, you will hear "didi" to indicate that it has been saved.

Reset (distribution mode switching): In the state of the blue indicator flashing quickly, press and hold for 10 seconds to make three beeps and then switch to the hotspot distribution mode, the blue indicator will flash slowly, and the recording will be deleted at the same time Record. Repeat this operation to switch back and forth.

Status Indicator

Flash - regular mode configurable state

Blinking slowly - AP configurable status

Always on - distribution network successful

Cleaning and Maintenance

Please clean the feeder regularly to keep your pet's health.

When it starts to get dirty and a lot of loose food in the food trough, you can remove the food cover to clean it.

Clean the feeder base containing the control panel with a soft, damp cloth. Do not wet this part. Remember not to rinse it directly with running water.

Do not put the product in the dishwasher, otherwise it will be permanently damaged!

Packing List

After opening the product package, please confirm whether the machine is in good condition.

Please check the list to confirm whether the accessories are complete.

The Feeder ×1

The power adapter ×1

Power Cord ×1

User's guidance ×1

Specification

Food Bucket Capacity: 4L

Power supply: DC 5V/1A power adapter; 3 alkaline AA batteries

Power adapter: AC110-240V input, DC5V output

Gross weight: 2.74kg

Size: 24.5×24.5×37cm

FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions : (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE:This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum distance between 20cm the radiator your body: Use only the supplied antenna.