

# USER MANUAL

## Instruction Manual

Before enjoying the pleasure it provides, please take a moment to read this user manual carefully.


## Specifications:

Category: Remote Control Bullet Vibrator  
Materials: Bullet Egg-Silicone; Remote-Silicone+ABS Plastic  
Users: Female, couples  
Size: Bullet Egg:7.64\*1.3 inch; Remote:2.36\*0.78 inch  
Weight: Bullet Egg:1.8 oz; Remote:1.23 oz  
Number of vibration modes: 7  
Battery type: Li-Ion(including USB charging cable)  
Charging voltage: 5V  
Water resistant: Bullet Egg-Waterproof;  
Remote-Not Waterproof;  
Charging voltage: 5V  
**Note: Please do not turn on the product when charging.**

1

## How to use this product?

1. In order to turn it on, you have to SEPARATELY press the button of the remote and bullet egg for 3 seconds. When it's turn on, the remote's LED light will stay solid while the egg's button will flash.
2. After turned on, you can press the remote button to change the egg's vibrations. The remote's LED light will change if you switch the vibration modes. There is a standby mode(no vibration, just light flashing) after you switch around the 7 vibration modes. Press again.
3. To turn it off, SEPARATELY press the button of the remote and bullet egg for 3 seconds.
4. To recharge, use the USB charging cord(came with the box) to charge it. The LED light will keep flashing until both parts get fully charged.

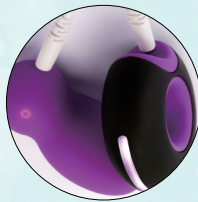

2

## Recharging:

1. Please use the original USB charging cable came with the box.
2. Please make sure the DC port is away from water or lube before charging.
3. The USB cable can be charged by any USB adapters for mobile phones, the USB port from laptop, PC or power bank.
4. It usually takes 2 hours to charge it.
5. **The button/LED light blinks when charging and it goes solid when it's fully charged.**
6. **The egg's button light is not very obvious in a bright room. Please observe it in the dark.**

4

## Cleaning:

1. Before the first-time use, please clean the toy carefully and thoroughly.
2. Clean the toy with warm water and antibacterial soap.
3. Please do not use cleaners that contains alcohol, petrol or acetone.
4. **Please do not soak the item in water for long time.**
5. **Please turn off the product before cleaning.**
6. **Please do not clean the toy when charging.**

## Preservation:

1. Please clean and dry the toy after every use.
2. Turn off the toy if not in use.
3. Do not expose the toy to direct sunlight or extreme heat. Keep in a safe, dry and dust-free place.
4. Keep the toy away from contact with material of other toys.

5

## Warranty:

1. We offer a one-year guarantee from the date of its purchase. Customers are responsible for the shipment fee if replacement is needed.
2. Please always follow the instructions.
3. Warranty does not cover the neglect or misuse of the product. Any attempt to open or take apart the sex toy will void the warranty.
4. The warranty does not violate any legal rights of consumers.

## FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.  
Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

6

Website: [www.imotoy.com](http://www.imotoy.com)



MADE IN CHINA

7