


105G双铜, 125*160mm

TOMSENN KEYBOARD

User`s Manual

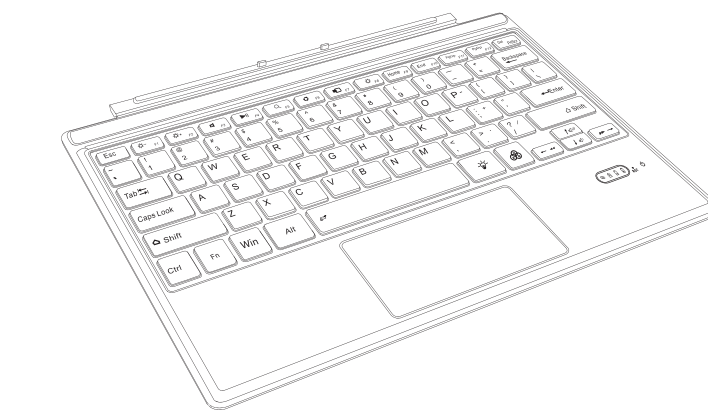

Smart keyboard

Packing List

1. Touchpad Keyboard for Surface Pro 7/ 6/ 5/ 4/ 3.
2. Type-C Charging Cable (No Charger).
3. Keyboard Manual.

Setup

Please lay the tablet horizontally and align it with the magnetic strip above the keyboard.

The tablet will automatically attach to the keyboard.

Note: The keyboard does not support pin connection. If you want to use the keyboard function, please connect the keyboard and the tablet using Bluetooth. when using the bluetooth.

Connection


When using the keyboard for the first time, please charge it for 3-4 hours to ensure sufficient power.



1. Turn on the keyboard power: Keep pressing the keyboard power button for 3 seconds. (Charging light shows red and turns of for 2 seconds, then turns off).
2. Automatics pairing: the Pair light shows blue and keeps flashing which indicates the keyboard is under pairing mode.
3. Open Windows Settings-Devices-Bluetooth & Other Devices-Add Bluetooth or Other Devices-Bluetooth. Search for" Bluetooth keyboard 5.1 V72" and click to connect.

Keyboard Features

Keyboard Overview

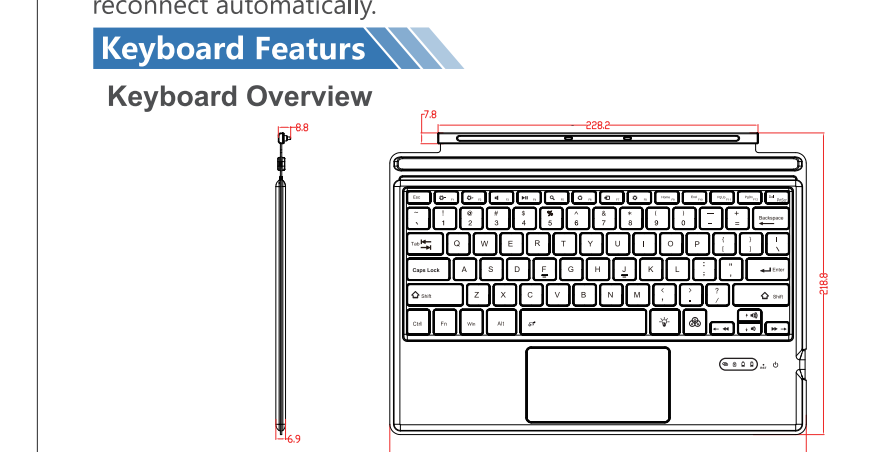

① Pair Light	Press Fn+Z to enter Bluetooth pairing, the light flashes blue, and the pairing is completed and goes out.
② Caps light	Press the caps lock on the keyboard, the indicator light is blue.
③ Battery lower light	Flashes red when lower than 15% and recharge required.
④ Charging light	Charging: Steady Red charge complete: turn off light.
⑤ Reset key	When no button is pressed, use a needle to pry it her and press down.
⑥ Power On/Off	Keep pressing the keyboard power button for 3 seconds.Charging light shows red and turns of for 2 seconds, then turns off).

Blacklit Instruction

1. Make sure the keyboard is connected to the device.
2. Single press the backlight key to switch the 3 levels of the backlight brightness.
3. Press keys to switch between 7 colors to adjust the backlight color.
4. When the battery power is lower than 20% , the blacklight turns off by itself and should not be turned on.

Note: Backlight Feature is only available on the backlight keyboard models.

Charge

1. For the first use, please use the charging cable to make the keyboard fully charged.
2. When charging, please check whether the charging port is powered normally.

Note: Please do not charge the keyboard for long time. Keeping it plugged in for a long time will deplete the keyboard's battery life.

Gesture	Instructions	What it does
	Swipe your finger.	Move the cursor.
	Single finger tap.	Activate the left mouse button.
	Quickly double-tap and drag.	Left click to selec the target and dr.
	Two-finger tap.	Activate the righ mouse button.
	Two-finger scroll up/down, left/right.	Swipe page.
	Two fingers outward or inward.	Zoom in and zoom out.
	Three-finger tap.	Search (WIN+S).
	Move three fingers up at the same time.	Multitasking view.

	Move three fingers down at the same time.	Show desktop.
	Swipe left with three fingers.	Switch apps.
	Swipe right with three fingers.	Switch apps.
	Four-finger tap.	Action Center (Win+A).

Specifications

Operating voltage	3.0-4.2V	Sleep current	<40uA
Length of operation	Backlit≥5 hours Not Backlit≥50 hours	Working current	backlight ≤85-120mA No backlight ≤6-10mA
Stand-by current	≤1mA	Low battery alarm	3.0-3.3V
Battery capacity	About 500mAh	Standby time	≤180 days
Button life	3 million taps	Battery Life	2 years
Connection distance	≤10m	Keystroke	50-70g
Recharging current	≤250mA	Charging port	Type C interface
Reconnect time	2-3 seconds	Charging time	2-3 hours
Pairing password	No	Wake-up time	≤3 seconds
Number of keys	78 keys	Operating temperatu	-10°C ~ 55°C

Cleaning and Care for the Keyboard

To keep your keyboard looking and working great, please maintain good usage habits and pay attention to protecting the keyboard.

Keyboard and Outer Cover Care

The keyboard is relatively thin and light. Please be careful not to use it on uneven surfaces to avoid bending the keyboard. Wipe keyboard and outer covers with a lint-free cloth dampened in mild soap and water.

Don't apply liquids directly to the keyboard Cleanoften in this way to keep your keyboard cover looking great.

Battery Care

Operating temperature: Keyboard is designed to work between 0°C to 35°C. Lithium batteries are sensitive to high temperatures, so keep your Surface out of the sun and don't leave it in a hot car.

Recharge anytime: The battery doesn't need to be empty or low before you recharge. You can recharge the battery whenever you like. However, do not keep charging for a long time, it will decrease the battery life.

Troubleshooting

About Keys Function

1. Windows shortcuts cannot be used
When you want to use the Window system shortcut keys, please use it with the Fn key, or click the FN button to lock the FN function. For example, if you want to use the F5 key to refresh the webpage, you can click FN+F5, or click FN to turn off the FN function, and then click F5 to refresh the website.

2. The keyboard does not work after a while If the keyboard is not used for 10 minutes, it will automatically enter sleep mode. Press any key and wait for 2 to 3 seconds for the device to automatically reconnect.
3. Other settings of the keyboard Open Windows Settings– Devices-Typing. You can set up keyboard input according to your habits through Surface.

About Touchpad Use

Please make sure that the touchpad function is turned on when using (Fn+Space). If the cursor jumps randomly, please wipe the touchpad with a lint-free cloth dampened in mild soap and water. Keep your hands dry during use to avoid incorrect gesture recognition by the touchpad.

About Connection

The keyboard only supports BT connection, please make sure that the keyboard and tablet have been matched and connected before use. If the keyboard has a connection delay or typing delay.

1. Fully charge the keyboard for 3-4 hours.
2. Delete all BT connections on the tablet to eliminate signal interference. Turn off the BT function and restart the tablet.
3. Turn off and on the keyboard. Press "Fn+Z" to reopen the keyboard BT.
4. Open the table BT and reconnect to the keyboard.

Erro Checking

1. Ensure keyboard have enough power.
2. Bluetooth of keyboard and tablet should be on.
3. Keyboard and tablet have been connected through Bluetooth.
4. Please pair bluetooth again when windows is updating or the keyboard is not functioning.
5. The keyboard inputs wrong letter(messy code, the letter of keyboard and button are not matched), please delete Bluetooth and reconnect.
6. Clear those Connected Bluetooth device that has not been used for a while, then Reboot the device.



<http://www.tomsenn.com/video/>

We hope you never have the need, but if you do, our services is friendly and hassle-free

✉ Support@tomsenn.comm

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.