

Wireless Controller

 
Operation Manual



RH-088-F

Please read the manual carefully before use, and use it strictly according to the requirements of the manual. After reading, please keep it properly for future reference

1. Gamepad Concept

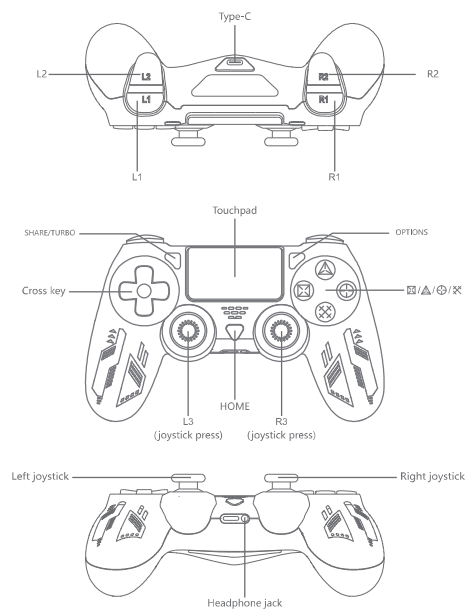

2. Android phone connection

 
- ① When the controller is turned off, first press and hold the Turbo/SHARE button
- ② Then press the Home button combination (Turbo/SHARE+Home), press and hold for 3 seconds



2. Open the mobile phone Bluetooth settings.




3. Find "Wireless Controller" Click to connect

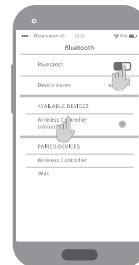


3. Apple mobile phone connection.(iPhone&iPad has been upgraded to ios13 and above)

 1. ①When the controller is turned off, first press and hold the Turbo/SHARE button
②Then press the Home button combination (Turbo/SHARE+Home), press and hold for 3 seconds

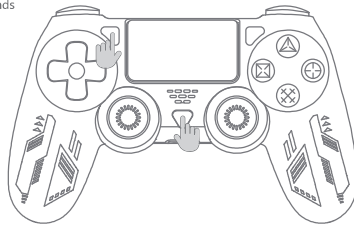

 2. Open the mobile phone Bluetooth settings.

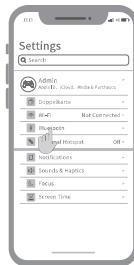


3. Find "DualShock 4 Wireless Controller"
Click to connect.



4. Apple computer connection method

 - ①When the controller is turned off, first press and hold the Turbo/SHARE button
- ②Then press the Home button combination (Turbo/SHARE+Home), press and hold for 3 seconds

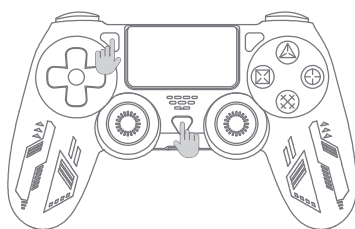

2. Click the system preference settings, click Bluetooth



3. Click Wireless Controller to connect

 


5. Windows computer connection method

- ① Open the computer Bluetooth. When the controller is turned off, first press and hold the Turbo/SHARE button
- ② Then press the Home button combination (Turbo/SHARE+Home), press and hold for 3 seconds




2. Click to add Bluetooth device in the device

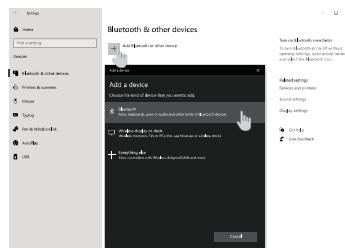

3. Search the Wireless Controller click to connect


6. Wired connection console

 1. Just insert the USB interface directly.

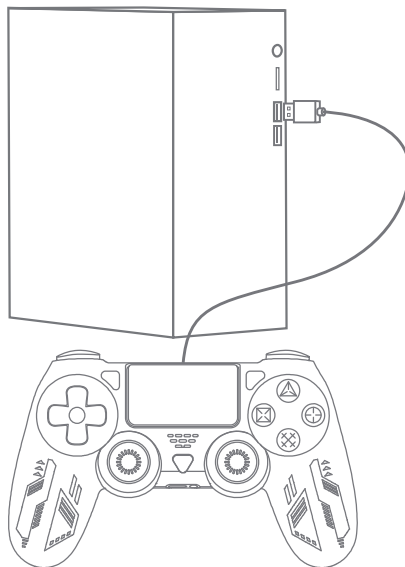

7. PS4 connection

 1. The first connection needs to be connected to the USB cable to pair, and the pair is successfully press the Home button to open the Bluetooth connection.

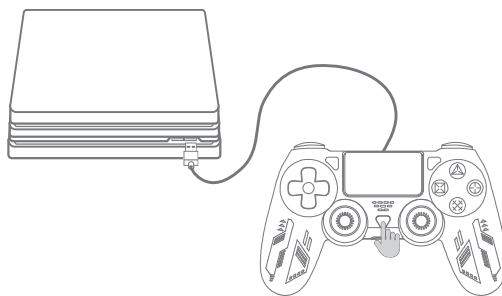


2. Then connect to open the ps4 and press the home to connect



8. PS3 connection

 1. Just insert the USB interface directly.

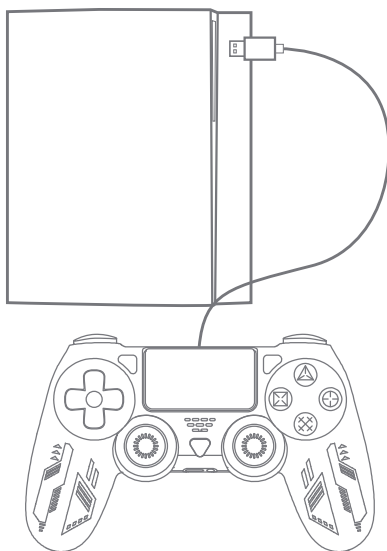

9. Turbo function settings

Set the function of the function key Turbo, the function keys include (X, ○, □, △, L1, L2, L3, R1, R2, R3)

1. Press and hold any function key



2. Then press the Turbo key.



Cancel the Turbo function

1. Press and hold the button containing the Turbo function,
2. Press the Turbo key.

10. RGB lighting function

To adjust the color of the RGB lights or turn off the RGB lights:

1. Press and hold the L3+R3 buttons for 3-5 seconds at the same time, the handle will vibrate and enter the lighting setting. (Colorful breathing cycle, blue, red, green, pink, orange, blue, purple, off)



2. Short press L3 to change the light color.



3. Short press R3 to confirm the color.



4. If the color is not confirmed within ten seconds, the light selection will automatically exit, and the handle will vibrate.

11. Function Introduction

On/Off

1. Power on: Short press the HOME button, the gamepad can be turned on.
2. Shutdown: Press and hold the HOME button for 10 seconds, the gamepad can be turned off, or the gamepad can be turned off by logging out of the host side.

Note: When pairing a new gamepad, the gamepad's initial state is off.

Charging Tips

1. When the battery power of the gamepad is low, the host will display the battery level as 0 and flashing; at this time, when charging through the USB cable, the host will display the charging progress bar, and three grids will be displayed when it is fully charged.
2. When the gamepad is charged in the off state, the indicator light will display an orange breathing light, and it will be displayed in a cycle. When it is fully charged, the indicator light will turn off.

Sleep Function

1. When the gamepad is turned on and connected to the host, if the connection is not successful for more than 1 minute, the gamepad will automatically shut down.
2. When the gamepad is online, you can set the shutdown time of the gamepad through the host, usually 10 minutes / 30 minutes / 60 minutes / do not turn off the power.

Gamepad Vibration

The gamepad has corresponding vibration function prompts according to the needs of different game scenarios.

Such as: "Call of Duty" series / "Battlefield" series shooting.

Touch Function

The gamepad implements corresponding touch functions according to the needs of different game scenarios.

For example, the map of "Assassin's Creed Valhalla" is moved, the menu of "Gone With the Past" is switched, and the corresponding function of "Soul of Tsushima" is used.

Six-axis Function

The gamepad implements corresponding six-axis functions according to the needs of different game scenarios.

For example: "Driving Club" moves the steering wheel, "Gravity Fantasy Different World 1/2" moves the perspective.

Analog Function

According to the needs of different game scenarios, the gamepad realizes the corresponding analog function by pressing the L2/R2 key.

Such as: "Need for Speed" series / "GT racing" series of accelerator and brake strength.

Speaker Function

The gamepad implements the corresponding speaker function according to the needs of different game scenarios.

Such as: "GTA5" when making a phone call, "Call of Duty 13" when the skill wheel is enabled

Precautions

English

- . Please do not store this product in a humid or high temperature place;
- . Do not knock, beat, stick, pierce, or attempt to disassemble the product, to avoid unnecessary damage to the product;
- . This product has a built-in battery, do not drop the Gamepad into the fire, and do not throw it away with garbage;
- . Avoid water or other liquids entering the Gamepad, which may affect the function of the Gamepad;
- . Do not charge the Gamepad near fire or other heat sources;
- . Do not place heavy objects on this product;
- . Do not touch the port with your hands, and do not put foreign objects into the port;
- . Non-professionals should not disassemble this product, otherwise it will not be covered by the after-sale warranty;
- . Children should use this product under the supervision of an adult.

✕ Troubleshooting

- √ Why is the controller not recognized on smart Android TV?
 1. Confirm whether the smart Android TV USB interface is working properly
 2. The power supply of the smart Android TV is insufficient, resulting in unstable USB voltage
 3. Try to unplug the smart Android TV USB port and try another USB port
- √ Why can't the controller be used in the game?
 1. The game itself does not support controller peripherals
 2. You need to set the Gamepad in the game before you can use it
- √ Why can't the Gamepad vibrate?
 1. The game itself does not support vibration
 2. The vibration function is not turned on in the game settings
- √ Other
 1. When it cannot be turned on, the built-in battery may be dead. Please use the USB cable to charge the Gamepad before turning it on.
 2. When the Gamepad crashes or drops unexpectedly, please keep the distance from the device not too far, or reconnect

Warranty Card

English


Product number:	Purchase date:
Dealer:	Username:
Contact numbr:	E-mail:
User address:	

Warranty record

Username	Fault description	Maintenance date	Signature


Certificate
Inspector

 1. Gamepad Concept

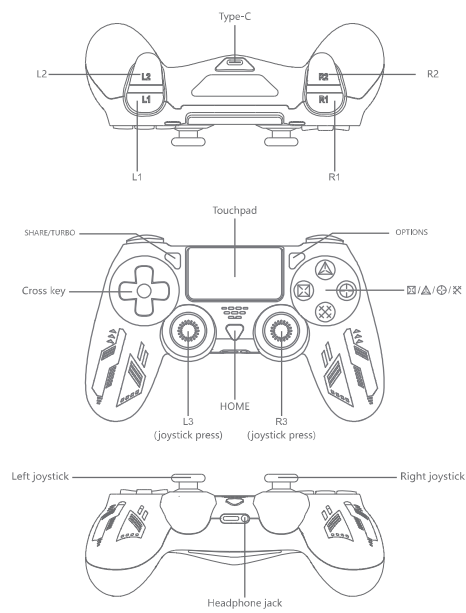

2. Android-Telefonverbindung

 
1. ① Wenn der Controller ausgeschaltet ist, halten Sie zunächst die Turbo/SHARE-Taste gedrückt
- ② Drücken Sie dann die Home-Tastenkombination (Turbo/SHARE+Home) und halten Sie sie 3 Sekunden lang gedrückt

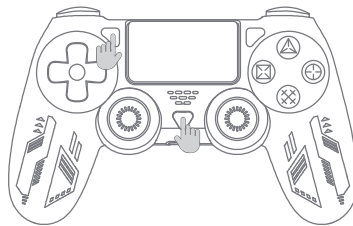

2. Öffnen Sie die Bluetooth-Einstellungen des Mobiltelefons.



 3. Suchen Sie nach "Wireless Controller". Klicken Sie, um eine Verbindung herzustellen

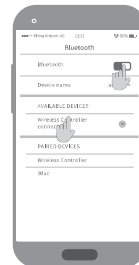


3. Apple-Mobiltelefonverbindung. (iPhone und iPad wurden auf iOS 13 und höher aktualisiert.)

1. ① Wenn der Controller ausgeschaltet ist, drücken und halten Sie zunächst die Turbo/SHARE-Taste
- ② Drücken Sie dann die Home-Tastenkombination (Turbo/SHARE+Home) und halten Sie sie 3 Sekunden lang gedrückt



 2. Öffnen Sie die Bluetooth-Einstellungen des Mobiltelefons.

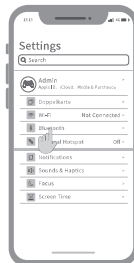

3. Suchen Sie nach "DualShock 4 Wireless Controller". Klicken Sie, um eine Verbindung herzustellen.



4. Verbindungsmethode für den Apple-Computer

1. ①Wenn der Controller ausgeschaltet ist, drücken und halten Sie zunächst die Turbo/SHARE-Taste
- ②Drücken Sie dann die Home-Tastenkombination (Turbo/SHARE+Home) und halten Sie sie 3 Sekunden lang gedrückt



2. Klicken Sie auf die Systemeinstellungen.



3. Klicken Sie auf „Wireless Controller“, um eine Verbindung herzustellen, und klicken Sie auf „Bluetooth“.

 


5. Microsoft-Computerverbindungsmethode

1. Öffnen Sie die Bluetooth-Funktion des Computers. Drücken Sie 3 Sekunden lang die Taste „Share+Home“, damit die weißen Lichter blinken.




2. Klicken Sie, um dem Gerät ein Bluetooth-Gerät hinzuzufügen.

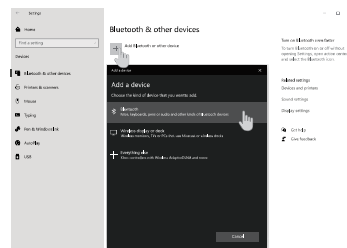

3. Suchen Sie den Wireless Controller und klicken Sie, um eine Verbindung herzustellen.


6. Kabelgebundene Verbindungskonsole

 1. Stecken Sie einfach die USB-Schnittstelle direkt ein.

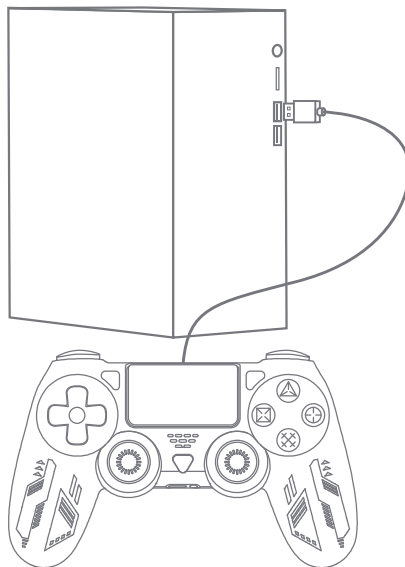

7. PS4-Verbindung

 1. Die erste Verbindung muss zum Koppeln mit dem USB-Kabel verbunden werden, und das Koppeln ist erfolgreich. Drücken Sie die Home-Taste, um die Bluetooth-Verbindung zu öffnen.

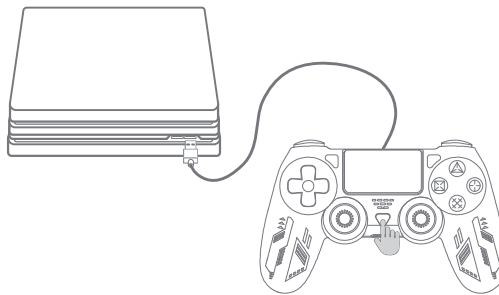


2. Dann verbinden, um die PS4 zu öffnen und auf die Home-Taste drücken, um eine Verbindung herzustellen.



8. PS3-Verbindung

 1. Stecken Sie einfach die USB-Schnittstelle direkt ein.

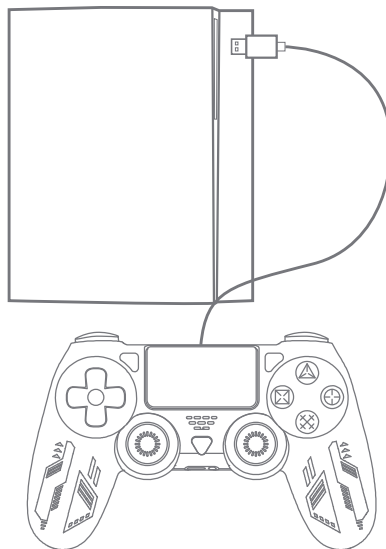

9. Turbo-Funktionseinstellungen

Stellen Sie die Funktion der Funktionstaste Turbo ein. Zu den Funktionstasten gehören (X, O, □, △, L1, L2, L3, R1, R2, R3).

1. Drücken und halten Sie eine beliebige Funktionstaste



2. Drücken Sie dann die Turbo-Taste.



Brechen Sie die Turbo-Funktion ab

1. Drücken und halten Sie die Taste mit der Turbo-Funktion.
2. Drücken Sie die Turbo-Taste.

10. RGB-Beleuchtungsfunktion

So passen Sie die Farbe der RGB-Leuchten an oder schalten die RGB-Leuchten aus:

1. Halten Sie die Tasten L3+R3 gleichzeitig 3–5 Sekunden lang gedrückt. Der Griff vibriert und die Beleuchtungseinstellung wird aktiviert. (Bunter Atemzyklus, blau, rot, grün, rosa, orange, blau, lila, aus)



2. Drücken Sie kurz L3, um die Lichtfarbe zu ändern.



3. Drücken Sie kurz R3, um die Farbe zu bestätigen.



4. Wenn die Farbe nicht innerhalb von zehn Sekunden bestätigt wird, wird die Lichtauswahl automatisch beendet und der Griff vibriert.

11. Function Introduction

On/Off

1. Power on: Short press the HOME button, the gamepad can be turned on.
2. Shutdown: Press and hold the HOME button for 10 seconds, the gamepad can be turned off, or the gamepad can be turned off by logging out of the host side.

Note: When pairing a new gamepad, the gamepad's initial state is off.

Charging Tips

1. When the battery power of the gamepad is low, the host will display the battery level as 0 and flashing; at this time, when charging through the USB cable, the host will display the charging progress bar, and three grids will be displayed when it is fully charged.
2. When the gamepad is charged in the off state, the indicator light will display an orange breathing light, and it will be displayed in a cycle. When it is fully charged, the indicator light will turn off.

Sleep Function

1. When the gamepad is turned on and connected to the host, if the connection is not successful for more than 1 minute, the gamepad will automatically shut down.
2. When the gamepad is online, you can set the shutdown time of the gamepad through the host, usually 10 minutes / 30 minutes / 60 minutes / do not turn off the power.

Gamepad Vibration

The gamepad has corresponding vibration function prompts according to the needs of different game scenarios.

Such as: "Call of Duty" series / "Battlefield" series shooting.

Touch Function

The gamepad implements corresponding touch functions according to the needs of different game scenarios.

For example, the map of "Assassin's Creed Valhalla" is moved, the menu of "Gone With the Past" is switched, and the corresponding function of "Soul of Tsushima" is used.

Six-axis Function

The gamepad implements corresponding six-axis functions according to the needs of different game scenarios.

For example: "Driving Club" moves the steering wheel, "Gravity Fantasy Different World 1/2" moves the perspective.

Analog Function

According to the needs of different game scenarios, the gamepad realizes the corresponding analog function by pressing the L2/R2 key.

Such as: "Need for Speed" series / "GT racing" series of accelerator and brake strength.

Speaker Function

The gamepad implements the corresponding speaker function according to the needs of different game scenarios.

Such as: "GTA5" when making a phone call, "Call of Duty 13" when the skill wheel is enabled

Vorsichtsmaßnahmen

Bitte lagern Sie dieses Produkt nicht an einem feuchten oder heißen Ort.

- Stoßen, schlagen, stechen, durchbohren Sie dieses Produkt nicht und versuchen Sie nicht, es zu zerlegen, um unnötige Schäden am Produkt zu vermeiden.
- Dieses Produkt hat eine eingebaute Batterie, lassen Sie den Griff nicht ins Feuer fallen und werfen Sie ihn nicht mit dem Müll weg. . Vermeiden Sie, dass Wasser oder andere Flüssigkeiten in das Innere des Griffs eindringen, was die Funktion des Griffs beeinträchtigen kann.

Deutsch

- . Vermeiden Sie, dass Wasser oder andere Flüssigkeiten in das Innere des Griffs eindringen, was die Funktion des Griffs beeinträchtigen kann.
- . Laden Sie den Griff nicht in der Nähe von Feuer oder anderen Wärmequellen auf.
- . Stellen Sie keine schweren Gegenstände auf dieses Produkt.
- . Berühren Sie den Anschluss nicht mit Ihren Händen und stecken Sie keine Fremdkörper in den Anschluss.
- . Laien sollten dieses Produkt nicht zerlegen, da es sonst nicht von der Nachverkaufsgarantie abgedeckt wird.
- . Kinder sollten dieses Produkt unter Aufsicht eines Erwachsenen verwenden.

✂ Fehlerbehebung

✓ Warum wird der Controller auf Smart Android TV nicht erkannt?

1. Bestätigen Sie, ob die Smart Android TV USB-Schnittstelle ordnungsgemäß funktioniert
2. Die Stromversorgung des Smart Android TV ist unzureichend, was zu einer instabilen USB-Spannung führt
3. Versuchen Sie, den USB-Anschluss des Smart Android TV zu trennen, und versuchen Sie es mit einem anderen USB-Anschluss

✓ Warum kann der Griff nicht im Spiel verwendet werden?

1. Das Spiel selbst unterstützt keine Controller-Peripheriegeräte
2. Muss das Spiel mit dem Griff einrichten, kann nur verwenden

✓ Warum kann man mit Vibrationen nicht umgehen?

1. Das Spiel selbst unterstützt keine Vibrationen
2. Die Einstellung des Spiels hat die Funktion der Vibration nicht entsperrt

✓ andere

1. Wenn Sie nicht booten können, kann der eingebaute Akku das USB-Kabel verwenden, um die Ladung zum Booten zu verarbeiten
2. Behandeln Sie unerwarteten Absturz oder fallen gelassen, bitte halten Sie den Abstand mit dem Gerät nicht zu weit, oder wieder online

Garantiekarte

Deutsch


Produktmodell	Kaufdatum
Händler	Der Benutzername
Telefonnummer des Kontakts	E-Mail.
Adresse des Benutzers	

Garantieaufzeichnung

Der Benutzername	Fehlerbeschreibung	Wartungsdatum	Zu unterschreibendes Wartungspersonal

Zulassungsbescheinigung
Inspektor

 1. Gamepad Concept

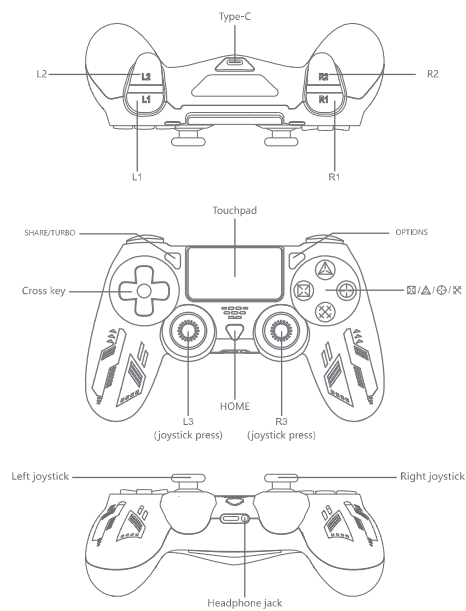

2. Connexion téléphonique Android

 
1. ① Lorsque le contrôleur est éteint, appuyez d'abord sur le bouton Turbo/SHARE et maintenez-le enfoncé.
- ② Appuyez ensuite sur la combinaison de boutons Home (Turbo/SHARE+Home), maintenez enfoncée pendant 3 secondes



2. Ouvrez les paramètres Bluetooth du téléphone mobile.



3. Trouvez "Wireless Controller" Cliquez pour vous connecter

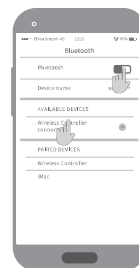

3. Connexion au téléphone mobile Apple. (iPhone et iPad ont été mis à niveau vers ios13 et supérieur)

 
- ① Lorsque la manette est éteinte, appuyez d'abord sur le bouton Turbo/SHARE et maintenez-le enfoncé.
- ② Appuyez ensuite sur la combinaison de boutons Home (Turbo/SHARE+Home), maintenez enfoncée pendant 3 secondes



2. Ouvrez les paramètres Bluetooth du téléphone mobile.




3. Trouvez "DualShock 4 Wireless Controller"
Cliquez pour vous connecter.

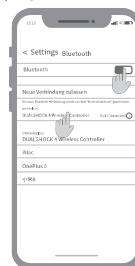

4. Méthode de connexion à l'ordinateur Apple

 1. ①Lorsque la manette est éteinte, appuyez d'abord sur le bouton Turbo/SHARE et maintenez-le enfoncé.
- ②Appuyez ensuite sur la combinaison de boutons Home (Turbo/SHARE+Home), maintenez enfoncée pendant 3 secondes

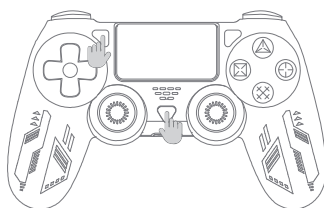

2. Cliquez sur les paramètres de préférence système.



3. Cliquez sur Contrôleur sans fil pour vous connecter, cliquez sur Bluetooth.

 


5. Méthode de connexion à l'ordinateur Microsoft

1. Ouvrez l'ordinateur Bluetooth, appuyez longuement sur le share + home pendant 3 secondes pour guider les lumières blanches à clignoter.




2. Cliquez pour ajouter un appareil Bluetooth dans l'appareil.

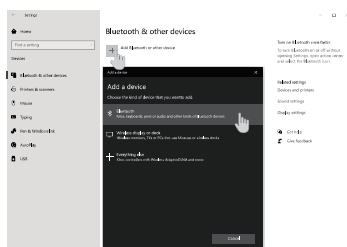

3. Recherchez le contrôleur sans fil, cliquez pour vous connecter.


6. Console de connexion filaire

 1. Insérez simplement l'interface USB directement.

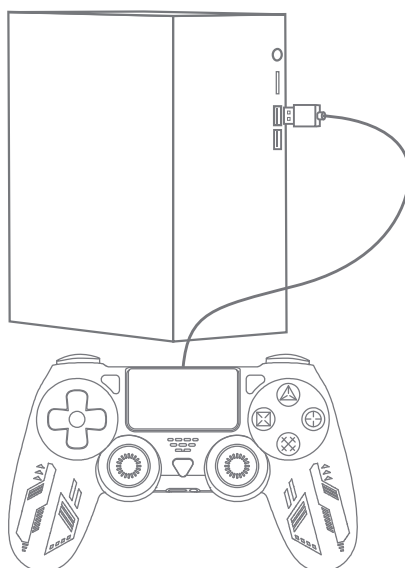

7. Connexion PS4

 1. La première connexion doit être connectée au câble USB pour s'appairer, et la paire appuie avec succès sur le bouton Accueil pour ouvrir la connexion Bluetooth.

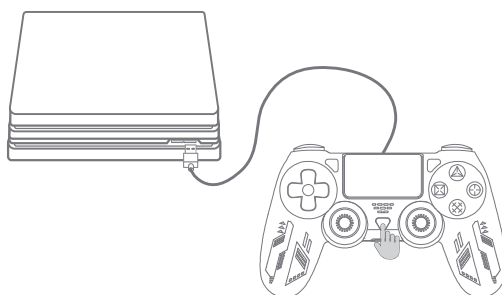


2. Connectez-vous ensuite pour ouvrir la ps4 et appuyez sur la maison pour vous connecter.



8. Connexion PS3

 1. Insérez simplement l'interface USB directement.

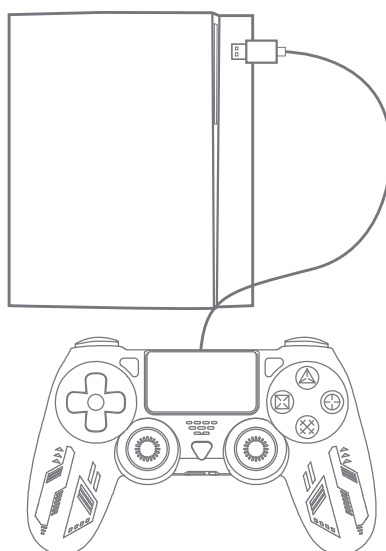

9. Paramètres de la fonction Turbo

Réglez la fonction de la touche de fonction Turbo, les touches de fonction incluent (X, O, □, △, L1, L2, L3, R1, R2, R3)

1. Appuyez et maintenez n'importe quelle touche de fonction



2. Appuyez ensuite sur la touche Turbo.



Annuler la fonction Turbo

1. Appuyez longuement sur le bouton contenant la fonction Turbo,
2. Appuyez sur la touche Turbo.

10. Fonction d'éclairage RVB

Pour régler la couleur des lumières RVB ou éteindre les lumières RVB :

1. Appuyez et maintenez les boutons L3 + R3 pendant 3-5 secondes en même temps, la poignée vibrera et entrera dans le réglage d'éclairage. (Cycle de respiration coloré, bleu, rouge, vert, rose, orange, bleu, violet, éteint)



2. Appuyez brièvement sur L3 pour changer la couleur de la lumière.



3. Appuyez brièvement sur R3 pour confirmer la couleur.



4. Si la couleur n'est pas confirmée dans les dix secondes, la sélection de lumière s'arrêtera automatiquement et la poignée vibrera.

11. Function Introduction

On/Off

1. Power on: Short press the HOME button, the gamepad can be turned on.
2. Shutdown: Press and hold the HOME button for 10 seconds, the gamepad can be turned off, or the gamepad can be turned off by logging out of the host side.

Note: When pairing a new gamepad, the gamepad's initial state is off.

Charging Tips

1. When the battery power of the gamepad is low, the host will display the battery level as 0 and flashing; at this time, when charging through the USB cable, the host will display the charging progress bar, and three grids will be displayed when it is fully charged.
2. When the gamepad is charged in the off state, the indicator light will display an orange breathing light, and it will be displayed in a cycle. When it is fully charged, the indicator light will turn off.

Sleep Function

1. When the gamepad is turned on and connected to the host, if the connection is not successful for more than 1 minute, the gamepad will automatically shut down.
2. When the gamepad is online, you can set the shutdown time of the gamepad through the host, usually 10 minutes / 30 minutes / 60 minutes / do not turn off the power.

Gamepad Vibration

The gamepad has corresponding vibration function prompts according to the needs of different game scenarios.

Such as: "Call of Duty" series / "Battlefield" series shooting.