


WIRELESS GAMING CONTROLLER FOR NINTENDO™ SWITCH/CONTROLADOR INALÁMBRICO DE JUEGOS PARA NINTENDO™ SWITCH

USEN  
WIRELESS GAMING CONTROLLER FOR NINTENDO™ SWITCH  
Operation and safety notes

USES  
CONTROLADOR INALÁMBRICO DE JUEGOS PARA NINTENDO™ SWITCH  
Instrucciones de utilización y de seguridad

IAN 414502\_2110

US

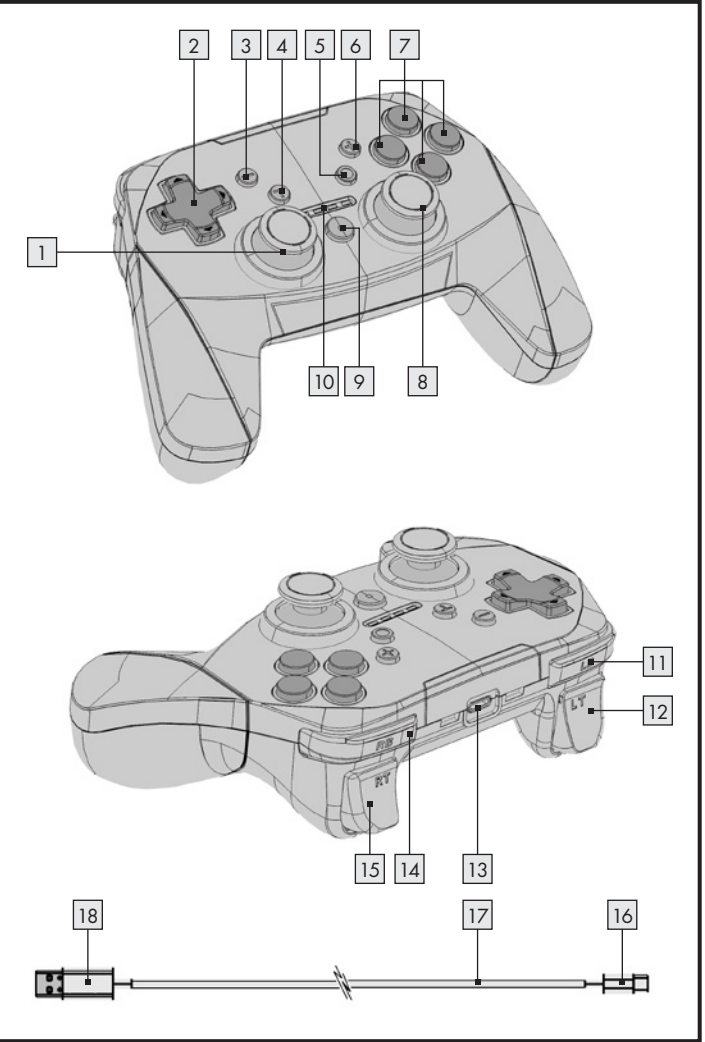

DESCRIPTION OF SIGNAL WORDS

**DANGER**

DANGER indicates a hazardous situation that, if not avoided, will result in death or serious injury.

**WARNING**

WARNING indicates a hazardous situation that, if not avoided, could result in death or serious injury.

**NOTICE**

NOTICE indicates information considered important, but not hazard related (e.g. messages related to property damage).

CUSTOMER SERVICE

Call customer service at **1 (844) 543-5872**

Visit the Website Customer Service Platform at **www.lidl.com/contact-us**

Visit a LIDL store for further assistance.

**IAN 414502\_2110** Please have your IAN number ready.

Warnings and symbols used

The following symbols and warnings are used in these instructions for use:

This symbol means that the instructions for use must be read before using the product.

**ATTENTION!** This symbol, along with the signal word "ATTENTION", indicates potential property damage if the warning is not observed.

Direct current

Only use the product in dry indoor areas.

Warnings and symbols used

The following symbols and warnings are used in these instructions for use:



Dispose of the packaging and product in an environmentally-friendly manner!

Wireless Gaming Controller for Nintendo™ switch

Introduction

Congratulations on your purchase. You have selected a quality product. The instructions for use are a part of the product. They contain important information about the safety, use and disposal of the product.

Before using the product, please learn about all the safety information and usage instructions. Only use the product as described and for the specified applications. If you lend the product to someone else, please also give all the instructions.

Intended use

This Nintendo™ Switch wireless gaming controller (hereinafter: "product") is a device with vibration feedback for use with a Nintendo™ Switch console.

Never use this product outside of enclosed spaces.

This product is not intended for commercial purposes. The manufacturer assumes no liability for damages due to improper use.

Product features

This product uses a Bluetooth 2.1 compatible protocol and has a range of 26–32.8 ft (8 m– 10 m). The built-in battery capacity is 500 mAh with an input voltage of 330 mA.

Brand notice

- Nintendo is a registered trademark of Nintendo Inc.
- Nintendo Switch™ and Joy-Con™ are registered trademarks of Nintendo Inc.
- This product is not developed, manufactured, approved, sponsored or supported by Nintendo.
- The brand and the trade name "SilverCrest" are property of the respective owners.
- All other names and products are brands or registered trademarks of their respective owners.

Contents

- 1 Wireless Gaming Controller for Nintendo™ switch
- 1 USB type A to USB type C charging cable
- 1 Instructions for use

IMPORTANT SAFETY INSTRUCTIONS

WHEN USING ELECTRICAL PRODUCTS, BASIC PRECAUTIONS SHOULD ALWAYS BE FOLLOWED INCLUDING THE FOLLOWING: READ AND FOLLOW ALL SAFETY INSTRUCTIONS.

**DANGER** Failure to observe the following warnings will result in death or serious injuries.

To reduce the risk of electric shock:

- DANGER TO LIFE DUE TO ELECTRIC SHOCK!** Keep the product away from moisture, damp areas, dripping water and splashing water!
- Never open the product. Opening the product poses a risk of electric shock.
- Seek professional help for any repairs. Repairs are required if the product is damaged in any way. For instance, if the product is damaged, liquids were spilled on the product, objects fell into the product, the product was exposed to rain or moisture, is not working correctly, or was dropped.

**WARNING** Failure to observe the following warnings may result in death or serious injuries.

- DANGER TO LIFE AND RISK OF ACCIDENTS FOR INFANTS AND CHILDREN! SUFFOCATION HAZARD!** Never leave children unsupervised with the packaging material.

The packaging material poses a suffocation hazard. Children frequently underestimate dangers. The packaging material is not a toy. This product may be used by children 8 years and up and persons with reduced physical, sensory or mental capabilities or lacking experience and/or knowledge when supervised or instructed in safe product use and the associated risks. Do not allow children to play with the product. Cleaning and user care should not be performed by children without supervision. This product is not a toy.

- Do not touch the USB connector with moist or wet hands. Risk of short-circuits or electric shock.
- A damaged charging cable or USB plug can cause a fire or electric shock. Routinely check the charging cable and the USB connectors. Do not use damaged charging cables or USB connectors.
- The USB port used must always be easily accessible to ensure the USB connector can be unplugged quickly from the USB port in an emergency.
- If you notice unusual noise, smoke or similar, immediately unplug the charging cable from the USB port and disconnect all connected devices. Do not use the product again until it has been checked by a qualified person.
- Only use the charging cable in dry indoor locations.
- Disconnect from power before cleaning.
- Do not set burning candles or other open flames on or near the product!
- Check the product and accessories for damage before every use. Never use the product if damaged.

Be sure:

- to avoid any contact with splashing or dripping water and corrosive fluids, and not to operate the product near water, an especially never immerse the product in liquids; never place containers with liquids, e.g. vases or beverages, on or near the product.
- foreign objects do not enter the housing.

- to always run the connected cables so they will not be stepped on or tripped over. There is a risk of injury.

- Changes or modifications to this product not expressly approved by the party responsible for compliance could void the user's authority to operate the product.

**Note:** This product has been tested and complies with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This product generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

- However, there is no guarantee that interference will not occur in a particular installation. If this product causes harmful interference to radio or television reception, which can be determined by turning the product off and on, the user is encouraged to try and correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the product into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

- This product complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:  
(1) This product may not cause harmful interference, and  
(2) this product must accept any interference received, including interference that may cause undesired operation.

NOTICE

- Disconnect the product from power during storms or if it will not be used for extended periods.
- Always grab the USB connector to disconnect from the USB port. Never pull on the charging cable.
- Do not set furniture, etc., on the charging cable. Be sure not to cinch the cable.
- Never tie knots in the charging cable or tie it together with other cables.

ATTENTION! RISK OF PROPERTY DAMAGE!

- This product has no parts which can be replaced by the user.
- Do not operate the product near heat sources, e.g. radiators or other devices which emit heat!
- Be sure:**
  - the product is not exposed to strong artificial light.
  - not to use the product near magnetic fields (e.g. speakers).
  - the product is never exposed to extreme temperature fluctuations, which could cause condensation and electric short-circuits. If the product is exposed to extreme temperature fluctuations, wait (2 hours) for the product to reach ambient temperature before continuing use.
  - never to expose the product to extreme shock or vibration.
  - not to set objects on a cable and the cables are not pulled across sharp edges to prevent damage.
  - to run the cable so it will not be stepped on or crushed or kinked. Pay special attention to connectors, USB ports and the point where the cable is connected to the product.

SAVE THESE INSTRUCTIONS

Parts description

- 1 Left analog stick/L3
- 2 Digital directional pad
- 3 Menu -
- 4 TURBO key
- 5 Screenshot key
- 6 Menu +
- 7 Action keys
- 8 Right analog stick/R3
- 9 HOME key (Power on/off)
- 10 LED indicator
- 11 L1 key
- 12 L2 key
- 13 USB Type C port
- 14 R1 key
- 15 R2 key
- 16 USB type A connector
- 17 Charging cable
- 18 USB Type C connector

## ● Technical data

|                   |                                                          |
|-------------------|----------------------------------------------------------|
| Input voltage:    | 5VDC                                                     |
| Input current:    | 330 mA                                                   |
| Output voltage:   | 3.7V==, 20 mA                                            |
| Battery capacity: | 500 mAh (Lithium-ion polymer)                            |
| Dimensions:       | 4.72 in x 6.29 in x 3.14 in<br>(120 mm x 160 mm x 80 mm) |

|         |                                                                  |
|---------|------------------------------------------------------------------|
| Weight: | 0.42 lb (190 g) (without cable),<br>0.55 lb (251 g) (with cable) |
|---------|------------------------------------------------------------------|

|                                           |                              |
|-------------------------------------------|------------------------------|
| Operating temperature:                    | 32 °F–95 °F (0 °C–35 °C)     |
| Storage temperature:                      | -68 °F–140 °F (-20 °C–60 °C) |
| Moisture (without condensation):          | 30%–75%                      |
| USB type A to USB type C<br>cable length: | 5.9 ft (1.8 m)               |

## Frequency and transmitting power

|                              |                         |
|------------------------------|-------------------------|
| Frequency range:             | 2402–2480 MHz Bluetooth |
| Max. transmitting power/dBm: | <10 dBm                 |

This product meets the US limits for portable HF exposure in an uncontrolled environment and is safe for the use specified in this manual.

### ❗ NOTE:

Specifications and design subject to change without notice.

## ● Before use

### ❗ NOTE:

- All parts must be unpacked and all packaging materials removed.
- Verify the package contents are complete and undamaged before use!
- Please contact the retailer where the product was purchased for missing or damaged parts.

## ● Operation and use

### ● Initial use & pairing

- Open the system settings on the console and select item Controller grip/change sequence in menu item Controller and sensors. The controller must be off. Hold the HOME key [9] on the product for about 5 seconds until the red LED's flash rapidly. Wait until the gamepad symbol appears in the list of connected devices (this may take up to 10 seconds). A red LED [10] indicates the device is connected. Push the A key [7] to complete the process.
- Simultaneously hold the "L3" key (pressing the left analog stick [1]) and "–" [3] to turn vibration off or on.

### ● Charging the controller

- The controller includes a USB type A to USB type C charging cable [17]. To charge the controller, connect the USB type C connector [18] to the USB type C port on the controller [13] and the USB connector of the charging cable [16] to the console docking station.
- The battery is not replaceable.

### ● Connecting a registered controller

- Press the HOME key [9] on the product at any time while the console is on. A red LED [10] will light up to indicate the product is connected.

### ● Use the Turbo features

- First press any key you wish to set as the turbo function. Then press the TURBO key [4] to activate the turbo function for the key selected in step 1. Select any key except the ZR [15] & ZL [12] keys for the turbo function. Hold the programmed key and press the TURBO key [4] again to disable the turbo function.

### ❗ IMPORTANT!

- Please note, you can use the product to put the console in standby mode, but the power button must be pressed to turn the console on manually.

## ● Storage when not in use

### NOTICE

Store the product in a dry location, away from dust and direct sunlight.

### ● Cleaning

### NOTICE

Only clean the product with a soft, dry cloth. Avoid cleaning solutions, solvents or other chemicals, and do not attempt to clean ports, as this may damage the product.

## ● Troubleshooting

### The controller is not working with the console.

#### Make sure:

- the controller is updated to the latest firmware. For update software, visit our help section at [www.Lidl-service.com](http://www.Lidl-service.com) and enter the IAN number. The software is not compatible with Android systems.
- the controller was properly paired with the console (LED [4] lights up red).
- the controller is charged.
- the controller is within the transmission radius of the console.

### The controller is not working and the LED does not light up:

- Charge the controller using one of the USB ports on the console or using a standard USB charger.

## ● Disposal

Dispose of the packaging through your local recycling facilities and in compliance with all federal, state and local regulations.



Please note the package markings regarding waste separation, indicated by abbreviations (a) and numbers (b), meaning: 1–7: plastics/20–22: paper and cardboard/80–98: composite materials.



Contact your local waste management authority for additional information on how to dispose of the used product.

To help protect the environment, please dispose of the product properly when it has reached the end of its useful life, do not throw in the garbage. Information on collection sites and their opening hours is available from your local authority.



**Improper disposal of rechargeable batteries can damage the environment!**

Never throw rechargeable batteries in the garbage. They may contain toxic heavy metals and must be handled as special waste. The chemical symbols of heavy metals are: Cd = cadmium, Hg = mercury, Pb = lead. Used rechargeable batteries should therefore be disposed of through a local collection point.

## ● Three year limited warranty

### What does this warranty cover?

The warranty covers:

- Damage, breakage or inoperability due to defect.
- Damage not caused by normal wear and tear or failure to follow the safety and maintenance instructions provided in the user manual.

### What is not covered by the warranty?

The warranty does not cover damage caused by:

- Normal wear and tear of the product, including fragile parts (such as switches, glass, etc.);
- Improper use or transport;
- Disregarding safety and maintenance instructions;
- Accidents or acts of nature (e.g. lightning, fire, water, etc.);
- Tampering with the product (such as removing cover, unscrewing screws etc.).

Consequential and incidental damages are also not covered under this warranty. However, some states do not allow the exclusion or limitation of incidental or consequential damages, so this limitation or exclusion may not apply to you.

### What is the period of coverage and warranty resolution?

The warranty is for 3 years from the date of purchase. At our discretion, product will either be refunded or replaced.

### What will we not do?

We will not:

- Start a new warranty period upon product exchange;
- Repair product.

### How to process the warranty?

To initiate, please:

- Call customer service at 1 (844) 543-5872
- Visit the Website Customer Service Platform at [www.lidl.com/contact-us](http://www.lidl.com/contact-us) or
- Visit a LIDL store for further assistance

To ensure the quickest warranty return process, please have the following available:

- The original sales receipt that includes the date purchased;
- The product and manual in the original package;
- A statement of the problem.

### What must you do to keep the warranty in effect?

- Retain the original receipt;
- Follow all product instructions;
- Do not repair or modify the product.

### How does state law relate to this warranty?

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. All implied warranties are limited by the duration and terms of this warranty. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.



### Distributed by/Distribuido por:

LIDL US, LLC, Arlington, VA 22202

Model No./Modelo Núm.: **SGCNW**

A0 Version/Versión: 05/2022

Made in/Hecho en: China

Last Information Update · Estado de las informaciones: 02/2022

Ident.-No.: **SGCNWA00220229-9**

### Battery Warning:

- High or low extreme temperatures that a battery can be subjected to during use, storage or transportation; and
- Low air pressure at high altitude;
- Replacement of a battery with an incorrect type that can defeat a safeguard (for example, in the case of some lithium battery types);
- Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion;
- Leaving a battery in an extremely high temperature surrounding environment that can result in explosion or the leakage of flammable liquid or gas;
- A battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.