

QUICK START GUIDE

GUIDE DE PRISE EN MAIN RAPIDE


Package contents

- Earbud(L/R)
- Charging case
- Wing tip(3 sets,S/M/L)
- Eartip(3 sets,S/M/L)
- USB cable
- Quick start guide

The items supplied with Street Buds+ may vary by region.


Device layout

Earbud

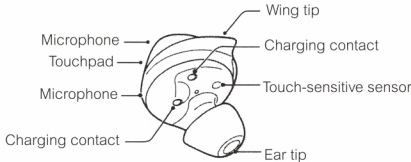

2

Charging case

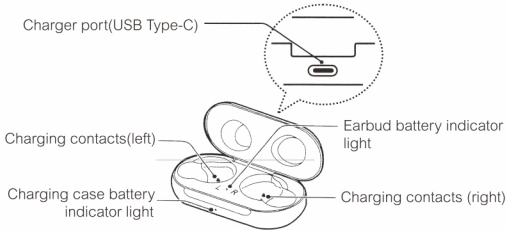

Charging the battery

When you charge the battery for the first time or when the battery is completely discharged, it needs at least 30 minutes to start to work.

- 1 Insert the earbuds in the charging case.
- 2 Close the charging case and connect the USB cable.
The batteries of the earbuds and the charging case are charged simultaneously.

3



- Chargers are sold separately.
- The charger should remain close to the electric socket and easily accessible while charging.
- Close the charging case when you store or charge the earbuds.
- If there is sweat or liquid on the charging contacts, corrosion may occur on the Street Buds+. When there is sweat or liquid on the charging contacts or earbuds, clean them before inserting the earbuds in the charging case.
- Do not put the wing tips on the earbuds in the wrong direction. The earbuds will not be charged if they are not properly inserted into the charging case.

Connecting the earbuds to a mobile device

You can listen to music or answer incoming calls wirelessly after the earbuds connect to a mobile device

Before the connection

- Charge the charging case sufficiently.

4

Connecting to a mobile device

- 1 Insert the earbuds in the charging case, close the case and open it. The earbuds will enter pairing mode automatically. Buds will appear at bottom of your bluetooth devices
- 2 Open Bluetooth settings on your device. You will find Buds at the bottom. Tap to pair.
- 3 Put the earbuds in your ears. You will hear "connected" after successfully paired.



If this does not work, hold you one finger over each Bud to power off, and then repeat to power on. Repeat instructions to successfully pair.

5

QUICK START GUIDE

GUIDE DE PRISE EN MAIN RAPIDE

Using the touchpad

You can control music playback or answer or reject calls by using the touchoad.



- **Single tap** Play or pause track.

Safety information

Read all safety information before using the device to ensure safe and proper use.



Warning

Your device contains magnets,which may affect medical devices,such as pacemakers or implantable cardioverter defibrillators.If you are using any of these medical devices,keep your device a safe disrtance from tnem and consult with your physician before you use the device

6

Follow the warning below to prevent incidents,such as fires or explosions,injuries,or damage to the device

- Do not expose the device or the battery to physical impact or damage.
- Use only Urban Extreme-approved chargers, accessories,and supplies specifically designed for your device.
- Prevent the charger port and charging contacts from coming into contact with foreign materials such as metal liquids or dust.
- If any part of the device, such as the glass or acrylic body is broken, smokes, or emits a burning odor , stop using the device immediately. Use the device again only after it has been repaired at a Urban Extreme Service Centre.
- Do not turn on or use the device when the battery compartment is exposed.
- Do not disassemble or reuse the battery.
- Do not allow children or animals to chew or suck the device.
- The device can be used in locations with an ambient temperature of 0°C to35°C.You can store the device at an ambient temperature of -20°C to 50°C.Using or storing the device outside of the recommended temperature ranges may damage the device or reduce the battery's lifespan.
- Do not use your device in a hot environment or near fire.
- Comply with all safety warnings and regulations regarding mobile device usage while operating a vehicle.



To prevent possible hearing damage when using a headset,do not listen to sound at high volume for long periods.

7

FCC WARNING STATEMENT

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
--Reorient or relocate the receiving antenna.
--Increase the separation between the equipment and receiver.
--Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
--Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement.

8

Correct disposal



This marking on the product, accessories or literature indicates that the product and its electronic accessories(e.g.charger,headset,USB cable)should not be disposed of with other household waste.



This marking on the battery>manual or packaging indicates that the batteries in this product should not be disposed of with other household waste.

PO BOX 12987,DUBLIN,IE

Accessing more information

For questions or comments, please contact us at: customerservice@urbanx.us

9