

# QUICK START GUIDE

## R180

### Correct disposal



This marking on the product, accessories or literature indicates that the product and its electronic accessories (e.g. charger, headset, USB cable) should not be disposed of with other household waste.

PO BOX 12987, DUBLIN, IE

• Some content may differ from your device depending on the region, manufacturer, or software version, and is subject to change without prior notice.

• This product includes certain free/open source software. To see the instructions for viewing the open source licence,




This marking on the battery, manual or packaging indicates that the batteries in this product should not be disposed of with other household waste.

### Wearing the earbuds

Adjust the earbuds to fit your ears.

1

Hold the upper and lower sides of each earbud and remove them from the charging case.

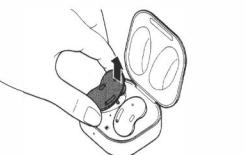


2

Check the direction of each earbud and point their lower halves (speakers) in the direction of the lower part of your ear.

3

Place the lower and upper halves into the corresponding parts of your ears, and then adjust the earbuds so they fit.

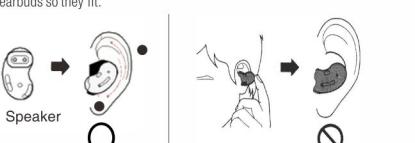

If the earbuds are not positioned correctly in your ears, they may not work. If this is the case, use a pair of wing tips that fit your ears and wear the earbuds properly.


### Package contents

- Earbud (UR)
- Charging case
- Quick start guide
- Wing tip (S/L)
- USB cable


The items supplied with Street Buds Live and their images may vary by region.

### Device layout

#### Earbud

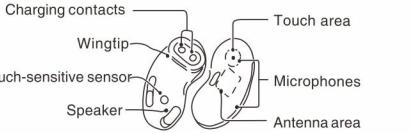

### Charging case

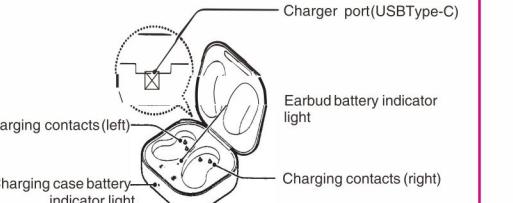

### Charging the Battery

When you charge the battery for the first time or when the battery is completely discharged, it needs at least 10 minutes to start to work.

- 1 Insert the earbuds in the charging case.
- 2 Close the charging case and connect the USB cable.

The battery of the earbuds and the charging case are charged simultaneously.

### Using the earbud by touch

Touch the earbud to play or stop music or answer or reject calls. You can also set the earbuds to perform other actions by touch.



- Single touch Play or pause track.



- Chargers are sold separately.
- Keep the charging case closed while you store or charge the earbuds, or when you charge the charging case.
- If you touch the charging contacts while charging the charging case, it may affect charging.
- If there is sweat or liquid on the charging contacts, corrosion may occur on the StreetBuds Live. When there is sweat or liquid on the charging contacts or earbuds, clean them before inserting the earbuds in the charging case.
- Do not put the wing tips on the earbuds in the wrong direction. The earbuds will not be charged if they are not properly inserted into the charging case.

### Connecting the earbuds to a mobile device

You can listen to music or answer incoming calls wirelessly after the earbuds connect to a mobile device.

#### Before the connection

- Charge the charging case at least 20 minutes.

### Safety information

Read all safety information before using the device to ensure safe and proper use.



#### Warning

Your device contains magnets, which may affect medical devices, such as pacemakers or implantable cardioverter defibrillators. If you are using any of these medical devices, keep your device a safe distance from them and consult with your physician before you use the device.

### Connecting to a mobile device

- 1 Insert the earbuds in the charging case, then close the charging case and open it. The earbuds will enter Bluetooth pairing mode automatically.

- 2 On your mobile device, open Bluetooth settings and scroll down to find the earbuds.   
 (a) Tap to connect.

- 3 Put the earbuds into your ears. They will say 'connected' when successfully paired.

#### Troubleshooting:

If unable to pair, hold a finger to each earbud for 5 seconds before power off, then again to power on. Close the case beside your phone and open it to restart pairing mode.

### Follow the warnings below to prevent incidents, such as fires or explosions, injuries, or damage to the device

- Do not expose the device or the battery to physical impact or damage. Prevent the charger port and charging contacts from coming into contact with foreign materials such as metal, liquids, or dust.
- If any part of the device, such as the glass or acrylic body, is broken, smoke or emits a burning odor, stop using the device immediately. Use the device again only after it has been repaired at a Urban Extreme Service Centre.
- Do not turn on or use the device when the battery compartment is exposed.
- Do not disassemble or reuse the battery.
- Do not allow children or animals to chew or suck the device.
- The device can be used in locations with an ambient temperature of 0°C to 35°C. You can store the device at an ambient temperature of -20°C to 50°C. Using or storing the device outside of the recommended temperature ranges may damage the device or reduce the battery's lifespan.
- Do not use your device in a hot environment or near fire.
- Comply with all safety warnings and regulations regarding mobile device usage while operating a vehicle.



To prevent possible hearing damage when using a headset, do not listen to sound at high volume for long periods.

### FCC WARNING STATEMENT

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

--Reorient or relocate the receiving antenna.

--Increase the separation between the equipment and receiver.

--Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

--Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement.