

Deligo Food Delivery Robot Manual

Version: 2.1.4 G

Date: December 21st, 2021



catalogue

1. Product introduction	2
2. Instructions for use	8
A. Get to know your robot	8
B. Navigation deployment.....	9
The step 1 [Connect to the Internet]	10
The step 2 [Build map].....	11
The Step 3 [Position]	17
The step 4 [Virtual wall]	20
3. Explanation of other functions	27
a [Special Area].....	27
b [Modify map]	28
c [Map]	30
d [Upgrade]	31
e [Debug]	31
4. Precautions for use	33
①Lost of robot positioning	34
②The machine does not navigate	35
③The machine navigation does not respond to charging.....	36

1. Product introduction

Safety use requirement

- ✧ Please use the robot within the temperature range of 5°C ~40°C, and store the robot and its accessories within the temperature range of 0°C ~50°C.
- ✧ Do not use the robot immediately after a great temperature change (such as moving from a cold outdoor to a warm indoor).
- ✧ Do not use the robot in dust, damp, rainy, dirty, or close to magnetic fields.
- ✧ Do not use the robot in an environment that is flammable, explosive, or close to a heat source.
- ✧ Do not place the robot in direct sunlight for .
- ✧ The floor of the robot operating area should be solid, smooth, and level. It is not recommended to use it on carpets, soft and ditched ground, outdoors, etc.

(Since the robot can move autonomously and complete various actions, please pay special attention: Do not move on a sloped ground to prevent accidental dumping of the robot or uncontrolled operation of the robot, damage to the robot, and damage to equipment, facilities, and objects. Damaged, if you

move on a sloped road, you need someone to take care of it)

- ✧ Please note that there are steps or step positions to avoid the robot movement in this area in case of falling.
- ✧ In the case of all-glass doors and all-glass walls, please pay attention to sticking safety identifiable signs between the glass and the ground 22cm-25cm. Personnel (especially children) should keep a safe distance from the robot (1 meter away from the robot). Prevent personnel injury or robot damage caused by the operation of the robot.
- ✧ Do not fall, drop, squeeze, bend, puncture, cut, microwave, incinerate or paint the robot and its parts.
- ✧ Please do not try to disassemble the robot and its accessories, the disassembly work can only be performed by authorized professionals.
- ✧ Do not apply excessive pressure on the screen and device to avoid damage, only use your fingers to interact with the touch screen.
- ✧ In order to ensure the reliability of this product and the safety of operation, please be sure to use the exclusive accessories of this robot.
- ✧ Avoid obstacles with too low height (the height of the obstacle

shall not be lower than the installation position of the ultrasonic sensor and the laser sensor, and not lower than 25cm).

- ✧ Avoid escalators, stairs, steps and other environments where the drop is greater than 5cm.

Charging precautions

- Please use the original DC power cord and charging pile configured with the robot to charge the robot.
- Please use a power supply with proper grounding, complying with local laws and regulations and the requirements of this manual, otherwise it will cause electric shocks and damage to the robot.
- The robot is prohibited from personnel touch and operation when charging.
- Do not drop or hit the charging pile.
- Do not touch the power cord with wet hands, or pull out the charging pile by pulling the power cord.
- Prevent the charging pile from being drenched by rain, liquid, and damp.
- If you do not use the robot for a long time, it is recommended

that you charge the robot every 15 days or so to ensure that the battery is always in the best active state.

- Do not use this batteries for other devices.
- Do not try to touch the charging pile and the output end of the charging port of the robot, there may be certain risks.
- The charging pile layout area needs to be against the wall, and it is open within a radius of 2 meters.

⚠ Special attention: improper operation of the battery will cause accidents such as battery explosion, fire, leakage and corrosion.

1.1 Overview of Robot Components



1. 7 inch display
2. Microphone
3. Smart light effect
4. Lidar

5. Depth Vision Camera
6. Infrared sensor
7. Automatic charging contact piece
8. Emergency stop switch
9. Infrared camera
10. One button to return
11. Power switch

Specifications

Specification name	parameter
Operating System	Android5.1and above
Overall Size	Diameter: 500mm, height: 1300mm
Total Weight	48.5Kg
Pallet Size	320X400mm
Number of Pallets	3 pcs
Single Pallet Payload Limit	10Kg
Screen Size	7 inches, resolution 1024×600
Memory LPDDDR3	1G
Built-in NAND FLASH	8G
USB Debugging Port	Micro USB interface
Processor Type	RK3128

Navigation Method	Laser navigation + visual positioning + visual obstacle avoidance
Lidar	Laser wavelength 905 nm, working area 270°
Infrared Camera	Two-dimensional code positioning (the height of the two-dimensional code from the camera is 1-3m or 1-5m); 5 million pixels
Moving Speed	0.1~1m/s
Battery Capacity	24V 20AH
Battery Life	About 10 hours
Charging Time	4A (about 8 hours), 7A (about 5 hours)
Wireless Technology RTL8821CS/ STM32F103VC	Support dual frequency 2.4&5G WIFI 802.11b/g/n wireless LAN, 11ac 5.15GHz-5.350GHz
Environmental Requirements	Working temperature: 5°C~40°C Ambient humidity: 5% ~ 85% Storage temperature: -10°C~50°C

2. Instructions for use

A. Get to know your robot

Power on: Press and hold the [Power on/off button] as shown in the picture, for about 1 or 2 seconds, the buzzer will make a short beep, the internal test light bar of the machine will light up, and wait for the machine to turn on.



Shutdown: Press and hold the [Power on/off button] for about 3 seconds, the beeping "di" screen will first shut down, and then the motor will be powered off.


Charging: You need to insert the adapter plug into a voltage of 110-220V, and plug the DC plug into the automatic charging pile. At this time, the green light of the charging pile will be on, indicating that it is ready for charging.

① Manual charging: Push the robot onto the charging pile, so that the charging sheet on the back of the robot is in full contact with the charging sheet on the charging pile, and the charging pile indicator light is red to indicate that the machine is charging.

② Automatic charging: refer to the navigation deployment below, deploy the charging pile points, and open the [Deligo] application on the Android screen to customize the power value that triggers automatic recharging.

B. Navigation deployment

Note: The following content is an introduction to all the functions of the robot deployment background. The functions that must be operated are as shown in points 1, 2, 3, 4 in the following figure. Other functions depend on the specific scenarios and usage conditions.

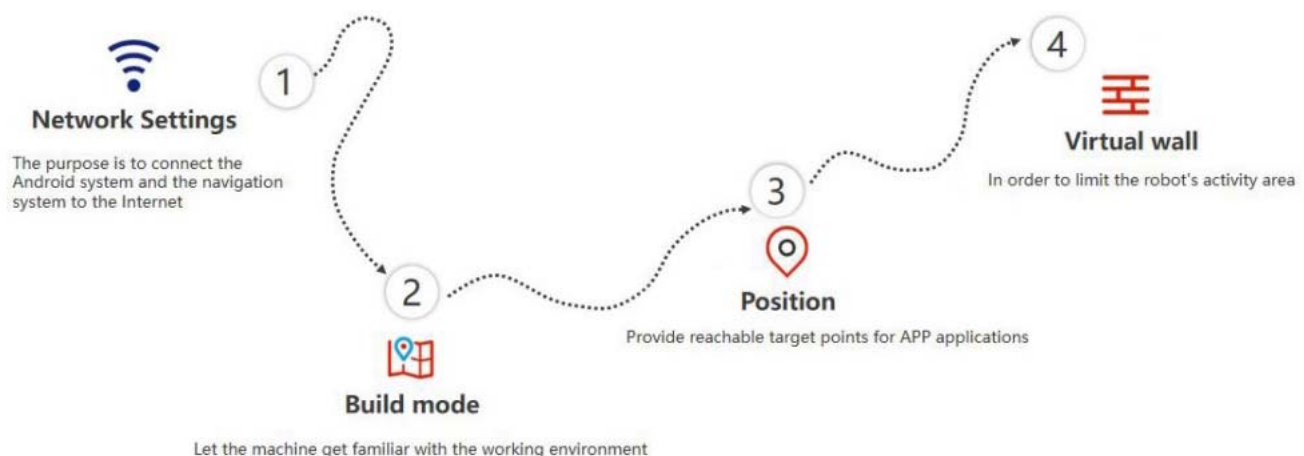

The step 1 [Connect to the Internet]

Note: The router network segment cannot be the 192.168.10.x network segment

1. Open the [Settings]-[WLAN] on the Android screen of the robot to connect to Wi-Fi
2. Open the Ftp application and enter the following interface. Follow the steps shown in the figure. If the Wi-Fi password already exists, click "Send Wi-Fi Information to Connect to ROS".

The screenshot shows the Ftp application interface for connecting to ROS via Wi-Fi. It includes input fields for Wi-Fi SSID and password, a button to send Wi-Fi information, and a list of system information.

Please enter WIFI SSID
JJCC_5G_Wi-Fi5 ①

Please enter WIFI password
jcan123456 ②

Send WiFi information to connect to ROS ③

ROS IP:JJCC_5G_Wi-Fi5:192.168.3.157 ④

Nav system version:RMB101-ROS-I5-B1.4.8

ROS hostname:wbot11u-210304-001-001

Laser data:laser[0.28]

ROS log

- ① Check the Wi-Fi name you want to connect to
 - ② Enter Wi-Fi password
 - ③ Send Wi-Fi information to the navigation system (just click once, don't click repeatedly)
 - ④ If show IP, connect success (If shows 127.0.0.1, connect fail)
3. The scanning device should be connected to the same LAN as the machine. Open the browser and input the IP address of the machine

(Chrome browser is recommended)

If the Wi-Fi connection fails, you can click ③ again to reconnect. If it still fails, you can connect to another network.

The step 2 [Build map]

- **The purpose of building the map is to let the robot know the working environment**
- The robot needs to scan the actual environment and construct an "original map". During the navigation process, the robot can compare with the original map based on the real-time scanning situation and find its own position.



Actual environment



The map scanned by
the robot's laser

- The viewing angle of the Lidar is 270° , and the scanning range is the horizontal plane of the radar height; the scanning distance is 20 meters
- Ask people to stand back and push the robot, or use the keyboard


arrow keys to control the mapping



A. Unlabeled lable map construction

It is recommended to use unlabeled map construction. If the robot loses positioning during use, please contact the technician in the group to investigate the specific reason.

1. Please proceed to the building page in the following order.

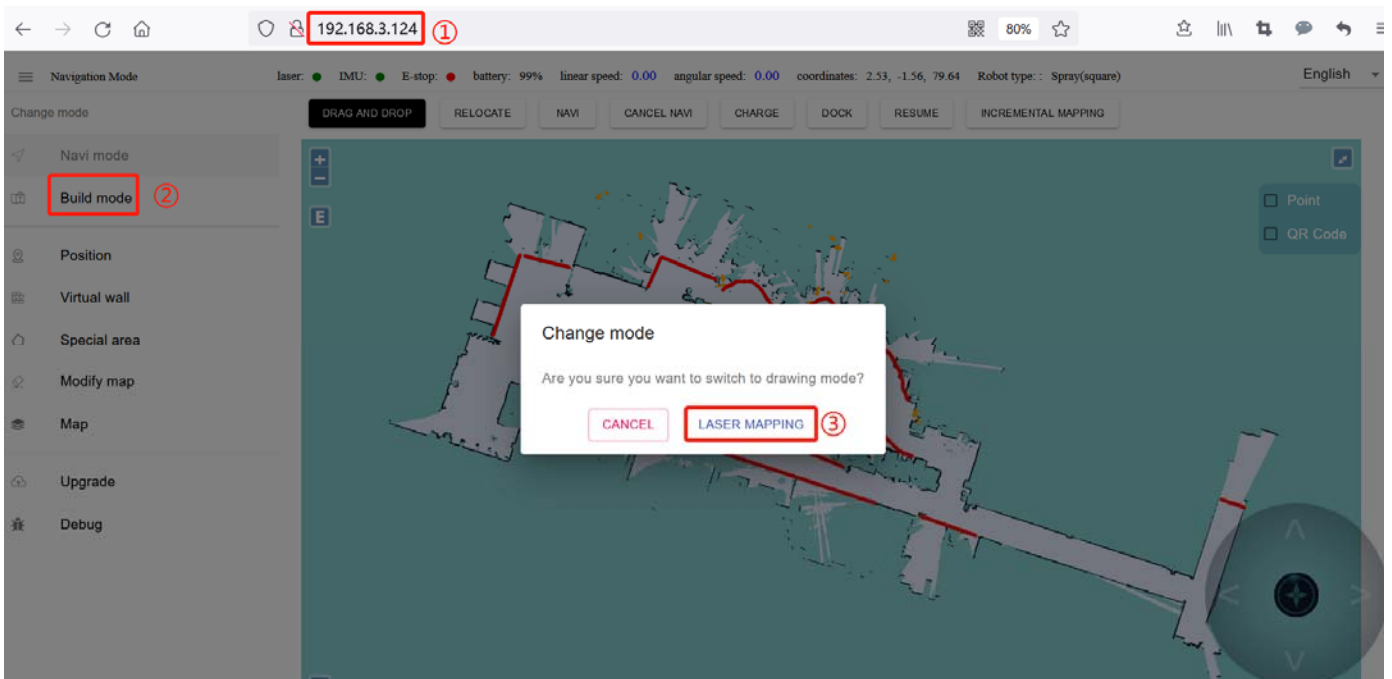


① get IP from FTP software


Mapping method : You can turn on the emergency stop switch and click the button to control the robot, or use the keyboard arrow keys

to control the robot to create a map; you can also press the emergency stop switch and then push the machine to create a map

2. After entering "map mode", the machine first turns around to clear the surrounding feature points. And don't turn it too fast. You can push(control) the robot after one turn. You can walk straight in narrow areas. Pay attention to the gaps during walking. Slowly turn the robot 90° facing the gaps to clear the feature points, then slowly turn back to continue scanning; open areas can follow the U-shaped route, as follows:

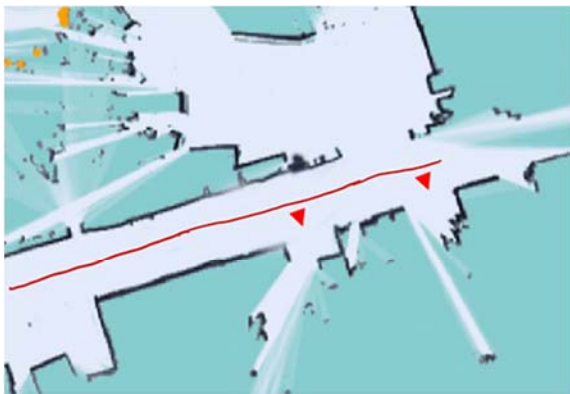

straight line

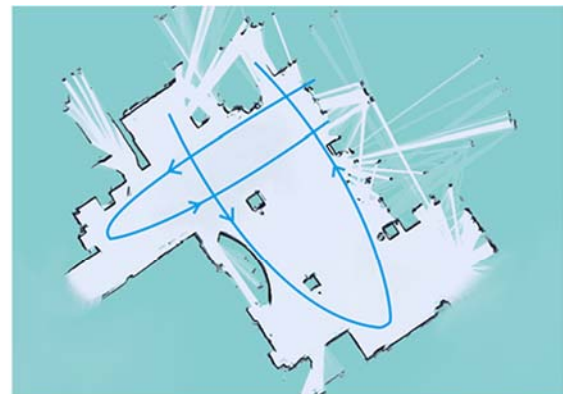

u-shaped route

3. When pushing (controlling) the robot, pay attention to whether the laser matches the actual terrain. If it does not match, stop and wait for a while, wait for the laser to match the actual terrain, and then go. As shown below:

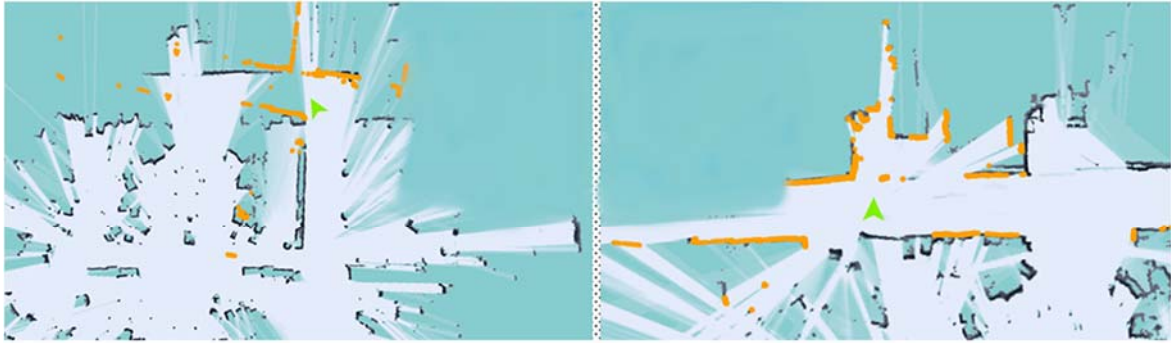


figure 1

figure 2

Figure 1: Laser does not match terrain (when the laser does not match the terrain, stop and wait for the laser to match the terrain before pushing the robot to build the map)

Figure 2: The laser matches the terrain (some areas require the robot to turn around to scan clearly, such as wide terrain and room)

4. Do not move the machine after the machine reaches the end point. Just observe whether the map is clean, without ghosting and matches the actual terrain. If there is no obvious dislocation, click "Finish". If there is any dislocation, please wait for a period of time, and the algorithm will correct it. If the correction is not successful in 10 minutes, consider rebuilding the map.

matters needing attention:

1. Select the place with obvious feature points and clean terrain as

the starting point and ending point, and slowly turn around at the beginning to scan the surrounding environment clearly.

1. When pushing or controlling the robot, walk slowly and observe whether the laser matches the terrain. If there is a mismatch, stop and wait for the laser to match the current terrain.

2. After the robot reaches the destination, observe whether the map is clean without ghosting, and matches the actual terrain. If there is no obvious dislocation, click "Finish". If there is any mismatch, please wait for a period of time, and the algorithm will correct it. If the correction is not successful in 10 minutes, consider rebuilding the map.

B. Map construction with label code

To build a labeled map, you need to paste the label code in advance. If you need to use a labeled map, please contact the technician in the group to evaluate whether you need to use this method.

➤ Positioning QR code deployment requirements

1. The ceiling is parallel to the ground and does not reflect light.
2. The ceiling shall be flat, and it is better to apply paint or emulsion

paint, or have flat metal surface, and do not support materials with insufficient viscosity.

3. There should be no big obstructions above the robot's road, to avoid that the machine can't see the QR code on the road.

4. The height between the ceiling and the camera is 1m to 5m.

5. The QR code should be pasted in the middle of the road as much as possible, not close to the obstacles.

6. The QR code shall be pasted smoothly, and the circular spot position of the QR code label shall not be inconsistent with the original position due to too many wrinkles.

7. The pasting distance of the QR code is 5-10 meters, and the corner and intersection should be paste.

➤ QR code paste method

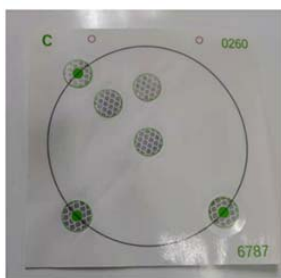


Figure 1 Before tearing

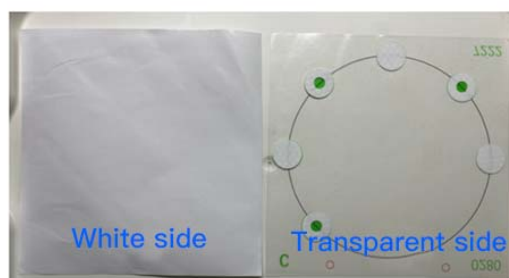


Figure 2 After tearing

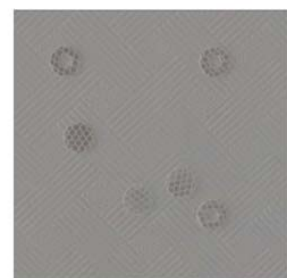


Figure 3 After pasting

Pasting method: as shown in Figure 2, first tear off the white paper of the QR code label, paste the transparent surface onto the ceiling, and then tear the transparent surface, taking care not to drop the round or ring spots during the tearing process, after completion as shown in Figure 3.


Note: Paste the QR code in the place designated by the technician. After the pasting is complete, create a map according to the method of "unlabeled code map construction". When the machine passes under the QR code, it will automatically record the QR code on the map.

The Step 3 [Position]


The function of calibration location: provide reachable target points for business layer applications.

Note: The calibrated position must be at least 50 cm away from surrounding obstacles and virtual walls; the machine must be turned on within 2m of the charging pile for subsequent use.

Schematic diagram of charging pile calibration method:

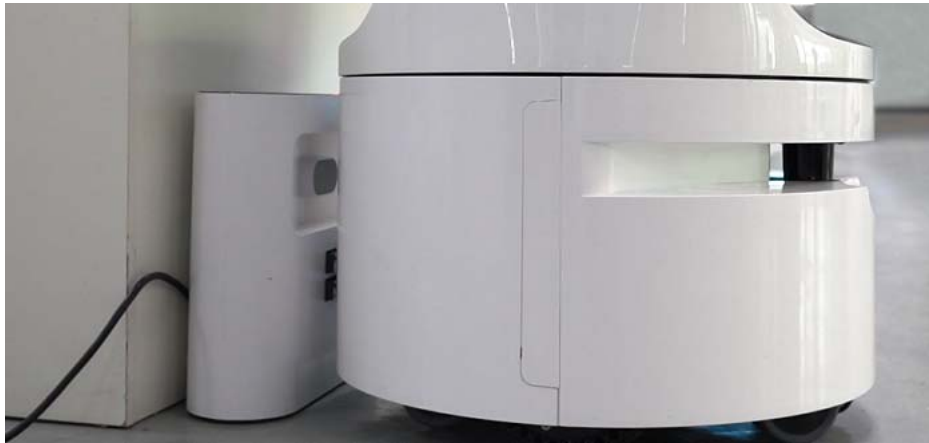

First, move the machine so that the charging shrapnel of the machine is facing the charging shrapnel of the charging pile, and click the button "charging pile" on the menu bar of the map.

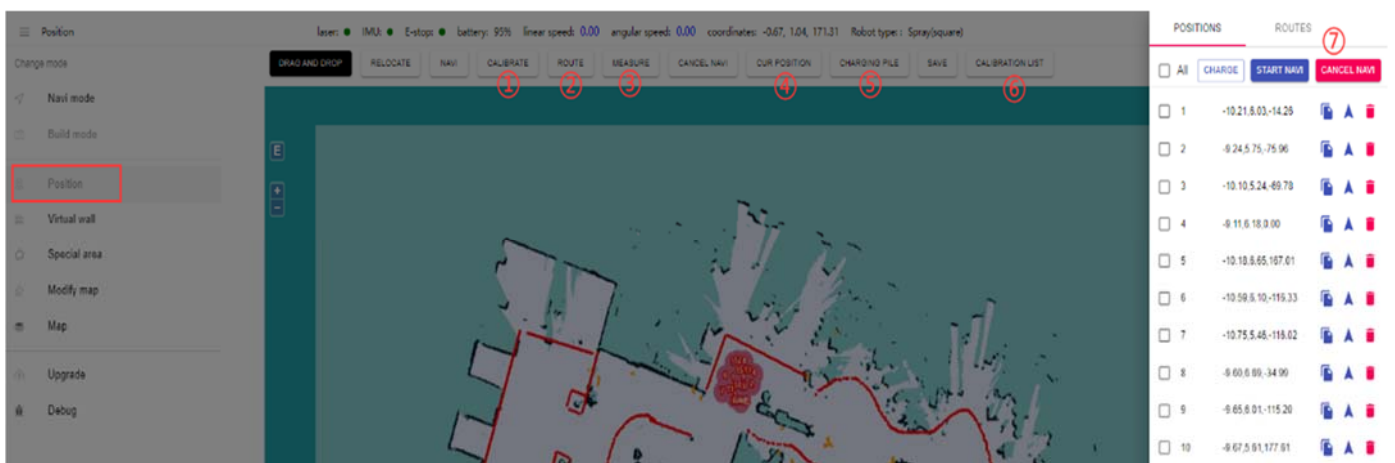


- ①**CALIBRATE:** you can drag on the map to get the coordinates of the specified location for calibration.
- ②**ROUTE:** click on the map to plan a fixed route to let the machine navigate.
- ③**MEASURE:** Click any two points on the map to get the length of the driving route.
- ④**CUR POSITION:** The current position of the robot can be obtained for

location calibration.

⑤**CHARGING PILE:** point the charging shrapnel of the robot directly to the shrapnel of the charging_pile, and then click "charging_pile" to calibrate, and the icon will automatically move forward when the calibration occurs (note: only this point is the exception).

⑥**CALIBRATION LIST:** Click on the right side of the screen to pop up ⑦this "POSITIONS" and "ROUTES".

The calibration example is as follows:

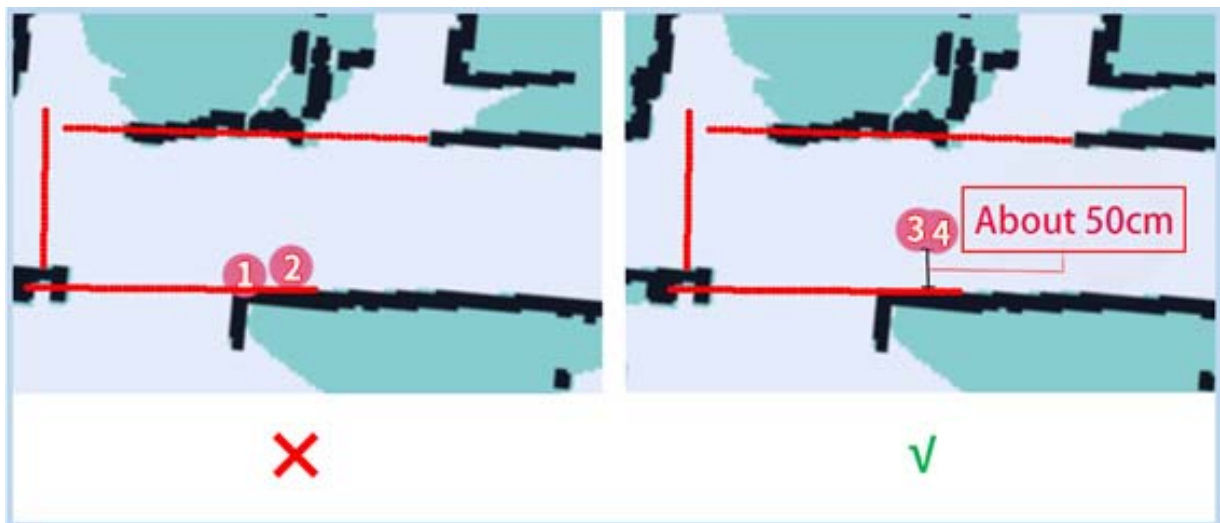

Precautions:

1. When calibrating the position, make sure that the current positioning of the machine is correct.
2. The calibrated position must be at least 50 cm away from surrounding obstacles and virtual walls.

3. It is recommended that there are no obstacles within 1.5 meters on the left and right sides of the charging_pile.

The step 4 [Virtual wall]

Edit the function of virtual wall: restrict the active area of robot



DRAG: in this mode, you can zoom, pan and rotate the map. In this mode, you can select a rectangular area according to "Ctrl + left mouse button", and the virtual wall in this area will be cleared.

DRAW CURVES: you can draw a curve, which is often used to draw irregular terrain.

DRAW LINE: click two positions to draw a straight line between the positions you click. It is often used in regular terrain or rough area

drawing.

ERASER : Circle the virtual wall that needs to be cleared.

SAVE: only click Save to save the drawn virtual wall.

CLEAR ALL: if you are not satisfied with the current virtual wall, click the clear button to clear all the virtual walls (you need to click Save to take effect).

Example: glass wall

Note: the laser can penetrate the glass, so when drawing the virtual wall, pay attention to the virtual wall outside the glass.



figure 1



figure 2



figure 3



figure 4

figure 1 Actual environment

figure 2 Map scanned by laser

figure 3 Error

figure 4 Correct

Example: table

Note: the laser can only scan one horizontal plane, so when drawing the virtual wall, consider the desktop projection.



figure 1

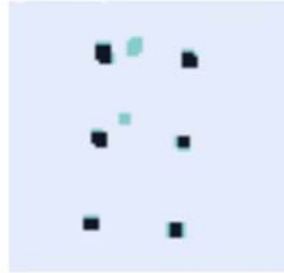


figure 2

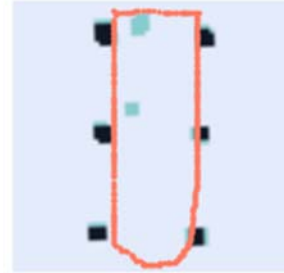


figure 3

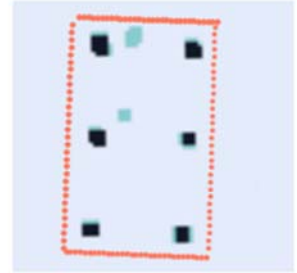


figure 4

figure 1 Actual environment

figure 2 Map scanned by laser

figure 3 error

figure 4 correct

Matters needing attention:


1. The minimum passing distance of the machine is 80cm, so attention should be paid when drawing the virtual wall.
2. The main function of the virtual wall is to draw the robot's moving space and separate the areas where the robot does not want to travel with the virtual wall.
3. Some areas that do not need to be driven or cannot be scanned by laser (glass walls, tables and chairs, steps, transparent and fragile

objects, etc.) please make sure to build virtual walls.

The Step 5 [Start delivery]

Find the application named [deligo] on the screen and open it, select the location to be delivered to start the delivery, the following is an explanation of the application function.

a , Slide from the right of the screen for more convenient operation, the interface below.

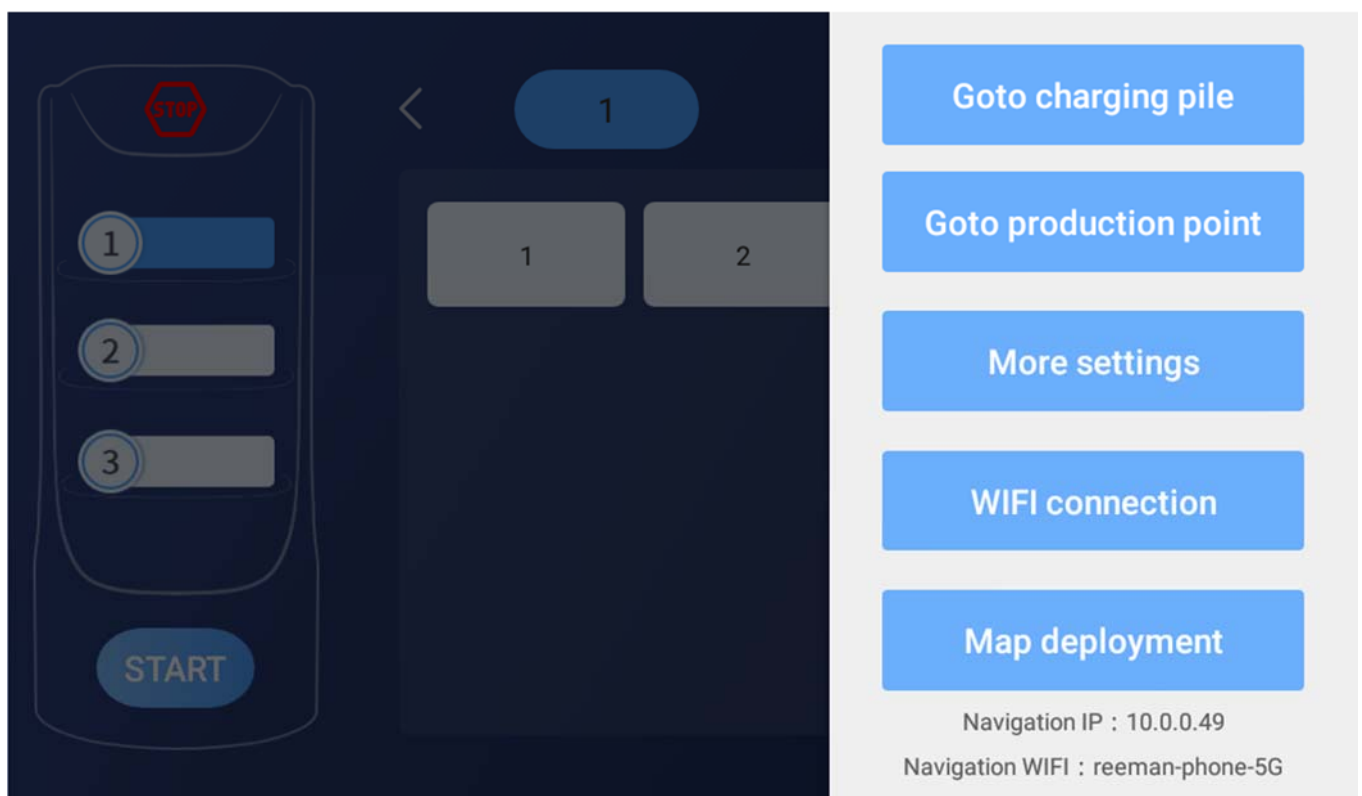

①**Go to charging pile:** The robot will go to the charging pile for charging.

②**Go to production point:** The robot will go to the meal pick up point.

③**More settings**

- Current language: The languages can be changed.
- Robot waiting time when arrived in tables: you can adjust the time

according to your requirement.

- Repositioning: Move the robot to the repositioning location and turn right the robot emergency stop switch , and click the repositioning button, the robot will reposition the current position.
- Work time: Switch on the robot, it will automatically go to the production point according to working time set, after the off work time , it will automatically return to the charging pile for charging.
- Automatic charging power: Set a battery remaining rate, when it arrived the rate you set, automatically back to charging pile for charging.
- Current version: The version number of the application.

④**WiFi connection:** You can change to other WIFI name.

⑤**Map deployment:** You can re-enter the map to add points or rebuild the map.


b , Select the table

As shown below: the 1,2 and 3 displayed on the selection table interface correspond to the meal tray on the delivery robot, and one table can only choose one delivery point.



c , food delivered

- ① The robot will deliver meals according to the selection table of the plate , the robot will arrive at the target point after the countdown, after the countdown will go to the next delivery point or use the shortcut key (the shortcut key is located at the top of the robot to put the hand in the touch sensing area after the machine senses the countdown ends early).
- ② When the robot arrives at the delivery point, the tray light will turn on and the rest of the tray light will turn off.

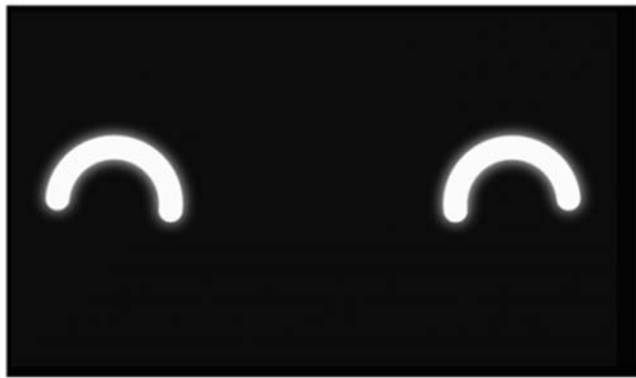


Interface status at delivery



Interface state after reaching the target point.

d , Charge


- ① When the robot switch on, the robot will return to the charging pile for charging after the battery lower than the battery remaining rate you set, The low power rate plus 20% , the robot will continue to delivery working.
- ② The robots start charging is shown in the picture as below. If put hand on the top side of the robot, the robot will move forward 20cm away from the charging pile and exiting charging status.

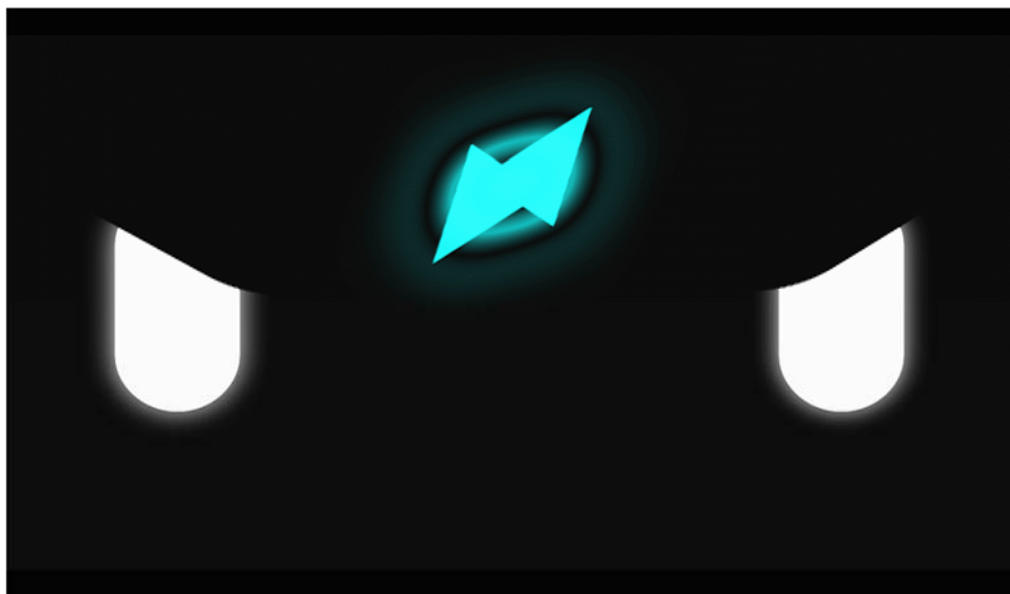

3. Explanation of other functions

a [Special Area]

Function: The drawable area limits the speed of the robot in a certain area

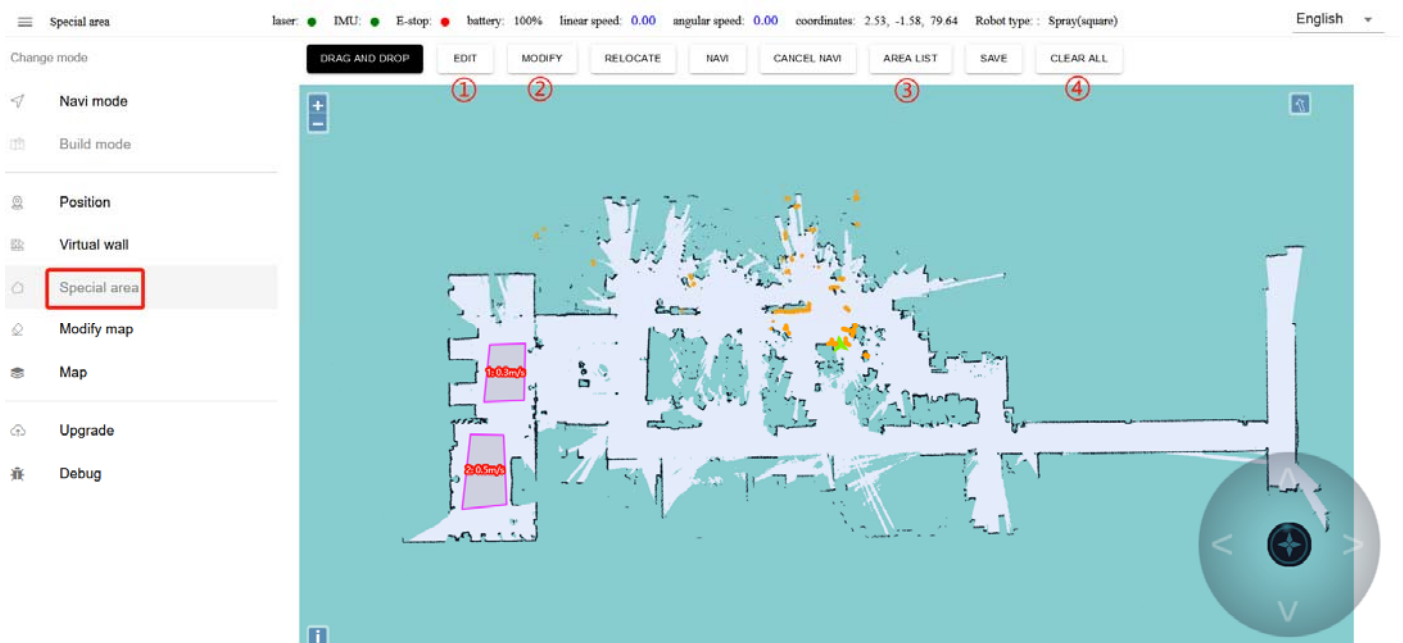

① **EDIT:** In the map, click with the left mouse button to draw a polygon at will, and a naming box for the area will pop up after completion to define the area and speed

② **MODIFY:** adjust the edited speed area, click on the speed area that needs to be edited, the color of the area will change (the line around the selected area will become thicker and become red), then pull the line to proceed Area size adjustment

③ **AREA LIST:** After clicking, the edited area list will pop up on the right side of

the page. You can redefine the speed and name of the area in the area list and delete the area.


④**CLEAR All:** Refers to one key to clear all edited special areas

Note: After editing is completed, click Save to take effect

b [Modify map]


The function of modify map: correcting the errors in scanning map

Modify premise: The map has changed after the scan is completed, and the map modify function can be used to modify the map appropriately if the change is not significant. If the map is too different from the actual environment, it is recommended to scan the map again.

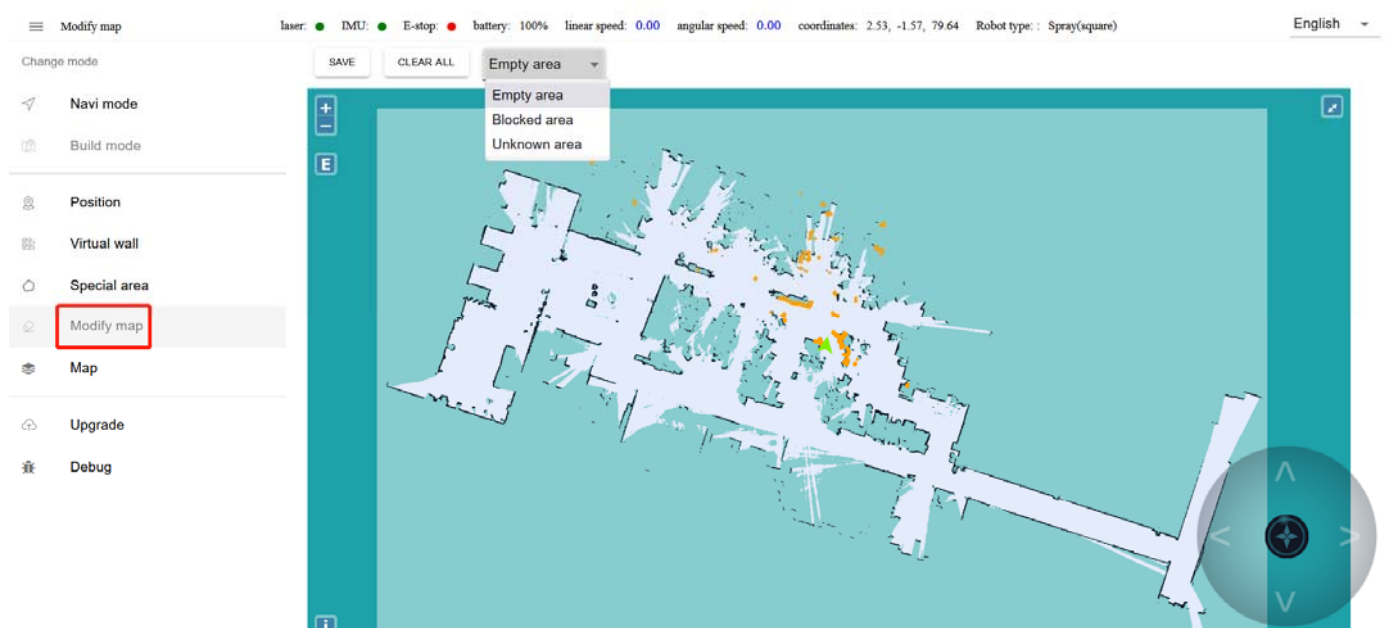

- ① Click "**SAVE**" to apply the map modification
- ② Clear "**REMOVE**" polygons
- ③ Here is the drop-down menu. You can select different amount map area types
 - "**Empty area**": Remove some temporary obstacles in the map(such as temporary people, etc.) during the process of scanning the map. Do not remove the real obstacles.
 - "**Blocked area**": some real fixed obstacles may not be scanned very clearly when building the map, so it is necessary to draw obstacles artificially on the map (note that the obstacles drawn must match the obstacles that can be swept by the real laser).
 - "**Unknown area**": some frequently changing feature points need to be drawn into unknown areas (for example, the area where robots will not walk outside the glass wall).
- ④ In the same way as a special area, the interior of the drawn polygon is a modified area.


c [Map]

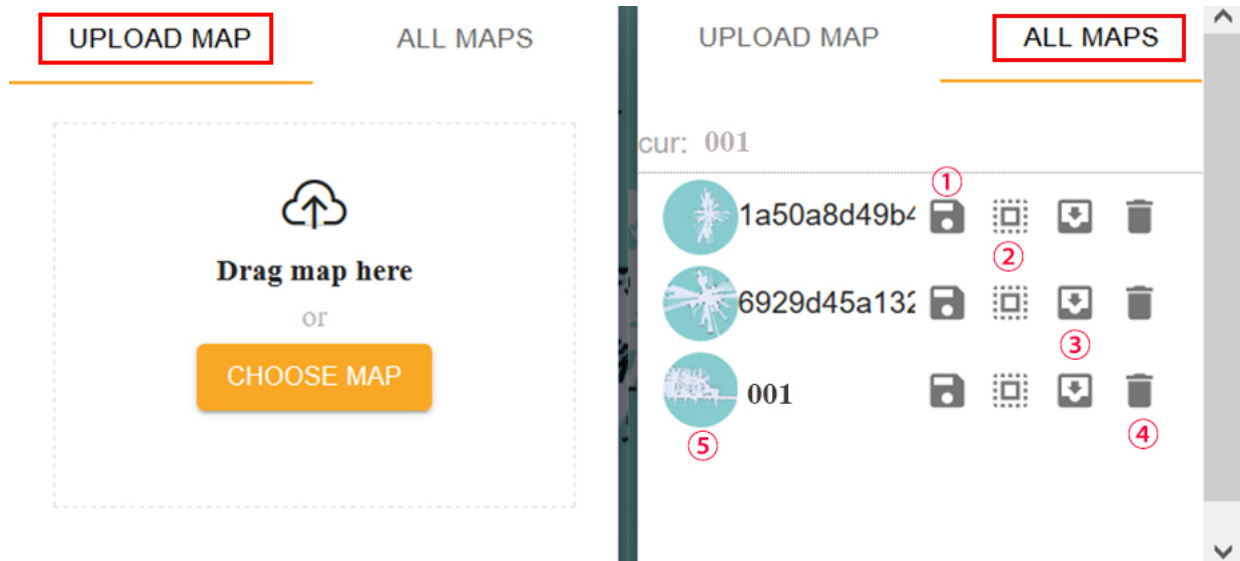

- ① Edit map name ② Apply this map ③ Export the map to the computer
- ④ Delete this map ⑤ Mouse over to show preview map, click to show original image


Note: The map will not be applied immediately after uploading, you need to find the row of the map in "All Maps" and click the "Apply" icon.

d [Upgrade]

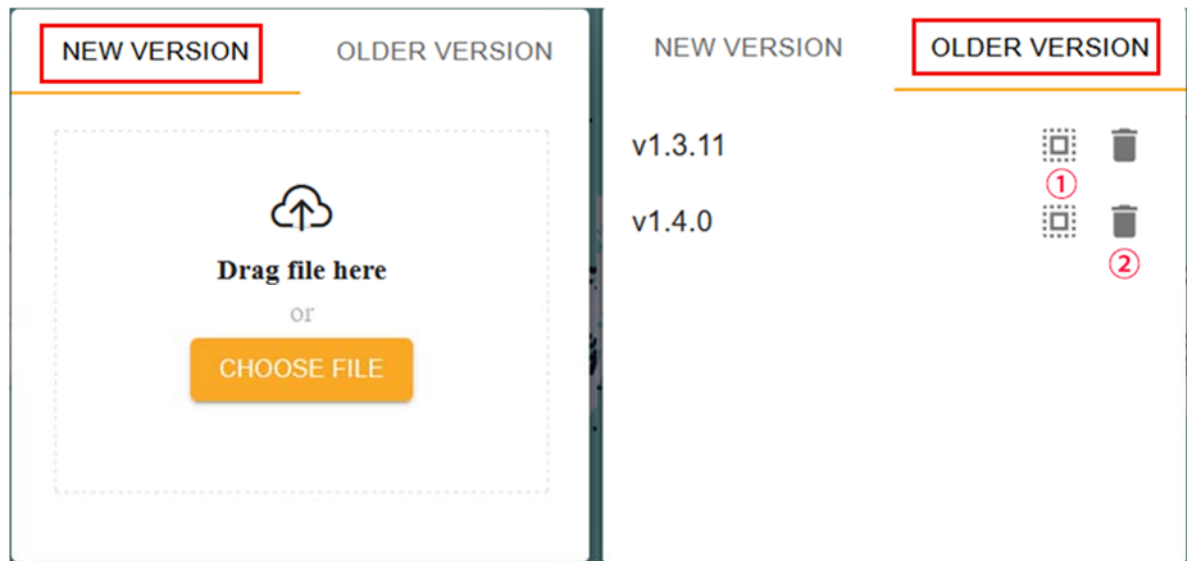

- ① Apply this version ② Delete this version

e [Debug]

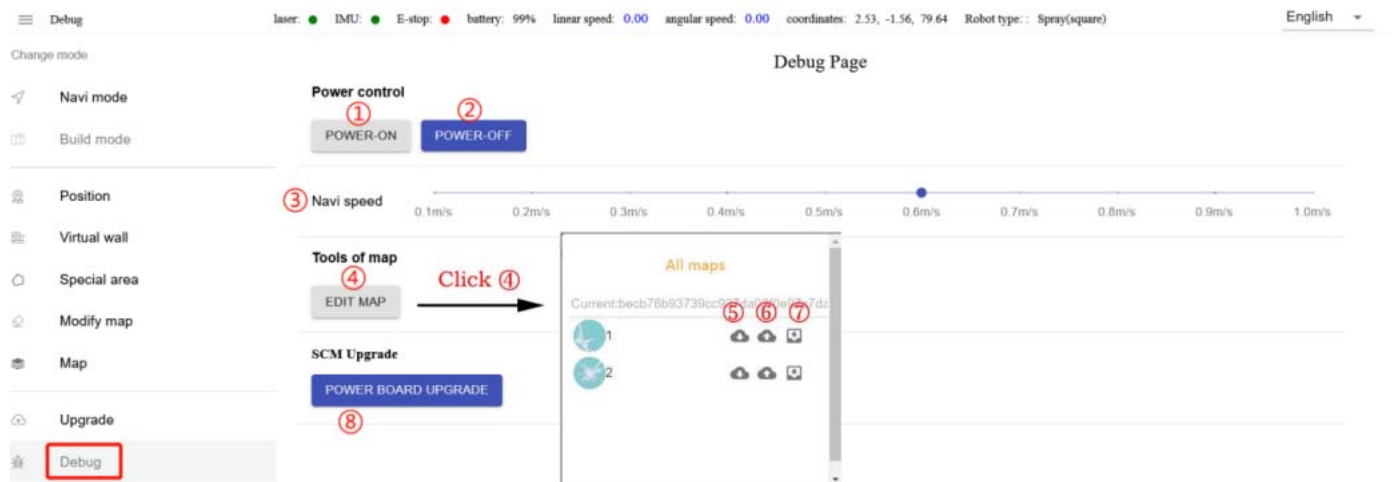


- ① **Power on:** turn on 36V external power supply
- ② **Power off:** turn off 36V external power supply
- ③ **Navi speed:** adjust the navigation speed of the robot (m/s)
- ④ **Edit map:** click on edit map and a map file box will pop up
- ⑤ **Export:** export the pgm file to be combined
- ⑥ **Import:** Import the assembled pgm file
- ⑦ **Greate new map:** click to generate a new map
- ⑧ **Power board upgrade:** when it ship out of factory is latest version,
no need to update again

Tools of map

Function: The effect of maps constructed for larger scenes or similar feature points is not good. You can use this function when there is overlapping or deformation. You can scan the map partitions and combine the 2 maps into one map.

Example of merged map:

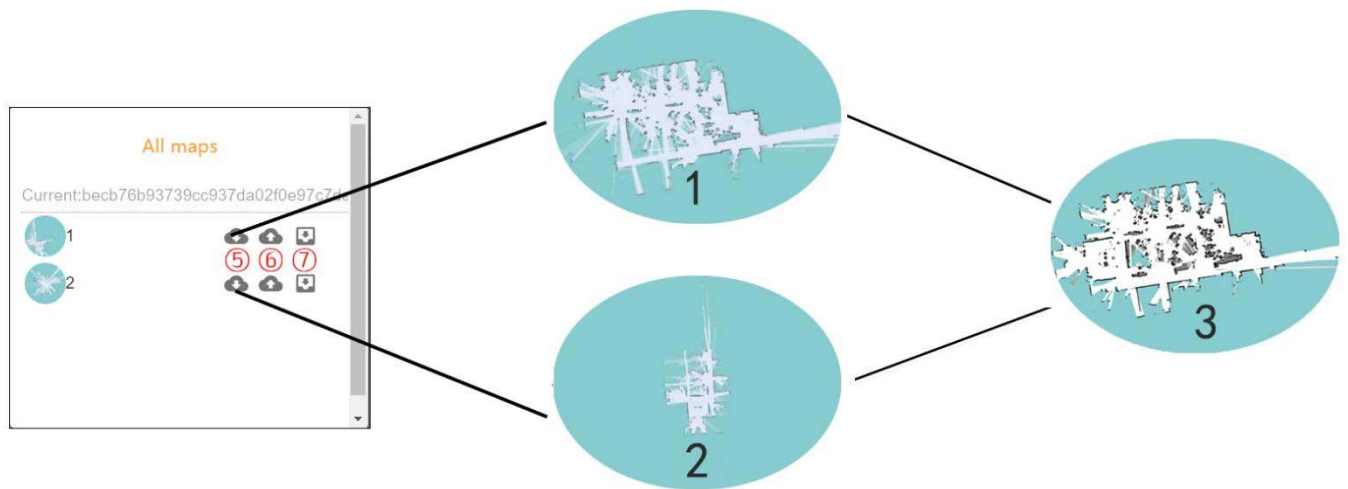

As shown in the picture above, first export pictures 1 and 2 to the computer, and then freely choose picture 1 or picture 2 as the original base map of ps. Open the ps software on the computer, assuming that map 1 is the original base map of ps, splicing map 2 to map 1 to get map 3, import map 3 (pgm format) into map 1, and then click "in Figure 1" Greate new map" (the generated new map will be automatically downloaded to the computer), and finally go to the "Map " to upload the generated map, and then go to the "All MAPS" to find the Map 1 application.

4. Precautions for use

①Lost of robot positioning

Overview: Lost positioning means that the map position of the robot does not match the actual environment position.

Cause :

- Manually pressing the emergency stop switch to move the robot
- When robot working, will match the current map according to the actual laser data. If the current terrain environment is big difference from the map build by laser, the robot will fail to match the map, resulting in the loss of positioning. The loss of positioning will cause the robot to lose the ability of path planning and cannot move.
- People stand around the robot, the positioning will be missed. If many people surround the robot, the laser will be blocked, will become more blur between the map and the terrain environment which will lead to the missing positioning.

Solution:

- Press the robot emergency stop switch, push the robot under the nearest QR code label, then open the FTP application on the screen to observe the information in

the last column. If the machine sense the QR code, the last column will display visual_ Mark [Name: c0189] indicates that the mark code has been sensed and the machine has completed relocation. At this time, turn on the emergency stop switch to continue tasks(Note: the number of c0189 label is not always same, the number of each label is different)

- Open the FTP application on the screen, input the IP address displayed in the IP column of the navigation system in the browser, manually relocate the machine
- Move the machine to the charging pile point and restart the machine within 2m of the charging pile point (Note: the target point of charging point shall be marked on the map)

②The machine does not navigate

Overview: The machine does not navigate refers to let the machine navigate to a certain point and the machine does not move

Cause :

- Check whether the emergency stop switch of the machine is

turned on, and the machine can be autonomously navigated only when the machine is turned on (Turn the emergency stop switch to the right to indicate on, and press to indicate off)

- Check whether the machine has lost its location (the orange laser and black obstacles on the map do not completely overlap, which means it has lost its location)
- Check whether the machine is close to obstacles or virtual walls (the machine will be unable to navigate if the machine is close to obstacles or virtual walls)
- Check whether the target point is close to obstacles or virtual walls

Solution:

- If the position is lost, relocate the machine according to ① solution
- Move the robot out a little to obstacles or virtual walls
- Reset the target point about 50cm away from the obstacle or virtual wall

③The machine navigation does not respond to charging

Overview: send autonomous return charging command to

robot, it does not work

Cause :

- Check whether the charging point is calibrated by using the charging point button after the ROBOT is connected to the charging point
- Check whether the charging pile target is close to obstacles or virtual walls

Solution:

- Please refer to the calibration method of charging pile in step 7 [calibration position]
- Remove all obstacle within 1.5m on the left and right sides of the charging pile

FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum 20cm distance between the radiator and your body: Use only the supplied antenna.