

EN

User Manual

**Product Parameters :**

Operating system: Android 11.0  
 Display: 7-inch HD Display  
 Screen resolution: 1024\*600  
 Processor frequency: 1.6GHz  
 Processor: Quad cores  
 RAM: 2GB, ROM: 32GB  
 Bluetooth version: 4.0  
 Battery: 3,000mAh

**Box Contents:**

-Android Tablet PC  
 -Tablet Case  
 -Device Charger  
 -Type-C Cable  
 -Screen Protector  
 -Manual

**This manual contains important safety precautions and information of correct use.****Please be sure to read this manual carefully before use so as to avoid any accidents.**

Do not place the product in hot, wet or dusty environment, especially in summer, do not leave the product inside a car with all windows closed.  
 Avoid dropping, impacting or shaking the product violently, otherwise it may cause damages or malfunctions. Select a proper volume to avoid ear problem when using headphones.  
 Do not cross the road or drive vehicles using headphones to avoid traffic accidents.  
 Be sure to use the provided chargers and accessories in the package.  
 Be sure to charge the product when the following situations take place.  
 - The battery icon shows lower or empty.  
 - System automatically shut down and it turns off soon after restart.  
 - Operation keys do not respond properly.  
 - The device shows ■ on the top right corner.

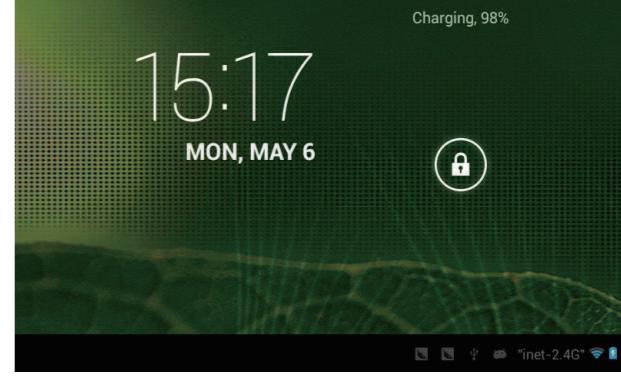
Dear Customer,

Thank you so much for purchase our 7 inch kids Tablet, if you have any questions you can contact our Customer Service on our Amazon Shop.

**3. Standby mode(Screen off mode) /Unlock the screen**

Short press power button to turn on/off the screen.(Standby mode on/off)

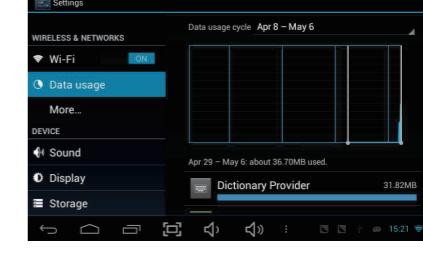
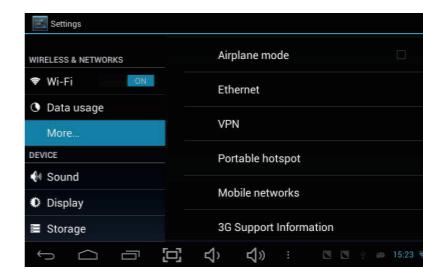
After standby mode o, slide the lock icon in order to unlock the screen.

**4. System settings**

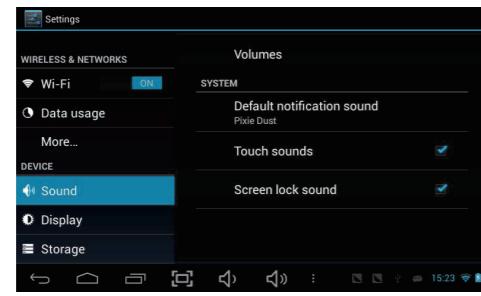
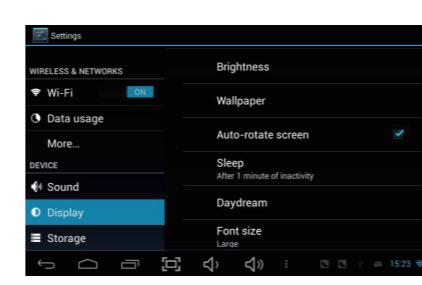
On the desktop, press menu button and select system settings.

**Press System Settings****1. Wireless & networks**

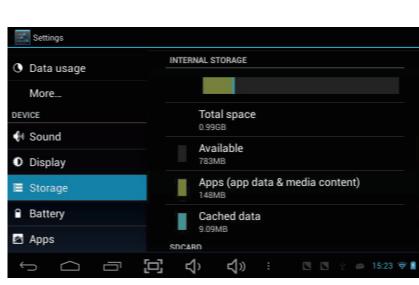
**Wi-Fi-Press Wi-Fi to turn on/off**  
 Set up each setting as you like. Wi-Fi settings - Press Wi-Fi settings, then the device will automatically search the available Wi-Fi signals. Select the network you want to connect with.

**2. Data usage****3. More...**

Slide mobile data switch to select open or close the flow usage.

**4. Sound****5. Display**

Set up each setting as you like.

**6. Storage**

Check device memory and microSD card status.  
 Unmount SD card - Unmount the SD card for safe removal.

**7. Battery**

Check battery usage status.

**8. Apps**

Manage downloaded or running applications.

Downloaded  
 All installed application are listing.

Keep pressing an application to manage.

Press Uninstall to uninstall the selected application.

Running services

View and control currently running services.

**9. Account & sync**

Create your account. After connecting Wi-Fi network, the e-mailing system synchronizes your account with the device. Emails are automatically downloaded into the device.

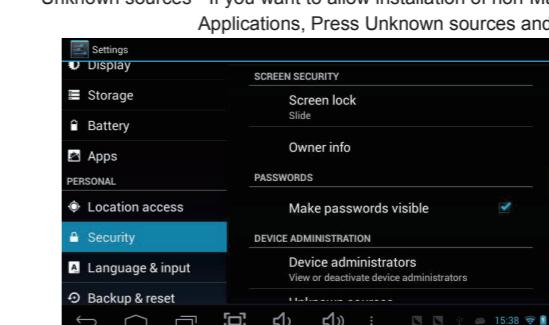
**10. Location services**

Google's location service - Let apps use data from sources such as WiFi and mobile networks to determine your approximate location

**11. Security**

Screen lock - Protect your device from unauthorized use by creating a personal screen lock pattern. Make passwords visible - Show password as you type.

Unknown sources - If you want to allow installation of non-Market Applications, Press Unknown sources and presses OK.



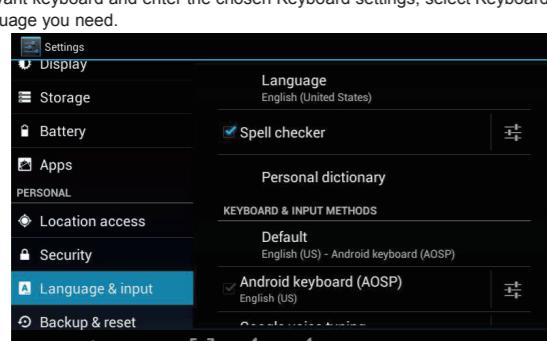
Install from SD card - Install encrypted certificates from SD card.

**12. Language & input**

Language - Choose your preferable language.

Keyboard &amp; input method - Change keyboard &amp; keyboard settings.

On Language &amp; input settings, if you need other languages besides English on keyboard, press the relevant keyboard and enter the chosen Keyboard settings, select Keyboards, press the language you need.

**13. Backup &Reset****14. Date&time**

Set date &amp; time and format

**15. Accessibility**

Set date &amp; time and format

**16. Developer options**

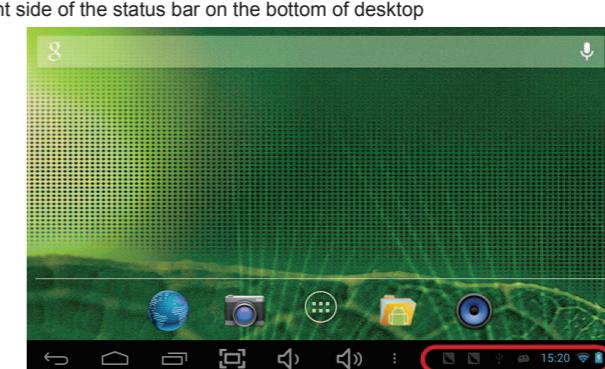
Set options for application development

**17. About tablet**

See status, legal information, ETC

**How to connect/disconnect the device with/from the computer**

On main desktop, connect the device with the PC, touch right side of the status bar on the bottom of desktop



Press "USB connected", select "Turn on USB storage".  
 The device is recognized at Explorer of the computer.  
 Now you can use it as an external storage.

After finishing your work,

Press "Turn on USB storage" to unmount it.

**How to install Applications(.apk file) into the device****Method 1.**

1. Connect the device with internet. See above [1.Wireless & networks] in order to connect internet.
2. Run "Getjar" and search the applications you want to install.
3. Follow the instruction on the screen for installation.

**Method 2.**

1. With your computer, search application file (.apk) that you want to install into the device.
2. Download the file (.apk) into your computer.
3. Connect the device with your computer.
4. See above [How to connect/disconnect the device with/from the computer.]
5. Copy and paste .apk file into the device and disconnect from your computer.
6. Run "File browser" and nd.apk. Let that was copied into the device.
7. Press the file to install and follow the instruction on the screen.

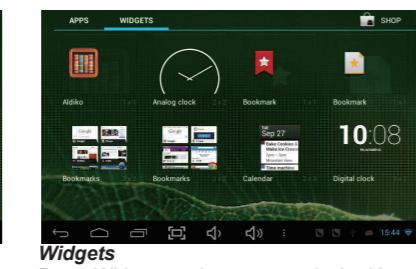
**Note**

You may only download adult applications if you are at least 18 years of age, or at least the age of majority in the jurisdiction where you reside or from which you download adult applications. If you do not meet these requirements, then you do not have permission to download adult applications.

In case of any problems including legal issues from the breach by end-user's own decision, the manufacturer shall not be responsible.



Long press your desired APK icon and put it on the desktop.



Press Widgets and press your desired icon to put it on the desktop.

**Wallpaper**

Long press the desktop, press Wallpapers and select one of categories of wallpaper.

Select one you desire and press Set wallpaper.

**FCC Statement**  
 This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try one or more of the following measures:

- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**RF Exposure Information**  
 The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

**Specific Absorption Rate (SAR) information:**  
 This Kids tablet meets the government's requirements for exposure to radio waves. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age or health condition. Exposure information and SAR data for this device can be found at <http://www.fcc.gov/oet/ea/fccid>. The SAR for this device is 1.5 W/kg. The device has been tested over one gram of tissue. Device types: Kids tablet has also been tested against this SAR limit. This device was tested for typical SAR operations with the back of the Kids tablet kept 0mm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain an 0mm separation distance between the user's body and the back of the Kids tablet. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

**How to make desktop icons**

Press the upper right side icon of desktop, the pop-up displays.

