

扭变车使用说明书

INSTRUCTIONS

感谢您使用本公司的玩具产品，为了使您对本产品有更好的了解，请您在使用前熟读以下说明，这将为您带来不一样的操作体验感。Thank you for using our company's toy products. In order to have a better understanding of this product, please read the following instructions before use, which will bring you a different operating experience.

注意 NOTE

 
本产品适合6岁及以上儿童使用。由成人组装/充电完成后，再由儿童玩耍。This product is suitable for children 6 years old and above. After assembled / charged by adults, play with children again.

请在成年人的监督下使用该产品。Please Use This Product Under The Supervision Of An Adult.

警告：请不要擅自拆卸或改装本产品，任何改动将有可能导致产品无法正常使用。Warning: please do not disassemble or modify the product without authorization, any changes may cause the product to not work properly.

特别警告： SPECIAL WARNING:
使用充电插头输出功率为5V，请勿使用快充插头和快充充电线，以免发生充电时，电流输出过快，导致电池充电过热，而引起产品烧坏等危险事情发生。The used output power of charging plug should be 5V. Please do not use the quick-charging plug and quick-charging cable, so as to avoid the condition that the too quick current output during charging causes overheated battery charging and results in dangerous matters such as product burnout.


产品配置 Product Configuration

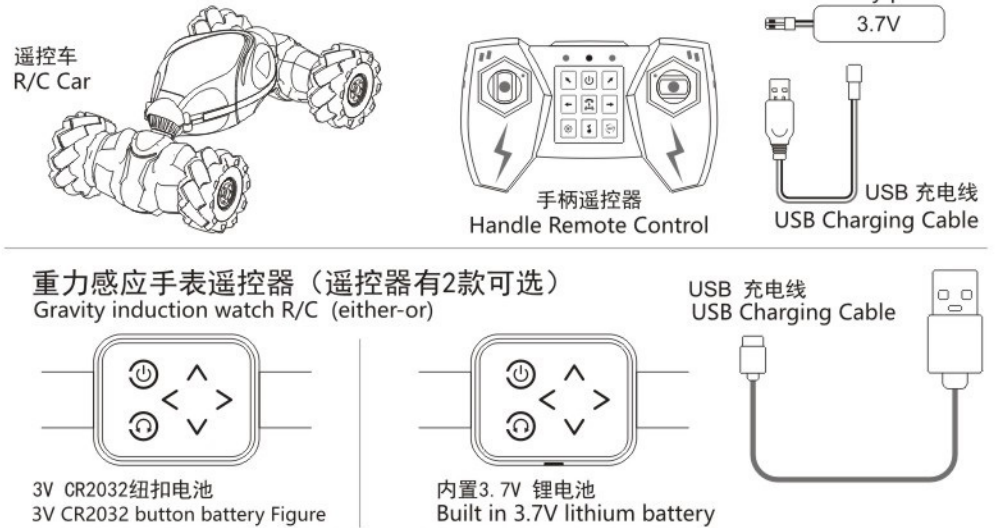

FCC Compliance Statements
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.
If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
-- Reorient or relocate the receiving antenna.
-- Increase the separation between the equipment and receiver.
-- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-- Consult the dealer or an experienced radio/TV technician for help.
Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

FCC ID :2A5IE20212071

 车身电池安装 Car Battery Installation

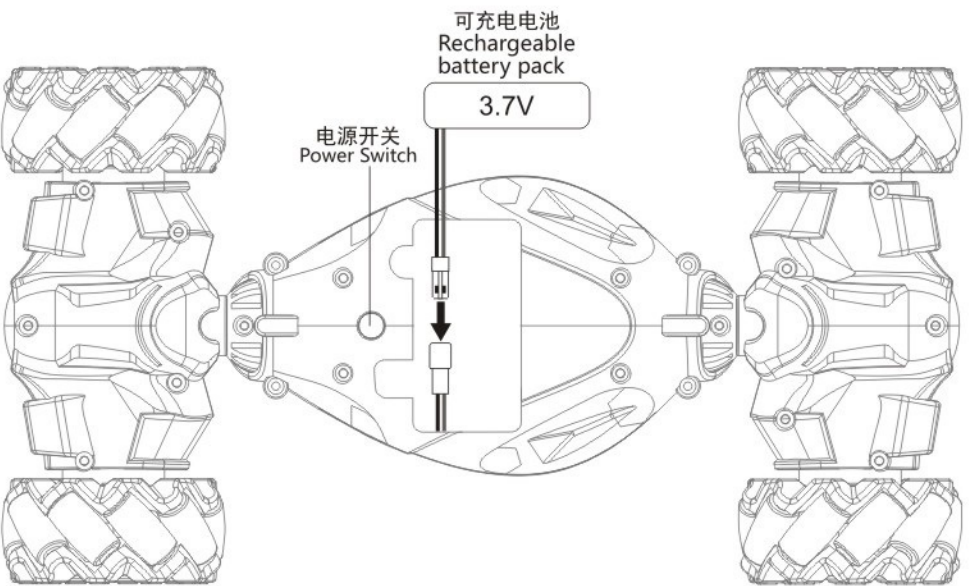


电池安装

打开电池盖，把 3.7V 可充电电池连接车底电源插口，并盖上电池盖。

Battery installation

Open the body battery cover, Connect the rechargeable battery pack to the power socket, Close the battery cover.

 
电池充电方式 Battery Charging Mode

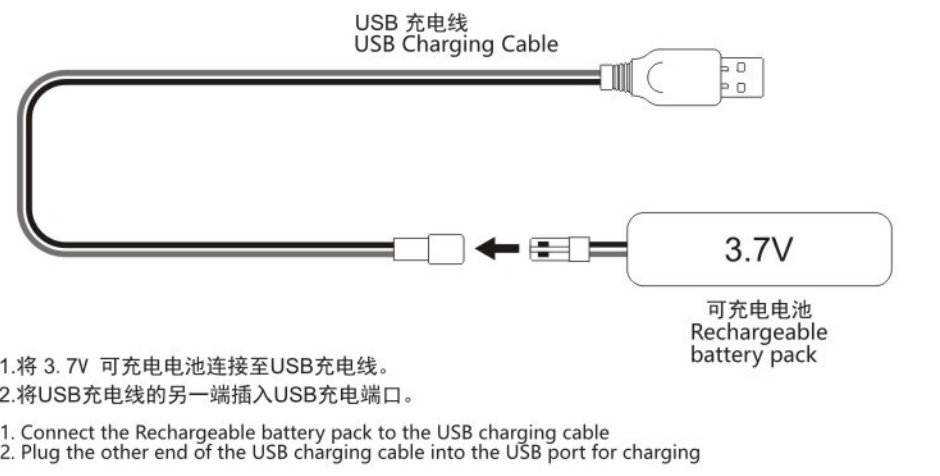

- 将 3.7V 可充电电池连接至USB充电线。
 - 将USB充电线的另一端插入USB充电端口。
1. Connect the Rechargeable battery pack to the USB charging cable
2. Plug the other end of the USB charging cable into the USB port for charging

遥控器功能介绍及电池安装方式

 R/C Function introduction and battery installation

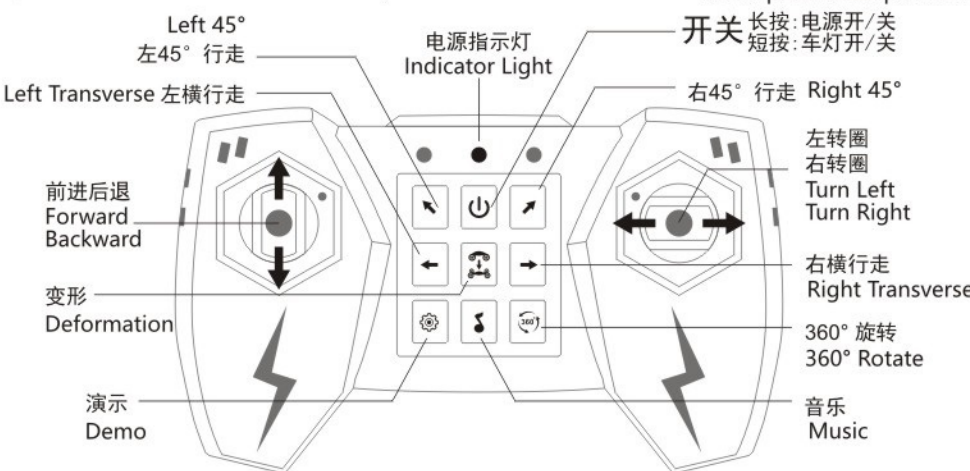

- 按下“演示”按键：遥控车进入自动演示模式；按任意个按键，退出自动演示模式。
 - 按下“音乐”按键：按第一次发动机声，按第二次音乐，按第三次另一首音乐，按第四次关闭音乐。
 - 遥控器有效控制距离约40米。
1. Press down the "Demo" key: the R/C car enters the automatic demonstration mode; press any key to exit from the automatic demonstration mode.
2. Press down the "Music" key: Press the first time to play the engine sound, Press the second time to play music, Press for the another music a third time, and press the fourth time to close the music.
3. The effective control distance of the handle remote controller is about 40m.

电池安装

打开遥控器电池盖，将2节1.5V "AA"非充电电池按正确的极性方向装上，并盖上电池盖。（电池不包括）

Battery installation

Open the body battery cover and install 2×1.5V "AA" non-rechargeable batteries in the right polarity direction and cover the battery cover. (Battery not included)

重力感应手表遥控器功能介绍

Function introduction of remote controller of gravity induction Watch

开关 ON / OFF

 
 
长按：电源开/关 Long press: power switch
短按：锁住所有功能，同时全部灯亮起。
Short press: Lock all function, All lights are on at the same time.

再短按解除，灯2和灯3亮起。
Short press again to release, Light 2 and Light 3 are on.

功能转换 Function Conversion

长按：进入自动演示模式（按任意键退出）
Long press: Enter automatic presentation mode (Press any key to exit)
短按：进入模式二（按任意键退出）
Short press: Enter mode two (Press any key to exit)

重力感应手表遥控器有效控制距离约35米。
The effective control distance of the gravity induction watch remote controller is about 35m.

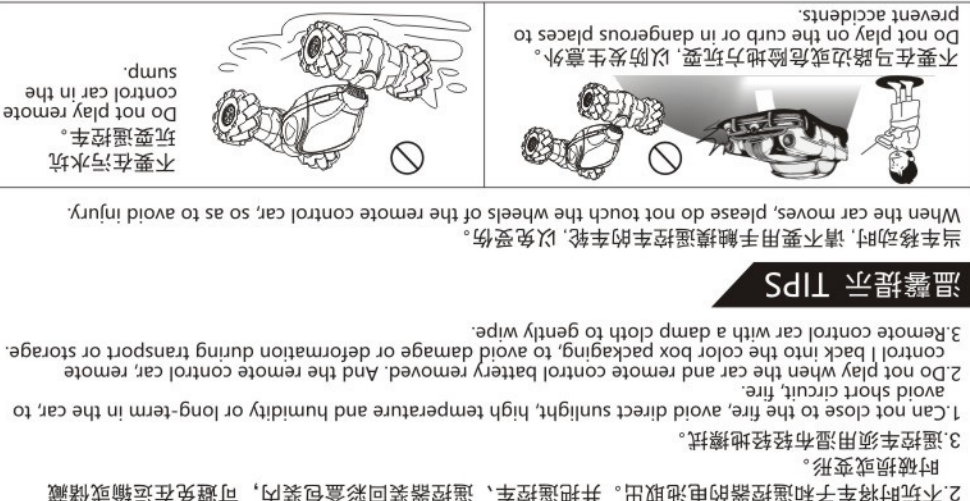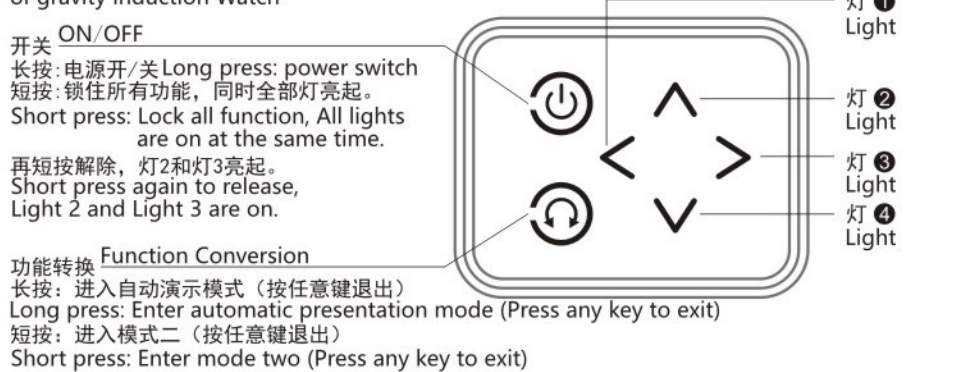

保养事项 Maintenance Matters
1. 不能靠近火源，避免阳光直射，高温潮湿或长期放在汽车中，可避免线路短路、起火。
2. 不定时将车子和遥控器的电池取出，并遥控车的电池取出，可避免在运输或储藏时破坏或变形。
3. 遥控车须用湿布轻轻地擦拭。
4. 1. Can not close to the fire, avoid direct sunlight, high temperature and humidity or long-term in the car, to avoid short circuit, fire.
2. Do not play when the car and remote control battery removed. And the remote control car, remove control back into the color box packaging, to avoid damage or deformation during transport or storage.
3. Remote control car with a damp cloth to gently wipe.

故障原因 Cause Of Issue	处理方法 Approach
车辆不能行驶 Vehicle Can Not Drive	1. 遥控器没有连接或遥控车的开关没有打开。 2. 将电池正确的装入遥控器或遥控车内。 3. 对充电电池组进行充电。 1. Long press the power switch of the gravity remote controller to start the frequency alignment. When the frequency alignment succeeds, the light 2 and light 3 of the remote controller go on. In case of no operation, the sleep mode starts one minute later. 2. Check the battery or the car does not load the remote control car switch is not turned on. 3. Charge the battery pack.
车辆不受控制 Vehicle Is Out Of Control	1. 遥控器内电池或充电电池组电力不足。 2. 场地附近可能有干扰源。 3. 将充电器或遥控车放入充电器。 1. There is not enough power in teh remote control battery or rechargeable battery pack. 2. There may be sources of interference near the site. 3. Change the venue.
异常保护 Abnormal Protect	当遥控车功能受到外力阻碍而无法完成功能时，或电路短路时，重新打开电源开关遥控车断电保护。 When the function of the remote control car is hindered by the external force and can not finish the full function of the remote control car is power protection. Re-open the power switch remote car

 
 
一般故障处理 General Trouble Shooting

致消费者 To The Consumer

1. 请在户外玩耍，不要在道路和人群中玩耍，以免发生危险。
2. 请在户外玩耍的地方玩耍，不要在道路和人群中玩耍，以免发生危险。
3. 在室外玩耍时，不要将手伸入，以免受伤，更不要卷入头发，衣服等。
4. 车采用了复杂电子电路及大量无配件，请不要随意对电路板进行拆装或改装。
8. 车采用了复杂电子电路及大量无配件，请不要随意对电路板进行拆装或改装。
10. 不要将玩具放在水里，灰尘时须用湿布轻轻地拭。
9. 遥控车在玩耍时，不要将手伸入，以免受伤，更不要卷入头发，衣服等。
10. Do not put the toy in the water, it will damage the electronic components.
9. Remote control car after playing with dirt, dust must be gently wiped with a damp cloth.
8. The car use a complex electronic circuits and a large number of components, please do not disassemble or modify the circuit board.

重力感应手表遥控器对频
Gravity induction watch R/C frequency alignment
1. 长按重力遥控器电源开关，开始进行对频，对频成功，遥控器灯3亮，若1分钟后没操作则进入休眠。
2. 对频不成功，遥控器灯1灯4一直以1，连接不成功请重复以上操作。
3. 对频后没操作，遥控器车和遥控器进入休眠模式，需要重新对频连接。
1. Long press the power switch of the gravity remote controller to start the frequency alignment. When the frequency alignment succeeds, the light 2 and light 3 of the remote controller go on. In case of no operation, the sleep mode starts one minute later.
2. When the connection fails, please repeat the above operations.
3. If there is no operation after Connection frequency, the remote control car and the remote control enter the sleep mode, and the frequency needs to be re-linked.

手柄遥控器操作说明
Handle Remote Control Operating instructions
1. 先打开车身体电源开关，车身体灯亮，车身体灯亮。
2. 将遥控器电源灯和车身体灯亮，连接不成功请重复以上操作。
3. 对频后没操作，遥控器车和遥控器进入休眠模式，需要重新对频连接。
1. First, turn on the power switch of the automobile light, and start frequency alignment.
2. When the frequency alignment succeeds, the light of the automobile body flashes.
3. If there is no operation after Connection frequency, the remote control car and the remote control enter the sleep mode, and the frequency needs to be re-linked.

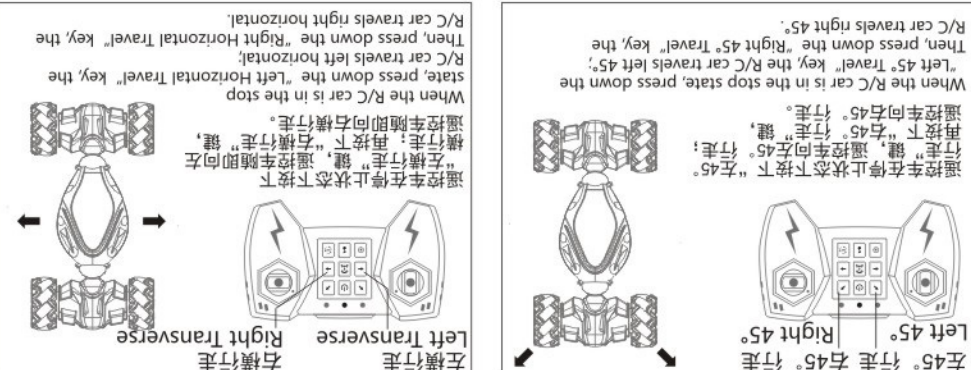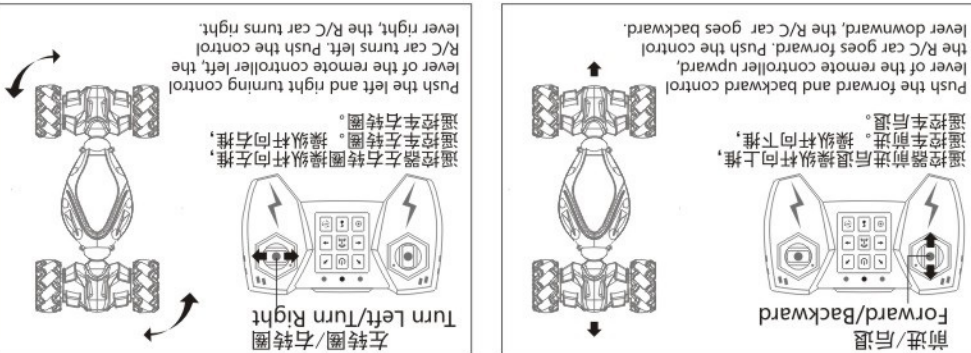

重力感应手表遥控器电池说明
Gravity sensing watch remote control battery description
重力感应遥控器有2款可选（按下图对应配置操作）
2 Gravity Induction remote controls (Operate as shown below)
1. 内置3.7V 锂电池
2. 外装3V CR2032纽扣电池（纽扣电池包括在内）
1. Built in 3.7V lithium battery
2. 3V CR2032 button battery

电池使用注意事项 PRECAUTIONS FOR BATTERY USE

- * 这个是新的电池组，需要充电后才能使用。
- * 充电插头使用输出功率为5V；
- * 充电电池实际毫安数越高充电时间越长；
- * 充电电池只能在成人监护下充电；
- * 充电时USB充电线头会亮红灯，当灯光不亮时，表示锂电池已经充满电，充电时间3至4个小时。
- * 先把电池组的电线插头插在充电器的插头里，在把充电器插头插在插座上。
- * 取出和放入电池应按玩具电池室上的标识进行；
- * Before playing please charge the new battery pack.
- * The output power of charging plug is 5V;
- * The higher the actual milliampere of the rechargeable battery, the longer the charging time;
- * Rechargeable batteries can only be charged under adult supervision;
- * During charging, the light of the USB charging cable head is on red. When the light goes out, it indicates that the lithium battery is fully charged. The charging time is 3-4 hours.
- * First plug the battery pack plug in the charger, then plug the charger plugged in the socket.
- * Take out and put in the battery according to the mark on the toy battery room;
- * Non-rechargeable batteries cannot be charged;
- * Use only the same or identical battery as recommended;
- * Do not mix-use old and new batteries or different types of batteries;
- * Batteries should be placed in the correct polarity;
- * Remove the exhausted battery from the toy;
- * Power terminals should not be short-circuited;
- * The charger must be checked regularly for damage to its wires, plugs, housings and other components. If damage is found, stop using the charger until it is repaired.

- * 非充电电池不可充电；
- * 只能使用与推荐电池一样或相同的电池；
- * 不可混用新旧或不同类型的电池；
- * 电池应以正确的极性放入；
- * 从玩具内取出电量用尽的电池；
- * 电源端子不应短路；
- * 充电器必须定期检查其电线、插头、外壳和其他部件是否损坏，如发现损坏时应停止使用，直至修复完好，才可继续使用；