



1.Windscreen and pop filter

2.Display

3.Power switch/Frequency adjustment

4. Battery cover

5.Transmission antenna

1.Connect the receiver to a power outlet through the power adapter provided and turn on the receiver.

2.Put two alkaline AA batteries into the battery compartment of the microphone. Please ensure the positive and negative ends are positioned in the correct direction.

3. Power on the handheld microphone. In case of any frequency interference, press set button can choose different frequency. There are up to eight frequencies to choose from.

4. Please note that it will take a few seconds for the receiver to automatically syndicate the frequency will changed after set button each pressed

**Warning:**

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**NOTE:**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**FCC Statement:**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.