
Manual for Smart electronic blackboard




Dear clients, because the machine has many functions, in order to use it fully and effectively , please read the manual carefully. The content of this document may not fully reflect the latest machine changes, please refer to the actual product.

Safety warning instructions

Please read and understand the following precautions carefully before using this product.

- * The machine should be placed in environment that does not hinder good ventilation.
- * Do not place the machine on an unstable, underweight cart/shelf or table.
- * The machine must be firmly fixed on the wall by professionals.

- * I Class product (usually equipped with three-core power cord, needs to be grounded) should be connected to the grid power output socket with a protective ground connection.
- * The terminals marked with ⚡ are dangerously, and the external wires connected to these terminals need to be installed by instructed personnel or use ready-made leads and flexible wires.
- * The battery must not be exposed to such as sunlight, fire or similar overheating environment. To protect environment, used batteries should be disposed of in accordance with the recycling implemented in the region.
- * Before connecting the machine to external AC power supply, please ensure that the grounding is good, otherwise the product touch may be out of control and affect user experience.

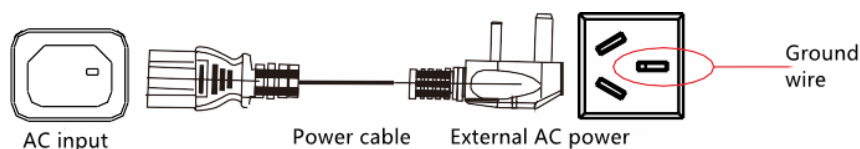

Safety symbol

If there are the following safety symbols on the machine, you should pay attention:



Only suitable for safe use in areas below 2000m above sea level



Only suitable for safe use in non-tropical climate conditions

Contents

Safety warning instructions	2
Contents	3
Precautions for use	4
Product Function introduction	5
Connection instruction	7
Remote controller instruction	8
System operation instructions	9
Simple troubleshooting	24
Daily maintenance	25
Environmental Precautions and Instructions	26


Precautions for use

1)Moving products

Be noted when moving the product, make sure the plug is unplugged from the power outlet and any cables are disconnected.

Make sure at least two people and keep touch panel stand upright when moving

Do not point the touch panel face up or down when moving

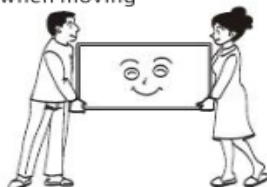

3)Not in use for a long time, disconnect the power

Standby mode is still power on



4)Don' t touch it when thunder or lightning occurs.

Antenna \ power cable \ etc, will take you in dangerous




2)Do not climb

It' s dangerous to climb or hang on it.



5)Don' t try to fix it without guidance Consulting service technician

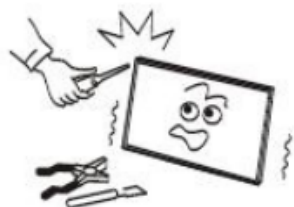


7)Fall down to damage

Disconnect the power cable immediately after contact service technician



6)Fire and smoke

Immediately turn off the product and unplug the power cable

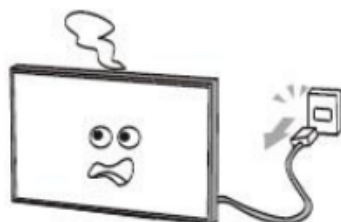

8)Unplug the power cable before cleaning

Do not use some dangerous material to clean the product as such gasoline, solvents.

- ◆ Please try to use gently wipe the LED screen with a soft, dry cloth.



1、Product function introduction

Smart electronic blackboard is an intelligent interactive teaching device, which integrates nano-touch, LED display and computer host, high-definition camera and array microphone.

Covers functions: touch interaction, micro-lecture recording, multimedia teaching and chalk writing, seamlessly connecting traditional teaching and smart blackboards. The surface is made of anti-glare nano-glass, which has the characteristics of dustproof, waterproof, shockproof and anti-blue light. It meets the needs of high dust, high safety protection, and high frequency operation in the teaching environment. It is the latest generation of intelligent education information equipment.

1. Features

- Built-in OPS-C standard PC module
- Common front interface and button
- One-key restore function of front buttons
- Five fingers press to turn off the backlight / turn on the backlight
- Three fingers press the screen to follow the floating menu
- Gesture swipe to appear the central control menu
- Channel preview and custom functions
- Intelligent temperature control function
- Intelligent eye protection function
- Smart child lock and U disk lock function
- Smart power off setting function
- Anti-blue light function
- Gesture occlusion function
- Intelligent photosensitive function
- NFC swipe card switch function
- One-key recording function for all channels
- One-key down function for all channels
- Wireless screen projection function
- Intelligent network identification function: only need to connect a network cable to realize Android/OPS dual system network connection
- Built-in 8 million pixel high-definition booth (optional)

2. Front interface

1	Type C	Data reading, charging
2	USB	USB3.0 interface (dual channel)
3	USB	USB3.0 interface (dual channel)
4	TOUCH	Front touch interface
5	HDMI	Front HD input interface


3. Front button function

1	One-key recording: short press to start recording, short press again to pause recording; long press to stop recording
2	adjustment / call up the central control menu (long press)
3	Control signal source switching/child lock (long press)
4	Press the button to select the control channel,long press the button for 3 seconds to lock the machine, long press again for 3 seconds to unlock.
5	Press the button to switch the image mode,long press the button for 3 seconds to call up the central control menu.
6	Press the button to switch Android/Windows dual system, long press the button for 3 second, the display ratio (4:3/16:9) can be switched.
7	Short press it to turn on when power off,short press for energy saving screen when power on, short press again to turn on the backlight, when power on, long press for 3 seconds to power off.

2、Device connection instruction

2. 1. External computer connected to the interactive flat panel


- ◆ Use HDMI cable to connect external computer to the front HDMI port at the bottom of panel.
- ◆ Use USB cable to connect USB port of external computer to the front USB-Touch port at the bottom of panel.
- ◆ After the connection is completed, open panel and computer, use remote control or touch the menu to select the corresponding signal source.
- ◆ Follow the on-screen display to confirm the signal source.

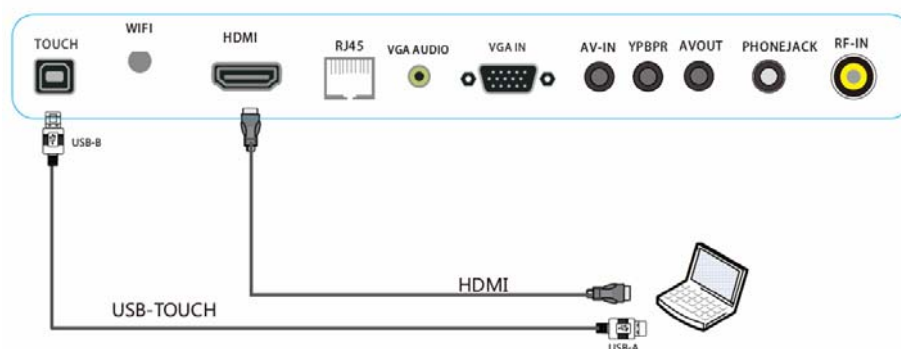

When connecting to an external computer, set the best resolution to 3840*2160 (some cables need to be provided by users)


2. 2. PC display output connection of the panel

- ◆ Connect to a projection or panel through DP (or VGA) and HDMI output port on the PC.

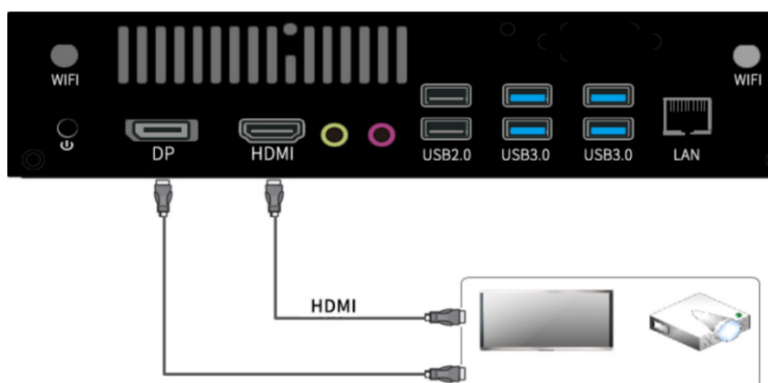

3、Remote controller instruction

1. Functions definition diagram

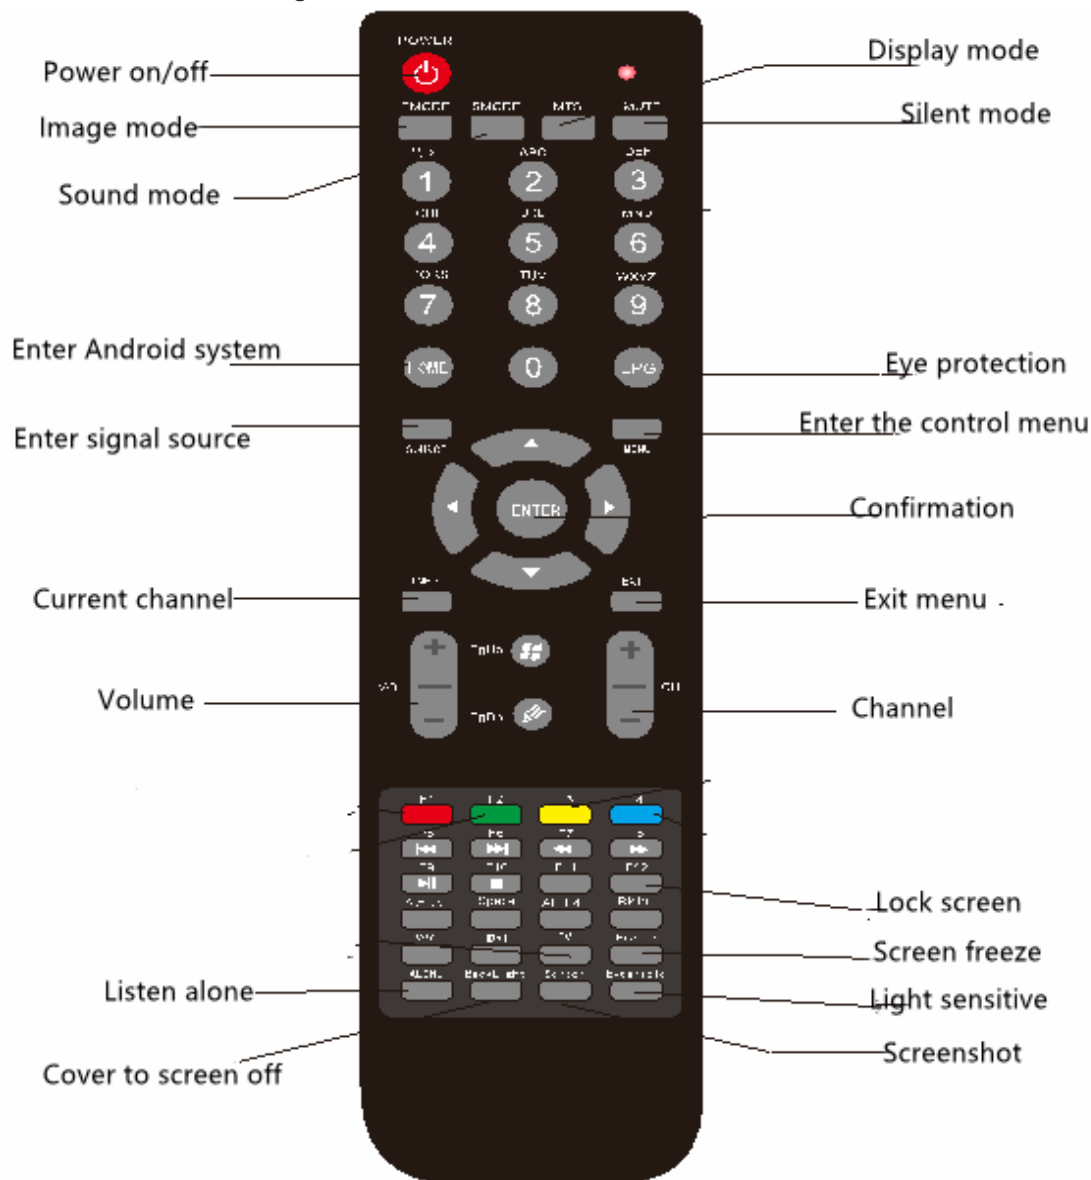

2. Precautions

- ◆ Please open the battery cover on the back of remote controller before use, insert two AAA batteries according to the polarity marked in the battery box and close the cover.
- ◆ Please aim the remote control at the receiver on front frame of the machine. If there is an obstacle between the machine and remote control, it may fail.
- ◆ In order to ensure the good operating mote control, if the operation is found to be abnormal, please replace the battery immediately.
- ◆ If users do not use remote control for a long time, please take out the battery to prevent the battery from leaking electrolyte.

4、System operation instructions

1. Power on /off

- ◆ Please make sure that the power cord is correctly inserted into the AC interface, and turn on the power of panel. At this time, the power indicator is steady red.
- ◆ Short press the power button of panel, the system can start normally, the power indicator light will be steady blue.
- ◆ In the power-on state, press and hold the power button for 3 seconds to shut down normally. When it shuts down by default, the system will shut down both the Android and Windows at the same time without shutting down the OPS system separately.

2. Screen energy saving

- ◆ In the power-on state, short press the power button, the system will turn off the backlight and enter energy-saving mode. At this time, the power indicator flashes in blue. After the backlight turning off, short press the power button of panel or touch the screen to resume normal display.

3. OPS system restore

- ◆ When the built-in OPS has a system failure, users can press the front button to restore the Windows system to factory state.
- ◆ When the system is restored, the OPS user data will be cleared. Please back up private data before restoration to prevent loss.

 
4. Sidebar shortcut menu

The sidebar is divided into left and right sidebars, click the icon on the left/right side of

the screen  , The sidebar can be called up, and the expanded function keys are back, home page, task, annotation, signal source, and side menu.

- ◆ Return: click  icon to return or exit the current program.
- ◆ Home: click  icon to enter the main interface of the Android system.
- ◆ Task: click  icon to enter the task management interface, you can choose to open or close the application.
- ◆ Comment: click  icon to open the annotation.

Comment column operation instructions:

Click : Currently in brush mode, call out the writing menu , You can set the brush color and size.

Click : Enable the eraser.

Click : It is currently in the annotation mode, exit the annotation mode, and the current non-annotation mode, enter the annotation adding page.

Click : Open the annotation drop-down menu.

Click  Select QR code sharing to scan the code and take it away. Click  Whiteboard can be imported

Click  Exit annotation mode.

◆ Source: click  icon, call out the signal source channel list, the user can choose to switch the desired channel.

◆ Side menu: click  icon to bring up the side menu, as shown in the following figure. The panel contains widget display, common application shortcut functions, and custom added applications, brightness, sound, and notification center information.

5. Pull up the central control menu

5.1 Features

Use gestures to touch and pull up from the bottom of the screen to display the central control menu. The expanded function buttons are Back, Home, Tasks, Input Source, Settings, Volume-, Volume+, Backlight-, Backlight+, Drawboard, Annotate, Screenshot, ChildLock, Power.



5.2 Return



Click  icon to return or exit the current program.

5.3 Home



Click  icon to enter the main interface of the Android system.

5.4 Task



Click  icon to enter the Android system task management interface, you can choose to open or close the application.

- ◆ In the multitasking state, touch the task list area and swipe up and down to view the task list.
- ◆ Touch the task thumbnail and swipe left or right until you slide out of the task list area to release the thumbnail to close.

5.5 Input source



Click  icon to call out the source channel list, and the user can choose to switch the desired channel.

5.6 Set up



Click  icon to call out the system touch menu, and the user can set the corresponding system function to the system.

5.7 Volume plus or minus



Click  icon to turn down the volume of the Smart electronic



blackboard. Click  icon to turn up the volume of the Smart electronic blackboard.

5.8 Backlight brightness plus or minus



Click **Backlight-** icon to decrease screen brightness.



Click **Backlight+** icon to increase screen brightness.

5.9 Drawboard



Click **Drawboard** icon, enter the system's built-in whiteboard software to perform operations such as writing and erasing.

5.10 Annotation



Click **Annotate** icon, you can open the annotation for writing, and the annotation content can be saved.

5.11 Screenshot



Click **Screenshot** icon to take a screenshot of the current interface, and the screenshot supports drag and drop to adjust the size.

5.12 child lock



Click **ChildLock** icon, you can activate the child lock function. After entering the password, long press the unlock button to unlock. The default password is 2580.

5.13 Power



Click **Power** icon to turn off the Smart electronic blackboard.

6. System settings

Click Settings in the Android main interface or other shortcut menus to enter the system settings menu:

6.1 Personalize


Personalized settings interface, users can customize and replace personalized settings such as device name, system theme, wallpaper, display size, color temperature style, screen saver, etc.

6.2 Network settings


Through the network setting interface, you can set functions such as wired network, wireless network, wireless hotspot and Bluetooth. When needed, just turn on the corresponding switch button, follow the system prompts to connect and configure it to use.

6.3 Smart settings


- ◆ In the intelligent setting interface, there are function settings such as energy saving mode setting, power on/off setting, channel setting, security setting, etc., which can adjust the corresponding functions of the system.
- ◆ Energy-saving mode: You can set the sleep time of the machine (5 minutes to 60 minutes), and you can also set whether to leave the screen or screen saver after sleeping. After setting, the system can enter hibernation or screen saver without any operation.

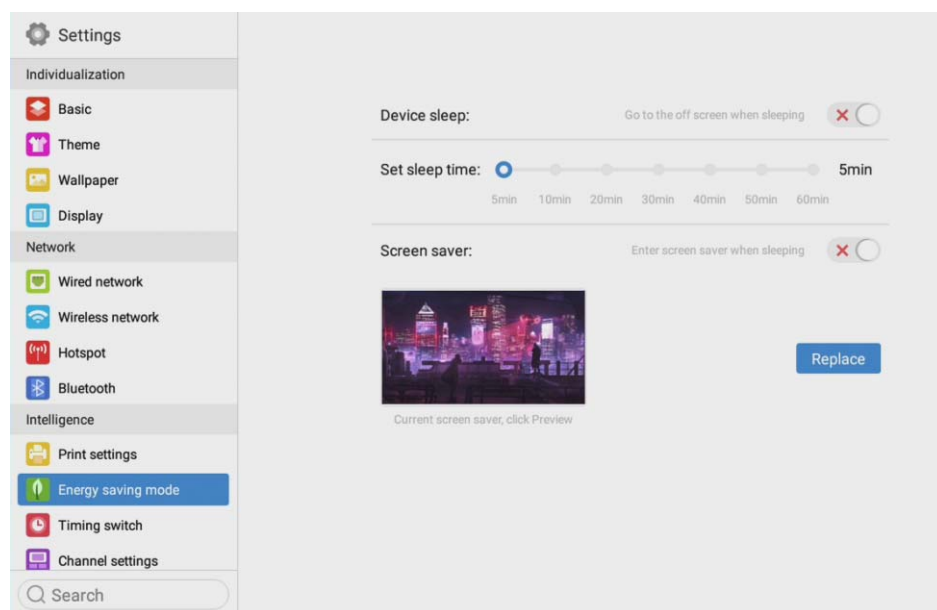


- ◆ Timed switch machine: After setting the startup time or shutdown time, the system will automatically start or shut down when the set time is up, and can be set to switch on and off once or repeatedly according to rules.

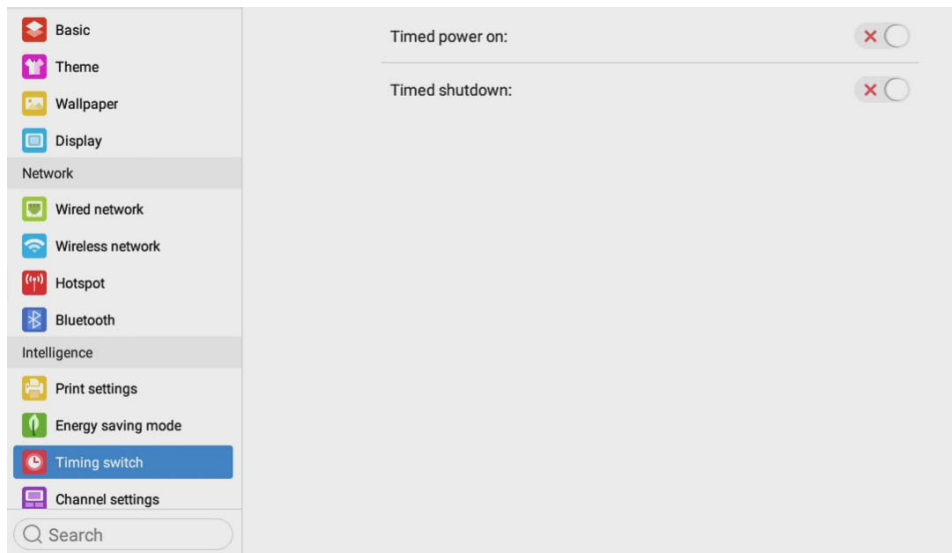

- ◆ Channel Settings: Set the default channel selection after the system is powered on, and supports clicking  Custom channel name.

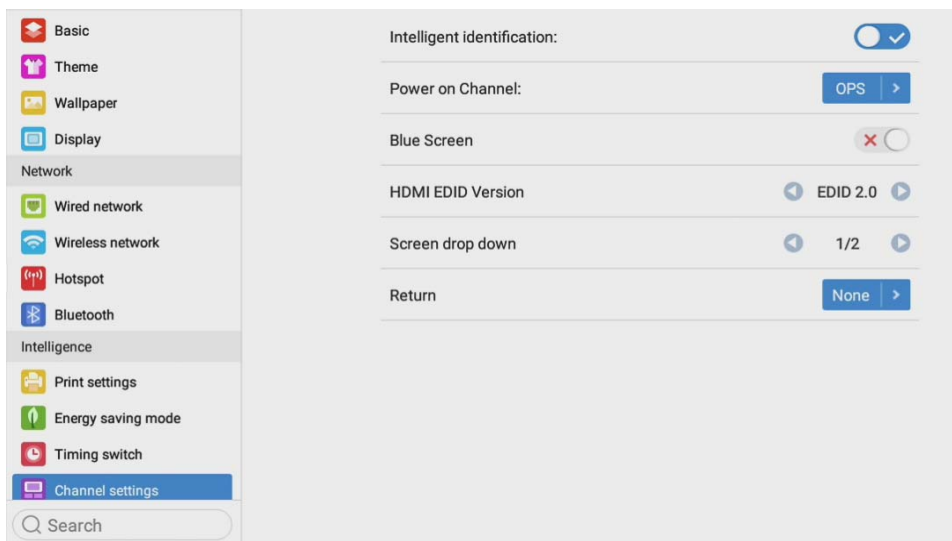


- ◆ Security settings: enable or disable USB lock, screen lock, application lock and PC touch lock function, and support password modification of the corresponding lock class, the default password is 2580.

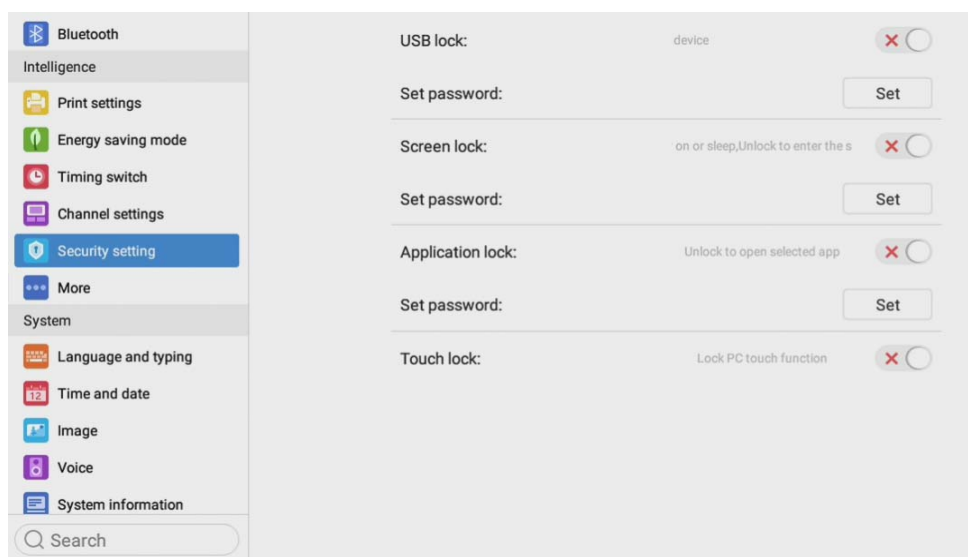

- ◆ More function settings: You can set the power button, floating menu, sidebar, photosensitive, centralized control, temperature monitoring, five-finger screen off, three-finger screen off and other function switches.

Among them, the power button supports three-in-one (energy saving, shutting down the computer and shutting down the whole machine), two-in-one (energy saving and shutting down the whole machine) and shut down (turning off the whole machine); Switch; when using the central control to control through the RS232 serial port, you need to open the "centralized control" switch.

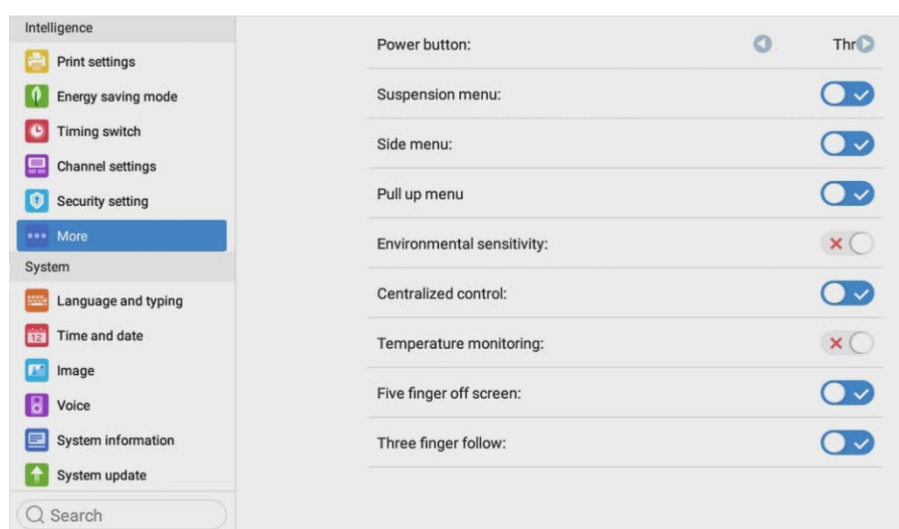

6.4 Channel settings


- ◆ This setting can only be switched to the channel option under the digital TV

or analog TV channel, and its functions are as follows:

- ◆ Manual Search: Search for a specific station by manually switching channels.
- ◆ Auto search: After selecting the auto search, the channel will be automatically detected and saved with signal stations.
- ◆ Program List: The searched channels will be displayed in the program list, and users can switch to view the existing channels in this list.

6.5. System settings

- ◆ The system setting options are mainly for language and input method, time setting and system update and upgrade, etc. You can also view system version information and built-in storage usage.
- ◆ Language and input method: You can choose to change the system language, mainly including Chinese, English, Italian, French, Japanese, Spanish, Arabic, Portuguese, Russian, etc. 9; you can choose to change the input method, the default is Android keyboard (English), Sogou input Method, Google Input Method (Chinese), other input methods can be installed and added.
- ◆ Time and date: You can adjust the time and set the time zone, and support automatic adjustment when networking.
- ◆ Image setting: This function acts on the channel and is mainly used to adjust the image quality of the channel and the ratio of the channel image.
- ◆ Sound Settings: Adjust the sound and set the sound mode, the sound mode includes: Standard, News, Music, Cinema, Sports, User.
- ◆ System Information: You can view information such as system version information and built-in storage usage.
- ◆ System update: support restoring factory settings and system firmware update, local update method: copy the firmware to the root directory of the FAT32 format U disk, connect the U disk to the USB interface of the all-in-one computer, and select local update. (Factory reset and firmware update will clear all your personal information and data, please back up before updating).

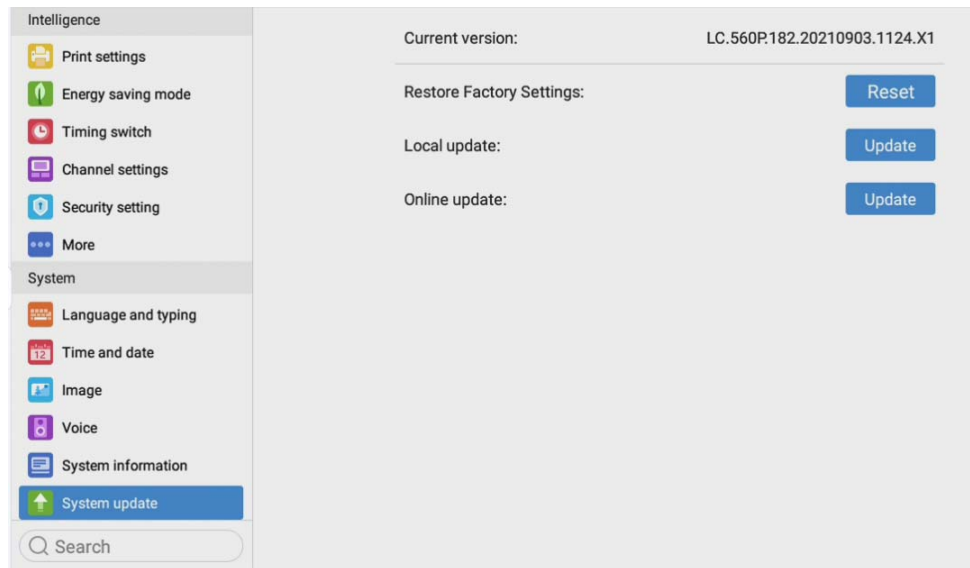


7. Floating menu

The floating menu can be clicked and used in any channel, you can quickly launch the applications in the menu, or you can customize and add other applications to the floating menu bar.


floating on the desktop  The icon can be moved freely and displayed under any channel.

- ◆ Press the screen with 3 fingers for 3 seconds at any position, and the icon of the floating menu will automatically move to the 3-finger pressing position.
- ◆ Add: click  icon, and select the application you want to add in the pop-up menu bar. Delete: long press the icon of the application to be deleted to enter the editable state, click  The shortcut icon for the app can be deleted.

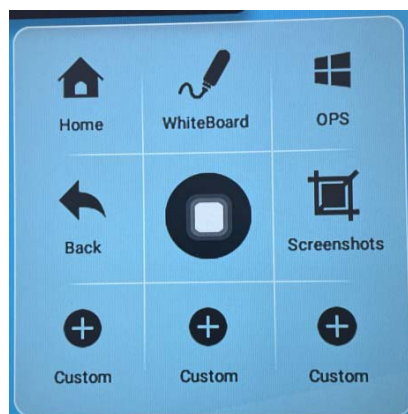


8. Whiteboard software

 
Click the writing whiteboard icon on the main



interface, The whiteboard software can be started, and the default brush tool of the writing whiteboard is selected, which can be directly written, and supports single-point mode and multi-point mode, and multi-point supports up to 20 points.

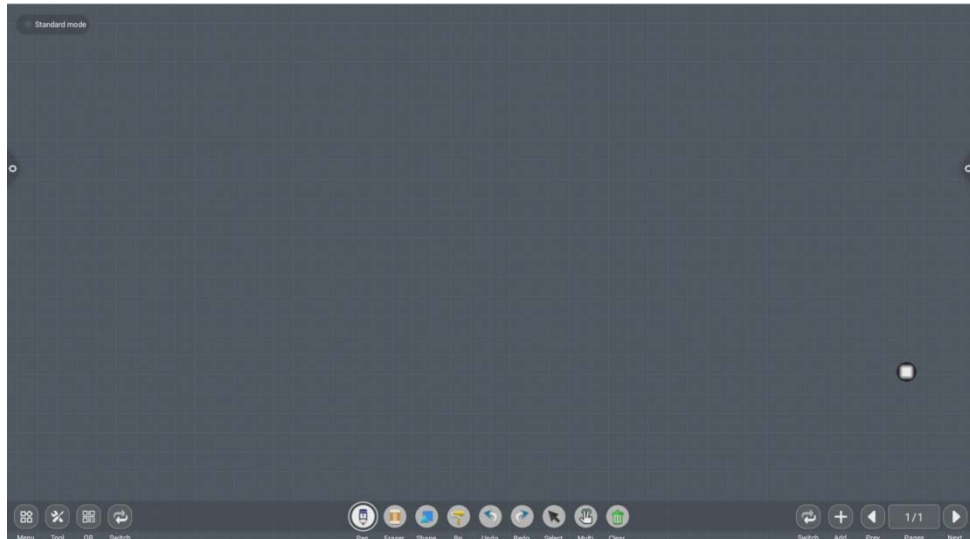


- ◆ Whiteboard content menu: Click in the lower left corner of the interface  (menu icon), pops up and displays the lower-level context menu.

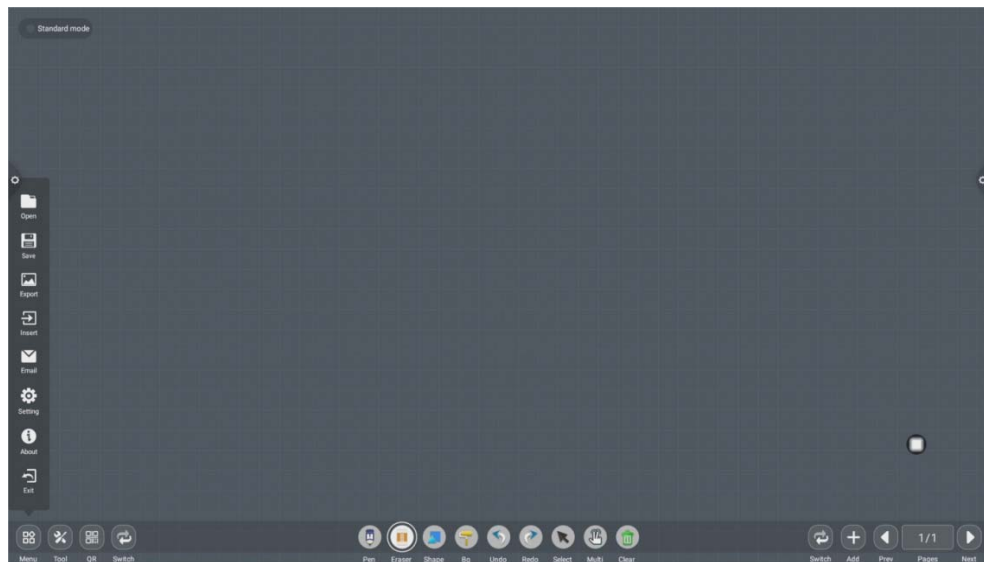

Operation description of the whiteboard content menu icon function:

- (1) Open: click  icon to open the file in the saved whiteboard file directory (the default path directory is built-in storage/Writeboard), click the file to open it directly, and perform functions such as editing and saving again.

- (2) Save: click  icon to save the content currently being written, the default time is named and saved, the user can customize the name and save, and the user can choose the built-in storage or U disk to save the whiteboard file.
- (3) Export: point  icon, export the content written on the whiteboard in the image format *.jpg, and the storage location of the exported image can be selected from the built-in storage or U disk.
- (4) Insert: point  icon, open the picture file in local storage or U disk, the user can select the picture and insert it into the whiteboard, and can mark and write the picture.
- (5) Email: click  icon, when using the email sending function, you need to set the email sender's email information on the email login interface and log in; after logging in successfully, enter the recipient's email address to send the whiteboard record, and the sending format is a PDF file.

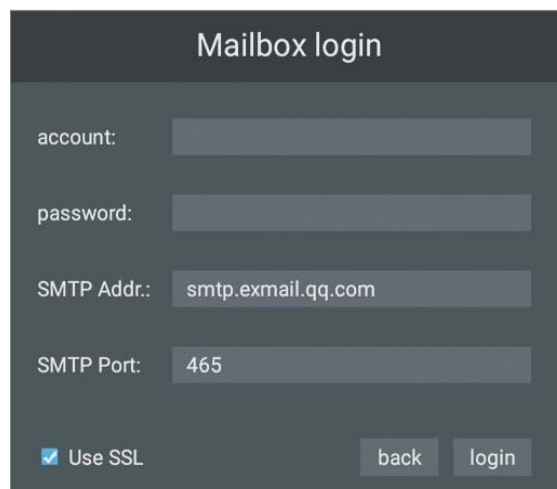

The image shows a 'Mailbox login' form with a dark background. It contains four input fields: 'account:', 'password:', 'SMTP Addr:', and 'SMTP Port:'. The 'SMTP Addr:' field has the value 'smtp.exmail.qq.com' and the 'SMTP Port:' field has the value '465'. At the bottom left, there is a checkbox labeled 'Use SSL' which is checked. At the bottom right, there are two buttons: 'back' and 'login'.


- (6) Exit: click  icon, when the whiteboard has content, a pop-up prompt will pop up when exiting the whiteboard: the whiteboard has not been saved, do you want to save the whiteboard and then exit the whiteboard? Function operation is performed according to whether or not; if there is no content on the whiteboard, click Exit Whiteboard to exit.
- ◆ Scan code to share: click  icon, select the sharing type, and when the network is connected, a QR code window can be generated, and the current

meeting record can be scanned and taken away through the WeChat scan function;
QR code sharing is divided into current page sharing and all sharing.



- ◆ As shown in the figure above, after the QR code is generated, you can click the lock icon to activate the QR code lock mode, and the password is displayed next to it. After scanning the QR code, you must enter the password to view the file; you can also scan the code directly. Share without lock.

Common tool functions:

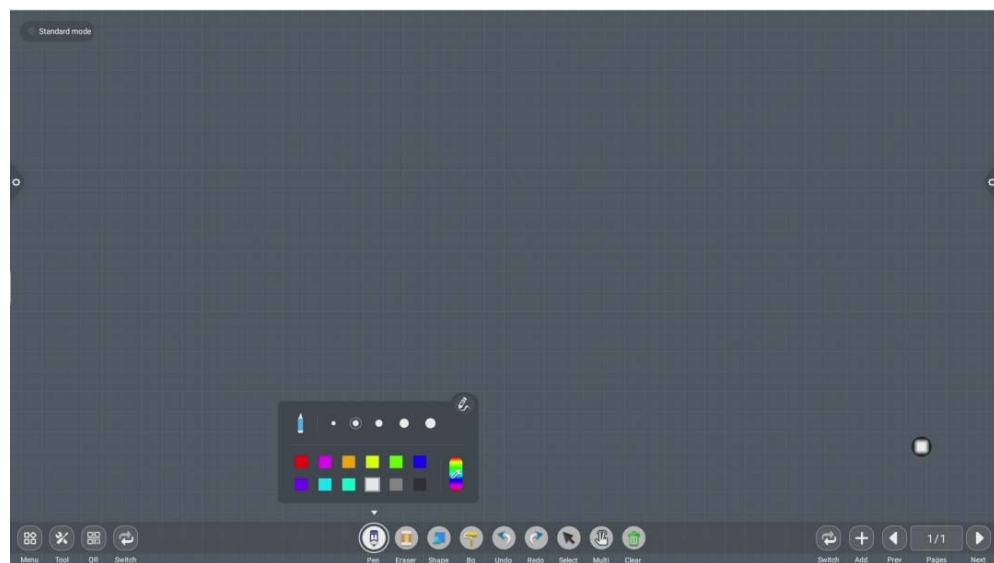

- (1) Click  icon to enter the brush tool selection interface, where you can select the brush thickness and color.

- (2) Click  icon to enter the eraser selection interface, you can choose to click and circle: 



- (3) Click  icon to enter the background replacement interface, you can choose different whiteboard backgrounds.



- (4) Click  icon to undo the previous operation, up to 50 steps can be undone at a time.



 
- (5) Click  icon to re-execute the undone operation, up to 50 steps can be restored at a time.

 


- (6) Click  icon, the interface is switched from the writing mode to the selection mode, and the handwriting and shape in the whiteboard can be selected, and then functions such as moving, deleting, rotating, and zooming can be realized.




- (7) Click  The icon can be switched in single-point/multi-point mode. In single-point mode, it supports multi-point movement, zooming and other functions; in multi-point mode, it supports simultaneous writing with multiple pens.



- (8) Click  icon to bring up the slider , manual  Swipe the icon to the right to clear the current screen writing.



 - (9) Click  icon, realize the left and right switching function, put more



function icons, scan codes, switch function icons     With up and


down page icons, page number preview icons, and page add function



icons      Switch the left and right positions.



- (10) Click  icon to enter the page preview pop-up interface, where you can preview, add, and delete content on multiple pages.

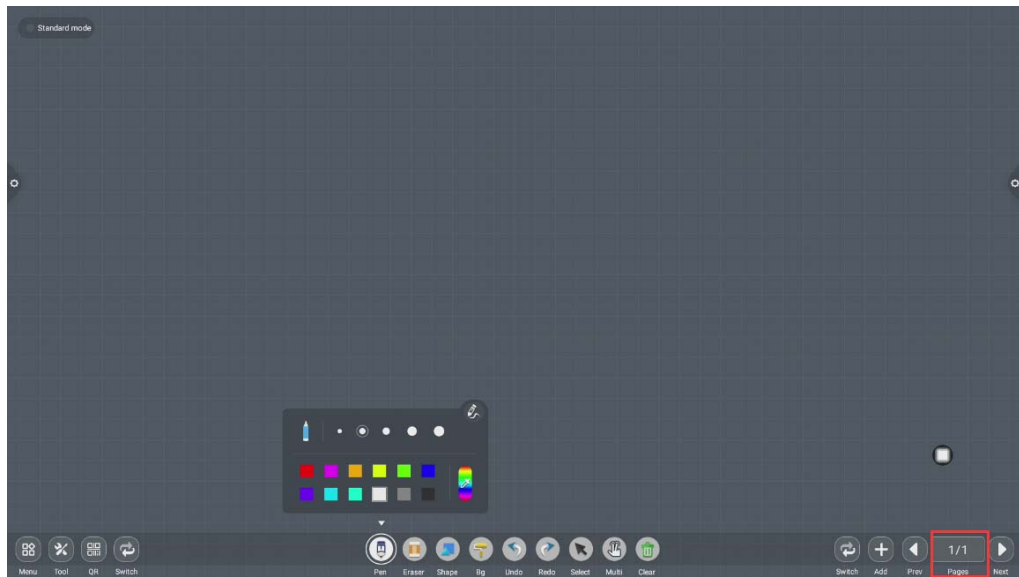

9、 Simple troubleshooting

1. Interactive flat panel does not work properly

Remote control malfunction	1. Check whether there is any obstruction between the remote control and the receiver of the machine.
	2. Check if the battery in remote control is installed or needs to be replaced.
	3. Check whether the remote control is operated within the receiving range of machine.
Display no signal	1. Check whether the connection of the signal input device to the machine is correct.
	2. Check whether the signal source of the machine is correct.
Automatic shutdown	1. Check whether the power cord is in good contact.
	2. Check if sleep mode is set.
	3. Check if there is no signal input.
	4. Check whether the backlight is turned off by mispressing the button.

2. Built-in PC display abnormal

The image is not full or out	1. Check if the resolution is the best resolution.
	2. Check whether the image zoom mode is correct.

of range	
image is missing or the color is wrong	1. Check whether the cable is not connected well or the cable is damaged.
	2. Check whether the image mode in the menu is the default.
	3. Check whether the PC display output settings are correct.

3. Touch function abnormal

Invalid touch	1. Restart PC and confirm whether the touch function can be restored.
	2. When touching the external PC, confirm whether PC recognizes the touch device and the driver is installed correctly.
Touch pointjump	1. Check whether the installation of blackboard is flat and not inclined.
	2. Check whether the power is properly grounded.

4. Audio function abnormal

There is image but no sound	1. Check if the machine is in silent mode.
	2. Increase the volume.
	3. Check if the audio cable is connected properly.
	4. Check whether the sound output of PC's sound card is correct.
Only one side speaker has sound	1. Adjust the sound balance in the menu.
	2. Check whether the PC sound control panel has only one channel set.

10、Daily maintenance

Proper maintenance can prevent many early failures, regular cleaning can avoid affecting operation, while avoid affecting the display and perfect appearance.

1. Clean screen

- ◆ Use soft cloth to gently wipe dust and other objects on the screen glass.

- ◆ Avoid repeated wiping with sharp tools to scratches or damage the screen glass.
- ◆ If it is difficult to wipe off the objects with dry cloth, users can dip the cloth in a small amount of water, neutral detergent and glass cleaner, and prohibit the use of organic solvents.
- ◆ Be careful not to squeeze water out into the machine.

2. Clean the frame

- ◆ Use a dry and soft cloth to wipe the front frame and pay attention to inspection to prevent the front it from being scratched by objects.
- ◆ Clean the place where the glass around the touch panel and the front frame are combined, avoid accumulation of dust or other objects.

3. When the panel is not used for a long time, please unplug the power and remove the batteries of remote control.

Environmental Precautions and Instructions

Protecting environment is the responsibility and obligation of every society member. Please pay attention to the following matters when using this product.

1. Energy saving: It is not only a need to protect environment, but also save you electricity bills.
2. Period of environmentally friendly use and hazardous substances.

The "Environmental Use Period" on the product and remote control is shown on the left. They are 10 years. The environmental protection use period of replaceable parts such as batteries may be different from The "Environmental Protection Use Period" is valid only the product is used in the normal environment described in the manual.

3. Product recycling and reuse

The product adopts design scheme that is conducive to the rational use of resources and harmless treatment. Under the existing technology, it uses as far as possible non-toxic, harmless (or low-toxic and low-harm) and easy-to-recycle materials. Company guarantees to provide replaceable parts that meet the standards and environmental protection requirements. If the product needs to be repaired or replaced, please contact our after-sales service department.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.