



REPLACING PROPELLERS

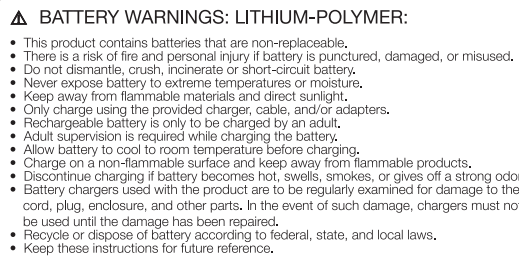


- ### BATTERY WARNINGS: ALKALINE
- Do not mix old and new batteries.
 - Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries.
 - Alkaline batteries are recommended. Use only the specified voltage.
 - Insert batteries using the correct polarity. Always use, replace, and recharge (if applicable) batteries under adult supervision.
 - Do not attempt to charge non-rechargeable batteries.
 - Do not short-circuit the battery supply terminals.
 - Do not dispose of batteries in fire: batteries may explode or leak.
 - Remove batteries before sleeping.
 - Recycle or dispose of batteries according to federal, state, and local laws.
 - Keep these instructions for future reference.

-
- This schematic diagram illustrates the anatomical relationships between the head/neck, shoulder, and arm. It shows three main components: a head/neck section on the left, a central torso/shoulder section, and an arm section on the right. The head/neck section is labeled with 'B' at its base. The central section features a vertical column of vertebrae. The arm section is labeled with 'A' at its base. Lines connect these sections to show their relative positions and movements.

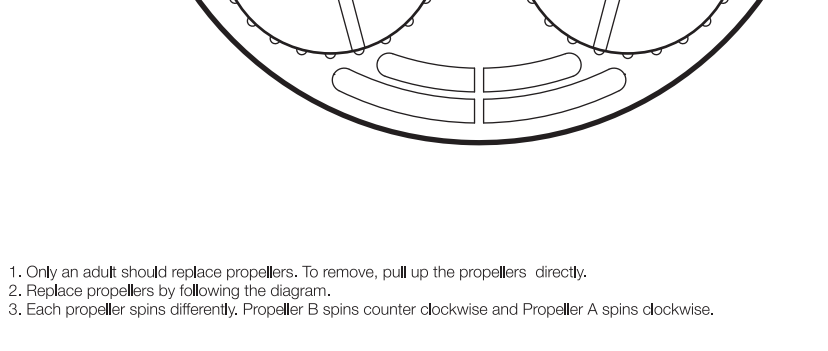


1. Only an adult should replace propellers. To remove, pull up the propellers directly.
2. Replace propellers by following the diagram.
3. Each propeller spins differently. Propeller B spins counter clockwise and Propeller A spins clockwise.

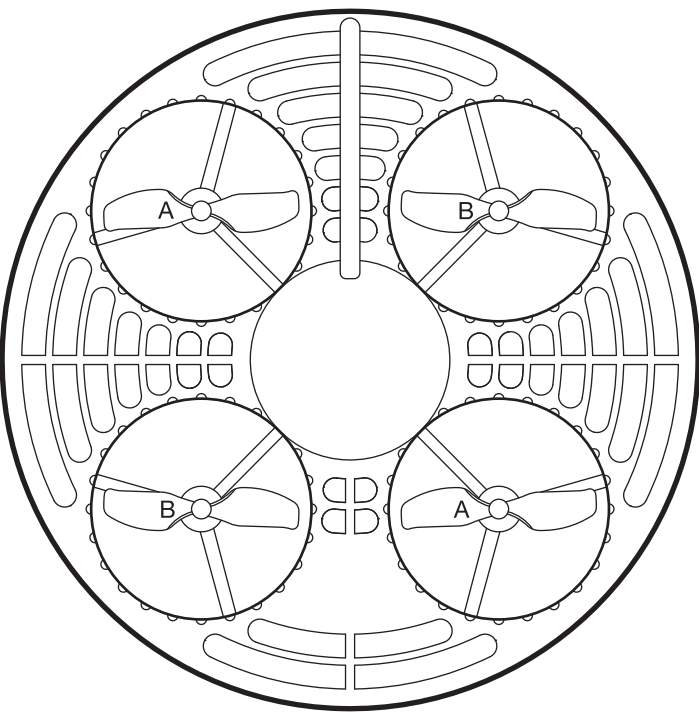


1. Only an adult should replace propellers. To remove, pull up the propellers directly.
2. Replace propellers by following the diagram.
3. Each propeller spins differently. Propeller B spins counter clockwise and Propeller A spins clockwise.

CONTENTS

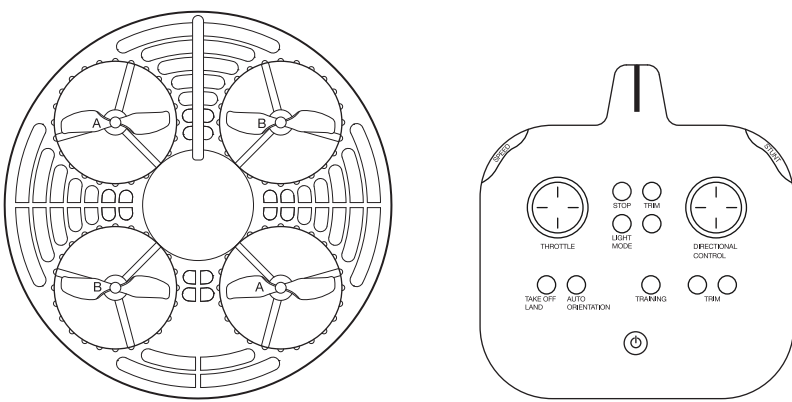

Drone Remote

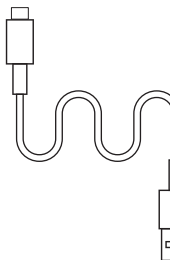

USB Charging Cable

OTHER FEATURES

Auto Orientation

Training Mode

The diagram shows a control panel with four main buttons arranged in a 2x2 grid. The top-left button is labeled 'THROTTLE' and has a circular gauge with a needle pointing to the right. The top-right button is labeled 'STOP' and 'THRUST' and has two small circles above it. The bottom-left button is labeled 'LIGHT MODE' and has two small circles above it. The bottom-right button is labeled 'DIRECTIONAL CONTROL' and has a circular gauge with a needle pointing to the left. The panel is framed by a decorative border with the words 'STOP' and 'THRUST' on the left and right sides respectively.

Move both joysticks diagonally in toward the middle of the remote. At the same time, position both control sticks at a 45-degree angle as shown in the image above.

1. Do not crash drone into sand or dirt. Drone gears may become clogged.
2. When first learning to pilot the drone, practice lifting off and hovering indoors.
3. Stay several feet from walls and objects.

1. Do not crash drone into sand or dirt. Drone gears may become clogged.
2. When first learning to pilot the drone, practice lifting off and hovering indoors.
3. Stay several feet from walls and objects.

GENERAL WARNINGS

[illegible]

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

WARNING: Changing or modifying this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used according to the instructions, may cause harmful interference to radio communications; however, there is no guarantee that interference will not occur in a particular installation.

Note: This equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on.

Fly-aways are the responsibility of the individual pilot and will not be replaced by the manufacturer.

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference.

WARFNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Page 2
Page 3
Page 4
Page 5
Page 6
Page 7
Page 8
Page 9

BEFORE USE, READ ALL WARNINGS AND INSTRUCTIONS IN THIS MANUAL.

FAO® and FAO Schwarz® names and logos are trademarks or registered trademarks. Distributed by and © 2022 MerchSource, LLC, Irvine, CA 92618. All Right Reserved.

For customer support please call 1-800-374-2744.

The artwork and design of this manual are protected by US copyright law and may not be reproduced, distributed, displayed, published, or used for any purpose without prior written permission. It is not permitted to alter, remove, or reproduce any trademarks, or copyright notice from this manual.

Model Number: 1015713

Printed in China

Due to continuous product improvements, illustrations in this manual may differ slightly from the actual product.

! Adult Assembly Required

⚠ WARNING:
CHOKING HAZARD - Small Parts.
Not for children under 3 years.