## User Manual

No liability for loss of password or other personal information caused by the use of illegal software or other damages.

Lock the SIM card or USIM card

You can lock the phone by starting the PIN provided with the SIM card or USIM card.

In the main mean unterface, and then select Settings -> Security -> Set SIM card lock mode -> Lock SIM card.

Enter the PIN code and choose 0K.

If you start the PIN lock you must enter the PIN code each time you turn on the phone.

If the PIN code is entered incorrectly three times, the SIM card or USIM card will be locked. You must enter the PIN unlock key (PUK) to unlock the SIM card or USIM card is locked due to an incorrect PUK input, bring the card to the service provider for unlocking.

dial
Learn how to use call features, such as making and receiving calls via available options during a call, or customizing and using call-related features.
call records
You can view call records filtered by type.
1. In the standby mode, tap the dial key to enter the dialing interface and call log interface.
2. In the call log interface, you can call by phone type.
3. Select the record for which you want to view the details of your call.

additional charges. For more information, please contact yourservice provider

Dislipad

Click the icon in the lower left corner of the main interface to collapse or eject the dial pad to operate the contact of the call log.

Each time a contact number is dialed, the contact is automatically added to the call log page.

Function menu Include contacts, speed dial, set options.

Learn how to create and send text messages (SMS) or MMS (AMS), and view and manage messages that have been sent or received. Sending or receiving information outside the local service area may incur

Listen to the radio program on the radio and record your favorite while listening. Before using the FM radio, be sure to connect the supplied headset (beadset as a radio antenna).

Note: support shutdown alarm clock.

Browser

The browser achieves faster Internet access, safer web navigation, mors convenient mobile Internet and more enhancements. High rate download, skinning, full screen browsing and so on. The browser is not only easy to use, but also powerful.

File management

Learn to quickly and easily open all your pictures, videos, music, documents, and other kinds of

mobile phone storage information in addition to MP3, MP4 and picture files, the system files please do not move and delete:
 It is recommended to install the APK installation package that comes with the mobile phone storage. If you install the APK package, you

recorder

Help you quickly save voice records, you can set your favorite sound quality and recording mode, clock

You can set the alarm clock, view the world time, use the timerand stopwatch function.

Note: support shutdown alarm clock.

music
Learn how to use your music player to listen to your favorite music.

Depending on the phone software, some file formats are not supported.

If the file size exceeds the available storage space, an error occurs when opening the file, add music Transfer music files to your phone:

Download from Web
Copy through data lines transmitted via Bluetooth
Album
Learn howto view pictures on your memory card and play videos. 7S using Android 6.0 system, GSM network, support WIFI. The machine uses a simple and easy to use Interface, but also allows you

Do not use any tool root of the phone, otherwise there may be unrecoverable failure, root phone does not enjoy the warranty!
Please read the Instruction amoual carefully before use.
Introduction to this manual
This practical description describes how to use the phone's concise information, such as the basic practical way to quickly grasp the pk

7S is a mobile phone based on android operating system, stylish design, high-quality manufacturing process, multi-touch capacitive

please Refer to "Understanding the phone". Safety Precautions

Smitty recautions

In order to use your phone safely and effectively, please read the following information carefully before using it. Safe boot

Safe boot
Do not use your phone when you are using a mobile phone or if you are using a mobile phone to cause interference or danger.
Traffic safety first Do not use your phone when driving to avoid driving safety.
In the restricted area to shut down
Please comply with the relevant restrictions or regulations. On the plane, or in the vicinity of flammable materials, chemicals or medical
equipment should be shut down.
interference Mobile communications may be subject to radio Interference, which may affect performance, waterproof

2

The phone is placed in a place where children can not touch

The phone is placed in a place where children can not touch
The phone and all of its accessories (including accessories) should be placed in places where children can not touch. Professional series
Do not disassemble your phone and accessories without authorization. Only authorized organizations can service your phone.

Install the SIM card or ISIM card
PIN and optional service. To use the 36 / 26 (WCDMA / GSM) service, you can purchase a Universal User Identification Modale (USIM) card.

In If the phone is on, press and hold the [Switch key] and select Shutdown to turn it off.

The phone is a card tray on the left of the phone, be careful not to hurt your nails.

3. Insert the SIM card or USIM card.

What the SIM card for USIM card.

What the SIM card for USIM card.

What the SIM card for USIM card.

What card face down and insert it into the card tray.

3. Insert the SIM card or USIN card face down and insert it into the card tray.

If you do not insert a SIM card or USIN card, you can only use the phone's non-network service and some function tables.

4. Please insert card tray with SIM card in to phone, and then press the [switch key] to boot.

touch screen, capacitive touch button, allowing you to enjoy a comfortable experience

Charge the battery
The battery must be charged before using the phone for the first time. You can use the travel charger or through the computer data cable
to connect the phone to the computer to charge the phone.
When the battery is low, the phone will send a warning tone and display the battery shortage message. If the battery is too low, the phone
will automatically shut down. Need to charge the battery before you can continue to use the phone.
Charging with travel charger

Insert the small end plug of the travel charger into the multifunction jack. Improper connection to the travel charger may cause serious

age to the phone, for any damage caused by misuse, will not be warranty

e-mail

Send or receive an email from your phone by configuring your personal or corporate email account.

You can view, delete video filesand sort video.

Learn how to create and manage a list of personal or corporate contacts stored on your phone's memory or on a SIM card or USIM card. You can

files stored in your phone store.

I. Insert the big end plug of the travel charger Into the power outlet.

can use the phone when charging, but this will extend the battery to complete the charging time;

When the phone will be charged when the fever, the phenomenon is normal, will not affect the phone's life or performance;

If the phone can not charge properly, please got the phone to the customerservicecentercheck.

When the battery is fully charged, disconnect the travel charger from the phone and unplug it from the power outlet, charge with computer

Before charging, make sure the computer is turned or

Plug one end of the computer data cable (mini USB) into the multi-function jack.

Connect the other end ofthe computer data cable to the computer's USB port Depending on the type of computer data cable used, it may 2. Connect the other end of the computer data cable to the computer's USB port Depending on the type of computer data cable used, it may take a while to start charging.

3. When the battery is fully charged, disconnect the computer data cable from the phone and unplug it from the computer. formst SD card storage

In the main menu, select Settings -\* Save f Save Info — Format SD Storage.

Before formatting the SD card, remember to back up all the important data stored in the phone. The manufacturer warranty service does not include data loss due to user operation.

Become of whiteners.

Boot and shutdown If you want to boot, long press [switch key] phone will boot.

To turn offthe machine, long press [switch key] and then choose to shut down.

In areas that prohibit the use of wireless devices (such as airplanes and hospitals), please follow all posted warnings and official instructions. If you want to use only the phone's non-network services, you can switch to flight mode. Pull

Learn how to perform mathematical calculations directly on your phone, like a regular handheld or desktop calculator, when you switch to a

Scientific Catalanama.

Setup
WLAN

Set the Status of the WLAN, network notification, add the network and soon

Bluetooth

Set the Bluetooth status, search for Bluetooth devices, and modify the Bluetooth name.

SIM card

SIM card management: This function can choose to turn off or open the SIM card; select the data connection and International reaming isopen: Flight mode: You can disable all language services.

Default SMS Application: Set the default SMS application

Network and sharing and portable hotspots: you can use WIAN hotspot, USB shared network, Bluetooth shared network, network sharing and portable hotspot settings

VPN: You can add VPN profiles. Mobile network: set up data connection, 3G service, preferences and so on.

Set the functions related to the phone display, such as the screen stand by time, automatically rotate the screen, interactive screensaver,

Souma ann notice
Set the phone mode. Default mode: standard, mute, conference, outdoor mode.
Set the phone ringtones, ring tones, and volume, etc., can also setthe custom profile mode.

application Locally manage the application and change the administrative settings for the Installed application. Safety

Show Password: Turn the display password on and off.

Device Manager: View or deactivate Device Manager.

Unknown Source: Whether to allow the installation of a source application, it can be turned on and c
Self-starting management: Enables or disables application startup
Apply permissions: Manage application permissions are guaranteed security and privacy
Mobile phone theft: remote lock the phone or remote destruction of data
Storage Type: Uniplays the type of storage,
Trusted credentials: Use certificates and credentials to ensure safe use of individual applications.

Lock the SIM card: Click to lock the SIM card and enter the PIN code to turn on the locked SIM card. Change SIM PIN:

Install from phon

storage: Install the encrypted certificate stored in the phone store Clearthe credentials:

Sereen look mode: set to no, slide, pattern, PIN, password, fingerprint recognition.
Auto Lock: Select Auto Lock Time
Owner information: After editing, will be in the standby lock display your information.

Encrypted mobile phone: Please refer to its description for details. Set SIM card lock:

Enterthe original PIN and enterthe new PIN twice Show Password: Turn the display password on and off.

screen lock notification, adjust the brightness, wireless display.

View phone and SD card storage View the use of mobile phone power

down the main interface, and then select the upper right corner of the icon has flight mode, touch screen
Use the phone touch screen to make it easier to select items or perform functions.
Understand the basic operation of using the touch screen:

To avoid scratching the touch screen, do not use sharp tools.
Do not touch the touch screen with other electronic devices. Electrostatic discharge may cause the touch screen to malfunction.
Do not touch the touch screen with other electronic devices. Electrostatic discharge may cause the touch screen to malfunction.
Touch the touch screen has the effect, use the phone before you remove the touch screen touch screen. The touch screen has a layer of protective layer, you can find the human body issued a small charge. For best performance, tap the tour with your fingertips. The touch screen bors not react to the touch of a sharp tool, such as a pen or pen.
You can control the touch screen by doing the following:
Click: Use the finger to tap once to select or activate a menu, option, or application.
click and hold down: hold down the item for more than 2 seconds to pop up the list of options.
Scroll: Clickand drag: the finger up, down, left or right to move to the item in the list.
Drag and droy: Tap and hold down a roject with your finger, then drag your finger to nove the item.
Double click: When viewing a photo, use your finger to quickly click twice to zone in or out.
If you do not use the phone fora specified length of time, the phone will turn off the touch screen. To re-open the touch screen
South Parce and the backlight time. In the standby mode, then select Setup — Display f Hibernate → Sleep time
Lock or unlock the touch screen and buttons

You can also adjust the backlight time. In the standby mode, then select Setup — Display f Hibernate → Sleep time Lock or unlock the touch screen and buttons. You can lock the touch screen and buttons to prevent any accidental phone operation.
To lock, press the [Switch key]. To unlock, press the [Switch key] and then follow the on-screen instructions to manually unlock. Choose wallapper source

You can set the wallpaper from the definition of standby screen or lock screen interface (wallpaper can customize the album in the picture).

lock screen wallpaper: set the lock screen interface image

lock screen wallpaper: Set the lock screen interface image.

Deaktow Fallpaper: Set to desktop wallpaper dynamic wallpaper; you can set the dynamic wallpaper Video Wallpaper: Set the background video.

Move the item on the standby screen

Clickamdholdtheiwenyouwantcowe.

When the project vibrates, drag the item to the desired position.

Remove items from the standby screen

Click and hold down the item you want to remove, the item vibrates and the X is deleted in the upper left corner of the item.

Use the shortcut panel.

In the standby node or when using the application, touch the top of the screen icon icon area, and then drag the finger down to open the shortcut panel. You can start or cancel other features such as wireless connections and access the list of notifications, such as messages, calls, events, or processing status. To hide the list, drag the bottom border of the list up.

The processing assume, io nine the list, drag the bottom border of the list up.

You can use the following options by swiping around the shortcut icon in the shortcut panel: Wi-Fi; Turn Wi-Fi connection on or off. Click this button to enterthe Wi-Fi settings interface.

Data connection: Start or close the data connection.

Bluetooth: Turn the Bluetooth wireless connection function on or off.

flight mode: start or close the flight mode scenarios: switching between standard, mute, meeting, and outdoor modes.

a key to closup we click to need the backward and large to the start.

a key to clean up: click to end the background application, the release of some memory. Brightness: Adjusts the brightness of the screen. Power: Displays the power usage of the equipment sleep: adjust the screen automatically shut down the delay time, a key lock screen: click after the device offiscreen lock standby.

More: You can set the shortcut panel in the shortcut function and order display.

Delete the credentials in the phone and reset the password Add Account: Change the settings for the auto sync feature Manage accounts to synchronize. language and keyboard Language and input method: you can select the language, se Backup and reset ethod: you can select the language, set the keyboard, select the input method.

Date and time
Automatically determine the date and time: Use the network to provide time.
Automatically determine the time zone: Use the time zone provided by the net
Setthedate:manuallysethecurrentdate.
Setthe time: manually set the current time.
Select Time Zone: Set the local time zone.
Use 24-hour format: Set the time to display in 24-hour format.
Trains switch machine.

Timing switch machine
Setthe time for the phone to switch on and off

Connect the printer to print the desired picture and other files

Query information about the phone, such as system upgrades, status Information, legal Information, phone model, version number, processor and

other information. Frequently Asked Questions and Solution

In order to save your time and unnecessary expenses, please contact the professional after-sales service, the following simple check. Could not start the phone

Check whether or not to hold the [Switch key] key for at least 1 second. Check the battery Is bad, please remove and then re-install, try to boot. Check if the battery is exhausted. Please charge it.

ne application
access the phone's application:
rn on the phone lock.
roll left and right to the other application screens
lect the startup program:
ss the middle button to return to the startup program.

Access the application

elect the startup program:
ress the middle button to return to the main standby screen.
The phone has a built-in motion sensorthat detects the direction of the phone. If you rotate your phone while using some features, the phone near a built-in motion sensorthat detects the direction of the phone. If you rotate your phone while using some features, the phone near a built-in motion sensorthat detects the screen.
The phone has a built-in motion sensorthat detects the success that the phone is the phone of the phone of the phone of the phone is the phone of the phone of the phone of the phone is the phone of the Widgets

widgets From the standby click on the Menu button, select Add widget, select any ofthe widgets to press and drag to stan

From the standary click on the sense decision, accounts and desired process.

Custosize your phone
Custosize your phone according to your personal preferences: themes and desktop screens.

Set the current time and date
At the main menu interface, then select Settings Date and Time.

Setthe time and date and change other options.

Turn the touch tone on or off
In the main menu interface, and then select Settings f Sound and Notification -\* Standard — Click the right setting — select the touch tone.

Adjust the volume ofthe ringtone

Pross the up or down volume button to adjust the ringer volume.

shortcuts panel situation mode directly switch

In the standby mode, press and hold the [Switch key], then select the vibration mode.
change ringtones

In the main menu interface, then select Settings -\* Sound and Notification -\* Standard f Point Right Settings -\* Phone Ringtone / Black
Tells the beep / message ringtone. Select the ringtone from the list and select OK.
Choose the wallpaper of the standby screen

In the standby mode, press the menu button f wallpaper f select the type of wallpaper you want to set

In the standby mode, press the mean botton r wallpaper's select the type of wallpaper you want to Adjust the brightness of the display Adjust the screen brightness under the setup men:

Aljust the screen brightness under the setup men:

In the main mean interface, select Settings Display f Brightness.

Turn off the button on the auto-adjust brightness.

Drag the slider to adjust the brightness level.

The brightness level of the display affects the speed at which the phone consumes battery power.

Set the unlock pattern
You can settle unlock pattern to prevent unauthorized use of your phone.

1. In the main menu interface, and then select Settlings-Security -\* Screen Lock -\* Pattern.

2. Watch the screen prompt and sample pattern and select Next (if necessary).

3. Drag your finger to connect at least four points to draw the pattern.

4. Choose Continue.

5. Re-draw the pattern to confirm.

6. Choose MG.

6. Choose MG.

Lindows Wa.

After setting the unlock pattern, you will need to enter the unlock pattern every time you turn on the power. If you want your phone to larger require an unlock pattern, select Settings — Security — Screen Lock —\* Draw a lock pattern f Nome.

Et you forget to unlock the screen will not be locked.

If you forget to unlock the pattern, you need to bring the phone to its customer service center to unlock it.

SARRATE LEVEL

FCC Statement
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These
limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates,
uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference
to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment
does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is
encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the deeler or an experienced radio/TV technician for help.

Connect the equipment into an outset on a circuit with the state of th

evice has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction. Pheefic Absorption Rate (SAM) information: This Mini smart phone meets the government's requirements for exposure to radio waves. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons regardless of age or health. FCC RF Exposure Information and Statement the SAM limit of ISA (PCC) is 1.6 W/kg averaged over one gram of tissue. Device types: Mini smart phone has also been tested against this SAM limit (Mac SAMC SAW(Mg.)). This device was tested for typical body-wron operation with the back of the phone kept 10mm from the body. To maintain compliance with PCC RF exposure requirements, use accessories that maintain anlOmm separation distance between the user's body and the back of the phone. The use of bett clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with PCC RF exposure requirements, and should be avaided.

Start the phone, there Is information display Enterthe phone lock password, select the automatic lock function, you must enter the phone password before use. Enterthe PIN code, select the time each time you enterthe PIN function, you must enterthe PIN code

Enter the PUK code: connect the wrong input PIN three times, will lock the SIM card, should enter the operator to provide the PUK code

SIM card metal surface dirt, with a clean cloth to clean the SIM card metal contact points.

The SIM card is not installed and the SIM card is installed correctly according to the instruction manual.

aged, contact your network service provider se move to the strong signal to try again

Beyond the network coverage area of the network service provider.

Invalid SIM card to contact your network provider. Invalid SIM card to contact your network provider.

Number can not exhale

Make sure that the dial key is pressed after dialing.

Please confirm whether the call is forbidden due to arrears.

Make sure the SIM card is valid.

Make sure that the call barring feature is set.

Make sure that the fixed dialing feature is set.

Poor cal I quality

Please check if the volume adjustment is inappropriate.

In the reception of bad areas using mobile phones, such as high buildings nearthe basement, radio

In the call-intensive period of use of mobile phones, such as commuting time, line congestion caused by no call. Number can not be called Make sure the phone is turned on and connected to the network. Please confirm whether it is forbidden to enter due to arrears.

Make sure the SIM card is valid. Make sure that the call barring feature is set. Contacts can not hear you Make sure the micropho ne Is or

Make sure the microphone Is on.

Please keep the phone below the microphone near your mouth.

Standby time is short

The standby time is related to the system settings of the network and may be in poorly received areas. When the signal is not received, the phone will continue to transmit to find the base station, consume a lot of battery power, resulting in shorter standby time. Please move to a strong signal to use or temporarily turn off the phone.

Need to replace the battery, please replace the new battery.

Can not be charged

Poor contact, check whether the plug is connected.

Contaminated, wipe the phone and battery terminals with a soft, clean cloth. roor contact, cneck whether the plug is connected.

Contaminated, wige the phone and battery terminals with a soft, clean cloth.

When charging in an environment below 0° C or above 45° C, change the charging enviror.

The battery or charger is damaged and needs to be replaced.

SAR rate is 2.0W/kg, suitable for National Standard : GB21288-2007