



## A28 Instruction manual

### Product parameter

- Bluetooth version: V5.4+BR+EDR
- Support protocol: A2DP\AVCTP\AVDTP\ AVRCP\HFP\HID
- Transmission distance: > 10m
- Audio coding: AAC, SBC
- Charging port: Type-C
- input voltage current: DC5V ≈ 0.2 A
- Current, output voltage: DC5V ≈ 0.2 A
- Playback time: about 4 hours for a single playback of 70% volume, about 10 hours with a charging case
- Call duration: > 3 hours
- Charging time: about 1 hour
- Power box charging: about 1.5 hours

### Product operation instruction

#### On/Off

- Open the charging case and take out the earphones, which will turn on automatically
- The earphone is off outside the box. Long press the function button for 3 seconds to turn it on
- Put it in the charging case and turn it off
- Press and hold for 5s to power off
- Disconnected devices automatically shut down after 5 minutes

#### Bluetooth connection

- Turn on your device's Bluetooth, search for "A28" and select Connect
- When the device is turned on for the first time, it will automatically enter the Bluetooth pairing state. The white and ice blue lights on the main ear will flicker alternately, and the secondary ear lights will be off
- When the device is turned on again, the headset will automatically connect back to the last device. If the connection fails, the headset will automatically enter the pairing mode

<b>Touch function</b>	<b>Matters needing attention</b>	<b>FCC Statement</b> Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: —Reorient or relocate the receiving antenna. —Increase the separation between the equipment and receiver. —Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. —Consult the dealer or an experienced radio/TV technician for help. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. The device has evaluated to meet general RF exposure requirement. The device can be used be in portable exposure without restriction.
Pause/Play Click the left and right function keys Next track Triple the right function key Previous piece Triple the left function key Volume up Double-click the right function key Volume down Double-click the left function key Voice assistant Long press left/right for 2 seconds Answer a call Click any function key Hang up Long press left/right for 2 seconds Reject a call Long press left/right for 2 seconds Cancel dialing Click any function key  Note: When using in one ear, double-click to add volume; Three clicks for the next song <b>charge</b>  • When the Type-C data cable is inserted into the charging port, the digital tube flashes at the end and lights up after full charge • When charging the earphone, the L/R corresponding to the charging case will be long on and off after 10 seconds of full charge. When the earphone is charging, the white light of the earphone will be steady on. When the earphone is fully charged, all lights will be off	<ul style="list-style-type: none"> <li>The earphone and charging bin are used for about a week. Clean the earphone and charging bin's thimble with cotton swabs or rag to prevent dirt on the thimble and avoid bad charging contact</li> <li>When not in use, please put the earphones back in the charging case to prevent loss and timely charge the earphones.</li> <li>Before cleaning and maintenance, stop using the device, shut down all applications, and disconnect all connections or cables from other devices.</li> <li>Use a clean, dry, soft cloth to wipe the device or its accessories.</li> <li>If the product with lithium battery is not used for a long time, make sure to charge it at least once every three months</li> <li>Keep the device and its accessories dry. Do not use external heating devices such as microwave ovens or hair dryers to dry them.</li> <li>Do not place the device or its accessories in an area where the temperature is too high or too low. Otherwise, the device may fail, catch fire, or explode.</li> <li>Do not use strong chemicals, cleaning agents, or strong detergents to clean the equipment or its accessories.</li> </ul>	