



A38 WIRELESS EARBUDS

Instruction manual

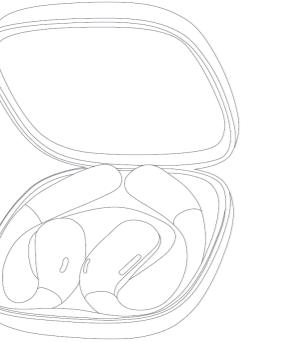

Overview

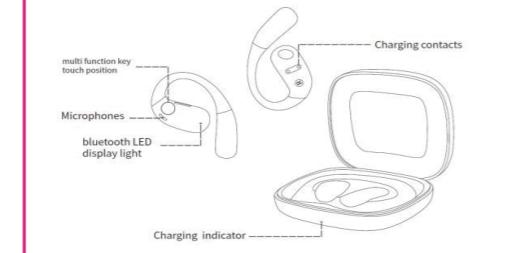

Packing list



On/Off

- The headset is in the box. Take out the headset and turn it on automatically
- The headset is turned off outside the case, and long press the function key for 3 seconds to turn it on
- Put it in the charging case and turn it off
- In the startup state, hold down 5S to power off
- Low power, unconnected devices automatically shut down

Bluetooth connection



- Turn on the device, search for "A38" and select Connect
- When the device is powered on for the first time, it automatically enters the Bluetooth pairing state
- When the device is turned on again, the headset automatically connects back to the previous device. After the connection fails, the headset automatically enters the pairing mode

Touch function

Pause/Play	Click the function key
Next song	Triple-click the right function key
Previous song	Triple-click the left function key
Volume up	Double-click the right ear function key
Volume down	Double-click the left ear function key
Voice assistant	Press and hold the left function button for 3 seconds
Game/Music mode	Press and hold the right function button for 3 seconds
Answer/End the call	Click the function key
Reject a call	Press and hold the function button for 1.5 seconds
Undial	Click the function key during the dialing process

Note:

- When using one ear, the operation is the right ear.
- If the left and right earbuds are not paired, turn on the device and disconnect it from the device, quickly click the function button on the left and right earbuds, put it into the charging case, and take it out to re-pair.

Basic parameters

Audio encoding: AAC, SBC
Bluetooth version: V5.4
Communication distance: 10 meters
Single play time: 7 hours
Battery life with charging case: 25 hours

Battery capacity: 50mAh for earphones, 400mAh for charging case
Charging case rated input: DC5V~0.3A
Charging case rated output: DC5V~0.2A
Charging time of the charging case: 2H
Earphone charging time: 1.5H

Maintenance and upkeep

- When the earbuds are not in use, please put the earbuds back into the charging case to prevent loss and charge the earbuds in time.
- Before cleaning and maintenance, stop using this device, turn off all apps, and disconnect all connections or cables to other devices.
- Please use a clean, dry, soft cloth to wipe down the device or its accessories.
- If the product with a lithium battery is not used for a long time, please make sure to charge it at least once every three months.

Safety instructions

Before using and operating the equipment, please read and follow the following precautions to ensure optimal performance of the equipment and to avoid dangerous or illegal situations.

- Electronic equipment: Do not use this equipment in places where the use of wireless devices is expressly prohibited, otherwise it will interfere with other electronic devices or cause other dangers.
- Impact on medical devices: The radio waves generated by the device may affect the normal operation of implantable medical devices or personal medical devices, such as pacemakers, cochlear implants, hearing aids, etc. If you use any of these medical devices, check with their manufacturers about restrictions on using this device.
- Hearing protection: When you use headphones to listen to music or calls, it is recommended to use the minimum volume required for the music or call to avoid hearing damage. Prolonged exposure to high volume levels may cause permanent hearing damage.
- Traffic safety: Exposure to high volume levels while driving can be distracting, which can lead to accidents. Please comply with the relevant regulations of your country or region, and do not use this product while driving.
- Children's Health: This device and its accessories may contain some small parts, please keep the device and its

accessories out of the reach of children. Children may inadvertently damage this appliance and its accessories, or swallow small parts that cause suffocation or other hazards. This device is not a toy and children should use the device under adult supervision.

- Please keep the device and its accessories dry. Do not use an external heating device such as a microwave oven or hair dryer to dry it.
- Do not place the device and its accessories in areas where the temperature is too high or too low, as this may cause the device to malfunction, catch fire, or explode.
- Do not knock, throw, trample, squeeze or throw into fire, do not use if bulging occurs.
- Do not use strong chemicals, detergents, or strong detergents to clean the appliance or its accessories.
- Do not touch the magnetic stripe card (such as bank card, phone card, etc.) to this device for a long time, otherwise the magnetic stripe card may be damaged by the magnetic field.
- Please do not disassemble or modify the equipment and its accessories without authorization, otherwise the equipment and accessories will not be covered by the company's warranty, please contact the authorized service center in case of equipment failure.

FCC Statement

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
—Reorient or relocate the receiving antenna.
—Increase the separation between the equipment and receiver.
—Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
—Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The device has evaluated to meet general RF exposure requirement. The device can be used in portable exposure without restriction.