 


Quick Start Guide
Laptop
GW2-W116

 
In The Box



11.6 Inch Laptop

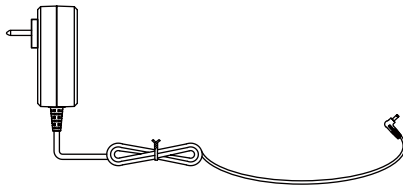


Adapter

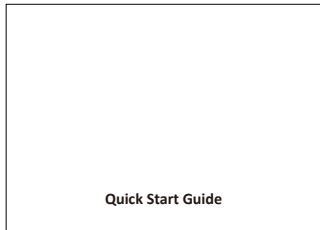

Quick Start Guide

 QSG

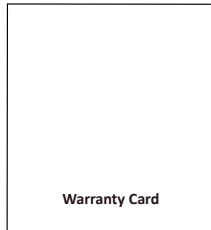


Warranty Card


Warranty Card

Preparing your Computer

 
Charge your device by connecting your laptop to a wall outlet with the provided adapter & Power cable.

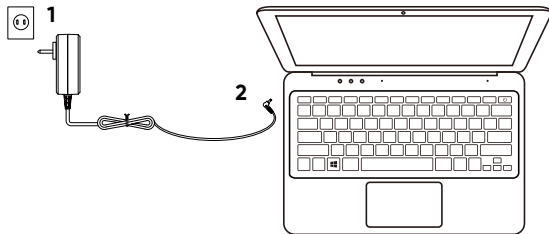


Press power button to power on .

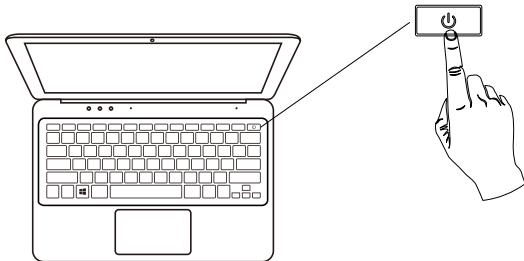 


Product Overview

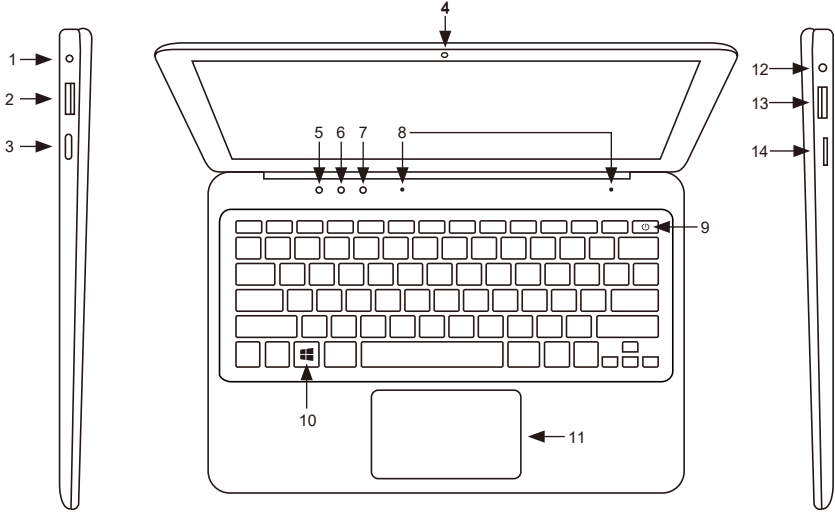 

FEATURE	FUNCTIONALITY
1. DC-In socket	Connect the supplied power adapter to charge the battery
2. USB port	Connect USB devices
3. Mini HDMI port	Connect to a second screen or television via optional Mini HDMI (Not Included)
4. Camera	Capture pictures and video
5. Power light/Charging Indicator	Indicates the battery-charge status
6. Caps Lock Indicator	Indicates when all letters are capitalised
7. Num Lock Light	Indicates that you can use the numeric keypad on the keyboard
8. Microphone	Records sounds. Provides sound input while making calls using web-based applications
9. Power Button	Turns device On/Off
10. Window  Button	Displays Start Menu
11. Precision Touchpad	Functions like a computer mouse
12. Audio/Microphone port (3.5 mm)	Connect a headset, headphones, microphone, or other audio equipment, to listen to stereo sound, record audio, or make web phone calls
13. USB port	Connect USB devices
14. Micro SD card slot	Reads and writes files stored on a MicroSD Card

 Bottom Side

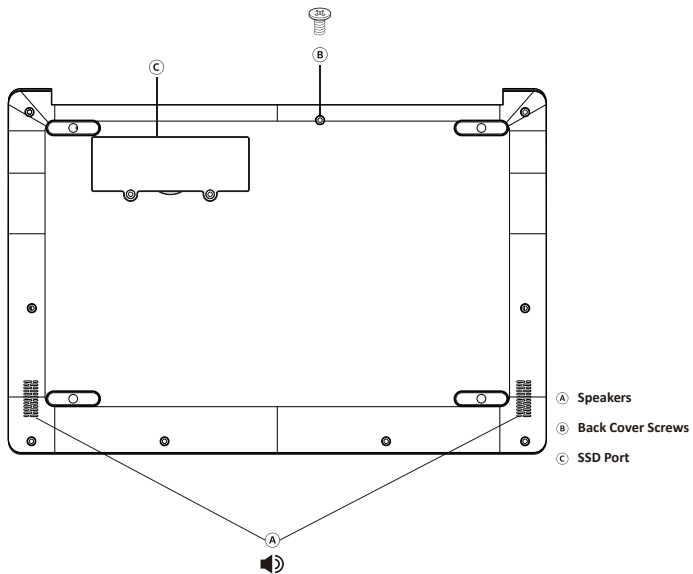





Congratulations on your purchase and welcome to Smartbook with the latest Windows 10 Home

Use your apps

Open apps





Press [] on the keyboard, or click [] on the bottom left corner of the screen to see all apps.

Open the recently used apps list


Click , you will see all the recently used apps. Tap the app you want from the list.

Action center

Click , Start setting management

-  Power
Turn the device on/off.
-  File Explorer
Search for files and applications on your PC.
-  Settings
Open device settings.
-  All apps
Scan all applications.

Connect to the Internet

1. Tap the wireless network icon [] in the right edge of the screen.
2. Turn on Wi-Fi, tap the network you want to connect to, and then tap Connect.

Warranty and limited liability

This product is sold with a limited warranty and specific remedies are available to the original purchaser in the event the product fails to conform to the limited warranty.

Manufacturer shall not be liable for any special, incidental or consequential damages, even if informed of the possibility thereof in advance.

Warnings and safety precautions

Warning

- To prevent fire or shock hazard, do not expose your device to rain or moisture.
- Do not allow the device to come in close contact with a flame.
- Do not put, store or leave your device in or near sources of heat, in direct strong sunlight, in a high temperature location, in a pressurized container or in a microwave oven.
- When using this device, obey all laws and respect local customs, privacy and legitimate rights of others, including copyrights.



Safety

Handle your device with care

- Keep your product away from any sources of humidity. Do not manipulate your device with wet hands. Any damage done to the device due to its contact with water voids your warranty.
- Do not use or store your device in dusty or dirty areas.
- Do not use or store your device in extreme temperatures.
Environmental requirements:
Operating temperature: 32° to 95° F(0° to 35° C)
Nonoperating temperature: -4° to 113° F(-20° to 45° C)
- Do not drop, knock, or shake the device. Rough handling can break it.
- Do not paint your device. Paint can prevent proper operation.

- You are responsible for knowing and obeying the laws and regulations regarding the use of wireless devices in the areas where you drive.
- Ensure that your device and its accessories do not block any air bags or other security devices fitted in your car.
- Do not use your device while walking or engaging in any activity that requires your full attention.

Avoid interference with other electronic products

- Keep the device away from magnets or magnetic fields.
- Your device radiates radio frequency (RF) signals that could interfere with the functioning of other electronic devices, such as pacemakers, hearing aids, or medical devices. Contact the manufacturer of the equipment to resolve any possible interference problems.

Small children

-



Battery and charger caution

This device is equipped with a Lithium-ion or Lithium-ion polymer battery.

- Risk of explosion if battery is replaced by an incorrect type.
- Do not pierce, open, disassemble the battery, or use it in a humid and/or corrosive environment. If a battery leaks, do not let liquid touch skin or eyes. If this happens, immediately flush the affected areas with water, or seek medical help.
- Do not expose the battery to temperatures over 45°C (113°F).
- Do not dispose of batteries in a fire as they may explode. Obey local regulations. Recycle when possible.
- Be careful to never crush or perforate the battery. Avoid exposing the battery to high external pressure which could provoke an internal short-circuit and overheating.

Avoiding hearing damage



To prevent possible hearing damage, do not listen at high volume levels for long periods.

Disposal and recycling



Correct disposal of the product

This product contains substances that are potentially dangerous to the environment and to human health. Therefore, you should hand it over to the applicable collection point for the recycling.



Correct disposal of the batteries

If your product contains a detachable battery pack, you should only dispose of it in a designated collection point for used batteries.

Troubleshooting

When I turn on my Windows Smartbook, nothing appears on the screen.

- If the screen is blank, make sure that:
 - The power adapter is connected to the smartbook and the power cord is plugged into a working electrical outlet.
 - The smartbook power is on. Press and hold the Power button for three seconds for confirmation.
 - Press and hold the Power button for seven seconds to force shut down the smartbook. Then press the power button for three seconds to restart.
- If these items are set correctly and the screen remains blank, have the smartbook serviced.

The screen goes blank while my Windows Smartbook is on.

- Your power management is enabled. Press the Power button to resume from sleep mode.

The critical low-battery error message appears, and the Windows Smartbook immediately turns off.

- The battery power is getting low. Connect the power adapter to the Windows Smartbook.

The Windows Smartbook enters sleep mode immediately after Power-on.

- Make sure that:
 - The battery is charged.
 - The operating temperature is within the acceptable range.

If the battery is charged and the temperature is within range, do the following.

1. Press the Power button for three seconds to turn on the smartbook.
 2. Press and hold the Power button for seven seconds to force shut down.
 3. Press the Power button for three seconds again to restart.
- If the problem persists, have the smartbook serviced.

The Smartbook does not return from sleep mode and it does not work.

- If the smartbook does not return from sleep mode, it might be because the battery is depleted.
- If your smartbook is in sleep mode, connect the power adapter to the smartbook. Then press the Windows button or the Power button.
- If your smartbook is powered-off, connect the power adapter to the smartbook. Then press the Power button to resume operation.

The screen is unreadable or distorted.

- Make sure that the screen resolution and color quality are correctly set.

Incorrect characters appear on the screen.

- Make sure that the operating system or programs are installed correctly.

No sound can be heard from the speaker even when the volume is turned up.

- Make sure that :
 - The Mute function is off.
 - The combo audio jack is not being used.
 - Speakers are selected as the playback device.

Your smartbook shuts down before the battery status icon shows it is empty.

- Recharge the battery.

Your battery seems to over heat

You might be using a charger that was not intended for use with your smartbook. Make sure you always use the authentic accessory shipped with your smartbook.

Your smartbook is not charging

- If the battery is completely flat, it might take several minutes of precharge (up to 5 minutes in some cases) before the charging icon is displayed on the screen.

Failure to restore system partition to factory default.

- The system partition (e.g. the partition size or the drive capacity of C) has been modified. Please connect with the official service center for support.

Your smartbook does not respond.

- To turn off your smartbook, press and hold the Power button for seven seconds or more. If the smartbook still does not respond, remove the power adapter.

SAR Information Statement

Your Laptop is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radiofrequency (RF) energy set by the Federal Communications Commission of the U.S. Government. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health. The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6 W/kg. * Tests for SAR are conducted with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the Laptop while operating can be well below the maximum value. This is because the Laptop is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output. Before a phone model is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the limit established by the government adopted requirement for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) as required by the FCC for each model. The highest SAR value for this Laptop when worn on the body, as described in this user guide, is 0.43 W/Kg (Body-worn measurements differ among Laptop models, depending upon available accessories and FCC requirements). The maximum scaled SAR in hotspot mode is 0.44 W/Kg. While there may be differences between the SAR levels of various Laptop and at various positions, they all meet the government requirement for safe exposure. The FCC has granted an Equipment Authorization for this model Laptop with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this model Laptop is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/fccid> after searching on

FCC ID: 2A5OHGW2-W116 Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications Industry Association (CTIA) web-site at <http://www.wow-com.com>. * In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements. The SAR test distance is 0mm.

FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.