


AGES 8+

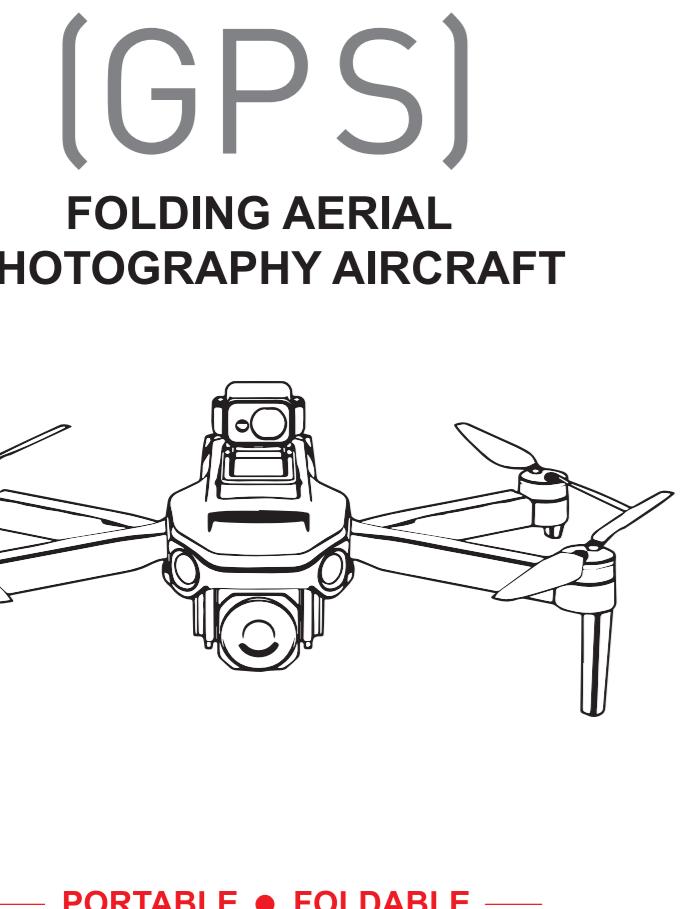

- PORTABLE • FOLDABLE
- To ensure the electromagnetic environment requirements of aviation radio stations, it is prohibited to operate within a range of 10 kilometers on both sides of the airport runway centerline and 20 kilometers on both ends of the runway, as well as civil aviation routes and flight paths.
- Stop using various models' drones.
- Stop using all types of drones in the no fly zones issued by relevant national departments.
- It is strictly prohibited to use drones in urban areas and densely populated areas.
- After receiving the drone, the battery must be fully charged before use.

PREFACE

Welcome to purchase this product. In order to make it easier and more convenient for you to use this aircraft, please read this manual carefully. At the same time, please keep this manual properly as a reference for future adjustment and maintenance.

IMPORTANT STATEMENT

- This product is not a toy, but a precision equipment requiring professional knowledge such as mechanics, electronics, avionics, and high-energy batteries. It needs to be used and maintained correctly to avoid accidents. The holder of the product can operate and control it in a safe manner; Improper operation may cause serious personal injury or property damage.
- This product is suitable for people who have experience operating model aircraft and are not less than 14 years old.
- In case of usage, operation, maintenance and other issues, Please contact the local distributor or relevant personnel of our company.
- SAFETY PRECAUTIONS**
- When flying the (GPS) FOLDING AERIAL PHOTOGRAPHY AIRCRAFT, be sure to stay away from crowds. Transport assembly or damage to the aircraft, poor electronic control, and unfamiliarity with operation can all lead to unpredictable accidents such as aircraft damage or personal injury. Operators must pay attention to flight safety and avoid potential risks.
1. Stay away from obstacles and crowds. Remote controlled aircraft have uncertain flight speeds and directions, which poses potential risk. During flight, it is necessary to stay away from crowds, high-rise buildings, high-voltage power lines, as well as other adverse weather conditions such as wind, rain, lightning, etc. to ensure the safety of pilots/around people and property.
2. Stay away from humid environments. The aircraft contains a large number of precision electronic components and mechanical parts, so it is necessary to prevent moisture or water vapor from entering the body of the aircraft to avoid accidents caused by mechanical and electronic component failures.
3. Please use original factory parts for modification or repair to ensure flight safety. Please operate, and use within the scope allowed by the product's functionality, and the guardian should not leave the model airplane outside the monitoring range.
4. Avoid flying in adverse weather conditions. Please use original factory parts for modification or repair to ensure flight safety. Safety of the aircraft is the responsibility of the operator. During charging, it must be kept away from flammable materials, and the guardian should not leave the model airplane outside the monitoring range.
5. Only use chargers that are originally configured by the factory.
6. Please follow the instructions or packaging instructions for correct installation and use, and some parts should be assembled by adults.
7. Please do not use the aircraft to keep them out of reach of children to prevent the risk of accidental ingestion.
8. It is strictly prohibited to take the aircraft to a place with accumulated water to avoid accidents, as well as high-voltage power lines or base stations, as they may affect the compass carried on the aircraft.
9. Avoid flying over or approaching crowds, trees, high-voltage power lines, buildings, airports or water bodies, as well as high-intensity power lines or base stations, as they may affect the compass carried on the aircraft.
10. Do not disassemble or modify the aircraft as it may cause malfunctions.
11. The charger battery box needs to be inserted into the designated power source that matches the battery.
12. The remote control uses a 3.7V built-in lithium battery, which does not require replacement.
13. Only use chargers that are originally configured by the factory.
14. Please do not use the aircraft to keep them out of reach of children to prevent the risk of accidental ingestion.
15. When changing a rechargeable battery, it must be done under the supervision of an adult.
16. Please do not use the aircraft to keep them out of reach of children to prevent the risk of accidental ingestion.
17. Do not mix different types of lithium batteries.
18. The aircraft uses 7.4V smart lithium batteries, which need to be replaced for charging.
19. Please do not charge the aircraft into fire. Do not place the battery in high temperature or heated areas (such as fire or near electric heating devices).
20. Aircraft should be stored as far away as possible from other electrical equipment and magnetic fields.
21. Please maintain a safe distance from the high-speed rotating propeller to avoid the risk of twisting or cutting.
22. The aircraft is a rotating component, please do not touch it avoid burns.
23. Do not emit any direct laser radiation, do not direct the laser directly.
24. Do not use the model near your ears! Misuse may lead to hearing loss.
25. USB: 5V ~ 2A.
26. Please pay attention to the requirements for the magnetic environment of aviation radio stations, the use of model remote controllers should be stopped as required during the radio control period and within the region issued by relevant national departments.
27. Understanding safety guidelines is crucial for safe flying. Before flying, please read the safety guidelines carefully.

WARNING

- The packaging and instructions contain important information and should be retained.
- You are responsible for ensuring that this aircraft will not cause harm to others' personal or property.
- When debugging and installing the aircraft, it is necessary to strictly follow the operating instructions.
- Pay attention to maintaining a distance of 1-2 meters from the user or other people to avoid hitting people's heads, faces, and bodies during flight or landing.
4. Our company and the seller are responsible for any loss, damage, or bodily injury caused by the use or operation.
5. Children should be guided by adults when operating aircraft, and this product is prohibited for children under 14 years old.
6. Please follow the instructions or packaging instructions for correct installation and use, and some parts should be assembled by adults.
7. Please do not use the aircraft to keep them out of reach of children to prevent the risk of accidental ingestion.
8. It is strictly prohibited to take the aircraft to a place with accumulated water to avoid accidents, as well as high-voltage power lines or base stations, as they may affect the compass carried on the aircraft.
9. Avoid flying over or approaching crowds, trees, high-voltage power lines, buildings, airports or water bodies, as well as high-intensity power lines or base stations, as they may affect the compass carried on the aircraft.
10. Do not disassemble or modify the aircraft as it may cause malfunctions.
11. The charger battery box needs to be inserted into the designated power source that matches the battery.
12. The remote control uses a 3.7V built-in lithium battery, which does not require replacement.
13. Only use chargers that are originally configured by the factory.
14. Please do not use the aircraft to keep them out of reach of children to prevent the risk of accidental ingestion.
15. When changing a rechargeable battery, it must be done under the supervision of an adult.
16. Please do not use the aircraft to keep them out of reach of children to prevent the risk of accidental ingestion.
17. Do not mix different types of lithium batteries.
18. The aircraft uses 7.4V smart lithium batteries, which need to be replaced for charging.
19. Please do not charge the aircraft into fire. Do not place the battery in high temperature or heated areas (such as fire or near electric heating devices).
20. Aircraft should be stored as far away as possible from other electrical equipment and magnetic fields.
21. Please maintain a safe distance from the high-speed rotating propeller to avoid the risk of twisting or cutting.
22. The aircraft is a rotating component, please do not touch it avoid burns.
23. Do not emit any direct laser radiation, do not direct the laser directly.
24. Do not use the model near your ears! Misuse may lead to hearing loss.
25. USB: 5V ~ 2A.
26. Please pay attention to the requirements for the magnetic environment of aviation radio stations, the use of model remote controllers should be stopped as required during the radio control period and within the region issued by relevant national departments.
27. Understanding safety guidelines is crucial for safe flying. Before flying, please read the safety guidelines carefully.

1

2

3

4

5

6

7

PRECAUTIONS:

1. Before each flight, ensure that the battery is fully charged.
2. The battery will automatically stop charging when fully charged. It is recommended to operate the aircraft when the battery is fully charged.
- 3 If the battery is not used for more than 4 days, please recharge it to 40%~45% capacity for storage, which can extend the battery's service life.
4. The aircraft enters a low battery alarm (the aircraft lights flash rapidly). It should land and stop flying as soon as possible to replace the battery or charge the battery.
5. If the remote control enters a low battery alarm (the remote control will keep emitting a "beep-beep" prompt sound), stop using it as soon as possible and charge the remote control.


Note:

1. It can be charged using a portable power bank or a car power bank.
2. The charging time is about 3 hours.

Precautions for Charging:

1. Do not place live batteries in areas that are exposed to high temperatures or heat, such as open flames or direct sunlight, or near heat sources.
2. Do not use batteries to impact or strike hard surfaces.
3. Do not use batteries to impact or strike hard surfaces.
4. Do not immerse the battery in water. The battery should be stored in a dry place.
5. Please do not leave white charging.

REMOTE CONTROL OPERATION METHOD

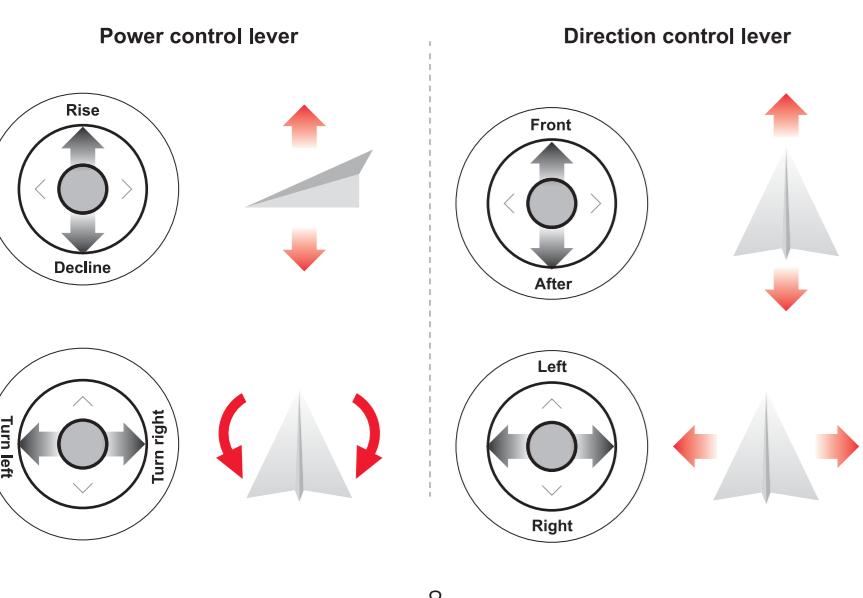

8

FLIGHT OPERATION GUIDANCE

Due to the large size of the aircraft, we only recommend that customers use this product outdoors to avoid unnecessary loss or damage.

