 
 


Mouse

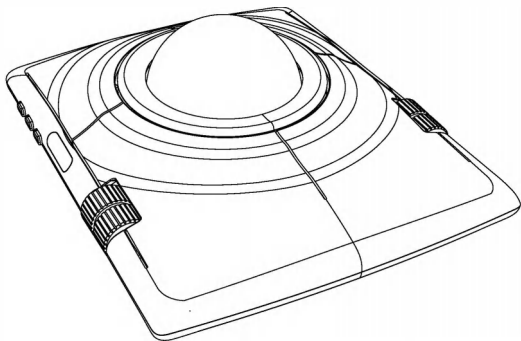

User Manual

Product Components

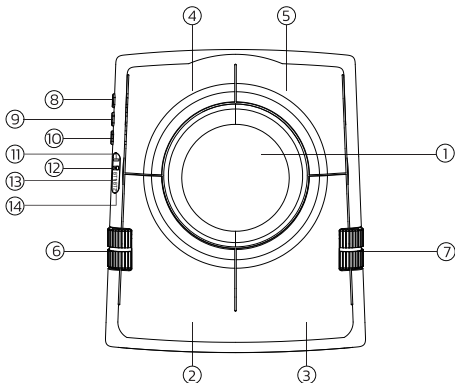

US

Control Components

- ① Trackball
- ② Left Button
- ③ Right Button
- ④ Middle Key
- ⑤ Back Key
- ④+⑤ Enable Drag Hold Function
- ⑥ Left Scroll Wheel
- ⑦ Right Scroll Wheel

Mode Keys

 
- ⑧ Mode Switch Key
- ⑨ Left/Right Hand Mode Switch Key
- ⑩ DPI Key

Indicators

- ⑪ Charging/DPI/Low Battery Indicator
- ⑫ 2.4G Indicator
- ⑬ Bluetooth 1 Indicator
- ⑭ Bluetooth 2 Indicator

US

Basic Parameters

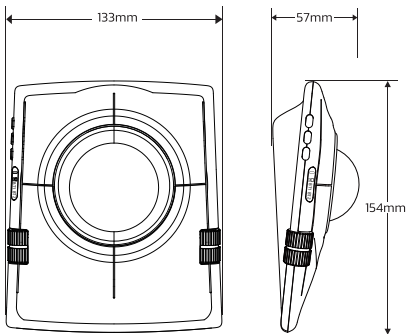

Model	TM277
Dimensions	2.25× 6.07× 5.23 inches/ 57× 154× 133 mm
Weight	318g
Trackball Size	2.2 inches / 55 mm
Connectivity	Bluetooth & 2.4GHz Wireless Receiver
DPI Levels	400(default), 800, 1200, 1600
Charging Voltage/Current	5V / 300mA (Max)

Package Contents

1× Wireless Trackball Mouse

1× Type-C Charging Cable

1× 2.4GHz USB Receiver

1× User Manual

Compatibility

Compatible with Windows/ macOS/ Linux/ ChromeOS

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

 
- Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.


- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help.


Usage Instructions

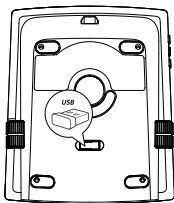

1

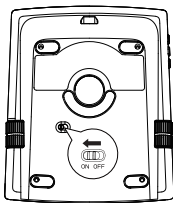 


2

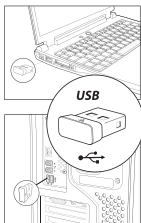 

3

 4

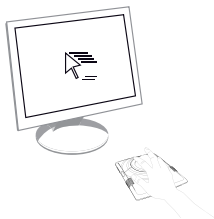


2.4G Connection

- 1 Take out the USB receiver at the bottom of the mouse.
- 2 Turn on the mouse.

- 3 Insert the USB receiver into your computer's USB port.
- 4 Start using the mouse.

 Bluetooth Connection

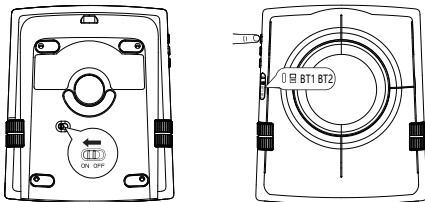

- 1 Turn on the mouse.
- 2 Press the "Mode Switch Button" to select either Bluetooth 1 or Bluetooth 2 channel.
- 3 Start using the mouse.

Bluetooth Pairing Instructions

- 1 Switch to Bluetooth Channel 1 or Channel 2.
- 2 Press and hold the pairing button for more than 3 seconds until the channel indicator starts flashing quickly, indicating that the device has entered pairing mode. The pairing process will last for 2 minutes.
- 3 Go to your computer's settings, turn on Bluetooth (compatible with Windows 8 and above), search for "BT5.0 ", and click to start pairing.
- 4 When the pairing is successful, the LED will light up for 3 seconds and then turn off, confirming the connection.

DPI Adjustment

This mouse has 4 adjustable DPI levels:

400(default), 800, 1200, and 1600.

Press the DPI button to switch between the levels.

 
The indicator light will flash according to the selected DPI level:

400 DPI: Flashes once

800 DPI: Flashes twice

1200 DPI: Flashes three times

1600 DPI: Flashes four times

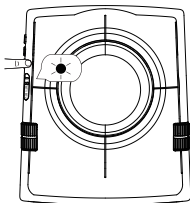


Connection Mode Switching

1 This mouse supports three connection channels:

2.4G and two Bluetooth channels.


2 Once the mouse is connected to devices via 2.4G and the two Bluetooth channels, you can switch between the connected devices by pressing the mode switch button.

 3 When switching to a different connection channel, the corresponding channel indicator will light up.

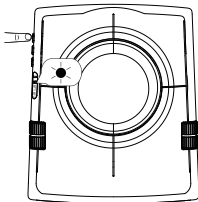


Left/ Right Hand Mode Switching

 - 1 Press the Mode Switch Key.
- 2 The following controls will automatically swap to match the selected hand mode:
 - Left and Right Buttons
 - Middle and Back Keys
 - Up/Down and Left/Right Scroll Wheel Functions



Drag Hold Function

 - 1 Activate:
Press the ④ Middle and ⑤ Back Keys simultaneously.
- 2 Deactivate:
Press any of the following keys:
Left, Right, Middle, or Back.

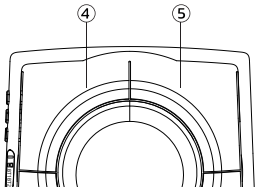

Sleep Mode

The mouse will enter sleep mode after 30 minutes of inactivity. To wake it up, simply move the trackball or click any button.

Charging Instructions

- 1 **Low Battery Alert:** When the mouse is low on battery, the low battery indicator will flash red. Please charge the mouse promptly to ensure optimal performance.
- 2 **Connecting the Charger:** Connect one end of the included Type-C cable to a USB charger, and the other end to the charging port on the mouse.
- 3 **Charging Indicator:** The charging indicator will glow blue while the mouse is charging. A full charge takes approximately 3 hours, and the light will turn green once charging is complete.

Important Safety Instructions

Please Note: Long-term repetitive use of any keyboard and mouse could cause injury to user. We recommend users to avoid excessive use of this or any keyboard and mouse.

- Avoid dropping.
- Do not disassemble.
- Do not expose to liquids.
- This product is suitable for moderate climates only.
- The maximum ambient temperature during use of this product must not exceed 40 degree.
- Open fame sources, such as candles, must not be placed on this product.
- Only use a dry cloth or brush to clean this product.

FCC Statement

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

The device can be used in portable exposure condition without restriction.

Correct Disposal of This Product



(Waste Electrical & Electronic Equipment)

This marking shown on the product or its literature, indicate that it should not be disposed with other household wastes at the end of its working life.

To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources. Household user should contact either the retailer where they purchased this product or their local government office, for details of where and how they can take this item for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product should not be mixed with other commercial wastes for disposal.