


Instruction Manual

Bluetooth® Record Player

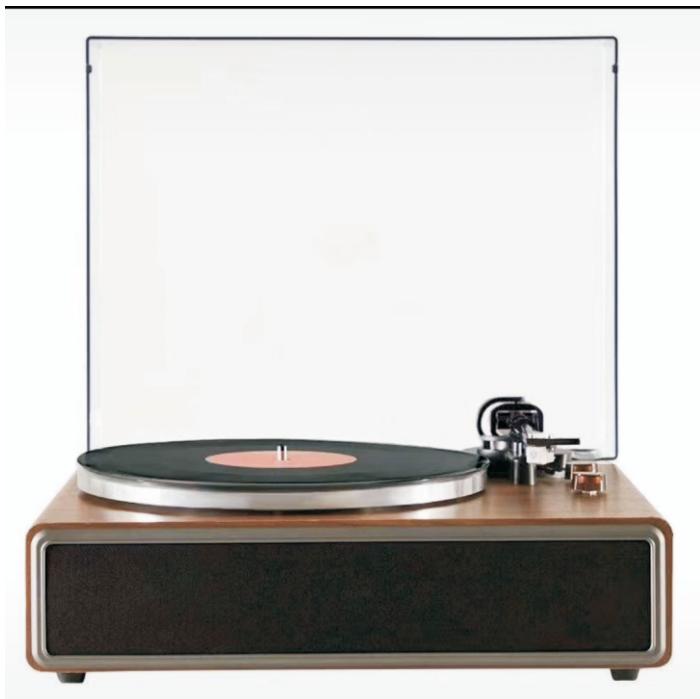

Record Player, Bluetooth® Connection, Aux-In Connection,
Built in Speakers, Line Out & AUX IN

See page 4 for important first use belt installation instructions.

INDEX

Preparation for First Use.....	Page 2
Controls Location.....	Page 3
Turntable Setup 1.....	Page 4
Turntable Setup 2.....	Page 5
Operating Instructions - Vinyl Records.....	Page 6
Operating Instructions - Aux In.....	Page 6
Connecting External Speakers.....	Page 7
Care & Maintenance - Cleaning.....	Page 7
Care & Maintenance - Replacing Stylus & Belt.....	Page 8
Troubleshooting & Warranty.....	Page 9
Customer Service & Cautions / Warnings.....	Page 10

PREPARATION FOR FIRST USE

1. Carefully remove the unit from the display box and remove all packing material from the unit.
2. Unwind the power adapter cord and extend it to its full length.
3. Place the unit on a stable, level surface, convenient to an AC outlet, out of direct sunlight, and away from sources of excess heat, dust, moisture, humidity or strong magnetic fields.
4. Connect the AC adapter to the rear of the unit.
5. Connect the plug to a conveniently located AC outlet.

POWER SOURCE


This product is designed to operate using the 9v AC Mains adapter only. Attempting to operate this system from any other power source may cause damage to the system, this damage is not covered by your warranty.

PROTECT YOUR FURNITURE

This model is equipped with non-skid rubber 'feet' to prevent the product from moving when you operate the controls. These 'feet' are made from non-migrating rubber material specially formulated to avoid leaving any marks or stains on your furniture. However certain types of oil based furniture polishes, wood preservatives, or cleaning sprays may cause the rubber 'feet' to soften, and leave marks or a rubber residue on the furniture. To prevent any damage to your furniture we strongly recommend that you purchase small self-adhesive felt pads, available at hardware stores and home improvement centers everywhere, and apply these pads to the bottom of the rubber 'feet' before you place the product on fine wooden furniture.

CONTROLS LOCATION


LOCATION OF CONTROLS AND INDICATORS FRONT PANEL

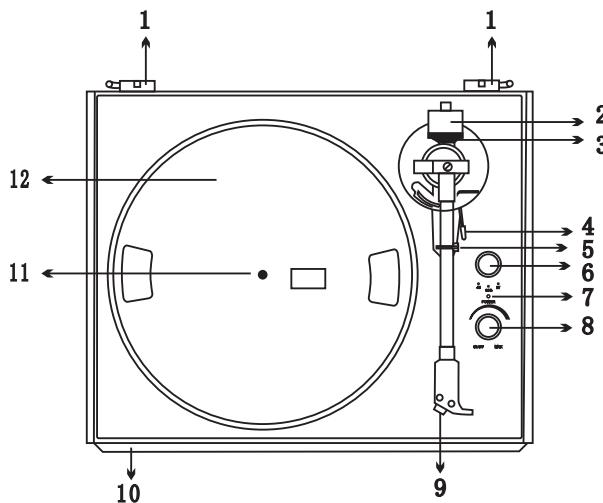

1. Lid Hinges	7. Indicator Light
2. Counterweight	8. Power Switch & Volume Control
3. Tracking Force Dial	9. Stylus Cartridge
4. Tonearm Lift Lever	10. Turntable Panel
5. Tonearm Clip	11. Turntable Platter
6. Function Dial	12. Center Axis
(33/45 RPM Speed & Bluetooth)	

BACK PANEL


- 13. Aux In Jack
- 14. Line Out Jacks
- 15. Power Adapter Input

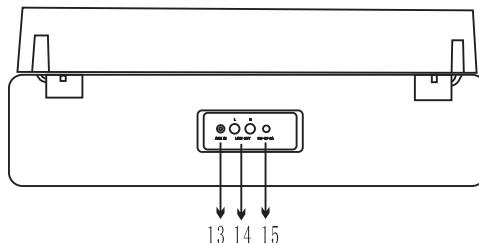

Placing the Turntable


Choose a level surface to place the turntable.

For best performance select a location free of vibrations and away from any computer, radios or cell phones that may cause interference.

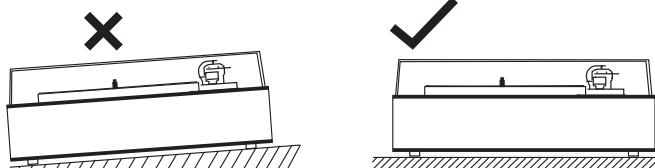


Important Step!**Setting up the Platter & Belt Drive**



1. Gently lift the platter up from the turntable and turn it over. Check that the belt is located in the middle of the inner ring.

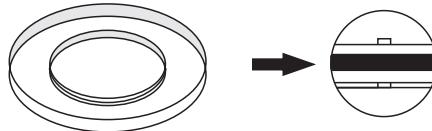

2. Place the turntable on the spindle and check to make sure it's level.

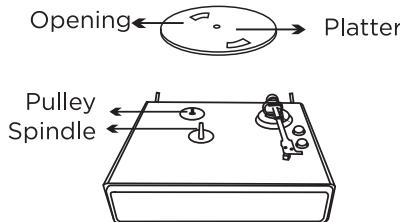

3. Rotate the platter until you can see the pulley through the opening.
4. Gently pull on the red ribbon to pull the belt over the spindle.

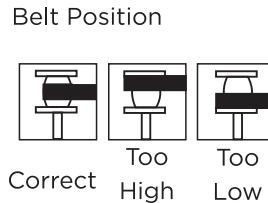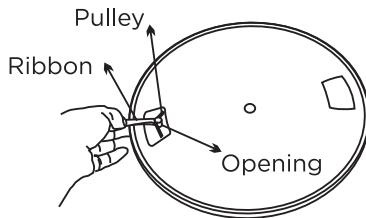

5. Check that the belt is centered on the spindle and not twisted.
6. Rotate the platter slightly by hand and remove the red ribbon.

TURNTABLE SETUP - 2

Checking Rotation

After setting up the below, slowly rotate the platter 10 times in a clockwise direction. This step resets the auto mechanism, and allows the belt to correctly locate itself on the drive rim below the platter.

After rotating the platter place the provided slip mat on the platter.



Setting the Counterweight & Tracking Force


The installed counterweight is suitable for pickup cartridges weighing between 3.0 & 6.0g.

Rotating the counterweight assembly changes the tracking weight on the tonearm.



To calibrate the counterweight follow these steps:

1. Remove the tonearm from the rest position and observe its balance.
2. Carefully rotate the entire counterweight assembly until the tonearm is neutrally balanced.

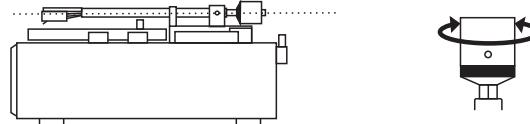


3. Once the tonearm is correctly balanced return the tonearm to its rest position.
4. Holding the rear of the counterweight steady, rotate the front of the counterweight with the dial scale until it reads "0".
5. Once the scale is calibrated to "0" you can gently rotate the dial until the desired tracking force is achieved.
6. When set you can use the socket key on the counterweight to prevent accidental loosening.

OPERATING INSTRUCTIONS - VINYL RECORDS

Playing Vinyl Records

The system is able to play 33 and 45 RPM records.

Remove the protective stylus cover from the stylus. Take care to pull the cover forwards only, to avoid accidentally removing the stylus.

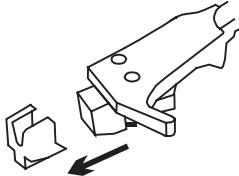

★ Tip: If you accidentally remove the stylus turn to page 8 for stylus installation instructions.

2. Place your vinyl record on the non-slip mat, aligning the center hole with the spindle.

3. Turn the function dial to the correct speed for your record. (33rpm for long play, 45 for singles).

4. Turn the power & volume knob clockwise then turn the power on.

5. Unlatch the tonearm, and push the lifting lever back to raise the arm.

6. Gently pivot the tonearm over the record and the turntable will begin to rotate. Align the stylus with the outer grooves.

7. Pull the lifting lever towards you to gently lower the tonearm onto the record's surface.

8. Once finished listening, raise the tonearm and return it to the latched position. Turn off the record player and store the record in a safe place.

OPERATING INSTRUCTIONS - BLUETOOTH

Using Bluetooth

Turn the function dial to "Bluetooth".

Turn the power on, the indicator light will flash.

Connect your smart device to the "TURNTABLE" signal. After successful connection the light will be steady.

OPERATING INSTRUCTIONS - AUX IN

Using the Aux In

To use the Aux In connect an audio cable to the Aux In jack on the rear of the turntable.

Plug the other end of the cable into your chosen audio device.

Turn the turntable on, the indicator light will turn red.

Adjust the volume as desired.

★ Tip: The Aux In function takes priority over all other functions. When a cable is connected the turntable will only operate in Aux In mode.

CONNECTING EXTERNAL SPEAKERS


The Turntable is able to output audio to an external powered amplifier and speakers. To use follow these steps:

Connect using an RCA Stereo Cable connect the line out of the turntable to the line in on an external amplifier.

Turn both the turntable on and the external amplifier.

Adjust the volume settings on the external amplifier to the desired level.

★ Tip: The line out function only works with an external amplifier, or active speakers with built in amplifier.

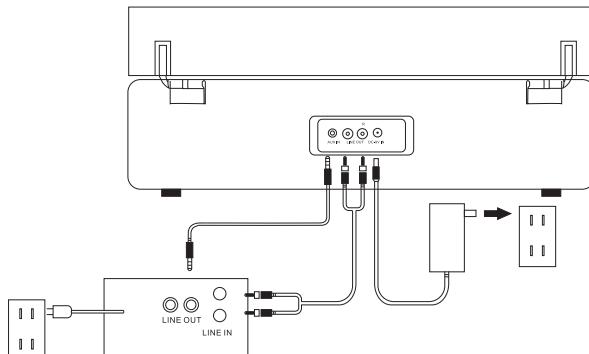

CARE & MAINTENANCE

Cleaning the Turntable

First disconnect the power, then using a microfiber cloth, gently dust the exterior of the turntable taking care not to damage the tonearm or stylus.

Do not use harsh cleaning chemicals.

Cleaning the Stylus


If dust collects on the stylus it should be cleaned. We recommend using a commercially available stylus cleaner and brush to properly clean the stylus without causing damage.

★ Tip: The stylus should be replaced after 400 hours of use for best performance.


CARE & MAINTENANCE

Replacing the Stylus


1. Align the new stylus with the body of the tonearm.

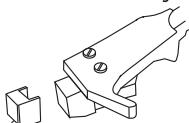

2. Gently push the stylus up until you hear a click.

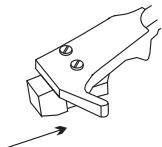



3. Check there is no gap between the tonearm headshell and the cartridge. If a gap is present tighten the cartridge mounting screws.

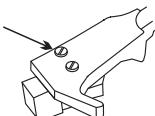

Replacing the Belt




The belt is a consumable part. Replace the belt if playback is irregular or the belt breaks.

1. Disconnect the power and remove the belt from the motor pulley.

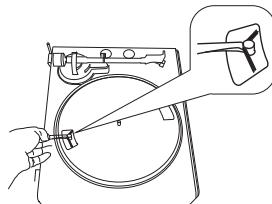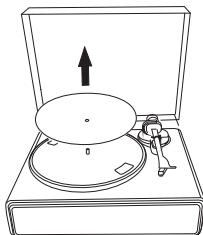

2. Lift the platter up and turn it upside down.

3. Remove the old belt from the inner circle, and loop the replacement belt in the same location.

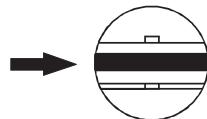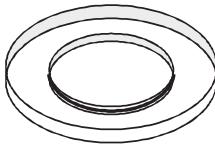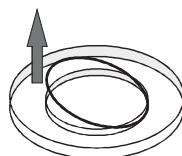

4. Turn the platter back over and lower carefully onto the turntable.
5. Align one of the openings with the motor pulley and using your fingers pull the belt over the brass motor pulley.
6. Rotate the platter 10 times to align the belt and replace the slip mat.

TROUBLESHOOTING

If you are experiencing problems with your device, check in the section below whether there are any quick and easy adjustment you can do that may help you solve the problem. If you cannot solve the problem by yourself, contact our after sales support line for advice. Do not attempt to open, repair or modify the equipment yourself.

Problems with sound

- * Clockwise rotate the power/volume knob to increase the volume.
- * Make sure the unit's power cord is connected to an appropriate electrical outlet.
- * Make sure the wall socket is switched on.
- * Make sure the function switch is set to your desired function.
- * Make sure the Aux In connection is disconnected if playing another source.
- * When playing a external source via the AUX IN connection, make sure the cable is firmly connected, all controls on the external source player are properly set.

Problems with records skipping.

- * Make sure the turntable is on a level surface free of vibrations.
- * Check the tonarm tracking settings.
- * Clean the stylus.
- * Clean the record.
- * Inspect the record for physical damage.

WARRANTY

60 DAY LIMITED WARRANTY

warrants to the original purchaser when used in the United States only, that this product shall be free of defects in material and workmanship. This warranty applies within 60 days of the original purchase date with normal home use. This warranty does not apply for commercial use of this product. Use outside of United States is not covered by this warranty. During the warranty period, we will at our discretion, repair or replace this product without charge, as long as the product has not been abused or mishandled as by our determination. Our determination shall be final and be the consumer's sole remedy. ALL RETURNS must be accompanied by a Return Authorization Number which is issued by O Marketing's Customer Service Department.

Please contact Customer Service BEFORE returning any products or parts thereof. Once you have obtained a Return Authorization Number you will be provided a return address within the Customer Service email.

This warranty does not cover installation, adjustments in the home, nor damage due to accidents, misuse, abuse, fire, or any acts of God, incorrect line voltage, damage to other equipment caused by improper installation, unauthorized or improper modifications. This warranty gives you specific legal rights and you may also have other rights that vary from state to state.

** THIS WARRANTY IS EXPRESSLY IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS.** 2

CAUTIONS & WARNINGS

- * Please read these instructions and keep them for future reference.
- * Pay attention to all warnings.
- * Follow all instructions.
- * Do not use this apparatus near water.
- * Clean only with a dry cloth.
- * Do not block any ventilation openings.
- * Install in accordance with the manufacturer's instructions.
- * Do not install near any heat sources such as radiators, heaters, stoves, or other apparatus (including amplifiers) that produce heat.
- * Protect the power cord from being walked on or kinked, in particular where the plug is fitted and at the point where it exits from the apparatus.
- * Only use attachments / accessories specified by the manufacturer.
- * Unplug this apparatus during lightning storms or when unused for long periods of time.
- * Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- * This appliance should not be exposed to dripping or splashing water and no object filled with liquids, such as vases, should be placed on the apparatus.
- * Do not overload the wall power outlet. Use only power source as indicated - i.e. included 9v adapter.
- * Avoid installing this unit in places exposed to direct sunlight or close to heat radiating appliances such as electric heaters, on top of other stereo equipment that radiates too much heat, places lacking ventilation or dusty areas, places subject to constant vibration and/or humid or moist areas.
- * Do not attempt to clean this unit with chemical solvents as this might damage the finish. Use a clean dry cloth. Operate controls and switches as described in the manual.
- * Store your Vinyl Records in a cool area to avoid damage from heat.



* **FCC Radiation Exposure Statement:**

This equipment complies with **FCC** radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance **20cm** between the radiator & your body.

* **FCC Warning**

This device complies with Part **15** of the **FCC** Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

* **Note:** This equipment has been tested and found to comply with the limits for a **Class B** digital device, pursuant to part **15** of the **FCC** Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

* **NOTE 2:** Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.