


# Dyzeryk MP3 PLAYER USER INSTRUCTIONS

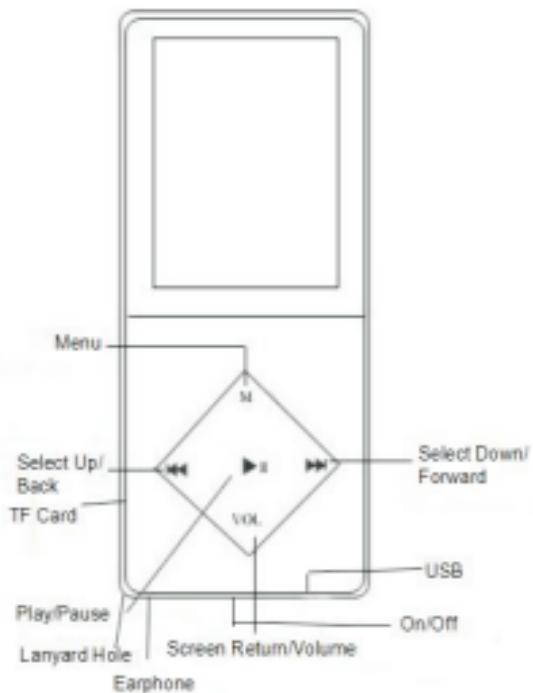

Thank you for purchasing the Dyzeryk MP3 Player.

**NOTE:** This product has a One Year Warranty from date of purchase. If you have any questions Please contact the seller “Dyzeryk” on Amazon.com.

## **BUTTONS/NAVIGATION:**

### ❖ TO TURN ON/OFF:

The power button on the bottom of the player is used to turn the player ON/OFF.

When the power switch is on, hold middle button to turn MP3 player into alternate ON/OFF mode.

### ❖ MAIN MENU BUTTONS:

The MENU (top) button is used to access available the play options menu during playback.

### ❖ SELECT PLAY/PAUSE BUTTONS:Play/Pause (center) button

- ❖ SELECT BUTTONS: LEFT: Up/Back RIGHT: Down/Forward
- ❖ VOL: Short press is screen return; Long press it to appear volume interface and can adjust the volume through the left and right button.

## MAIN INTERFACE SCREEN & SUB-MENUS:

- ❖ MUSIC:

Supported Formats: MP1, MP2, MP3, WMA, OGG, APE, FLAC, WAV, AAC-LC, ACELP, Audible files.

Options While Paused: (Card Folder, Delete File, Delete All, Exit)

Options During Playback: (Repeat, Equalizer, Variable Speed Play, Replay Mode, Exit)

Left button: previous song; Right button: next song; Middle button: pause / play.

- ❖ VIDEOS:

Supported Formats: AMV

Options While Paused: (Local Folder, Delete File, Delete All, Repeat, Exit)

❖ RADIO:

Menu options while listening: (Save, Record, Delete, Delete All, Auto Search, Normal Band, Exit)

To manually scroll thru available FM Radio stations use front left & right buttons.

To automatically save available stations, Click MENU --> Auto Search.

NOTE: Earphones must be connected to MP3 player for FM Radio to detect available radio stations.

❖ PICTURES:

Supported Formats: JPG, BMP, GIF

Options While Paused: (Local Folder, Playback Set, Delete File, Delete All, Exit)

To Select picture use Previous/Forward (left/right buttons)

Click middle button to display selected picture file.

❖ RECORDINGS:

Supported Recording Formats: MP3, WAV

Options While Paused: (Card Folder, REC Type, Exit)

❖ EBOOK:

Supported Formats: TXT

Options While Paused: (Local Folder, Playback Set, Delete File, Delete All, Exit)

Options During Playback: (Bookmark Select, Bookmark Delete, Bookmark Add, Exit)

❖ SETTINGS:

(System Time, LCD Set, Language, Power Off, Memory Info, Firmware Version, Firmware Upgrade, Exit)

**TROUBLESHOOTING:**

❖ RESET THE PLAYER:

To reset the MP3 player, push the ON/OFF button, and the player will restart.

❖ **PLAYER DOES NOT STAY ON or DOES NOT POWER ON:**

Low battery. Please connect the player to a power source to charge the battery. The display will have a low battery notification.

Make sure the player is properly connected at both ends of the data/charge USB cable when recharging & that it shows it is recharging, otherwise the battery will go low.

❖ **CHARGING THE BATTERY:**

When recharging the player the display screen will show that the player is charging then turn off automatically, (Click the middle button to check recharge status if LCD screen is off). Do not leave the player on the charger when it is fully charged.

If you have any questions during use, please feel free to contact us, we will serve you wholeheartedly.

### **§ 15.19 Labelling requirements.**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

### **§ 15.21 Information to user.**

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

### **§ 15.105 Information to the user.**

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.