

Remote Control USER MANUAL

MODEL: RMT-TX100U



Function Button

POWER: Press to turn on and off the TV.

INPUT: Selects the video source.

Color Buttons(YELLOW/BLUE/RED/GREEN/): Shortcut keys for interactive functions

●: Press to select the digital sub-channels. For example, to enter "63-5", press "63", "●", and then "5".

NETFLIX Accesses the "NETFLIX" online service.

DISPLAY: Display the playback and web browsing(BDP-3200 BX320/S5200/BX520 only) information on the screen.

BACK: Return to the previous step.

HOME: Enters the plays's home menu Displays the wall paper when pressed on the category icon of the home menu.

GUIDE: Displays and Electronic Program Guide.

VOL +/-: Adjusts the volume.

CH +/- : Changes channels.

AUDIO: Selects the language track when multi-lingual tracks are recorded on BD-RoMs/DVD VIDEOS. Selects the sound track on CDs.

SUBTITLE: Selects the subtitle language when multi-lingual subtitles are recorded on BD RoMs/DVD VIDEOS.

PREV/NEXT: Skips to the previous/next chapter track, or file.

STOP: Stops playback and remembers the stop point(resume point). The resume point for a title/track is the last point you played or the last photo for a photo folder.

FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance

could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception,

which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.