


正面


展开尺寸: 650x240mm, 风琴4折页, 折后尺寸: 240x130mm

材质: 80G书纸, 双面单黑印刷

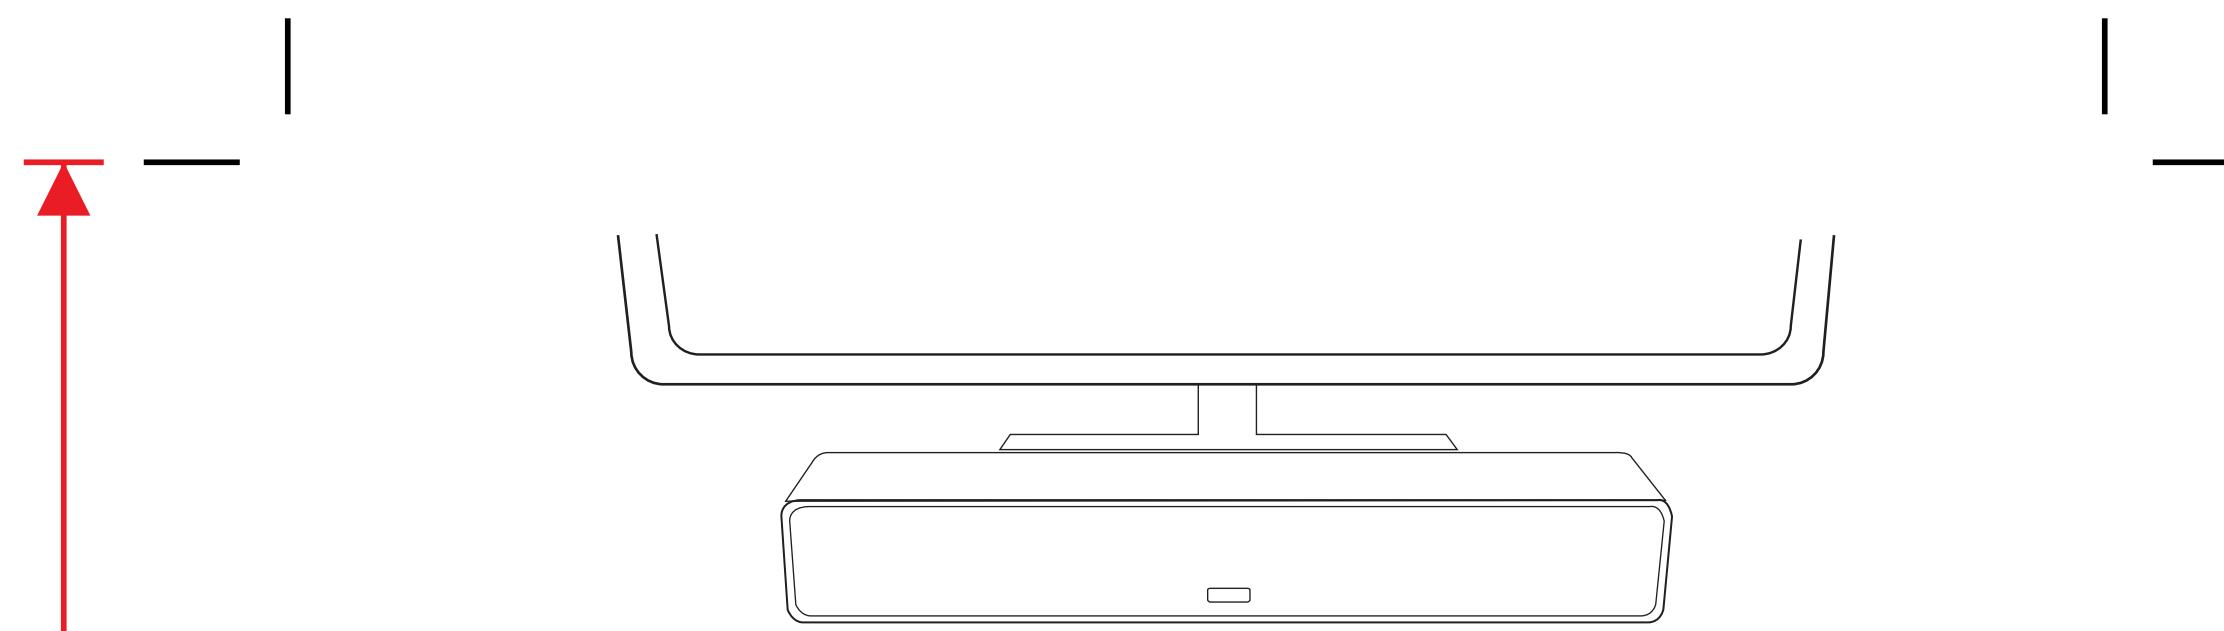

ZVOX AccuVoice TV Speaker

MODEL AV120 | SETUP & OPERATION

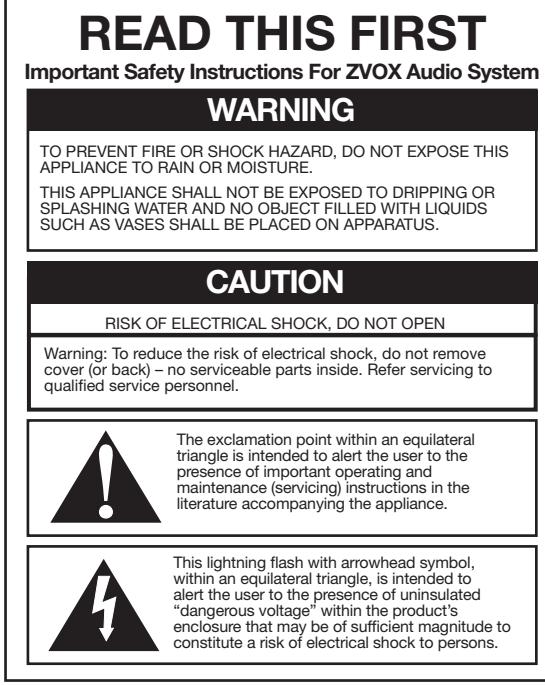

Disposing of this appliance

Electric and electronic appliances often contain valuable materials. These appliances may also contain materials essential for the correct functioning of your appliance which, if handled or disposed of incorrectly, could pose a risk to human health and to the environment. Therefore, please do not dispose of this appliance with your household waste. Dispose of it at your local community waste or recycling center, or contact your retailer for advice.

ii ZVOX AV120 | Safety Instructions

Declaration of conformity

CE ZVOX Audio, LLC. Herby declares that this product is in compliance with the essential applicable EU directive requirements. The complete declaration of conformity can be found at: www.zvox.com/AV120

FCC Statement

NOTE: This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by ZVOX could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules and ISED Canada License-exempt RSS Standard(s). Operation is subject to the following two conditions:
(1) This device may not cause harmful interference.
(2) This device must accept any interference received, including interference that may cause undesired operation.

This equipment should be installed and operated with a minimum distance of 20 cm between the radiator and your body.

ISED Statement

This device contains license-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's license-exempt RSS(s). Operation is subject to the following two conditions:

1. This device may not cause interference.
2. This device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Cet équipement doit être installé et utilisé avec une distance minimale de 20 cm entre le radiateur et votre corps.


ZVOX AV120 | Regulatory and Legal Information iii

Table of Contents

Quick Setup Guide	1
Alternative Ways To Connect The AccuVoice AV120 TV Speaker	2
TV to AV120 Audio Signal Cable Guide	3
Placement Options	3
Button Functions on the ZVOX Remote Control	4
Still Need Assistance?	5


iv ZVOX AV120 | Table of Contents

Quick Setup Guide

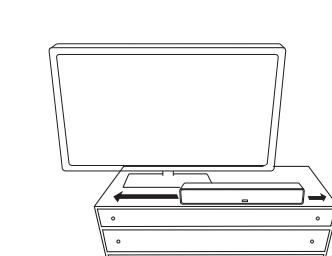

1 Place The ZVOX Speaker


You can place the ZVOX speaker anywhere in front of your TV. It can also be placed on any level surface near the TV – above, below or to the left or right. It doesn't have to be centered in front of the TV. The ZVOX speaker performs best if it faces the people watching the TV.

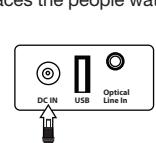

2 Connect Power Cord to the ZVOX Speaker

Connect the power cord to the DC jack on the back.

Then connect the AC plug into an AC power receptacle. The speaker will then power on and a white light on the front of the speaker will turn on briefly, then will be replaced briefly by a green light.

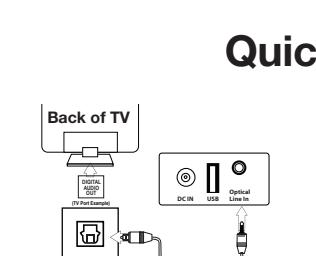


3 Connect the Optical Signal Cable

Most TVs have an optical digital output jack (sometimes called "TOSLINK") on the back panel. This optical jack is often a square-like end which plugs into the TV and a round end which goes into the ZVOX Speaker. The optical cable might, or might not, have small clear plastic covers protecting the metal tips. Simply remove the covers before connecting the cable.

NOTE 1: The optical jack on your TV is not perfectly square. You need to align the square-like end of the optical cable to the orientation of the TV's optical jack. Once it is aligned, the cable's plug should slip into the jack with a slight push. You may hear and feel a small "click" once the cable is inserted completely.

NOTE 2: If your TV does not have an optical jack, you can use one of the supplied analog signal cables. See instructions later in this manual.

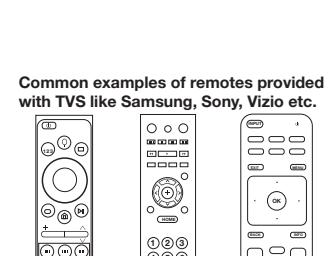

4 Turn off your TV's Internal Speakers

Some TVs require you to go into the audio menu of the TV and turn off the TV's internal speakers in order to get an audio signal from the optical jack.

NOTE 1: The optical jack on your TV is not perfectly square. You need to align the square-like end of the optical cable to the orientation of the TV's optical jack. Once it is aligned, the cable's plug should slip into the jack with a slight push. You may hear and feel a small "click" once the cable is inserted completely.

NOTE 2: If your TV does not have an optical jack, you can use one of the supplied analog signal cables. See instructions later in this manual.

5 IMPORTANT: Set Audio Output to PCM Using TV's Menu Screen.

Using the TV's set's remote (not your cable box remote) go into the TV's menu. On the menu screen select the Sound option, and then select the "Expert Settings" or "Advanced Audio" option. Then select Digital Output Audio Format – and then select PCM. When you have done this, simply push the Menu button one more time to return to your normal screen.

For further assistance go to zvox.com/setup and look for "TV-Speaker Hookup Videos." Or call us at 1-866-367-9869.

ZVOX AV120 | Quick Setup Guide 1

240 mm


反面

展开尺寸: 650x240mm, 风琴4折页, 折后尺寸: 240x130mm

材质: 80G书纸, 双面单黑印刷

Alternative Ways To Connect The AV120 TV Speaker

If your TV doesn't have an optical audio output, here are some other options:

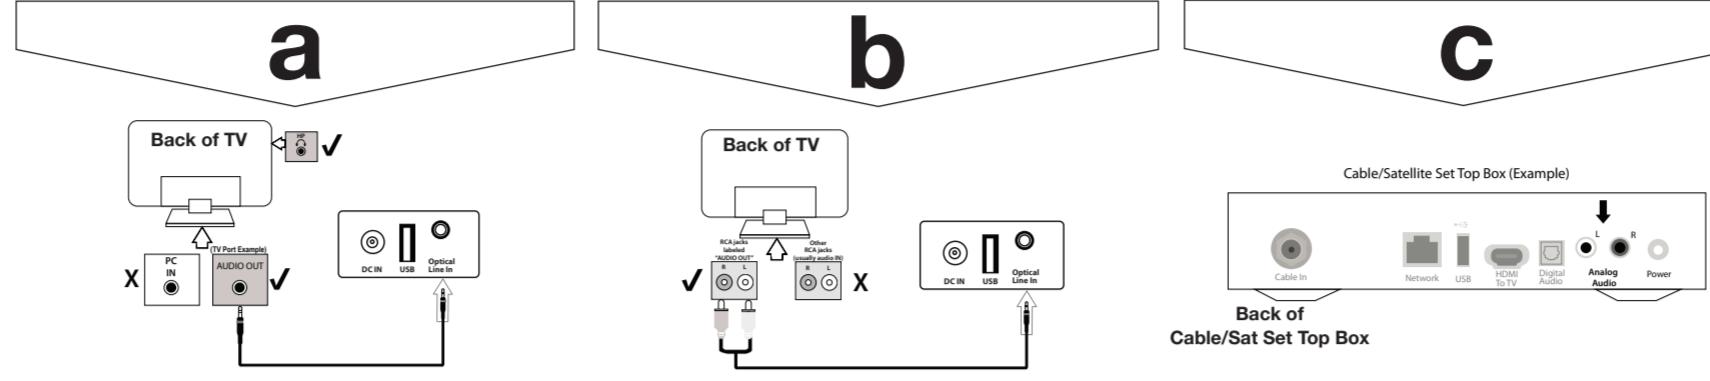

Minijack Analog Audio Out

Some TVs have a 3.5mm audio output jack or a headphone jack. Insert one end of the supplied analog "Miniplug to Miniplug" cable into the TV's audio out minijack. Insert the miniplug at the other end of the cable into the ZVOX speaker's red and white jack labeled OPTICAL LINE IN. This port also supports analog connections.

If the TV has a headphone jack, you will want to make sure that the TV's volume is turned up to 50 to 75 % of maximum volume to make sure that the ZVOX speaker is receiving a strong audio signal to amplify.

USB Input

Insert an external USB flash drive to hear audio tracks, like MP3s play externally from the AV120. Use the BACK and FWD buttons on the AV120 remote to toggle back and forward to audio tracks on your USB Drive. MP3 Files may be in the root or in folders.

Bluetooth setting.

You may play audio from your Smart phone, tablet, laptop or Bluetooth capable TV to the AV120 as well. Simply press the INPUT button on the AV120 remote until the AV120 display on the front of the speaker blinks blue which signals the sound bar is in pairing mode. It will stay solid blue once paired with device.


Manual On/Off Operation

With the unit on, press and hold the "Other Settings" button for 5 seconds. If the LED blinks RED 3X, the auto On/Off feature is disabled.

The remote must be used to turn the unit on and off. If the LED blinks BLUE 3X, the auto On/Off feature is being re-enabled. The Auto On/Off toggle only works if the minijack input is selected. It will automatically turn off 30 seconds after a loss of digital signal OR several minutes after an analog signal has stopped.

TV to AV120 Audio Signal Cable Guide

The AV120 includes two analog signal cables and one optical digital signal cable. The optical cable has a standard optical plug on one end and a miniplug on the other end. One of these three cables will connect from most TVs or cable/satellite set top boxes to the input on the AV120. In the rare instance your TV or cable/satellite set top box has only an optical minijack audio output, an optical miniplug to optical miniplug cable is needed (not supplied with the AV120).

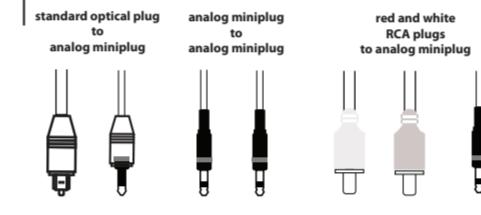

Placement Options



Placing The AV120 TV Speaker in Front of the TV.

Most people choose to place the ZVOX speaker in front of the TV. But it can also be placed on any level surface near the TV – above, below, or to the left or right. Choose a place that lets you direct the ZVOX Speaker towards the TV viewers.

- A safe, secure installation of the AccuVoice TV Speaker is the owner's responsibility.
- Do not place any objects on top of the AccuVoice TV Speaker.

ZVOX AV120 | Cables and Placement 3

Button Functions on the ZVOX Remote Control

Input Selection

Press the INPUT button on the ZVOX remote to select between the speaker's input modes. Note: The USB input is not selectable unless a USB thumb drive is plugged in.

AccuVoice


Press the AccuVoice button to select the AccuVoice function. Additional press of the AccuVoice button will select one of three levels of voice enhancement, starting with AccuVoice 1 going to 2. The light flashes purple a certain number of times to indicate which AccuVoice mode you are selecting. The default setting is AccuVoice 1. If you were to press the AccuVoice button once you would see the light blink twice indicating AccuVoice 2 mode. Once you are in AccuVoice 2 mode, pressing the AccuVoice button will return you to AccuVoice 1.

Mute Play/Pause

Press this button to mute the ZVOX speaker. When the MUTE function is active, the display blinks yellow repeatedly. The AV120 will enter STANDBY if it is left in MUTE for longer than 5 minutes. The button also doubles as the Play/Pause function when using sound bar with the USB Drive and/or the Bluetooth.

Other Settings

The OTHER SETTINGS button can be used to control the Auto on/off feature when the minijack input is selected OR to cancel a bluetooth connection and start the pairing process when the Bluetooth input is selected.

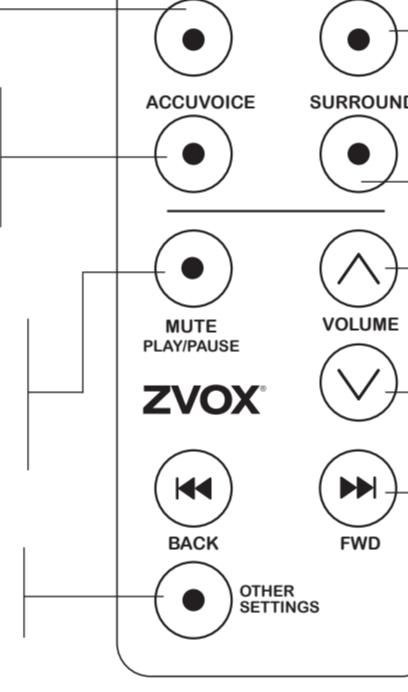

Power

The Power button switches the ZVOX speaker between off (STANDBY) and on. When the ZVOX AV120 is powered on, you will see a white light followed by a blue light. From speaker grille flash. When it is powered off into STANDBY, you will see the red light flash four times. Note: The ZVOX AV120 will also enter STANDBY if it receives no audio signal for several minutes.

Surround Settings

There are two SURROUND levels: Surround One has low virtual surround effect and strong vocals. Use this setting if vocal clarity is important to you. Surround Two has moderate virtual surround effect and moderate vocals. The default setting is Surround 1. If you were to press this button again you would see the Pale Blue light blink twice indicating Surround 2 mode.

Volume

When the volume up arrow button is quickly pressed and released, you will see the light corresponding to your input (Green, Blue, Red) flash indicating one volume step increase. If you press and hold down the volume up button, the light will continuously flash and the volume will go up until you release the button. The volume down arrow button is indicated by the yellow light and flashes in the same manner when pressed and released.

Back and Forward

The Back and Forward buttons will allow you skip forward, or back, from audio tracks when using the USB Drive Input or Bluetooth connections.

4 ZVOX AV120 | Remote Control

USA Warranty

For warranty information applicable to an AV120, please visit this webpage:

<https://zvox.com/pages/warranty-returns>

STILL NEED ASSISTANCE? If your TV is not the same as the descriptions in this guide, don't hesitate to send an inquiry to info@zvoxaudio.com or call ZVOX Audio at (866) 367-9869. Please provide your TV brand and model number. For information about additional options, please refer to the ZVOX Audio website, www.zvox.com.

ZVOX
Great Sound Made Simple

© 2022 ZVOX Audio LLC. ® ZVOX, AccuVoice and PhaseCue are registered trademarks of ZVOX Audio LLC.

WWW.ZVOX.COM

4020X 5/22

650 mm

240 mm