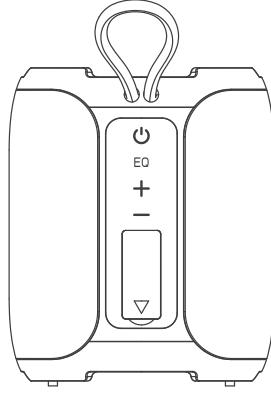
 


80*100mm

双面单色印刷

 <p>K50 User Manual</p> <p>Welcome to use our speaker product. In order to help you better use this product, please read the manual carefully; *Due to the iterative upgrade of the product, there may be some description and packaging changes, please refer to the actual product!</p>	<p>PRODUCT INTRODUCTION 01</p> <p>I Packing list</p> <p>Audio host * 1 specification* 1 Charging cable* 1</p> <p>II Product parameter</p> <p>Product Name: Wireless speaker Product model: K50 Waterproof grade: IPX7 Transmission distance: ≤ 10 m D C power supply: maximum 5V 2A Battery capacity: 5000 mAh Charging time: 4-5 hours Product size: 130 * 105 * 105 mm Sensitivity: 87dB ± 3dB</p>	<p>INTERFACE&KEY DESCRIPTION 02</p> <p>III Interface&Key Description</p>  <p>1. Switch on/off mode switch indicator light / TWS connection 2. Bluetooth light: flickering when not connected, always on when connected 3. EQ switch playback pause/answer/end call/ disconnect Bluetooth 4. Volume+/Next Song 5. Volume -/Previous track 6. 3.5mm AUX audio input 7. TypeC charging interface 8. Charging lamp 9. TF card interface 10. USB interface</p>	<p>INTERFACE&KEY DESCRIPTION 03</p> <table border="1"> <thead> <tr> <th>Key</th> <th>Action</th> <th>Function description</th> </tr> </thead> <tbody> <tr> <td>Power</td> <td>Short press</td> <td>Mode switch: Bluetooth/AUX/TF/USB playback.</td> </tr> <tr> <td></td> <td>Long press</td> <td>Long press for 3 seconds to turn on/off.</td> </tr> <tr> <td></td> <td>Double click</td> <td>to initiate TWS pairing. Once pairing is successful, you can double click to disconnect the TWS connection.</td> </tr> <tr> <td>EQ</td> <td>Short press</td> <td>Pause / Play .</td> </tr> <tr> <td></td> <td>Double click</td> <td>switch EQ mode .</td> </tr> <tr> <td></td> <td>Long press</td> <td>Hold down for 3 seconds to disconnect the Bluetooth connection.</td> </tr> <tr> <td>(Answer call)</td> <td>Short press</td> <td>Short press to answer the call and short press to hang up the call during the call</td> </tr> <tr> <td>+</td> <td>Short press</td> <td>Volume plus</td> </tr> <tr> <td></td> <td>Long press</td> <td>Next song</td> </tr> <tr> <td>-</td> <td>Short press</td> <td>Volume down</td> </tr> <tr> <td></td> <td>Long press</td> <td>Previous song</td> </tr> <tr> <td>+-</td> <td>Simultaneously</td> <td>Simultaneously press and hold for 2 seconds to turn on/off the light effect.</td> </tr> </tbody> </table>	Key	Action	Function description	Power	Short press	Mode switch: Bluetooth/AUX/TF/USB playback.		Long press	Long press for 3 seconds to turn on/off.		Double click	to initiate TWS pairing. Once pairing is successful, you can double click to disconnect the TWS connection.	EQ	Short press	Pause / Play .		Double click	switch EQ mode .		Long press	Hold down for 3 seconds to disconnect the Bluetooth connection.	(Answer call)	Short press	Short press to answer the call and short press to hang up the call during the call	+	Short press	Volume plus		Long press	Next song	-	Short press	Volume down		Long press	Previous song	+-	Simultaneously	Simultaneously press and hold for 2 seconds to turn on/off the light effect.
Key	Action	Function description																																								
Power	Short press	Mode switch: Bluetooth/AUX/TF/USB playback.																																								
	Long press	Long press for 3 seconds to turn on/off.																																								
	Double click	to initiate TWS pairing. Once pairing is successful, you can double click to disconnect the TWS connection.																																								
EQ	Short press	Pause / Play .																																								
	Double click	switch EQ mode .																																								
	Long press	Hold down for 3 seconds to disconnect the Bluetooth connection.																																								
(Answer call)	Short press	Short press to answer the call and short press to hang up the call during the call																																								
+	Short press	Volume plus																																								
	Long press	Next song																																								
-	Short press	Volume down																																								
	Long press	Previous song																																								
+-	Simultaneously	Simultaneously press and hold for 2 seconds to turn on/off the light effect.																																								

<p>FUNCTION INSTRUCTIONS 04</p> <p>IV Function Instructions</p> <p>Bluetooth connection: Press and hold the power button for 3 seconds to turn on the phone, and the device will enter Bluetooth mode. The blue light on the power button icon will flash quickly to enter pairing status. The phone will search for the Bluetooth name "Jinyun K50" and click to connect.</p> <p>TF card/USB drive/Axin mode: Insert the TF card into the corresponding card slot, recognize the file and automatically play it (TF card supports up to 32G). Connect any audio device with a 3.5mm jack and connect it to an AUX audio cable for playback.</p> <p>TWS function: 1. Turn on both speakers (* If there is a Bluetooth device connected, the Bluetooth connection must be disconnected first). 2. Double click on the "On/Off" button of one of the speakers to enter TWS pairing, and there will be a prompt tone; Paired successfully. 3. At this point, open the Bluetooth device and search for the Bluetooth name "jinyun - k50". Click to connect. Play music and enjoy wireless stereo sound effects. 4. When TWS is connected, double-click the "On/Off" button to disconnect TWS pairing.</p> <p>Precautions: Before charging, please check the specifications of the charger. Do not use a fast or high voltage charger to charge the machine. For the sake of hearing health, do not use it at maximum volume for a long time. Please do not use near fire sources or high temperature environments to avoid permanent damage to the product; Please strictly follow the instructions and do not modify or disassemble the product without authorization. Do not drop, impact, strike, squeeze or engage in other behaviors that seriously affect the product structure to avoid damaging the strength and reliability of the product. If abnormal conditions such as high temperature, deformation, and corrosion are encountered during use, please immediately stop using and contact the merchant for proper handling.</p>	<p>COMMON PROBLEM HANDLING 05</p> <p>V After-sales service description</p> <p>Dear users, thank you very much for using our products. In order to effectively protect your rights and interests, it is clear that the distribution agents and the company should undertake the maintenance, replacement and return of products (hereinafter referred to as "three guarantees") responsibilities and obligations, please read the matters:</p> <p>1. The Product Warranty Card is the necessary proof for our company to provide free after-sales service within the warranty period. 2. According to the principle of "three guarantees", if there is a product quality problem, contact the distributor with the "Product warranty card", and the distributor will provide service to the customer, and our company will provide service support to the distributor; 3. The company promises that if any quality problem occurs within 7 days from the date of sale (subject to the date of valid bill, the same below), the customer can return the product now for replacement or repair; From the date of sale from 8 days to 15 days of quality problems, customers can choose to replace and repair; From the date of sale. Within one year quality problems, customers can free maintenance; The product will enjoy lifelong maintenance if quality problems occur after the warranty period (all after-sales service points only charge for components and materials); Please fill in the "Product Warranty Card" with the dealer carefully.</p> <p>4. The following circumstances do not enjoy the three-guarantee service: (1) Exceeding the term of three contracts; (2) Damage caused by failure to use, maintain and keep the product according to the instructions; (3) Damage caused by disassembly by the repairman who is not responsible for the three packages; (4) The content of the Product Warranty Card is inconsistent with the physical identification of the product or altered; (5) Damage caused by force majeure.</p>	<p>PRODUCT WARRANTY CARD 06</p> <p>Product model : _____ Purchase date : _____ Agent : _____ Invoice date : _____ Telephone : _____ Customer Name : _____ Postal Code : _____</p> <div style="text-align: center;">  <p>Pass QC 01 Qualified</p> <p>Examination clerk This product has been inspected and found to be qualified</p> </div>	<p>Attention: The product is equipped with a rechargeable lithium battery. Please do not disassemble or replace it by yourself. Use the correct method to charge the device. Do not place the device near a fire source or expose it to direct sunlight, otherwise the battery heating will damage the safety device and cause the battery to explode or burn.</p> <p>Made in China</p> <p>CE FC  </p>
---	--	---	---

FCC Caution:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception,

which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.