

Bluetooth Karaoke Microphone

I. Basic Button Operation

1.  Long Press: ON/OFF

Short Press: Mode switching

2. 

Press: the previous song

3. 

Press: the next song

4. 

Short Press: Play/Pause.

Long Press: Turn on/off LED lights.

5. 

Short Press: Mic ON/OFF

Long Press: change different magic sounds
(Under karaoke mode).

6. "VOL+"

Increase music volume

7. "VOL-"

Decrease music volume

8. "MIC +" and "MIC -"

Gradually push to adjust the sound of mic

9. REMIX

Gradually push to make your voice better

II. Multi-function Operation

Wireless Karaoke

1. Turn on the power: long press power button  to turn on the microphone.

2. Bluetooth connection: Open the Bluetooth of the mobile phone, click it to connect "OVELLIC-868L", and the prompt sound appears to indicate successfully connection

3. Turn on the music on your phones or Pads.
(Don't need to download a special App, just use some normal audio software, such as Spotify, iTunes, YouTube etc.)

4. Start Karaoke and adjust some setting according the Basic Button Operation

Bluetooth Speaker Function

1. Plug the TF card with music and play music, the microphone can be used as a Bluetooth speaker.

2.  Short press to switch the music modes
(Original sing Accompaniment)

Recording with mobile phone

1. Connect the recording wire: Insert the Micro cable of the recording wire into the Micro interface of microphone, and plug the 3.5mm jack into the earphone jack of the mobile phone.

2. Open the Karaoke software with recording function in the mobile phone, record the song according to the the instructions of Karaoke software, then select your favorite song and star singing.

3. Test and save the song: According to the instructions of Karaoke software.

Selfie function

1. Short press the button 

to switch from Bluetooth mode to selfie mode

2. Connect the Bluetooth in the mobile phone, search Bluetooth "shutter".click it for connection.

3. Turn on the camera of the mobile phone, press the button  or  to take photos.

Note: This microphone can support both Android mobile phone(Above Android 4.2.2) and iPhone IOS system(Above IOS 6.0). It doesn't support the mobile phone which has a separate physical button to take photos

Radio Mode

1. Short press the button 

to switch from selfie mode to Radio mode.

2. Long press the button 

to search FM Channel automatically.

Technical Parameters

Output Power: 5W

Frequency Range: 100HZ-10KHZ

Max Sound Pressure Level: >115DB 1KHZ TDH<1%

Reverberation Mode: sound effect reverberation

Power Supply: Built-in 18650 Li-Battery

Battery Capacity: 3000 mAh

Charging Power: DC 5V

Remind:

The microphone's switch key is on the top of the panel, not on the surface of the panel.

If the port on the bottom is not aligned, you can manually turn the cover to align the port.

FREE WARRANTY:

We offer 3 years free warranty for quality problems.

If the product has any quality problems, we are willing to send you new products for free.

Please contact us first and we will assist to make everything right.

After-sale contact :

ovellic@outlook.com

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.