

COMMON PROBLEMS AND SOLUTIONS

Problems	Cause	Solutions
The car will not respond to the controller's command!	1. The car failed to connect with the controller, or the power switch was not turned on. 2. The controller or the car's battery was not installed correctly. 3. The controller or the car's battery was in low power.	1. Turn on the switch again and repeat the operation of the signal connection. 2. Check and reinstall the batteries correctly according to the instruction manual. 3. Please fully charge the car battery or replace new batteries for the controller.
The car is out of control or the control range is shorter than it should be!	The batteries of the remote control are low or the power of the battery pack is weak.	Replace the fully charged batteries.
The car runs slowly or can not run!	1. The electronic component was damaged and a short circuit happened or the car was stuck by something. 2. The inside gear was worn. 3. The battery was in low power.	1. Check for stripped or dirty gears, clean all bushings or ball bearings, and contact our customer service. 2. Replace or charge the battery.

FCC INSTRUCTIONS

CAUTION

Changes or modifications that are not expressly approved by the party responsible for compliance may cause the user to lose the authority to operate the product.

NOTE

This product has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This product generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If the product does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

1. Reorient or relocate the receiving antenna.
2. Increase the separation between the product and receiver.
3. Connect the product into an outlet on a circuit different from that to which the receiver is connected.
4. Consult the dealer or an experienced radio/TV technician for help.

The device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
1. This device may not cause harmful interference
2. This device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet the general RF exposure requirement. The device can be used in portable exposure conditions without restriction.

FCC ID:2AD4VRQ2059

Lab: AGC

WARNING:
CHOKING HAZARD-Small parts.
Not for children under 3 years old.



Made in China

6+ AGES

0-3

4

5

6

7

8

9

10

11

12

13

14

15

16

17

18

19

20

21

22

23

24

25

26

27

28

29

30

31

32

33

34

35

36

37

38

39

40

41

42

43

44

45

46

47

48

49

50

51

52

53

54

55

56

57

58

59

60

61

62

63

64

65

66

67

68

69

70

71

72

73

74

75

76

77

78

79

80

81

82

83

84

85

86

87

88

89

90

91

92

93

94

95

96

97

98

99

100

101

102

103

104

105

106

107

108

109

110

111

112

113

114

115

116

117

118

119

120

121

122

123

124

125

126

127

128

129

130

131

132

133

134

135

136

137

138

139

140

141

142

143

144

145

146

147

148

149

150

151

152

153

154

155

156

157

158

159

160

161

162

163

164

165

166

167

168

169

170

171

172

173

174