

ARMATURA

User Manual

AMTL-UHF-10

Date: April 2024

Version: 1.0

About This Manual

- This manual introduces the operation of user interfaces and menu functions of **AMTL-UHF-10**.
- The pictures in this manual may not be exactly consistent with those of your product; the actual product's display shall prevail.
- Not all the devices have the function with ★, which the real product prevails.

Table of Contents

- 1 OVERVIEW3
- 2 SIDE VIEW & WIRING4
- 3 SPECIFICATIONS5
- 4 DIMENSIONS6
- 5 DEVICE CONNECTION7
 - 5.1 LOCK CONNECTION7
 - 5.2 BARRIER CONNECTION8
 - 5.3 CONNECTED WITH OTHER PARTS9
 - 5.4 CONNECTED WITH POWER9
 - 5.5 WIEGAND OUTPUT & INPUT9
 - 5.6 CONNECTED WITH COMPUTER10
- 6 INSTALLATION PROCEDURE 11
 - 6.1 INSTALL THE READER 11
 - 6.2 INSTALL THE UHF CARD 12
- 7 RECOMMENDED TAGS 14
- 8 SOFTWARE CONFIGURATION 15
 - 8.1 LOGIN 15
 - 8.2 LIVE 16
 - 8.3 SETUP 16
 - 8.3.1 DEVICE INFORMATION 17
 - 8.3.2 TIME SETTINGS 17
 - 8.3.3 DATA MANAGEMENT 18
 - 8.3.4 COMM CONFIGURATION 18
 - 8.3.5 NETWORK SETTINGS 19
 - 8.3.6 USER MANAGEMENT 20
 - 8.3.7 FIRMWARE UPGRADE 20
 - 8.3.8 RESTORE 21
 - 8.3.9 PASSWORD SETTINGS 23
 - 8.3.10 UHF READER SETTINGS 23
 - 8.3.11 DEVELOPER 24
 - 8.4 Log26
- ECO-FRIENDLY OPERATION27
- FCC WARNING28

1 Overview


AMTL-UHF-10 is Armatura's latest third-generation UHF reader, featuring enhanced stability, an extended reading range, and quicker recognition. It utilizes a passive UHF card, making it suitable for vehicle and personnel management. It conforms to CE and FCC standards, awaiting further security certifications.



Features

- AMTL-UHF-10: UHF standalone reader terminal
- AMTL-UHF-10F Pro is suitable for FCC: 902MHz-926MHz
- AMTL-UHF-10E Pro is suitable for: 865MHz-868MHz
- Long reading distance
- Compatible with the Armatura One Security Platform
- Access control function

2 Side View & Wiring



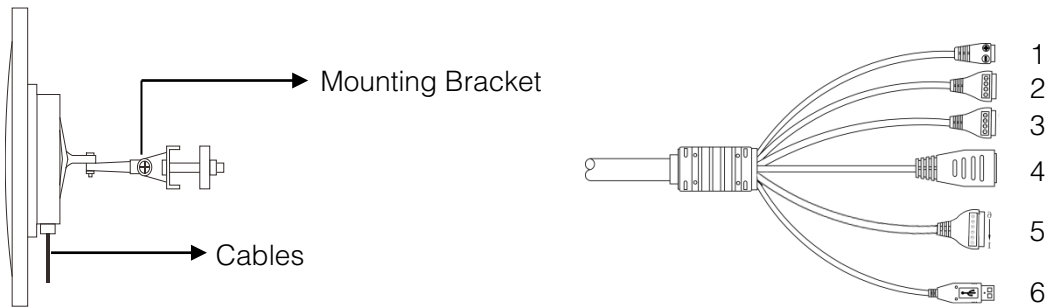


No.	PIN	Description
1	+12V	Power In
	GND	
2 (Green)	+12V	Power Out
	GND	
	IWD0	Wiegand In
	IWD1	
3 (Black)	SEN	Sensor, Button, Trigger
	BUT	
	GND	
	TRIG	
4		Ethernet
5	NO1	Lock
	COM1	
	NC1	
	NO2	Lock
	COM2	
	NC2	
6		USB

3 Specifications

Menu	Description
Card Capacity	5000 cards
Log Capacity	30,000 Transactions
Reading Distance	0 to 29.53ft (Stable is 0 to 16.40ft) 0 to 9m (Stable is 0 to 5m)
Communication	TCP / IP
Access Control Interface	Wiegand In / Out, RS485, 3rd Party Electric Lock, Door Sensor, Exit Button, Alarm
Dimension	12.17" W x 12.17" L x 2.74" H (309 x 309 x 69.5mm)
Access Control Functions	Standard access functions, anti-passback
Operating Frequency	F Series:902Mhz-928MHz; E Series:865MHz-868MHz
Antenna Gain	9dBi
Output Power	10dBm to 30dBm
Maximum Power Cosumption	<2W
Protection Level	Weather & Dust Proof Protection Rating compliant with IPxx
Supporting Software	Armatura One Security Platform
Operating Voltage	DC 9V to 12V
Operating Current	3A (Max)
Operating Temperature	-4°F to 140°F -20°C to 60°C
Operating Humidity	<95% (77°F) <95% (25°C)

4 Dimensions

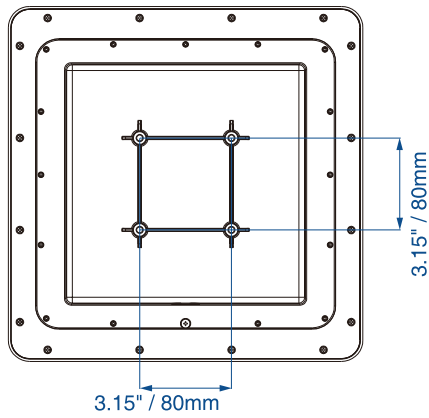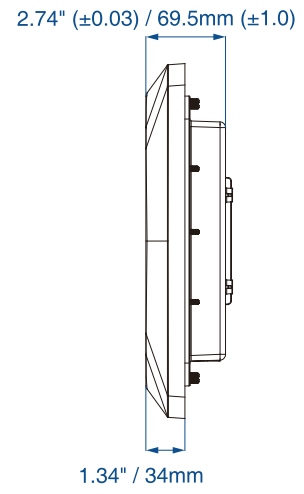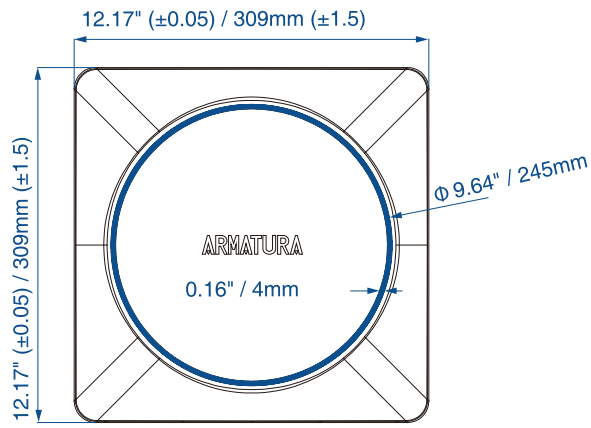


5 Device Connection

5.1 Lock Connection


Shares Power with the Lock:

$U_{LOCK}=12V, I \geq I_{Device} + I_{Lock}$ (The maximum operating current of the device is 100mA, and the rated current is 60mA); and the lock is near to the device.

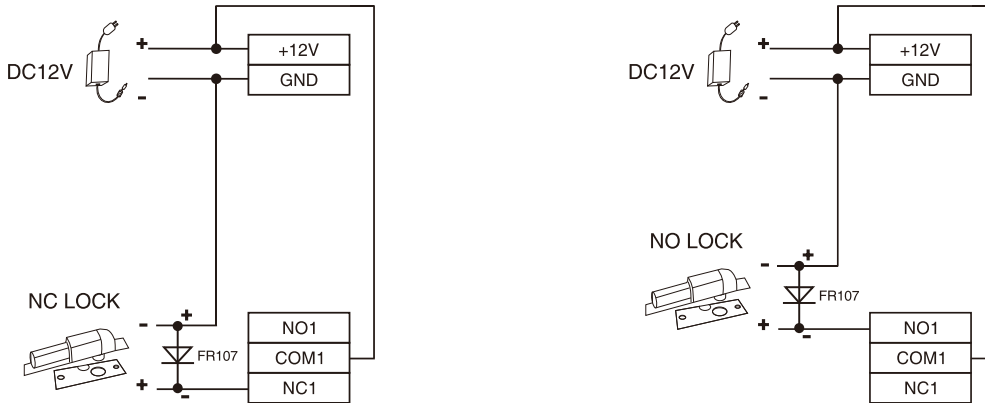

Does not Share Power with the Lock:


1. When $U_{LOCK}=12V, I < I_{Device} + I_{Lock}$ (The maximum operating current of device is 100mA, and the rated current is 60mA);
2. When $U_{LOCK} \neq 12V$;
3. When the lock is far from the device.

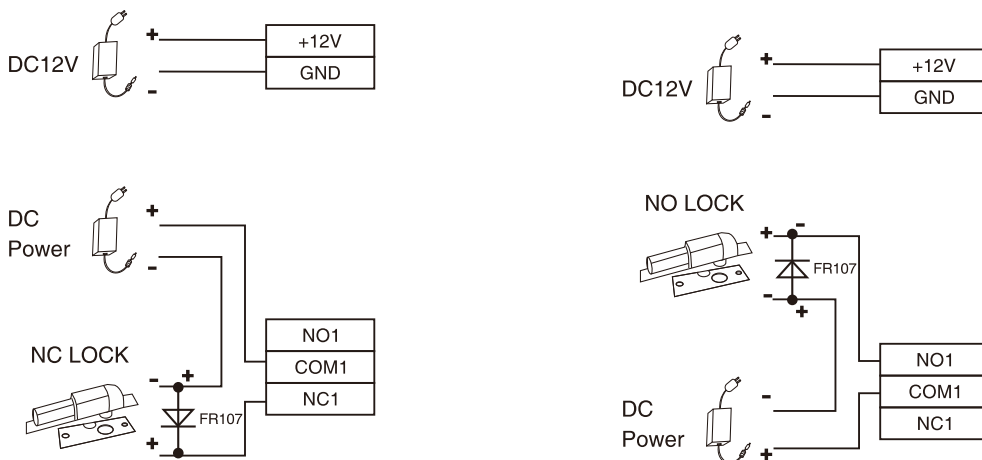


Note:

- The system supports NO LOCK and NC LOCK. The NO LOCK (normally open by power on) is connected to the NO terminal, and the NC LOCK is connected to the NC terminal.
- To prevent the generation of self-inductance EMF which would affect the system, when the electrical lock is linked to the Access Control System, it is required to connect one FR107 diode (equipped in the package, do not reverse the polarities) in parallel to release the self-inductance EMF.

5.2 Barrier Connection

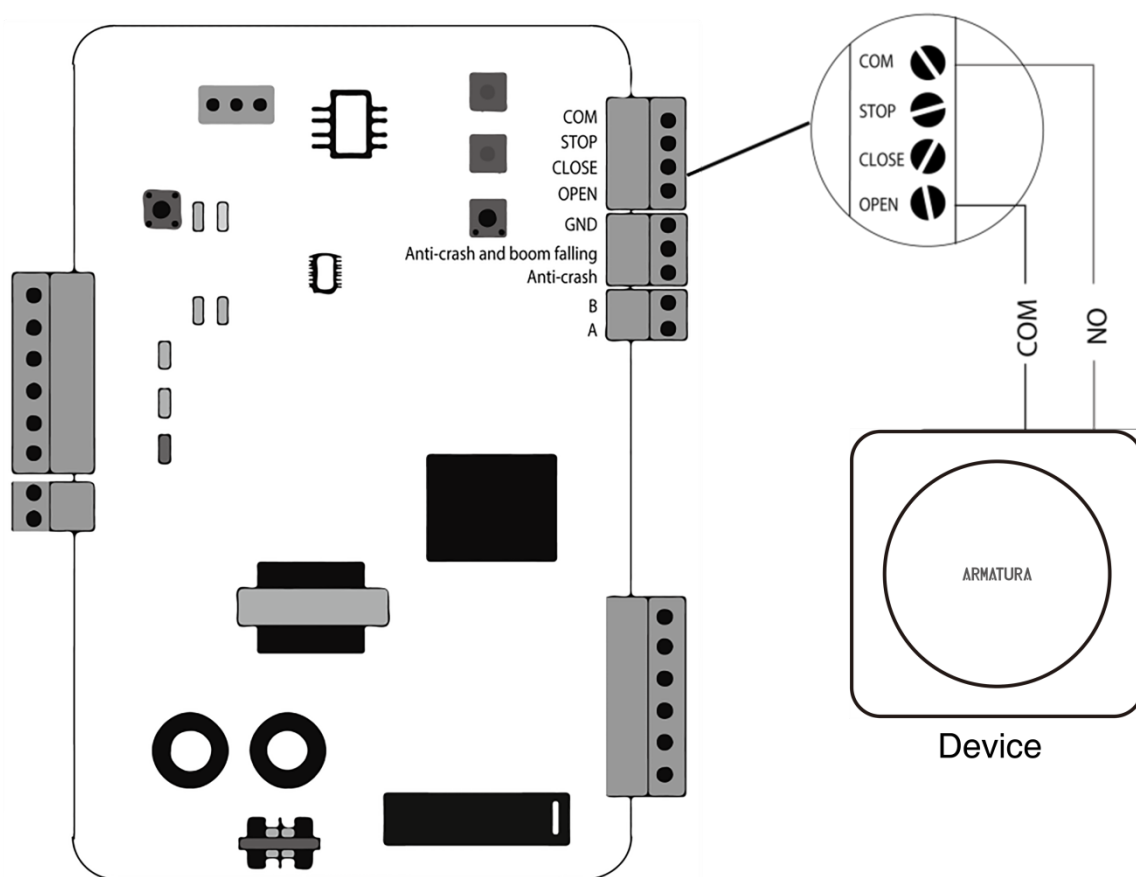


5.3 Connected with Other Parts

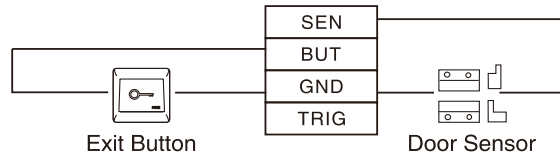

5.4 Connected with Power

Input DC12V, ≤110mA (≤80mA standby)

 
Positive is connected with +12V, and negative is connected with GND (do not reverse the polarities).



5.5 Wiegand Output & Input


Wiegand Output

The device supports standard Wiegand 26 output, as a reader device it has a very good compatibility.

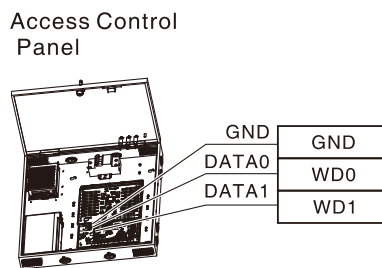

Wiegand Input

The device features Wiegand signal input capability, allowing it to connect with an independent card reader. When installed on each side of the door, they work together to control access and the lock.

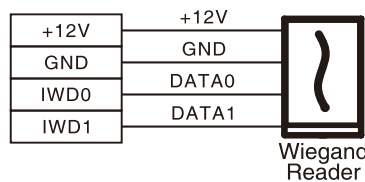


Note:

- Please keep the distance between the device and the Access Control or Card Reader less than 90 meters (Please use a Wiegand signal extender in a long distance or interference environment).
- To keep the stability of the Wiegand signal, connect the device and the Access Control or Card Reader in the same 'GND' in any case.

5.6 Connected with Computer

Connect the RJ45 port of the device to the computer's Ethernet port. The device is compatible with the Armatura One Security Platform.

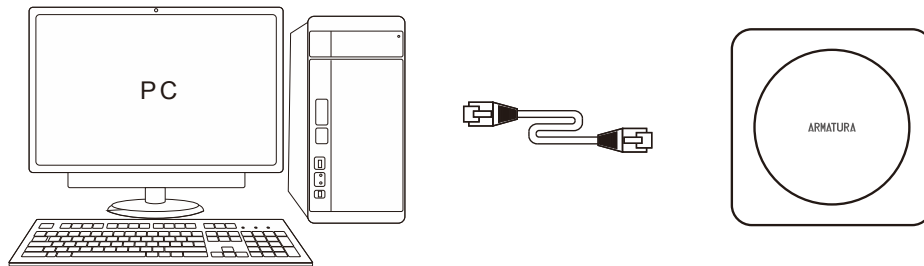


6 Installation Procedure

6.1 Install the Reader

The device uses the Hang Mounting method for installation. Please refer to the following chart for installation instructions. Mount the device on the bracket and adjust the angle according to the desired swing card effect.

Method A:

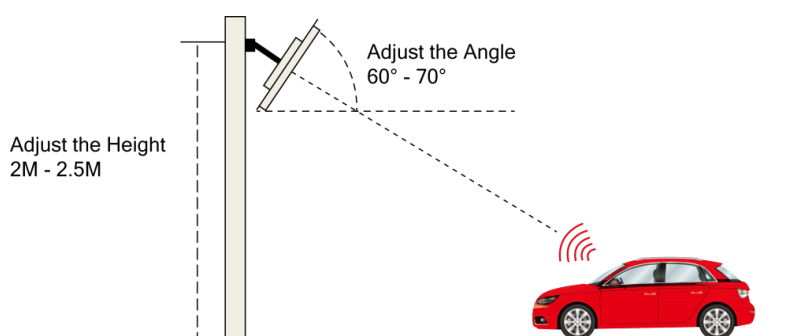


Method B:



Note:

 - Avoid installing the integrated machine facing another.



- The detection distance of the integrated machine may vary depending on weather conditions such as rain, snow, or wind.




- The device should be away from strong magnetic field when working.

6.2 Install the UHF Card


AMTL-UHF-Tag

AMTL-UHF-Tag is generally used in long distance access control management and long distance pedestrian crossing control management.

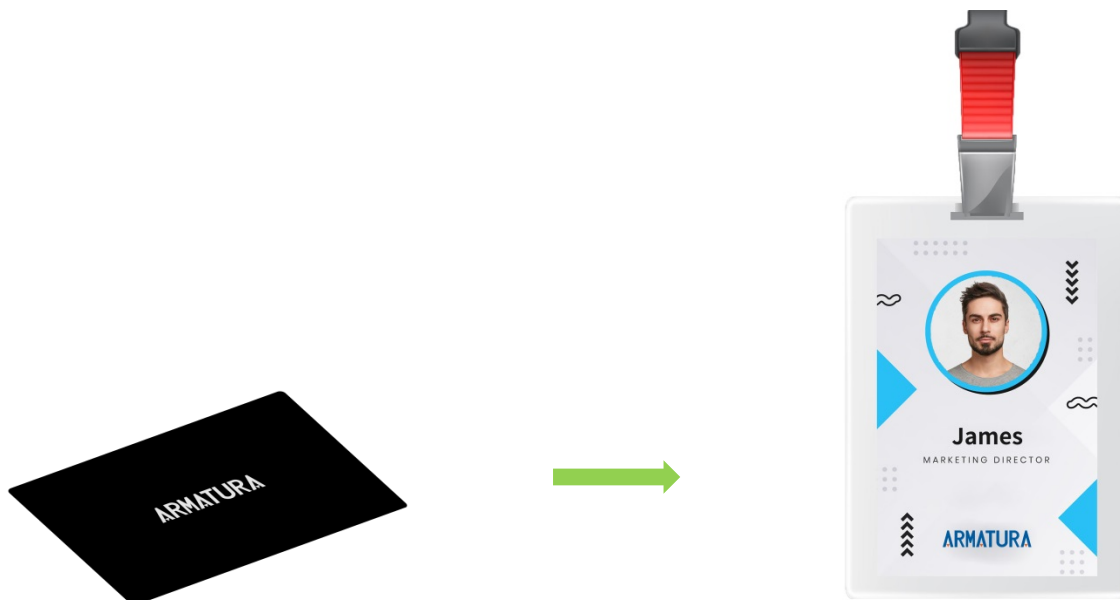


AMTL-UHF-Mini Tag


AMTL-UHF-Mini Tag is also generally used in long distance fixed vehicle access management. It is pasted on the interior windshield of the car.

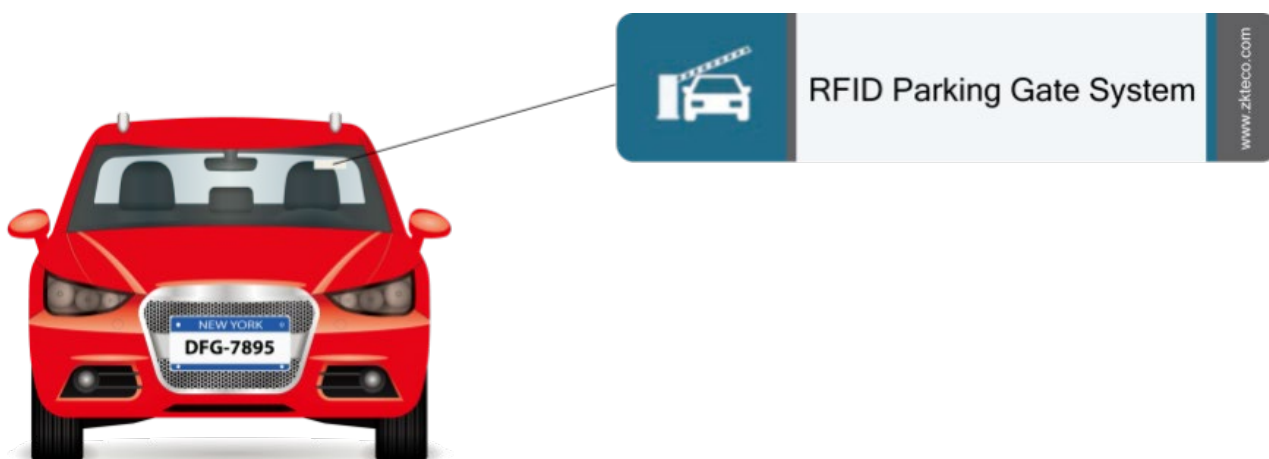

The distance between the UHF tag and the metal frame shall be 80 mm at least. The position of the tag/card in the vehicle is as follows:

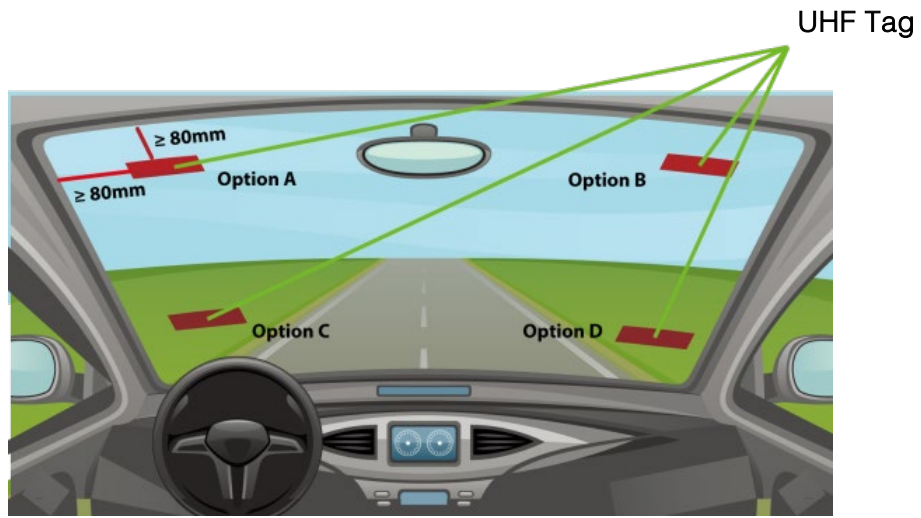

7 Recommended Tags

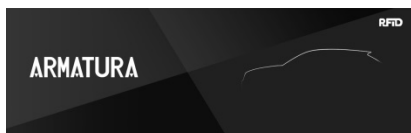


AMTL-UHF-Mini Tag



AMTL-UHF-Tag


Type	Description
AMTL-UHF-Mini Tag	Standard protocols: ISO18000-6C, EPC Gen2 (V1.2.0) Operating frequency: 860 to 960MHZ Storage capacity: 128Bits Operating temperature:-10°C to 50°C Storage temperature:-20°C to 65°C Storage humidity:40% to 50%RH Recognition distance:10m (AMTL-UHF-10)
AMTL-UHF-Tag	Standard protocols: ISO18000-6C, EPC Gen2 (V1.2.0) Operating frequency: 860 to 960MHZ Storage capacity: 128Bits Operating temperature:-30°C to 55°C Storage temperature:-10°C to 40°C Storage humidity:40% to 50%RH Recognition distance:11m (AMTL-UHF-10)

8 Software Configuration

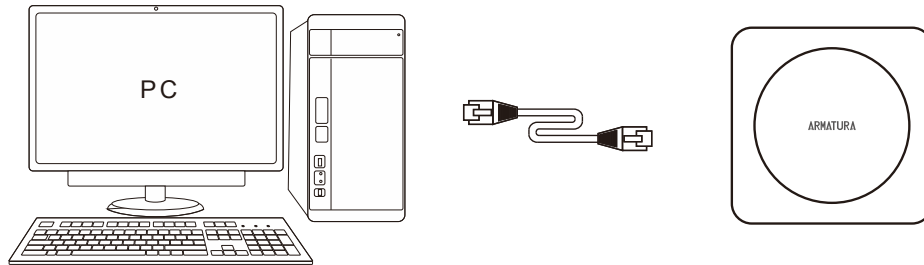

8.1 Login

Enter the IP Address (default: 192.168.1.201) of the device in the address bar of a web browser. The address format should be **https://IP Address**. For example: <https://192.168.1.201>. Then enter the Username (default: admin) and password (default: 123456), as displayed in the below figure.

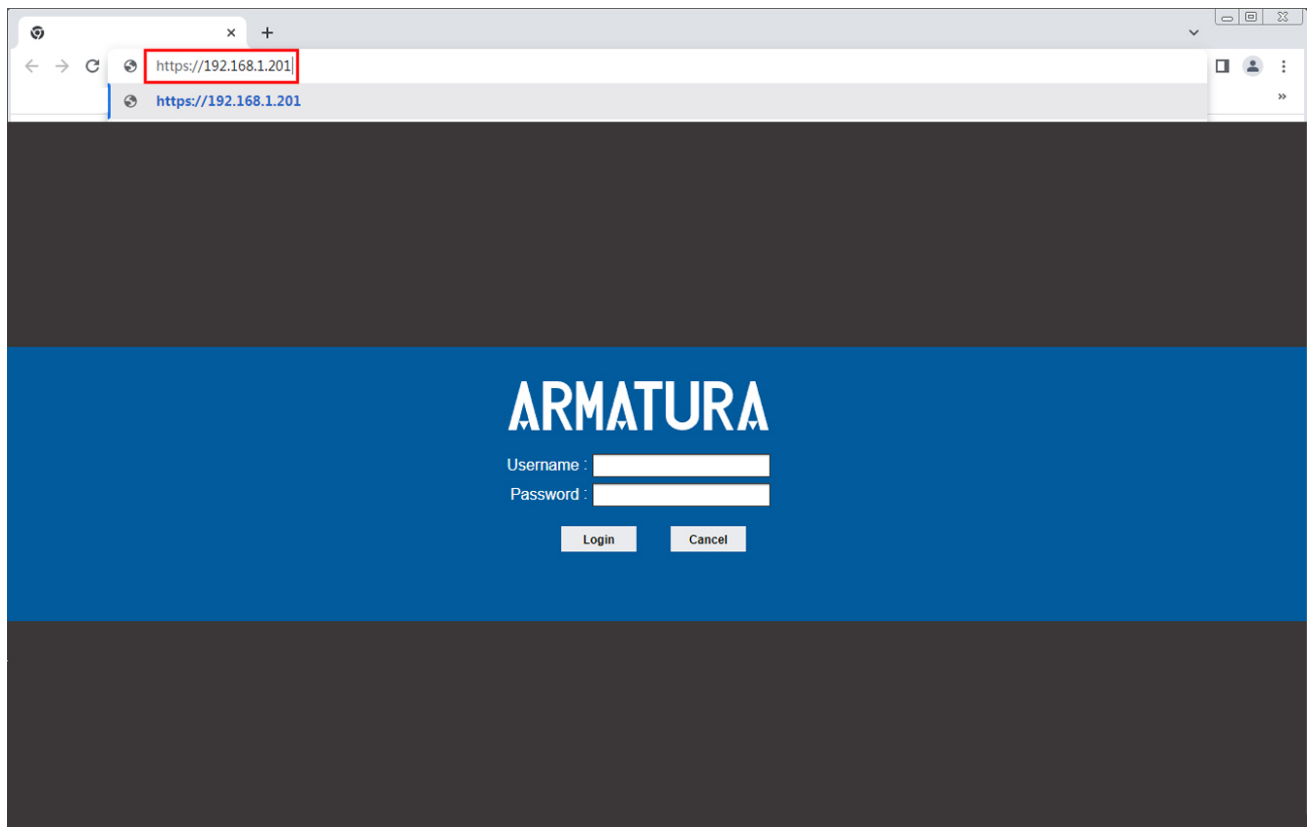

8.2 Live

After successful login, you will be directed to the **live** page. On the page, the left side displays real-time card information whenever the reader reads the card, and the right side displays basic information about the device.

The screenshot shows the 'Live' page of the ARMATURA interface. At the top, there are navigation buttons for 'Live', 'Setup', and 'Log'. The main content is divided into two sections: 'Live Event' and 'Device Information'.

ID	Time	Event	CardNo	PIN	Event Address	Verify Type
245687	2024-04-17 10:18:14	Verification failed	2b43a6 (HEX)	0	1	Only Card
245686	2024-04-17 10:18:12	Verification failed	2b43a6 (HEX)	0	1	Only Card
245685	2024-04-17 10:18:10	Verification failed	2b43a6 (HEX)	0	1	Only Card
245684	2024-04-17 10:18:08	Verification Success	11d9f (HEX)	11	1	Only Card
245683	2024-04-17 10:18:05	The swipe interval is too short	(HEX)	0	1	Other
245682	2024-04-17 10:18:04	Verification Success	11d9f (HEX)	11	1	Only Card
245681	2024-04-17 10:18:02	Verification Success	11d9f (HEX)	11	1	Only Card
245680	2024-04-17 10:17:58	Verification failed	2b43a6 (HEX)	0	1	Only Card
245679	2024-04-17 10:17:56	Verification failed	2b32ca (HEX)	0	1	Only Card
245678	2024-04-17 10:17:54	Verification failed	2b43a6 (HEX)	0	1	Only Card
245677	2024-04-17 10:17:52	Verification failed	2b43a6 (HEX)	0	1	Only Card
245676	2024-04-17 10:17:50	The swipe interval is too short	(HEX)	0	1	Other
245674	2024-04-17 10:17:48	The swipe interval is too short	(HEX)	0	1	Other
245673	2024-04-17 10:17:47	Verification Success	11d9f (HEX)	11	1	Only Card
245672	2024-04-17 10:17:43	Verification Success	11d9f (HEX)	11	1	Only Card
245671	2024-04-17 10:17:39	Verification failed	2b43a6 (HEX)	0	1	Only Card
245670	2024-04-17 10:17:37	Verification failed	2b32ca (HEX)	0	1	Only Card
245669	2024-04-17 10:17:35	Verification Success	11d9f (HEX)	11	1	Only Card
245668	2024-04-17 10:17:33	Verification failed	2b32ca (HEX)	0	1	Only Card
245667	2024-04-17 10:17:31	Verification failed	2b43a6 (HEX)	0	1	Only Card
245666	2024-04-17 10:17:27	Verification failed	2b43a6 (HEX)	0	1	Only Card
245665	2024-04-17 10:17:25	Verification Success	11d9f (HEX)	11	1	Only Card
245664	2024-04-17 10:17:22	The swipe interval is too short	(HEX)	0	1	Other
245663	2024-04-17 10:17:21	Verification Success	11d9f (HEX)	11	1	Only Card
245662	2024-04-17 10:17:19	Verification failed	2b32ca (HEX)	0	1	Only Card
245661	2024-04-17 10:17:17	Verification failed	2b32ca (HEX)	0	1	Only Card
245660	2024-04-17 10:17:15	The swipe interval is too short	(HEX)	0	1	Other

The 'Device Information' section on the right shows: Device Name U1000 Pro, Online Status Offline, and Firmware Ver AC Ver 4.7.8.3033 Apr 11 2024.

8.3 Setup

Click **[Setup]** in the navigation bar at the top of the page to enter the setup page, in this page you can view or modify the functions and parameters of the device information, including Device Information, Time Settings, Data Management, Comm Configuration, Network Settings, User Management, Firmware Upgrade, Restore, Password Settings, UHF Reader Settings and Developer.


The screenshot shows the 'Setup' page of the ARMATURA interface. The 'Network Settings' section is active, displaying various configuration fields:

- IP Address: 192.168.130.66
- Subnet Mask: 255.255.255.0
- Gateway: 192.168.130.1
- DNS 1: 0.0.0.0
- DNS 2: (empty)
- MAC: 00:17:61:03:C4:0B
- HTTP Port: 80
- TCP Port: 14370

A 'Save' button is located at the bottom right of the configuration area.

8.3.1 Device Information

Click [Device Information] on the Setup.

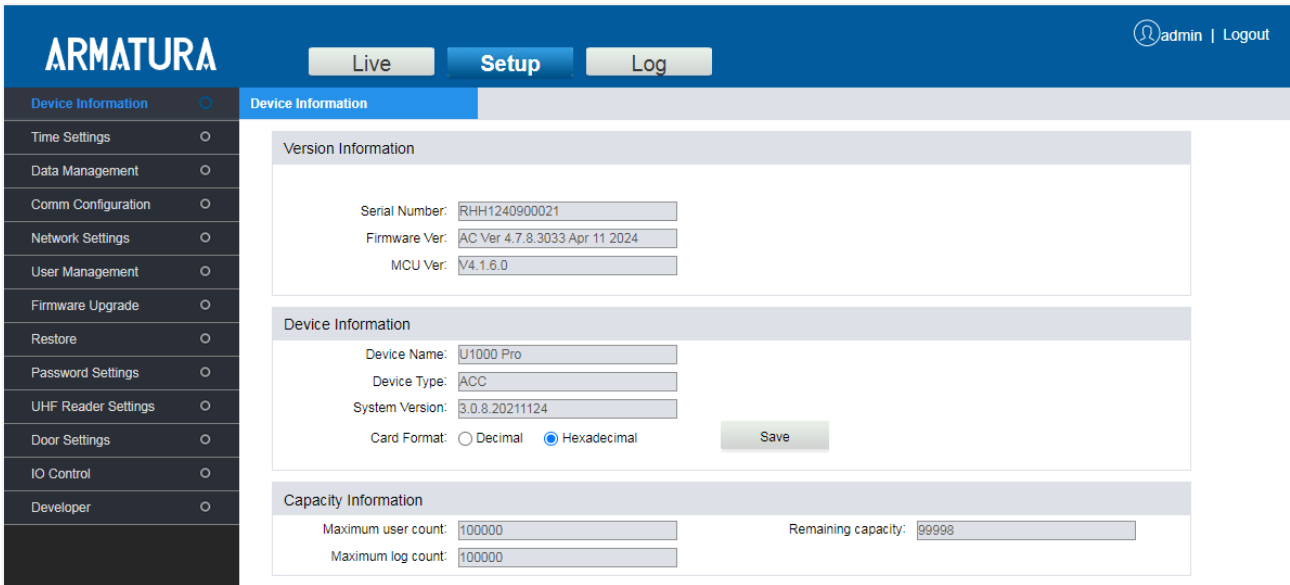

Version Information

- **Version Information:** Displays the basic parameters of the device, including serial number, firmware version, and MCU version.

Device Information

- **Device Information:** Displays the device name, device type, and system version, and sets the card format.
- Click [Save] after setting the parameters.


Capacity Information

- Displays the maximum user count, remaining capacity, and maximum log count of the current device.

8.3.2 Time Settings

The Time Settings is used to set the system date and time. The user can choose to synchronize with the local system, or set the time manually. After setting the time as needed, [Save] users can click [Save] to apply the changes.

Click [Time Settings] on the Setup.

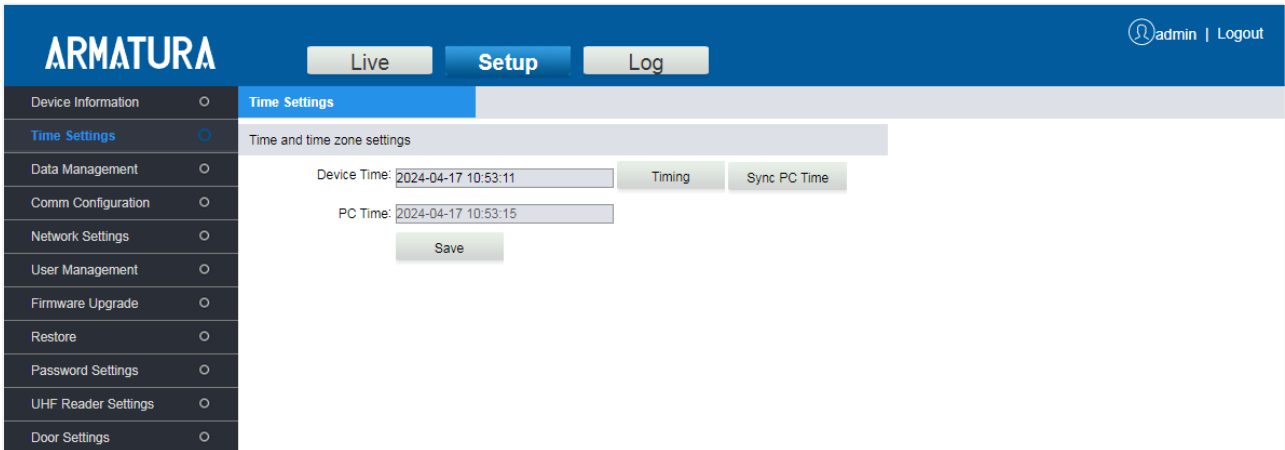


- **Set the time manually:** Enter the date and time manually and click **[Timing]** to save the changes.
- **Synchronize with Local System:** Click **[Sync PC Time]**, and the time will be consistent with the local computer.
- Click **[Save]** after setting the parameters.

8.3.3 Data Management

This option is used for the management of specific data such as allowlist. The user can import, export, and clear the data as needed to meet their requirements.

Click **[Data Management]** on the Setup.

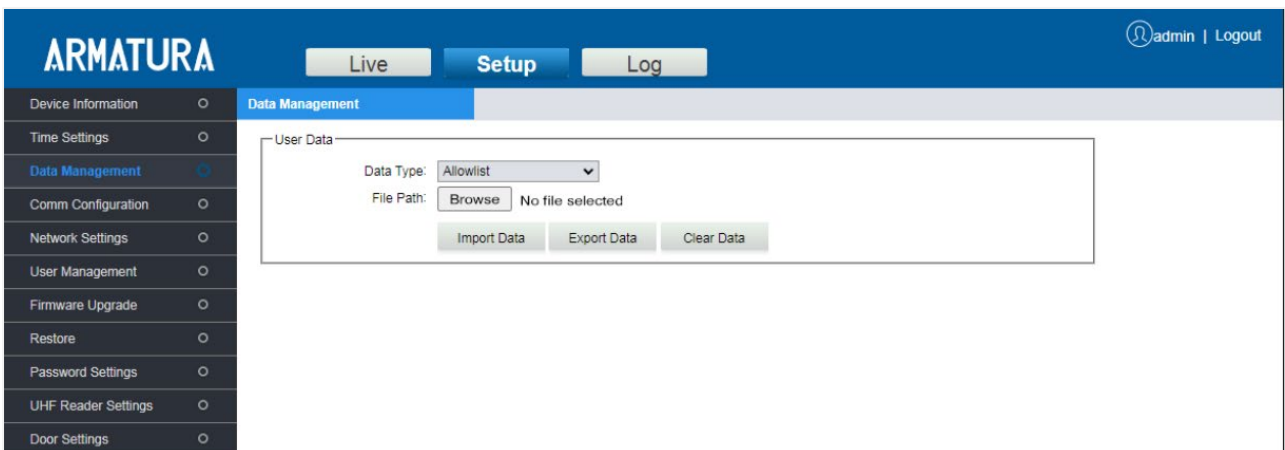


8.3.4 Comm Configuration

Push protocol allows to communicate with various software platforms. To use this feature, set the corresponding parameters here.

Note: Parameters in the POMS Configuration need to be set only when communicating with the Parking Operation and Maintenance System.

Click [Comm Configuration] on the Setup.

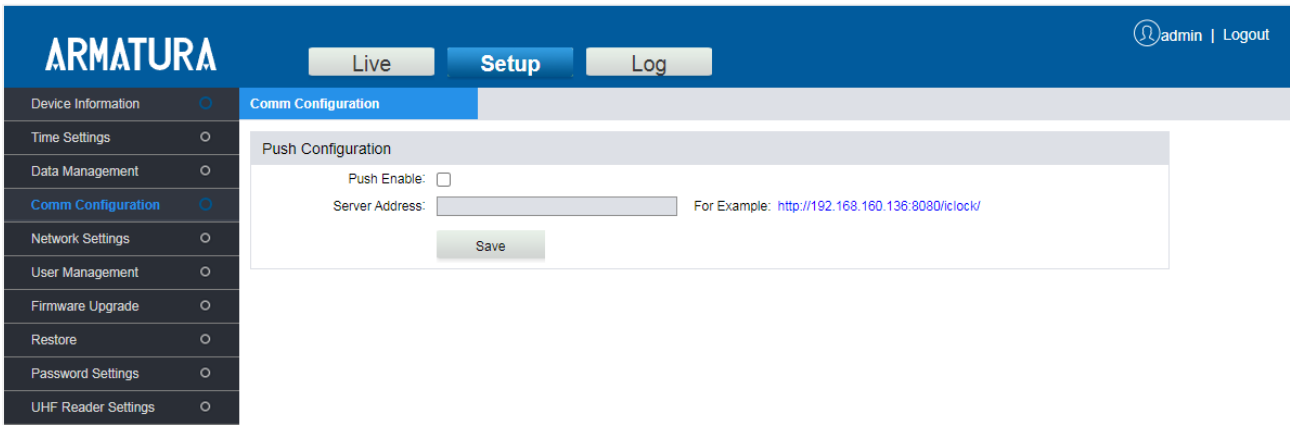


- **Push Enable:** Select the check box to enable this feature.
- **Server Address:** Enter the server address of the push configuration.
- Click [Save] after setting the parameters.

8.3.5 Network Settings

Here, the user can view or set the device network parameters.

Click [Network Settings] on the Setup.

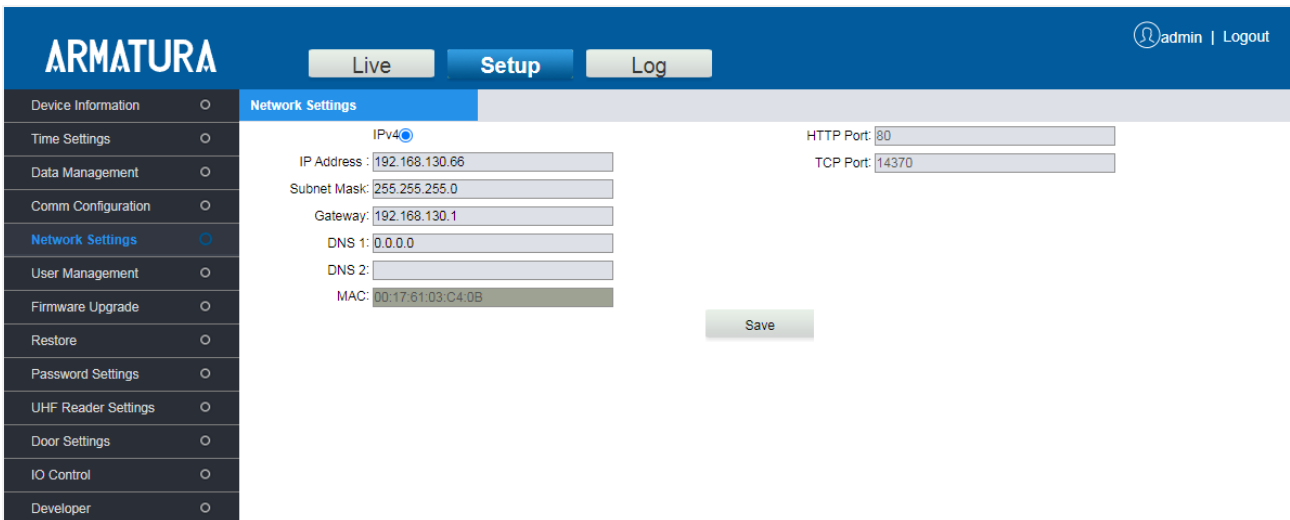


- **LAN:** Set the related parameters of the Local Area Network, including IP Address, Subnet Mask, Gateway, DNS, and MAC according to the actual situation.
- **HTTP Port:** Enter the corresponding port (the default port number is 80).
- **TCP Port:** Enter the corresponding port (the default port number is 14370).
- Click [Save] after setting the parameters.

8.3.6 User Management

Modification preferences differ based on user roles, Administrators can modify the modification passwords and user types of all users. They can also add new users, delete users, and set user rights. Normal users can only modify their passwords and user types.

Click **[User Management]** on the Setup.

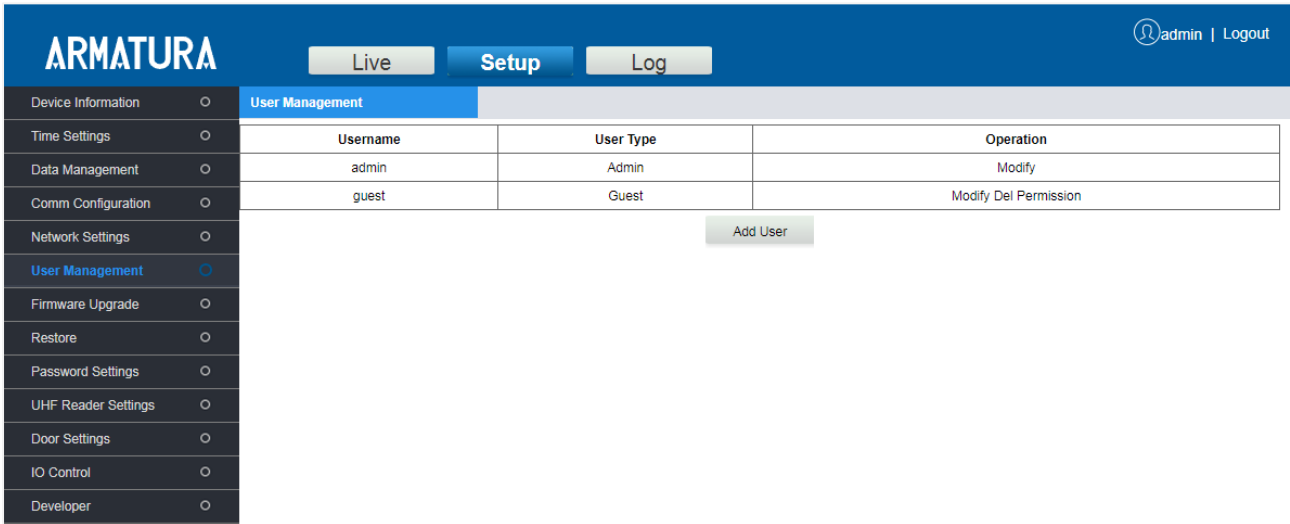

- **Modify:** Modify the user password and user type.
- **Del:** The administrator can delete all users in the user list.
- **Permission:** Administrators can set permissions for normal users
- **Add User:** Administrators can add new users.


Note:

- a) Username, Password may consist of a to z, 0 to 9, underscores, and a single dot (.), 1 to 15 characters. Password is case-sensitive.
- b) When the username or password is modified, it is required to log in again to update the change.

8.3.7 Firmware Upgrade

To upgrade the device firmware, click **[Browse]** and select the firmware upgrade file in the format of .tgz, and click **[Update]**. After upgrading the firmware, restart the device.


Click **[Firmware Upgrade]** on the Setup.

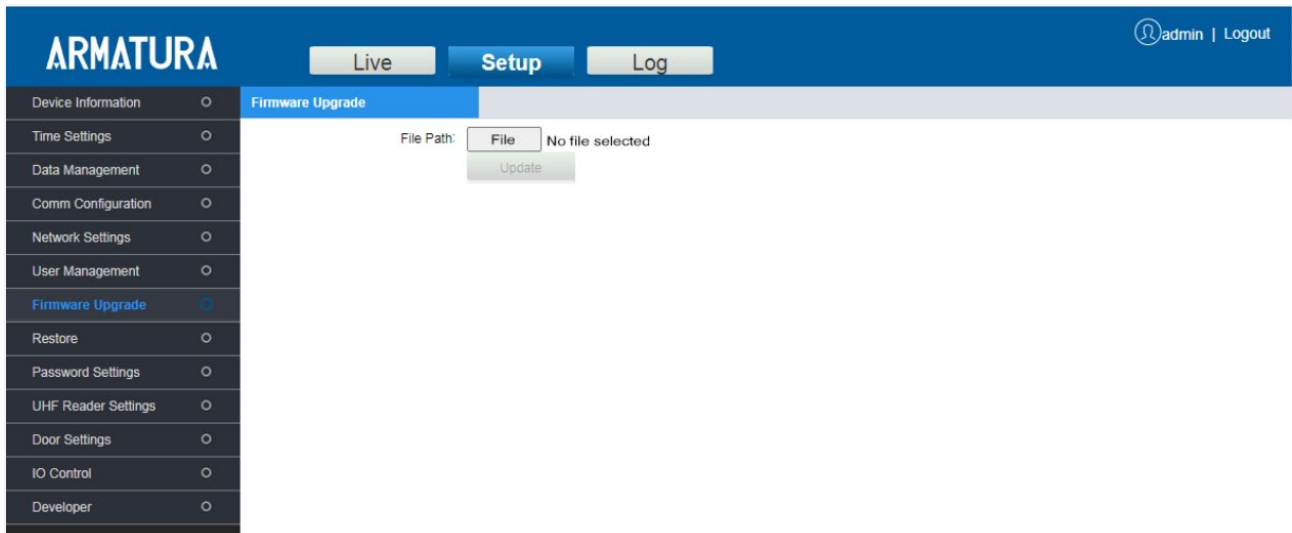

Note: Contact the corresponding technician for an upgrade package or remote upgrade support.


8.3.8 Restore

Click [**Restore**] on the Setup.

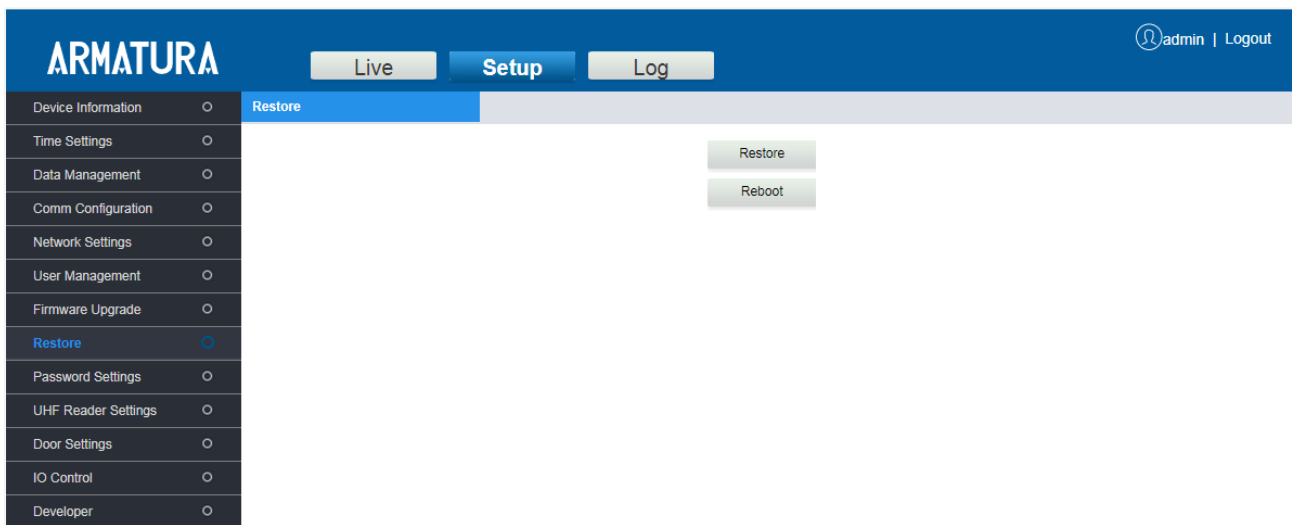


Restore

Restores the device parameter settings. With this function, all the settings of the device can be restored to factory default values. Click [**Restore**], select the parameters to be restored, and click [**OK**].

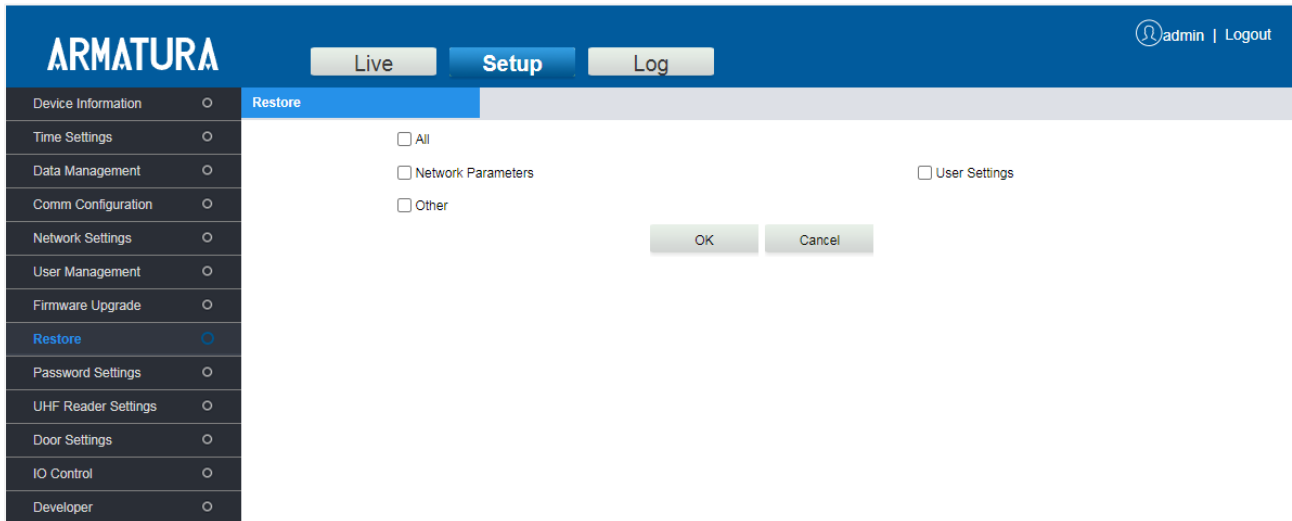

Reboot


It restarts the system.

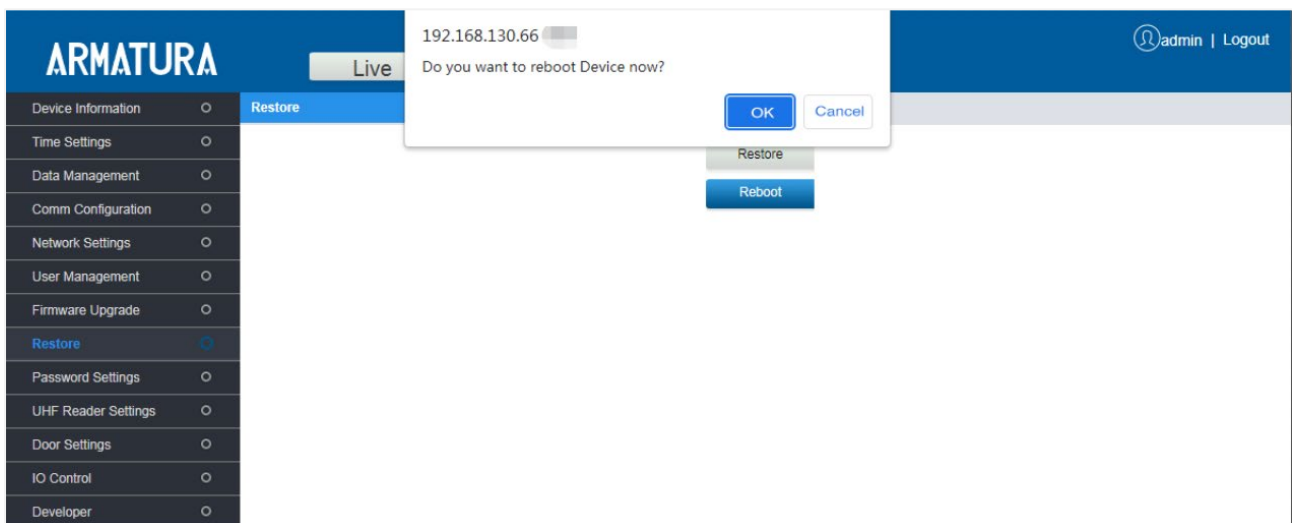

8.3.9 Password Settings


For security reasons, you can set passwords for Communication and Data on the device.

Click [Password Settings] on the Setup.

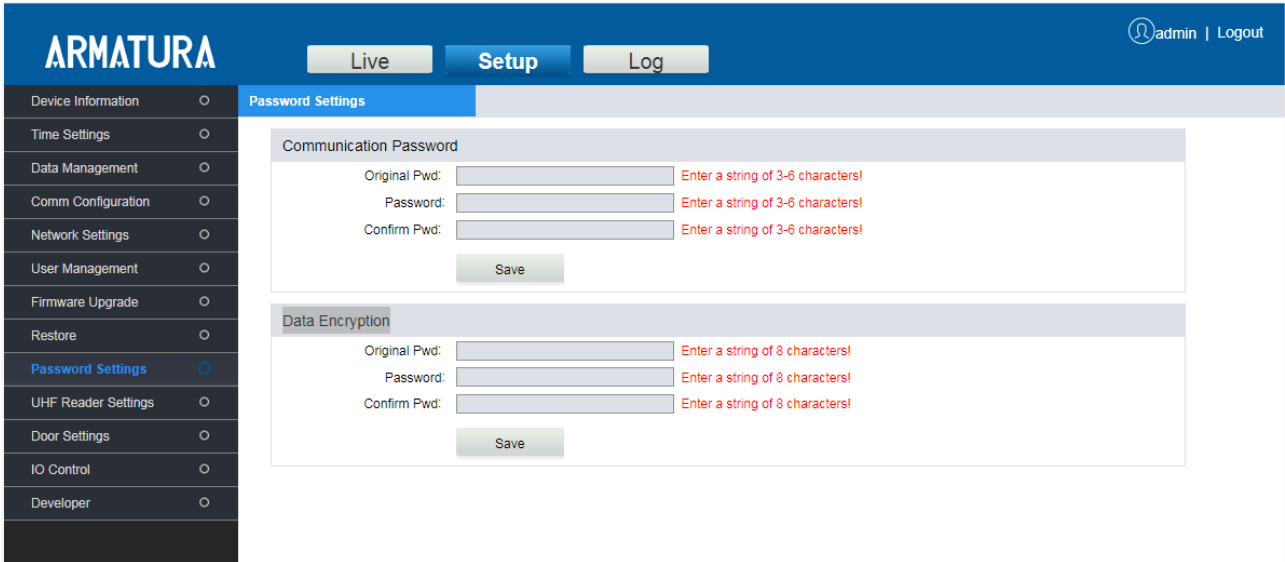

8.3.10 UHF Reader Settings

Click [UHF Reader Settings] on the Setup.

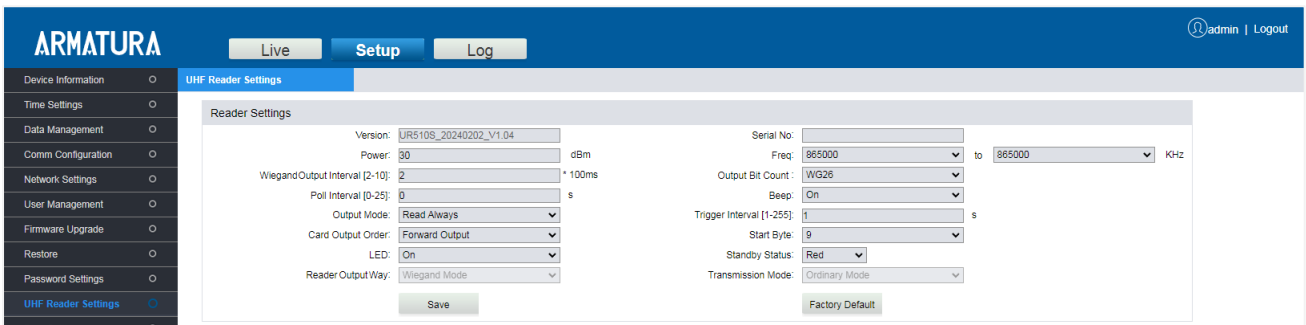


- **Version:** Displays the version number of the device.
- **Serial No:** Displays the serial number of the device.
- **Power:** Set the power of the device, valid values of 7 to 30.
- **Freq:** Set the frequency values, valid values of 865000 to 868000.
- **Wiegand Output Interval [2-10]:** Sets the interval time between Wiegand output, valid values are 2 to 10.
- **Output Bit Count:** Select the Wiegand output bit count for the device. The default Wiegand format is WG26, and it can be set as WG34, WG42, WG50, WG58, WG66, WG74, WG82, WG90, WG98.

- **Poll Interval [0-25]:** Sets the poll interval time for the device, valid values of 0 to 25.
- **Beep:** Enable/disable the sound when device reading the card.
- **Output Mode:** Set the Wiegand output mode, either read always or read by trigger.
- **Trigger Interval [1-255]:** Sets the trigger interval time for the device, valid values of 1 to 255.
- **Card Output Order:** Sets the card output order of the device, either forward output or inverted output.
- **Start Byte:** Sets the start byte when the device reads the card, valid values of 0 to 9.
- **LED:** Enable/disable the LED of the device.
- **Standby Status:** Sets the color of the LED when the device is in standby.
- **Reader Output Way:** Displays the reader output way for the device.
- **Transmission Mode:** Displays the transmission mode for the device.
- Click **[Save]** after setting the parameters.
- Click **[Factory Default]** to restore the device to factory parameters.


8.3.11 Developer

Click **[Developer]** on the Setup.

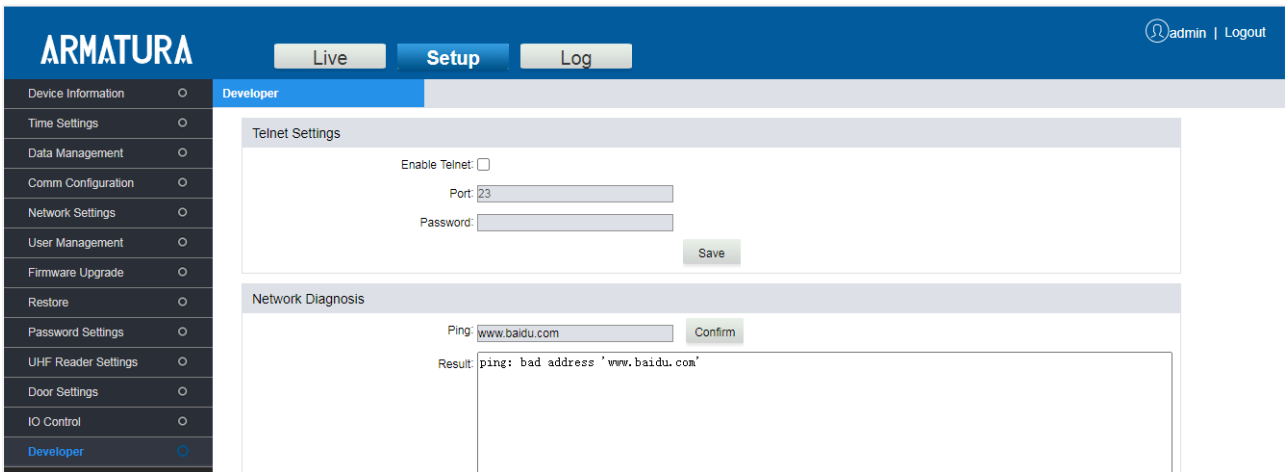


Telnet Settings

Whether to enable telnet function.

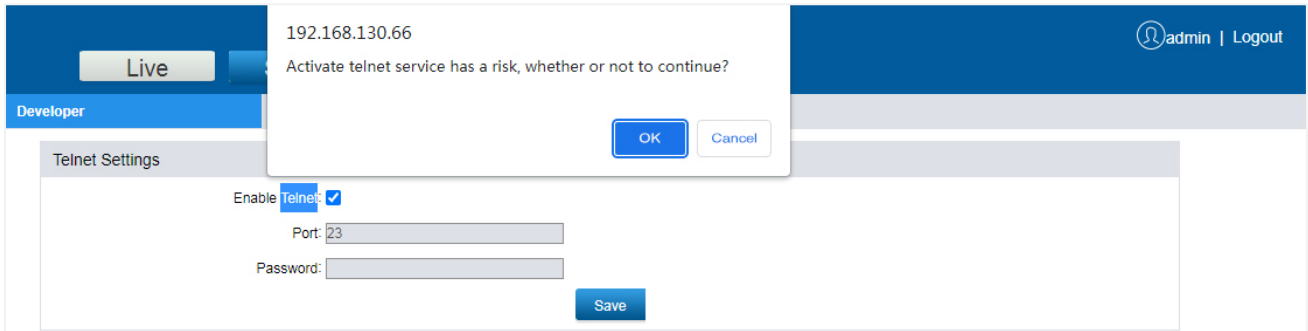

Network Diagnosis

Enter the URL to test if the device's network is working.

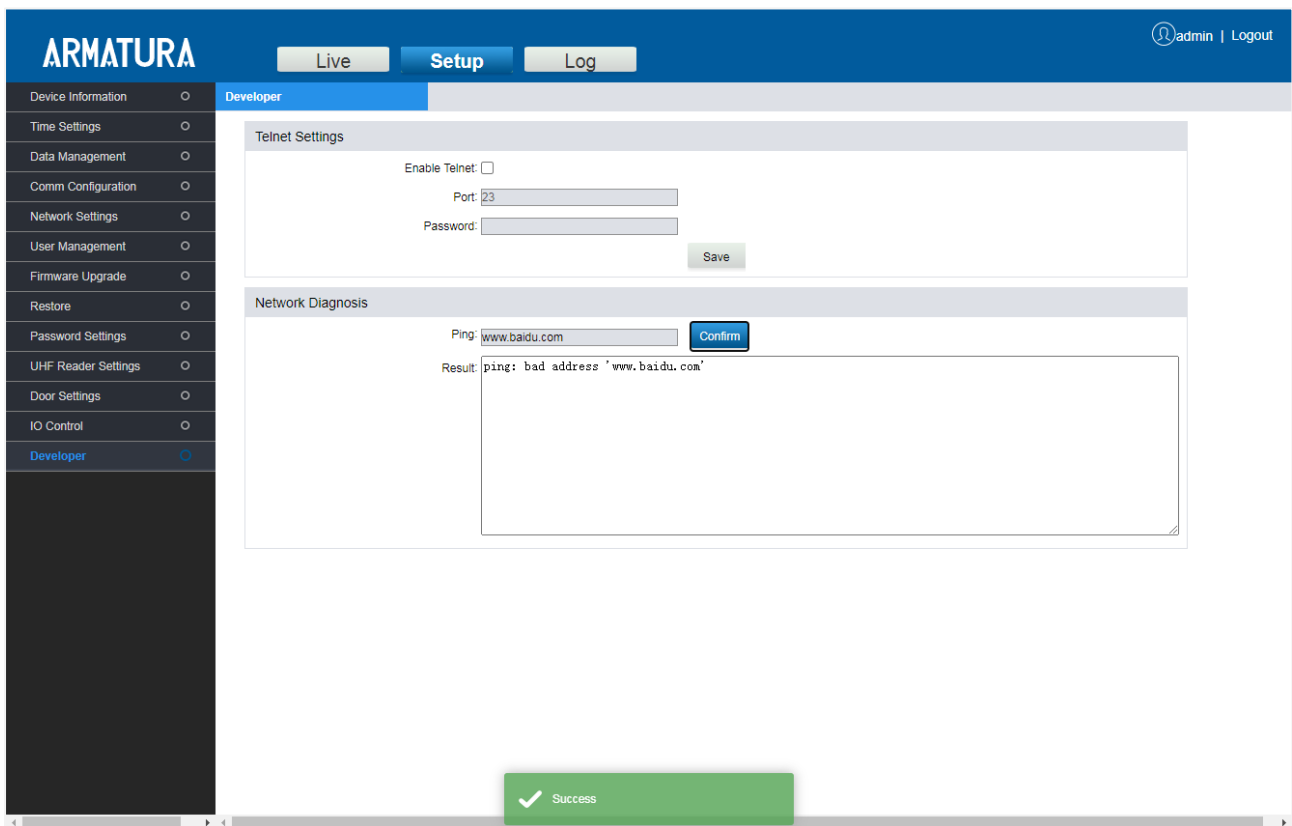

8.4 Log

Click **[Log]** in the navigation bar at the top of the page to enter the log page, the log is used to search the recording history. The user can filter the search list with options such as search type, start time, end time, and the number of log results per page. After selecting the criteria, click **[Search]** to related logs.

The screenshot shows the ARMATURA web interface with the 'Log' tab selected. On the left, there is a search panel with the following fields: Main Type (All), Start Time (2024-04-17), End Time (2024-04-17), and Page No. (30). A 'Search' button is located below these fields. The main area displays a table of log entries with the following columns: Index, Log Time, Operator, Main Type, Log Theme, Ch, and User Address. The table contains 30 rows of data, with the first row being the header and the subsequent rows containing log entries. At the bottom right of the table, there is a pagination summary: 'Total: 42 Records, Current: 1 Page, Page Down, End Page, Skip To, Page'.

Index	Log Time	Operator	Main Type	Log Theme	Ch	User Address
1	2024-04-17 16:15:20	admin	Operation	Remote Login	1	192.168.130.1
2	2024-04-17 15:06:45	admin	Operation	Delete user successful	1	192.168.130.1
3	2024-04-17 15:05:22	admin	Operation	Remote Login	1	192.168.130.1
4	2024-04-17 15:01:06	admin	Setup	Successfully set UHF reader parameters	1	192.168.130.1
5	2024-04-17 15:00:19	admin	Operation	Successfully restore UHF reader	1	192.168.130.1
6	2024-04-17 14:58:29	admin	Operation	Device start	1	192.168.130.1
7	2024-04-17 14:57:37	admin	Operation	Remote Reboot	1	192.168.130.1
8	2024-04-17 14:57:14	admin	Setup	Successfully set UHF reader parameters	1	192.168.130.1
9	2024-04-17 14:56:56	admin	Operation	Remote Login	1	192.168.130.1
10	2024-04-17 14:56:30	admin	Setup	Failed set UHF reader parameters!	1	192.168.130.1
11	2024-04-17 14:56:28	admin	Setup	Failed set UHF reader parameters!	1	192.168.130.1
12	2024-04-17 14:00:47	admin	Operation	Remote Login	1	192.168.130.1
13	2024-04-17 14:00:39	yangkaijin	Operation	Remote Logout	1	192.168.130.1
14	2024-04-17 14:00:18	yangkaijin	Operation	Remote Login	1	192.168.130.1
15	2024-04-17 14:00:03	admin	Operation	Remote Logout	1	192.168.130.1
16	2024-04-17 13:43:11	admin	Operation	Remote Login	1	192.168.130.1
17	2024-04-17 13:43:04	yangkaijin	Operation	Remote Logout	1	192.168.130.1
18	2024-04-17 13:42:36	yangkaijin	Operation	Remote Login	1	192.168.130.1
19	2024-04-17 13:42:25	yangkaijin	Operation	Remote Logout	1	192.168.130.1
20	2024-04-17 13:42:25	yangkaijin	Operation	Modify user successful	1	192.168.130.1
21	2024-04-17 13:41:19	yangkaijin	Operation	Remote Login	1	192.168.130.1
22	2024-04-17 13:41:07	admin	Operation	Remote Logout	1	192.168.130.1
23	2024-04-17 13:37:40	admin	Operation	Remote Login	1	192.168.130.1
24	2024-04-17 13:37:31	yangkaijin	Operation	Remote Logout	1	192.168.130.1
25	2024-04-17 13:37:15	yangkaijin	Operation	Remote Login	1	192.168.130.1
26	2024-04-17 13:36:58	admin	Operation	Remote Logout	1	192.168.130.1
27	2024-04-17 13:36:54	admin	Operation	Modify user successful	1	192.168.130.1
28	2024-04-17 11:56:28	admin	Operation	Remote Login	1	192.168.130.1
29	2024-04-17 11:56:20	yangkaijin	Operation	Remote Logout	1	192.168.130.1
30	2024-04-17 11:55:18	yangkaijin	Operation	Remote Login	1	192.168.130.1

Eco-friendly Operation



The product's "eco-friendly operational period" refers to the time during which this product will not discharge any toxic or hazardous substances when used in accordance with the prerequisites in this manual.

The eco-friendly operational period specified for this product does not include batteries or other components that are easily worn down and must be periodically replaced. The battery's eco-friendly operational period is 5 years.

Hazardous or Toxic substances and their quantities

Component Name	Hazardous/Toxic Substance/Element					
	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Hexavalent Chromium (Cr6+)	Polybrominated Biphenyls (PBB)	Polybrominated Diphenyl Ethers (PBDE)
Chip Resistor	×	○	○	○	○	○
Chip Capacitor	×	○	○	○	○	○
Chip Inductor	×	○	○	○	○	○
Diode	×	○	○	○	○	○
ESD component	×	○	○	○	○	○
Buzzer	×	○	○	○	○	○
Adapter	×	○	○	○	○	○
Screws	○	○	○	×	○	○

○ indicates that the total amount of toxic content in all the homogeneous materials is below the limit as specified in SJ/T 11363—2006.

× indicates that the total amount of toxic content in all the homogeneous materials exceeds the limit as specified in SJ/T 11363—2006.

Note: 80% of this product's components are manufactured using non-toxic and eco-friendly materials. The components which contain toxins or harmful elements are included due to the current economic or technical limitations which prevent their replacement with non-toxic materials or elements.

FCC Warning

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC RF Radiation Exposure Statement:

- This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment.
- This equipment should be installed and operated with a minimum distance of 20 cm between the radiator and your body.
- This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

IMPORTANT! Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Replacement of a battery with an incorrect type that can defeat a safeguard. Therefore, please make sure That the device uses alkaline Lithium batteries.

Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion.

A battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.

ARMATURA

ARMATURA LLC www.armatura.us E-mail: sales@armatura.us
Copyright © 2024 ARMATURA LLC. All rights reserved.