

Mini printer

Operating Manual



Support A4 roll paper, tattoo paper, A4 folded paper

Warm Prompt: Specifications and parameters may be changed depending on the configuration of the model. Please refer to the actual product.

 
Brief Introduction

Thank you for using the smart digital products produced by our company. To help you easily experience the product, we have provided a detailed user manual. You can find information about the product's features and usage in it. Please read the manual carefully before you start using the device to ensure accurate operation. We reserve the right to make changes to the content without prior notice.

Maintenance and Care

- Do not place this product in a humid environment for a long time;
- If there are stains on the surface, please wipe it with a dry cloth;
- To reduce battery aging and expansion, regularly check the wires, plug shells and other parts for damage. If damaged, stop using it immediately until it is repaired;
- If not used for a long time, charge it every three months or so.

Key Description

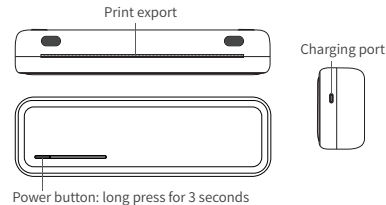


Power button: long press for 3 seconds

Meaning of indicator lights

	Colored lights: Power on
	Green light flashes:BT is not connected
	Colored lights continue to flash: Device is successfully connected
	Red light:Paper is out,device temoerature is overheated lid is not closed
	Red light flashes: low battery

 Guidelines for use



- 1 Please charge before use, then press and hold the power key for 3 seconds to turn on.



- 2 Search and download "Tiny Print" in App Store or Google.

 


- 3 After turning on te BT of your mobile phone, open the app, click the device list in the upper right corner, and select "X9-24F8".




1. Install the driver on your computer: Go to the website <https://gj.fanqie365.cn/> on your Windows computer, download, and install the printer driver: Fanqie Print Manager.
2. Connect the computer and the A4 printer using a Type-C USB cable.
3. Open the document, click "Print," select the printer named "BYP800," and click "OK" to start printing, as shown in the figure.

Paper replacement course



- 1 Press the OPEN button in the direction indicated by the arrow to open/close the paper bin (note the direction of the machine)

 Open: Press the OPEN button and press down on the paper bin cover to pop open (do not press the paper bin when opening, otherwise it will not pop open)
Close: Put both hands on both ends of the paper bin and press down to close the paper bin



- 3 Cover the paper bin, the machine can automatically absorb paper after normal use.



- 2 Take out the old paper roll and put the new paper roll in the direction shown.The paper should be put straight and notcrooked.(Note: The new thermosensi-tive paper needs to be exposed to 2 cm of paper bin length so that the machinecan absorb paper automatically whenthepaper bin is shaped)



- 4 After the above steps are correct, themachine can print normally.

Battery Warning Note

- 1 . Please use 5V charger to charge according to the specificationto avoid damage to the machine
- 2 . Disassembly , impact , extrusion or fire are prohibited ;
- 3 . If severe bulging occurs , do not continue to use,
- 4 . Do not put in high temperature environment , battery afterimmersion is prohibited to use;
- 5 . Replacement with the wrong type of battery canbe explosive , be sure to follow the instructions to dispose ofused batteries.

Precautions (Warnings)

If there is carbon deposit (dust) on the first film, the picture will become lighter and lighter, which is a normal situation. Wipe it with alcohol to return to normal. If the battery has not been used for a long time or the battery is exhausted, it may not be able to start the machine immediately when recharging. Please continue charging for a period of time before starting the machine.

1. Do not immersing the battery in water, pay attention to moisture-proof and explosion-proof.
2. Do not disassemble or modify the battery without authorization.

3. Do not short-circuit the positive and negative poles of the battery.
4. Do not place the battery in a high temperature of 60 ° C or near a fire source.
5. After the battery is immersed in water, it is prohibited to use.
6. Contains small parts, not suitable for children under the age of 3!
7. Do not close to the fire when playing!
8. There is a risk of explosion when replacing the wrong type of battery. Dispose of the used battery according to the instructions.
- 9 . Note that the maximum temperature of the print head when printing is 70 °C, please be careful not to touch;
- 10.Pay attention to the sharp tearing blade, please be careful not to touch;
- 11.This product does not belong to children's toys. Children under the age of 14 should be used under the supervision of adults. According to our national compulsory product CCC certification standard, this product does not contain power adapter at the factory. If users use power adapter for power supply, they need to purchase supporting use CCC certification and meet the standard requirements of power adapter.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure statement

The device has been evaluatec to meel general RF exposure requirement. The device can be used in portable exposure condition without restriction.