

YED 14+ YE311 2.4G 2.4G遥控船模操作指南



注意事项

1. 船下水会自动导通电源，可直接与遥控器连接。
2. 船没有自动翻船功能，操控时注意不要翻船或撞击障碍物导致翻船。
3. 导航舵需手动调整方向。
4. 船操控距离不得超过45米，否则可能会失灵。
5. 船行驶的时间大约是20分钟，低电时遥控船灯闪，遥控器蜂鸣器报警，低电时需回到可控范围内行驶，否则会因电池没电船直接停止航行而导致拿不回船。
6. 船行驶时需避开水草等杂物，避免缠住螺旋桨。

遥控船主要构造图

遥控器功能

电池的充电方法：打开被控船后面的电池盖，将充电线插入正确位置插入2节“AA”碱性电池（电池原封的）。

船模电池的安

-1-

船模电池充电

充电时间约为120分钟，充电时充电器船头上的灯亮，充电完成时灯灭。

警告

1. 本产品必须在成人直接监护下使用，此船模非玩具，仅限于14岁以上小孩使用。
2. 使用完此装置等到电池冷却后再充电。
3. 船模航行时，应确保保持水域没有人，避免伤人，水面不能有水草或杂物，避免螺旋桨在水中被缠住，或船模损坏。
4. 本产品内含有微小零件请勿吞食以免发生窒息危险。
5. 请与高速旋转的风叶保持安全距离，以免发生受伤危险。
6. 电机为发热部件，请勿触摸，以免发生烫伤危险。
7. 定期检查齿轮箱和其他部件是否有损坏，发现损坏时立即停止使用，重复检查完好。

-2-

保养检修

 
1. 船模停止工作时，请取下电池。
2. 船模表面应避免长时间暴晒，防止晒伤；每次使用完后，船模应用干布擦拭干净。
3. 当船模长时间不使用时，遥控器电池须取出，防止电池漏液腐蚀遥控器。

功能操作

向前时，可快速进行方向，重打时慢点可重复向前，船头时向前快速。

-3-

YED 14+ YE311 2.4G 2.4G Remote-Controlled Speedboat Operation



Cautions

- 1.The boat will automatically power on when placed on water, and connect to the remote control.
- 2.The boat does not have a self-righting function, so take care not to flip it or crash into obstacles during operation.
- 3.The rudder direction must be adjusted manually.
- 4.Do not pilot the boat more than 45m away from the remote control, otherwise connection will be lost.
- 5.The boat can be operated for approximately 20 minutes when the battery is in low state, the boat light will flashes,remote control buzzer alarm. When the battery is low, you need to return back the boat to avoid the boat stop running and can't go back.
- 6.Avoid aquatic plants during operation, as these may get entangled with the propeller.

RC boat main structure diagram

Remote control functions

Inserting batteries remove the battery compartment on the back of the remote controller and insert 2*AA alkaline batteries, paying attention to the polarity markings in the battery compartment.

Inserting battery into the boat

-1-

Charging the model battery

Time to charge is approx 120 mins. When charging, the charger light is on, when charging is complete the light is off.

警告

1. This product is suitable for people over the age of 14. Must only operate it when supervised by an adult.
2. Finish the voyage, cannot recharge the battery immediately until the battery cooling.
3. When the ship sailing, insure the area without people. Cannot have aquatic or debris in the water, avoid the propeller went caught or damage to the ship.
4. This product have some small parts, Don't swallow in order to avoid choking danger.
5. Please keep a safe distance with the void high speed rotating propeller. Avoid ground injury risk. Battery matters attention.
6. Motor is a hot parts, pls don't touch it in order to avoid scalding danger.
7. Regularly check the USB cable and other parts for damage, should stop using until repair intact if have something broken.

-2-

Maintenance

1. Stop work, pls remove the battery.
2. The surface of the boat should avoid exposure long time prevent to take off the lacquer. After play, the surface applied dry cloth clean.
3. When the ship not play for a long time, need removed the remote controller battery to prevent battery leakage damage to the remote controller.

Functions

Rudder: Adjust this to control the boat's direction. When sailing straight, manually adjust to the right if drifting left, and adjust to the left if drifting right.

-3-