

封面



PROJECTOR

内页→

CONTENTS

IMPORTANT SAFEGUARDS	01
ACCESSORIES LIST	01
PROJECTOR OVERVIEW	02-03
STANDARD SETTING	04
HOW TO MOUNT THE PROJECTOR ON THE CEILING	05
SUPPORTING MACHINE OPERATION	06
FOCUS / KEYSTONE CORRECTION / ZOOM	07-08
SOURCE SETTINGS	08
PROJECTION SETTINGS	09-10
IOS CAST WIRELESS CONNECTION	11
MIRROR YOUR PHONE, PAD OR IPOD TOUCH	11
IOS CABLE	12
MIRACAST WIRELESS CONNECTION	13
SPECIFICATIONS	14
MULTIMEDIA SUPPORTED FORMATS	14
WARRANTY INFORMATION	15
MANUFACTURER SUPPORT	16

—01—

IMPORTANT SAFEGUARDS

1. Please read the manual carefully before operating projector. To avoid damage to the projector, please do not drop or bump the projector.

2. Please use the power supply and cables indicated on the rating label. The projector should be kept away from cloth, sofa and other materials that may damage the projector or cause the projector unit away from the available area and the projector should not be left near water and any other liquids.

3. Please do not touch the lens by yourself as this will invalidate the warranty service. To protect your eyes, do not stare directly at the projector lens when it is turned on.

4. Please do not expose the projector to the sun or any other direct light source. Please do not expose the projector to the rain and away from moisture. It is recommended to sum the projector to a solid, stable and flat surface. Please do not drop the projector unit on the original foam and other cushioning materials when transporting the projector.

5. If the projector does not work, please contact the authorized service agent.

ACCESSORIES LIST

Air Signal Cable	>1
Remote Control	>1
Power Cord	>1
User Manual	>1
Adjustable Foot	>1
HDMI Cable	>1

—02—

PROJECTOR OVERVIEW

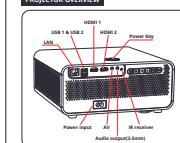


Diagram showing the projector with various ports and controls labeled: LAN, USB 1 & USB 2, HDMI 1, HDMI 2, Power Key, Power Input, Air, 8K receiver, Audio output (S-VIDEO), Volume, Volume+, Volume-, Arrow Keys, On/Off, Confirm Key (Power/Flag Key), Menu key, Source key, and Focus.

—03—

POWER KEY

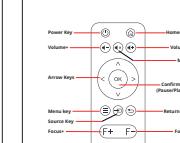


Diagram of the remote control with labels: Power Key, Home Key, Volume+, Volume-, Arrow Keys, On/Off, Confirm Key (Power/Flag Key), Menu key, Return Key, Source key, and Focus.

—04—

STANDARD SETTING

Refer to the data in the table below to place the projector away from the wall. The distance between the projector and the wall should be no less than 30cm of the lens.

(Note: The shortest projection distance of the projector is 1.8 times)

Aspect Ratio	16:9
Picture Size (inch)	Projection Distance (m)
72	2.17
100	2.77
120	3.27
200	5.55

—05—

HOW TO INSTALL THE PROJECTOR ON THE CEILING:

1. Determine the best throw distance and ratio for your projector. Once the projector is mounted, the projector will not be able to move so it is recommended to mount the projector on a solid, stable ceiling. The projector should be kept away from cloth, sofa and other materials that may damage the projector or cause the projector unit away from the available area and the projector should not be left near water and any other liquids.
2. Prepare for a mount and mount included that suit the projector depending upon your ceiling type.
3. Turn the projector upside down. Remove the rubber feet from the bottom of the projector and attach the projector to the mount. Ensure that the entire mount is attached to the projector before connecting the cables.
4. Secure the projector and install the mount to your ceiling.
5. Attach the cables to the projector.
6. Adjust the settings to fine tune the image.

⚠ Warning:

- Before installing, ensure the mount can withstand the weight of the projector, ceiling mounting bracket and other components to prevent any accidents.
- Projector will not be liable for any accidents occurring from the unit dropping due to improper mounting, etc.

—06—

SWITCHING MACHINE OPERATION

Power On:

Step1: Press the power button on the body or the power button on the remote control, the indicator light will turn blue.

Step2: After 2 seconds, the projector starts to work. The image will appear on the screen. (Note: If the projector is not in the working state, the image may be blurred or distorted. Please refer to the "Focus/Keystone Correction" section for calibration).

Power Off:

Step1: While working state, press the power button on the body or the power button on the remote control to switch the projector to the shutdown state.

Step2: After the projector enters into the shutdown state, the indicator light will change from blue to red.

—07—

