

User manual

Introduction

Congratulations, and thank you for choosing tablet.This

manual contains important security measures and the correct use of the

product information, in order to avoid accidents. Please make sure to

reading the manual carefully before use the device.

The company reserves the right to improve product, products

specification and design have any change, The information is subject

to changes without prior notice.(This tablet is no waterproof function)

 
【Remark】 All pictures in this manual is just for your reference.

products specification and design have any change, The information

is subject to changes without prior notice.

Product Catalogue

Product Description	1
Product Specification	3
How to use the Tablet?	4
-1.Button	
--1.1 Touch Spanel	
--1.2 Power Button	
--1.3 Volume Button	
--1.4 Earphone Jack	
--1.5 TF Card Slot and Sim Card Slot	
--1.6 Micro USB Port	
--1.7 Reset Button	
2.First Use	
--2.1 Battery Management and charge	
--2.2 Connection with PC	5
-3.Equipment Operation Interface	6
--3.1 Main Interface Describe	
-4.Settings	7
--4.1 Wireless&Networks	
--4.2 Setting DEVICE	
--4.2.1 Sounds Settings	
--4.2.2 Display Settings	
--4.2.3 Storage	8
--4.2.4 Manage Applications	8
--4.2.5 How to Uninstall Apps	8
-4.3 Language & Keyboard	8
4.4 Backup & Reset	9
4.5 Date & Time Setting	9
4.6 About Tablet information	10
5.Apps Install and Manage	10
6.Issue Solution	10
FAQ	11
Safety Rule	12
After-sales Service & Warranty	12

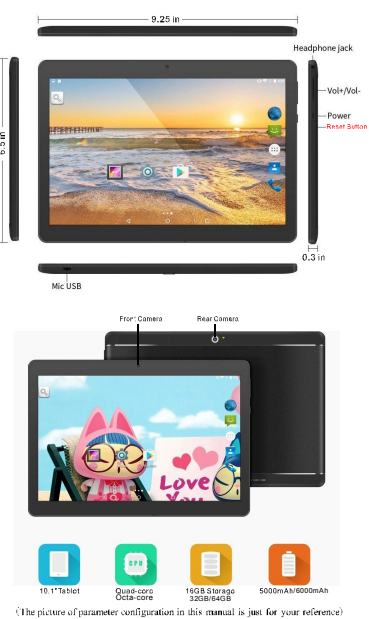

-1-



-2-

Product Configuration:

Basic Function>Please refer to the actual parameters you ordered)

Hardware Configuration:

CPU processor: MTK65XX, 1.5GHz ~ 2.5GHz

Operation System: Android 6.0~9.0

Memory: 16GB/64G

RAM: 1GB/4GB

TF card: 128GB-32GB(Expandable by MicroSD to 32GB)

Screen Size: 10" IPS Capacitive Screen

Display Technology: Full Size, High Sensitive 5 Point Capacitive Touch Screen

Size of Sim Cards Standard Sim Card, use sim adapter if the sim card is nano or micro.

Battery and capacity: rechargeable Built-in type polymer battery

USB Port: USB 2.0 and support OTG Cable

Audio: Built-in MIC & Speaker

Video: MKV/H.264/H.265/AVI/WMV/MP4/MPEG2

Audio: MP3/WMA/APE/FLAC/AAC3 WAV

Image: JPEG/BMP/GIF/PNG/TIF

Software: Google Play Pre-installed, Skype Video Calling/YouTube, Facebook, Flash etc. Supported

WHAT'S IN THE BOX ?

Package Included:
1 x Tablet PC
(MicroSD and SIM Cards not included)
1 x AC Charger
1 x User Manual
1 x USB Cable
1 x OTG Cable
1 x Earphone
1 x Stylus Pen
1 x Screen Protector

-3-

1. Button

1.1 Touch panel

Capacitive touch panel: In The Operation, to click/dragging on the touch panel

1.2 POWER

Startup: Long Press and hold the power button, the system will enter the main interface

Shutdown: In the main menu interface, Press the power button about 5 second to shutdown. The system can hint "power off" option, Click "ok" you can safely shut down.

Lock screen: Short press Power button to lock screen or unlock screen.

Remark 1: When power is empty, system will shut down automatically.

Remark 2: Illegal turn off the device, restart will scan and restore the disk. It may take longer time to enter into system

1.3 Volume +, Volume-

The buttons on top Volume +, Volume - achieve changes in the volume.

1.4 Earphone Jack

3.5 mm standard earphone jack

1.5 TF Card Slot and Dual Sim Card Slot

TF-CARD Slot: external TF-FLASH card and Expandable by MicroSD to 32GB

SIM Cards Slot: You could make phone call with your sim cards, it support dual sim cards

(Tips: Currently, the tablet does not support the sim cards of AT&T And T-mobile)

1.6 Mini USB Port

Mini USB jack; you can use it to connect the computer for data transmission, charging and external connection USB flash drive

1.7 Reset Button

1.7.1 When the Tablet under the condition of the crash, use the small objects to short press RESET button. Tablet will force to shutdown.

1.7.2 When the tablet doesn't charge properly or doesn't respond. Please use the small objects to long press RESET button about 5 seconds. Tablet will reset and then long press power button to restart it.

【Remark】: unless unable to shutdown or charge, otherwise don't use the reset, suggest you to shutdown by normal. If no will easy to damage the machine system.

2. First use

2.1 Battery management and charge

Before first use, please set the device's battery is fully charged.

Just need to connect the adaptor or USB interface, then you can charge

The first two times charging please keep about 6 hours, after that you just need 4 hours to charge.

【Remark】: This tablet using Built-in type polymer battery. Charge must be to choose

standard adaptor (Input: AC110V 240V 50/60Hz Max: 180MA. Output: DC5.0V 5V 1.5 2A), this device without supply DC charging. USB interface can charge.

Choose USB interface to charger

During the charging, the battery icon will scroll

When finished charging, battery icon will become green and stop rolling

In order to prolong the service life of the machine, suggest use out battery power before charge it

【Remark】:

1. If you long time don't to use this Tablet in order to avoid power consumption caused damage, pls charge play the battery once a month.

2. After low battery shut down, connect DC adaptor, device will remind low battery, charging, need to wait some time until the battery is enough power to enter into main menu.

 
3. Device charging should be in standby status for reach normal charging time. Because with device and screen consumption, it may cause longer charging time.

4. If the tablet can not be charged, Please try to reset the tablet and wait 10 mins later, restart the tablet. (How to reset the tablet, please reference 1.7.2)

2.2 Connection with PC

Use USB cable to connect device to PC, device will pop up the USB connection

window, click Turn on USB storage to connect to PC

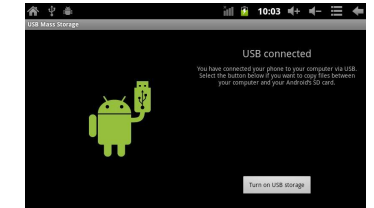

Into the load mode, you can copy, delete the file on the device and the file on the memory card

(the tablet will automatically connect your mac if your PC version is above windows 7)

-5-

3. Equipment operation interface

3.1 Main interface describe

 
After startup will enter the main interface



In the main interface, you can:
Management main interface software ICONS: long press the icons 3 second, after the icons will bigger, then you can drag anywhere in the interface.

Deletes icons: long press the icons 3 second, drag the icons to the Recycle Bin icon, once it become red, Loosen your hand, after that you can delete icon

You touch the screen keep a time, appear the dialog box Add your Home screen or settings as shown below.

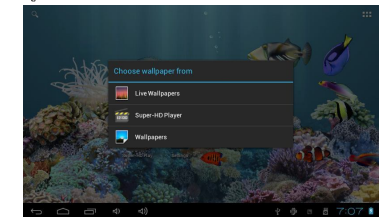

-6-

3.2 status bar describe

The status bar above of the screen:

Top left display main interface software, T-Flash card, Sim Cards, USB connection status and so on

Top right display the battery, battery charge icons, current time, set time, Settings Menu, bluetooth and so on

3.3 Use touch panel

Following the main touch screen area is described, and describes some of the tips for how to use the touch screen.

No matter which interface you are on the screen, can go back to main screen through

pressing the soft key under the main screen.

 
In different applications, by tapping the back soft key under the touch screen, you can return to its interface on the upfloor.

In different applications, by tapping the menu key under the touch screen, the screen will appear and switches over the application you've been viewing.

In the main interface, you can touch the icon to open the APPS
(In different browser/file, music, video, pictures) You shift and drag the scroll bar, so that the file list can up or down to roll.

4. Equipment basic settings

Setting: Click setting icons enter setting interface

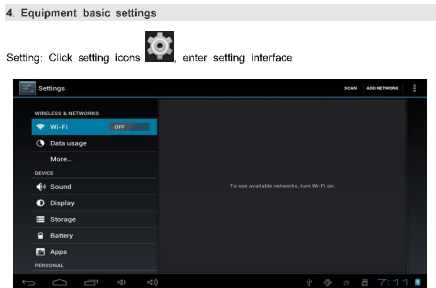

-7-

In the Settings, here are: WIRELESS/NETWORKS, DEVICE, PERSONAL, ACCOUNTS, SYSTEM, 5 Parts. Under these parts, there are different small classes can choose and set.

4.1 WIRELESS/NETWORKS

 
(a). Choose and connect to the networks. Here are Wi-Fi, Bluetooth, Sim Management, Ethernet and so on.

(b). Manage and view data usage and more

4.2 DEVICE


4.2.1 Sounds Settings:

Can choose Silent mode, Volume, Notification ringtone, Audible selection, Screen lock sounds and so on

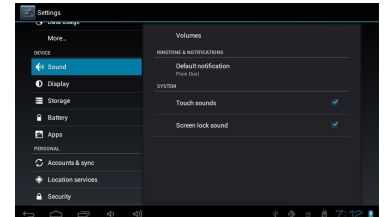

4.2.2 Display Settings:

 Choose and set wallpaper, Lock screen notifications, Brightness, Sleep, Daydream, front size and so on.

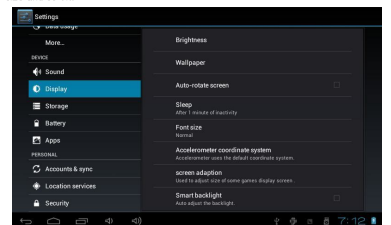

-8-

4.2.3 Storage

 
View Phone Storage (INTERNAL STORAGE and PHONE STORAGE), SD Card Storage

Remove TF card, view of the available storage space

【Remark】: Please touch option "delete SD card", so that can safely to remove SD card

4.2.4 Application Apps:

Manage applications

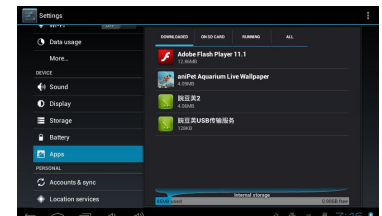

Unknown sources: Click "Unknown Sources", then click "OK"
Manage application: manager and uninstall Application

【Remark】: when you Firmware Upgrade, please close the USB connect

4.2.5 How to uninstall app?

A. Enter "settings" > "Application" > "Manage application" And then there will be installed the program list

B. Click you want to uninstall icons, will enter the following interface

C. Click Uninstall, then you can delete the application

4.3 Language & keyboard

Setting: (Language); text input and automatic error correction options;

-9-



Select Language: 44 kind of national languages are available

Remark: Android system can support 44 kinds of language, now menu interface just support 14 kind of language.

Android keyboard setting

Sound on Key press

Auto-capitalization

 
Show suggestions: Display suggested words while typing

Auto-complete: Space bar and punctuation automatically insert highlighted word

4.4 Backup & Reset

Separately for internal Memory disk and SD Card disk

Select the APK you would like to install, click (to install, go back to main menu, will display the installed app you just selected.

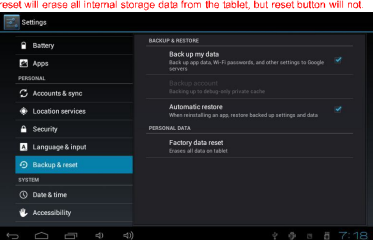


4.5 Date & time setting

Set date, set time, Select time zone and select date format

-10-

 4.6 About Tablet

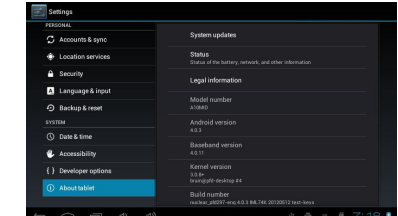

5. Apps install and manage

This tablet can support Android Apps in market by third party or google play most Apps can install in the network, can copy to NAND FLASH or SD card

Click App Installer icon, will appear install, manage, Exit options.

Install: Click install, enter apk install interface

Separately for internal Memory disk and SD Card disk

Select the APK you would like to install, click (to install, go back to main menu, will display the installed app you just selected.

【Remark】: some 3rd APP must install properly by memory card, downloaded 3rd part app may not install properly on device.

Manage: click manage, enter third party interface

Click install icon, will enter Action interface

6. Issue Solution

6.1 Can not open the device or charge?

A: The tablet supports Skype, Facebook, Snapchat, Google Play and more.

You could choose Wi-Fi or sim card to surf the internet. Both operate on their respective data models and can be used independently.

Q: Can I use the tablet with out a sim card just use my own Wi-Fi?

A: Yes, You can. Both operate on their respective data models and can be used independently.

Q: Can I use a keyboard, does it have to have Bluetooth or USB slot?

A: The tablet can use keyboard with Bluetooth and USB Slot. About the USB Slot, you have to connect it with a OTG cable.

Power is not enough, please charge it.

Shutdown?

Power is not enough, please charge it.

-11-

Headset can't hear the voice?

1. Please check the volume whether set to 0

2. Check the music file whether damaged Try playing other music, if the file have damaged may lead to serious noise or no sound

Can copy file or play music and so on?

1. Pls check between computer and device is correct connection

2. check the memory storage space is already full

3. check the USB cable is good or not

4. USB connection is disconnected

7. FAQ

Q: Why the tablet can't charge?

A: Please connect adaptor first, and long press reset button about 5 seconds.

wait 5-10 mins, restart the tablet.

Q: How long does the tablet work?

A: Power-loss has many factors, such as connect to Wi-Fi, Bluetooth, Internet and download, Usually, in the case of full charge, the time is about 3-4 hours for reading and watching video is about 2-3 hours, if you think the time is short, we suggest that you can watch video while charging. Of Course please power off if you don't use it.

Q: What size sim card does it take I can't mine it?

A: The sim card size is fitted for standard sim card. If your sim card is nano or micro, we suggest you need to have a sim card adaptor.

Q: Does Skype work? Do you need a sim card for Skype to work?

A: The tablet supports Skype, Facebook, Snapchat, Google Play and more.

You could choose Wi-Fi or sim card to surf the internet. Both operate on their respective data models and can be used independently.

Q: Can I use the tablet with out a sim card just use my own Wi-Fi?

A: Yes, You can. Both operate on their respective data models and can be used independently.

Q: Can I use a keyboard, does it have to have Bluetooth or USB slot?

A: The tablet can use keyboard with Bluetooth and USB Slot. About the USB Slot, you have to connect it with a OTG cable.

Power is not enough, please charge it.

Shutdown?

Power is not enough, please charge it.

Shutdown?

Power is not enough, please charge it.

Shutdown?

Power is not enough, please charge it.

Shutdown?

Power is not enough, please charge it.

Shutdown?

Power is not enough, please charge it.

Shutdown?

Power is not enough, please charge it.

Shutdown?

Power is not enough, please charge it.

-12-

8. Safety Rules:

This manual contains important security measures and the correct use of the product information, in order to avoid accidents. Please make sure to reading the manual carefully before use the device.

Please don't be in high temperature, moisture or very dust place

Please don't be in high temperature, Especially in summer don't put the device in the car when Windows closed.

Avoid fall or Violent collision of the device, don't make the LCD display screen were violent tremor, This could cause LCD display screen abnormal or damage.

Please choose the appropriate volume, Use headphones should not be too big volume, if feel stimulus, Lower the volume or stop using it

Please charge in the following condition.

A. The battery power ICONS shows have no power

B. The system automatically shut off, startup after power off soon

C. Operation buttons no response

D. The machine that the top right corner show red icons

When the device in the format or ongoing upload and download file, please don't suddenly disconnect, This could cause application error.

For those who because of damage to the product, repair, or other causes of erased the memory, The company shall not be liable for any responsibility, please follow the user manual for the standardized operation to use the device.

Don't disassemble the product, don't use alcohol, Thinner or benzene to scrubbing products

Don't use the device one of the place of prohibit to use electronic equipment in regional (such as the plane)

Please don't using the Tablet PC when you in driving or walking down the street, USB just only be used for data transmission

The company reserves the right to improve product, products specification and design have any change. The information is subject to changes without prior notice. (This tablet is no waterproof function)

【Remark】 All pictures in this manual is just for your reference, products specification and design have any change, The information is subject to changes without prior notice.

After-sales Service Letter of Commitment

All products purchased from our company are guaranteed to keep in good repair for one year.

If quality problems happen in guarantee period, our company will maintain for free. Additionally, our company

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

The devices has been evaluated to meet general RF exposure requirement , the device can be used in portable exposure condition without restriction