



This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential environment. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

• Reorient or relocate the receiving antenna or equipment and receiver;

• Connect the equipment into an outlet on a circuit different from that to which the receiver is connected;

• Consult the dealer or an experienced radio/TV technician for help.

**CAUTION:** Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.



**BATTERY SAFETY:** This product is fitted with a Li-Polymer battery. Do not damage, open or dismantle the battery and do not use it in dangerous or explosive environments. Do not expose the battery to fire and never expose them to high temperatures. Do not expose the product to temperatures exceeding 50°C (140°F).

**BATTERY DISPOSAL:** The crossed-out wheelie-bin symbol means that you may not dispose of this product as unsorted municipal waste. Instead, it should be handed over to a designated collection point for the recycling of used items of electrical and electronic equipment. For more information about local recycling points, contact your local authority, city council or the retailer where you purchased this product. The waste collection centres accept recycling of used items of electrical and electronic equipment prevent any harmful substances they contain from harming humans health and polluting the environment.

Please find this information for [EURO reference](#).

**WARNING:**

**RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE.**  
**DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.**

APPLE, IPOD, IPAD, PHONE, AND SPARES TRADEMARKS OF APPLE INC. REGISTERED IN THE U.S. AND OTHER COUNTRIES. GOOGLE, AND THE GOOGLE ASSISTANT ARE TRADEMARKS OF GOOGLE INC. REGISTERED IN THE U.S. AND OTHER COUNTRIES.



© 2022 PrimeAudio  
1400 BROADWAY, SUITE 1000  
NEW YORK, NEW YORK 10018

THE BLUETOOTH® WORD MARK AND LOGOS ARE REGISTERED TRADEMARKS OWNED BY BLUETOOTH SIG, INC. AND ANY USE OF SUCH TRADEMARKS BY PRIMEAUDIO IS UNDER LICENSE. OTHER TRADEMARKS AND TRADE NAMES ARE THE PROPERTY OF THEIR RESPECTIVE OWNERS. ACTUAL PRODUCT MAY DIFFER SLIGHTLY FROM IMAGE SHOWN. PLEASE REFER.


FCC ID: 2AB6Q-4WTW5206



#### INSTRUCTION MANUAL

# PrimeAudio®

#### PRODUCT DIAGRAM

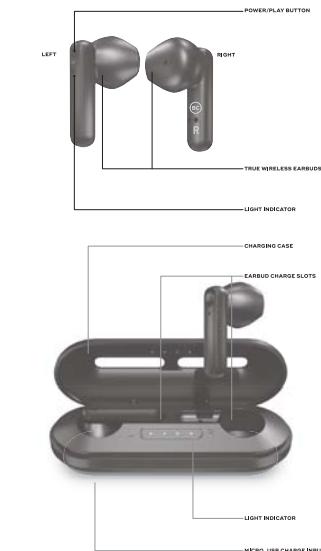

#### INSTRUCTION MANUAL

##### Bluetooth® True Wireless Cord-Free Earbuds

###### FEATURES

- Works with all Bluetooth®-enabled devices
- Connect to the earbuds via Bluetooth® and play in high quality for up to 20 ft. away
- Integrated microphone via Bluetooth® and provides hours of talking time wherever you go
- Charging case provides charge to earbuds

###### CONTENTS

- 1 Pair Wireless Earbuds • 1 User Manual
- 1 Micro-USB Cable
- 1 USB Charging Case

###### CHARGING CASE

The charging case is used to charge the earbuds and it must be fully charged before first use. Keep it fully charged regularly for maximum performance. If it has not been used in a while, it is recommended to fully charge the case before using the earbuds.

1. Insert the Micro-USB connector of the included USB cable into the charging input port on the charge case.

2. Insert the larger USB end of the cable to the port of a computer or compatible USB DC 5V wall adapter. Turn the earbuds on and the earbuds will begin to charge. The earbuds will turn blue when charging and turn solid blue when charging is complete.

**CHARGING THE EARBUDS**

The earbuds must be charged before first use. The charge case must also be fully charged for maximum performance. To charge:

1. Press and hold the function button for 3 seconds to power on the earbuds.

2. Insert the earbuds into the charging case and align the earbuds with their corresponding charge slots, ensuring the charge contacts on the bottom of the earbuds are up and connect with the contacts within the charge slots.

3. Close the lid of the charging case. The light indicator on the earbuds will turn solid red when the earbuds are charged.

**NOTE:** When battery power is low the LED may blink red every 5 seconds and/or there may be a slight sound (buzzer) when the earbuds are charged. To fully charge the battery as explained above to resume normal operation:

1. Make sure both earbuds are charged as explained above.

2. Press and hold the function button for 3 seconds to power on the earbuds.

3. Open the lid of the charging case and align the earbuds with their corresponding charge slots, ensuring the charge contacts on the bottom of the earbuds are up and connect with the contacts within the charge slots.

4. To pair the paired earbuds to your audio device, activate the Bluetooth function once. The earbuds will automatically recognize the earbuds and will allow you to select it using the name "PrimeAudio".

5. Once the earbuds are paired to your audio device, the earbuds will automatically connect to the paired device when within 30 ft. range of the audio device.

6. To unpair or remove a Bluetooth compatible device from the earbuds, turn off the Bluetooth function on the paired device and then turn on the earbuds.

**NOTE:** If you do not connect the earbuds with a Bluetooth device after 2 minutes of being turned on, the earbuds will turn off automatically.

**NOTE:** When the earbuds are paired, the wireless earbuds will automatically connect with the last successfully paired audio device.

###### WIRELESS EARBUDS CONTROL

1. During a call, include the volume of your audio device to medium level as a safe starting point.

2. The volume will be controlled by the function button on the earbuds and your audio device. Quick press the function button three times on the right earbud for volume up, quick press the function button two times on the left earbud for volume down.

3. To play audio, click the function button on either earbud once + click it once again to pause.

4. To skip audio, click the function button on either earbud once + click it once again to end the call.

5. To skip an incoming call, long press the function button on either earbud for two seconds.

6. To disconnect a call, click the function button on either earbud three times. The earbuds will turn off automatically for 3 seconds and then turn back on.

7. To turn the earbuds off, click the function button on either earbud three times. The earbuds will turn off automatically for 3 seconds and then turn back on.

8. To turn the earbuds on, press and hold the function button for 2 seconds.

**ADDITIONAL FUNCTIONS:**

1. Press the function button on the left earbud three times to skip to the previous song. Press the function button on the right earbud three times to skip to the next song.

2. When powered on, press and hold the function button for 2 seconds to power off.