


FY-07 整车组装图 (Body assembly diagram)

2x6HM	22
2x8HM	8
2x12HM	2
2x12HM	4
2.5x6HM	2
2.5x8KM	4
2.5x10HM	2
2.5x12TM	2
2.5x14TM	2
2.6x8TB	6

10

7号车整车组装图


No.7 Car shell assembly diagram

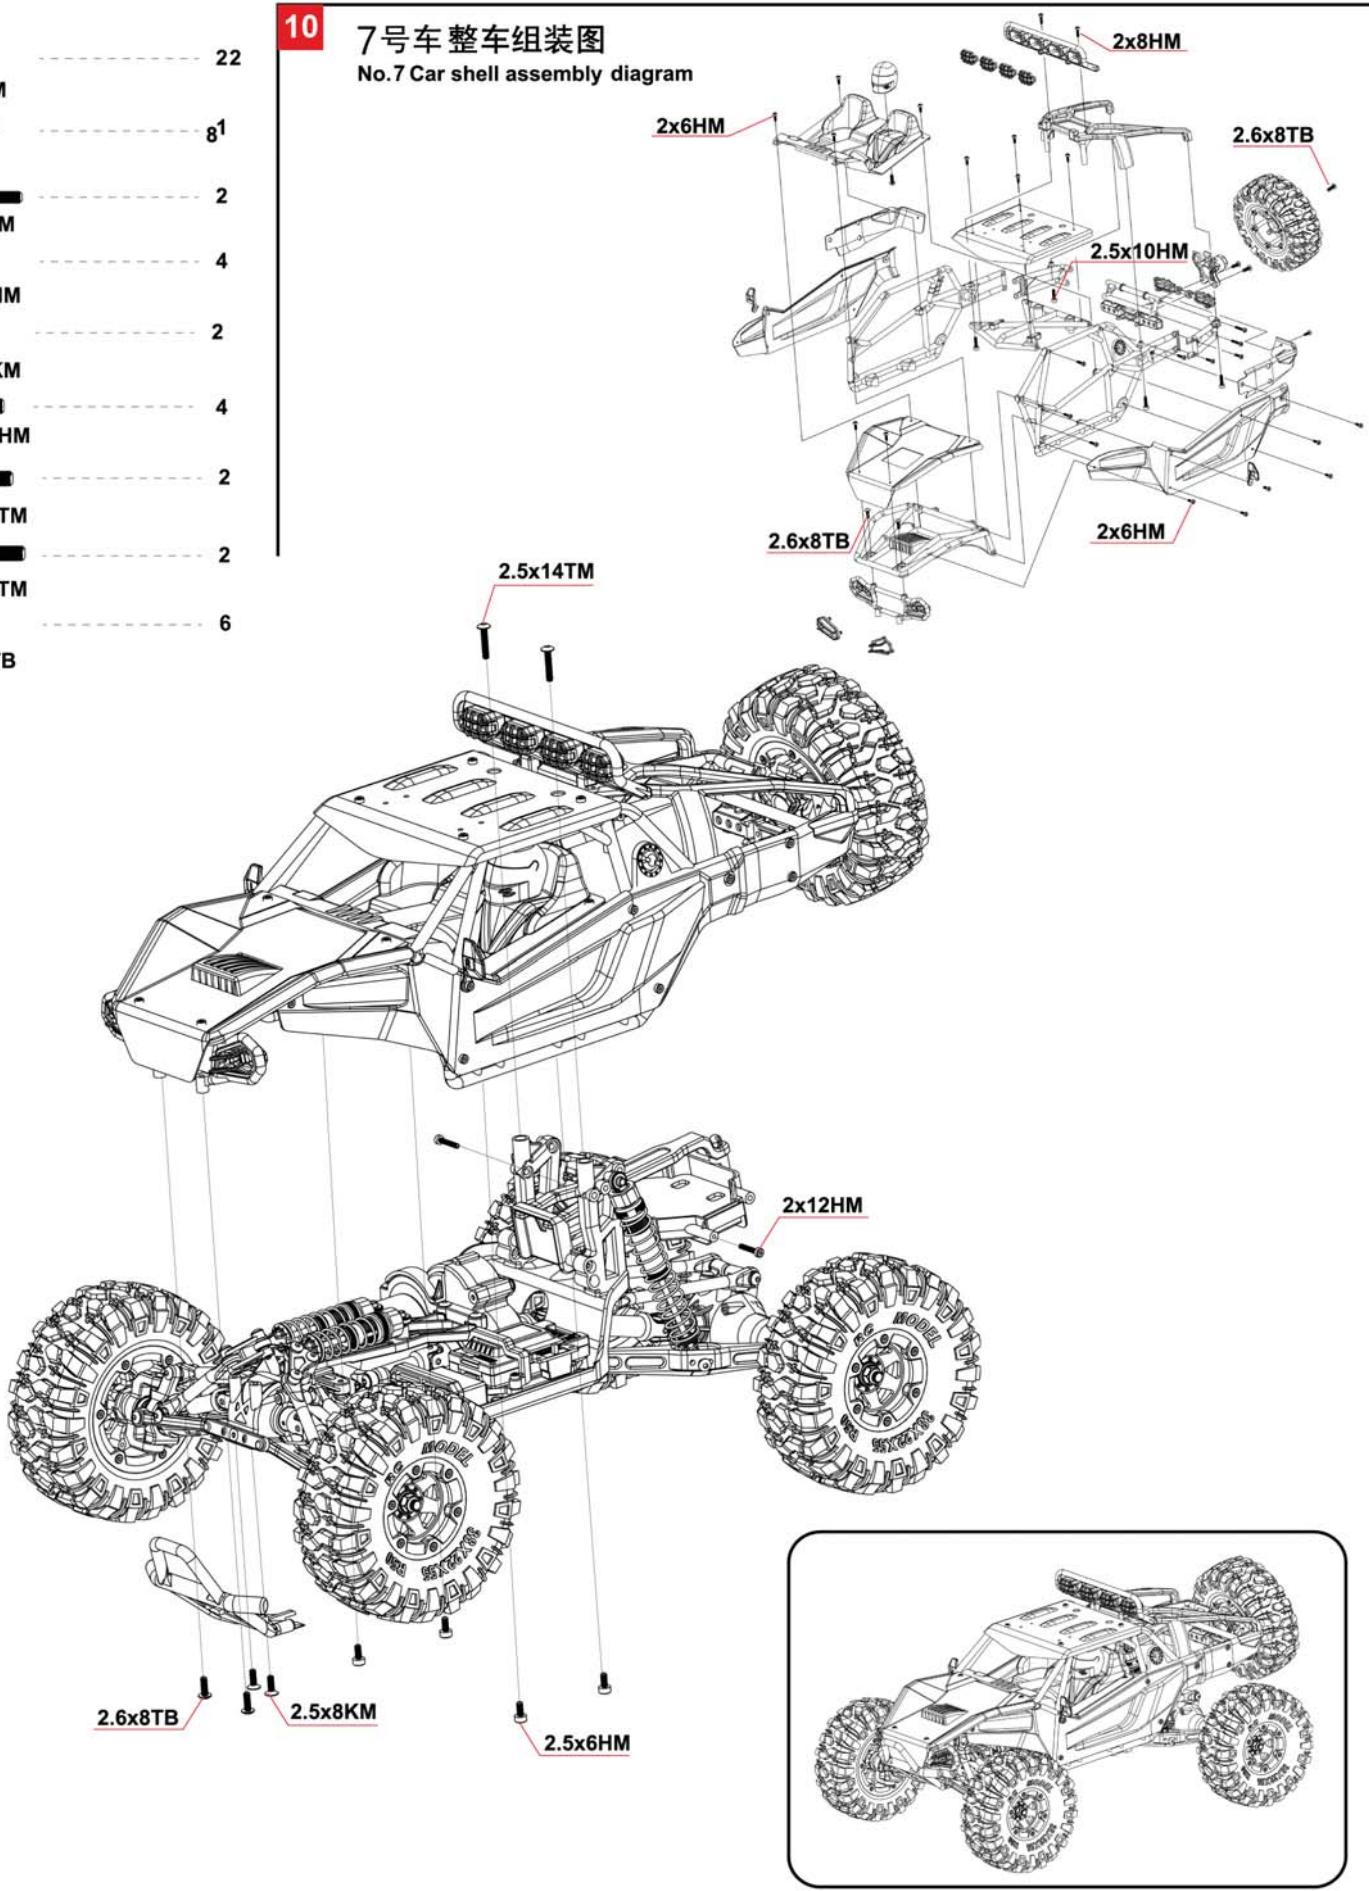

FY-06 部件分解图(Parts exploded view)

11 后波箱分解图


后双相力解图 Rear gear box exploded view

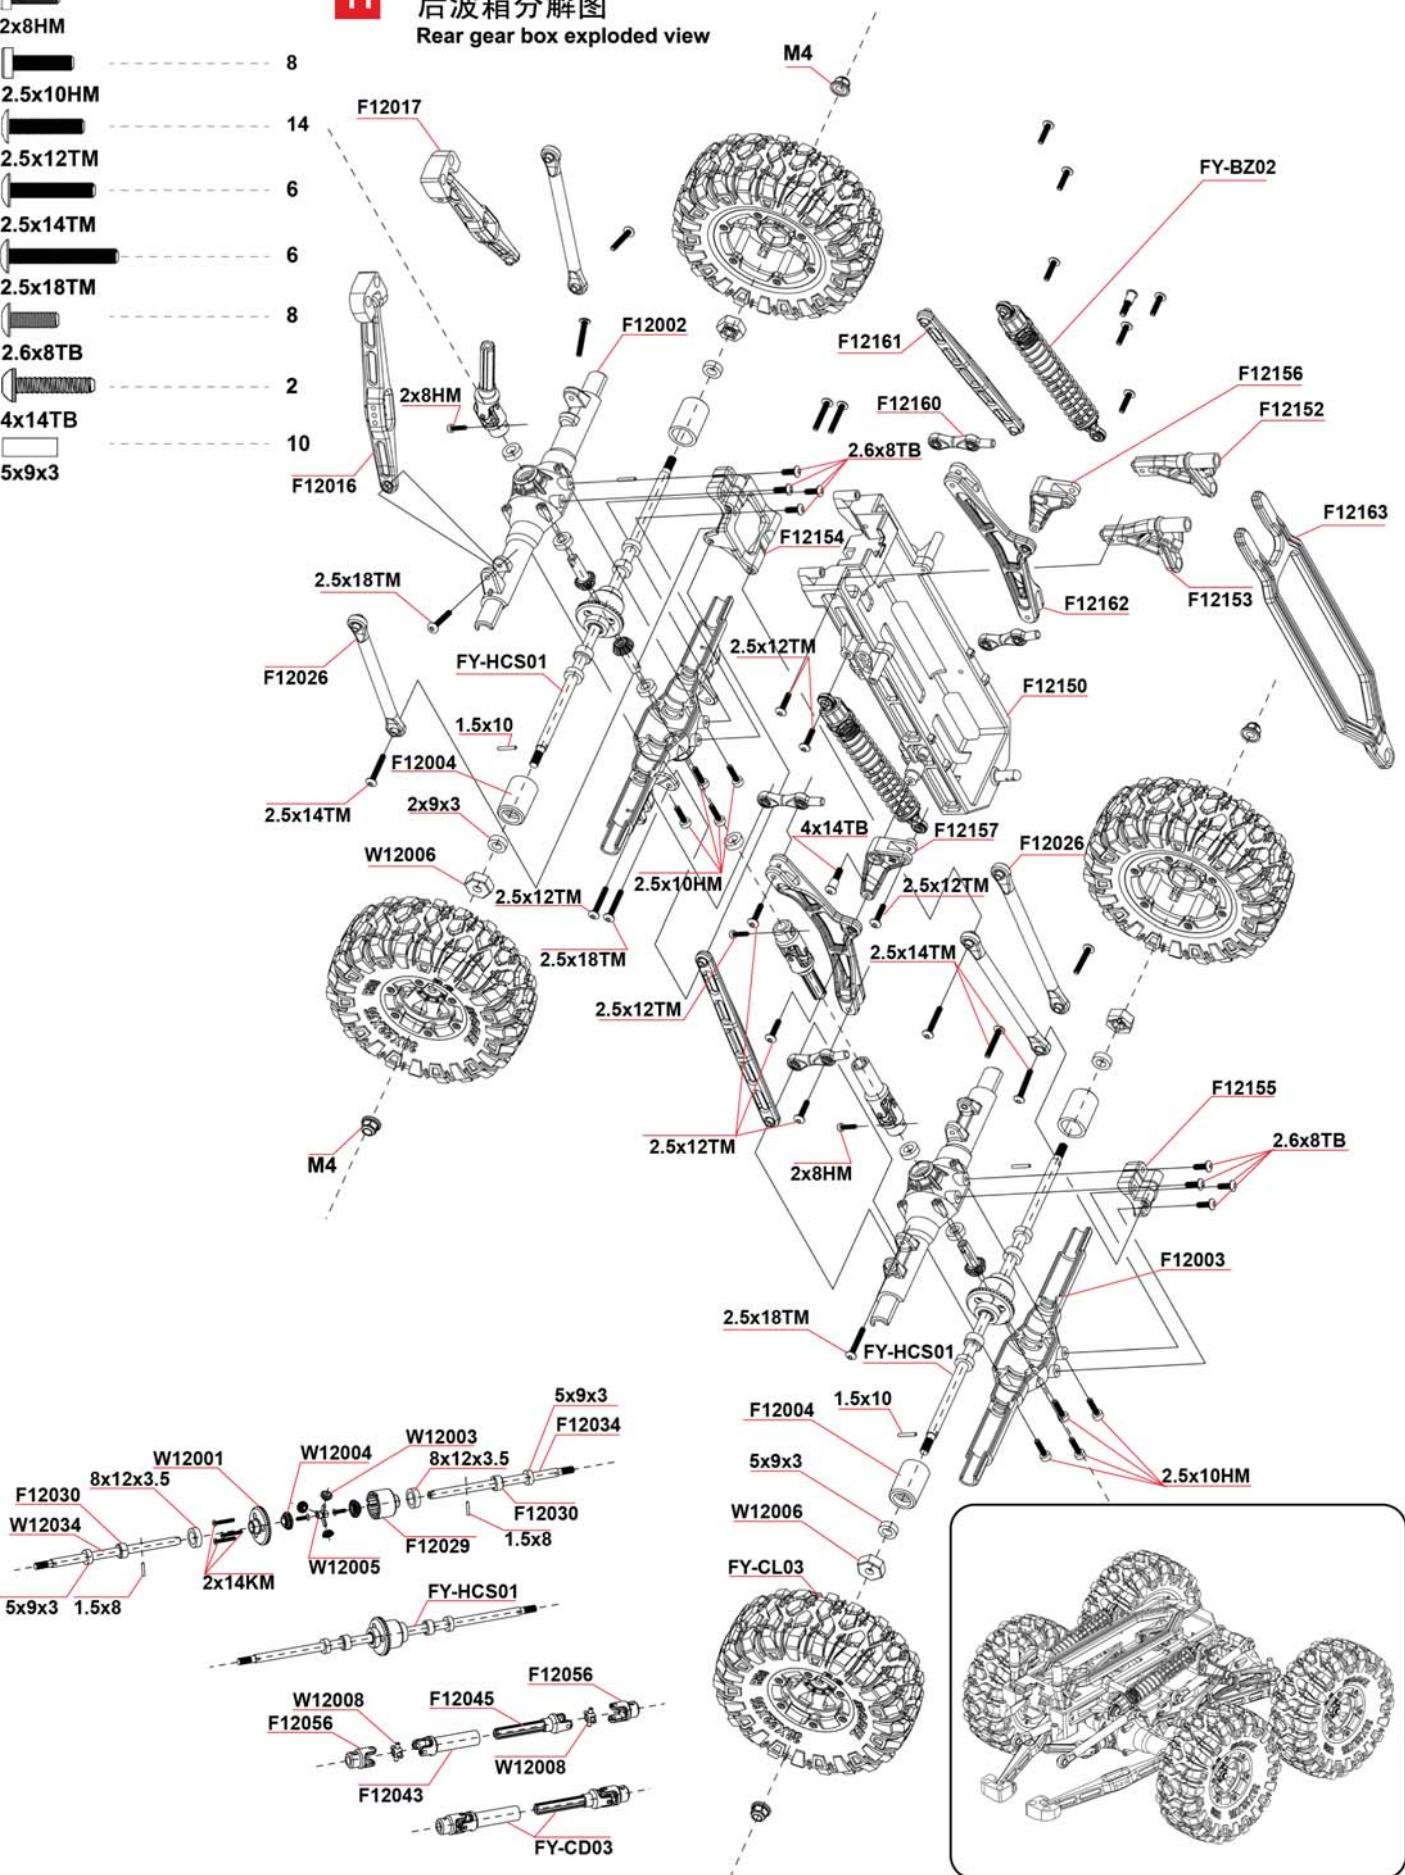



FY-06 车底组装图 (Vehicle bottom assembly diagram)

2X8HM	2
2.5x10HM	4
2.5x8KM	18
2.5x12TM	2
2.5x18TM	4
2.6x8TB	4


12 车底组装图
Vehicle bottom assembly diagram

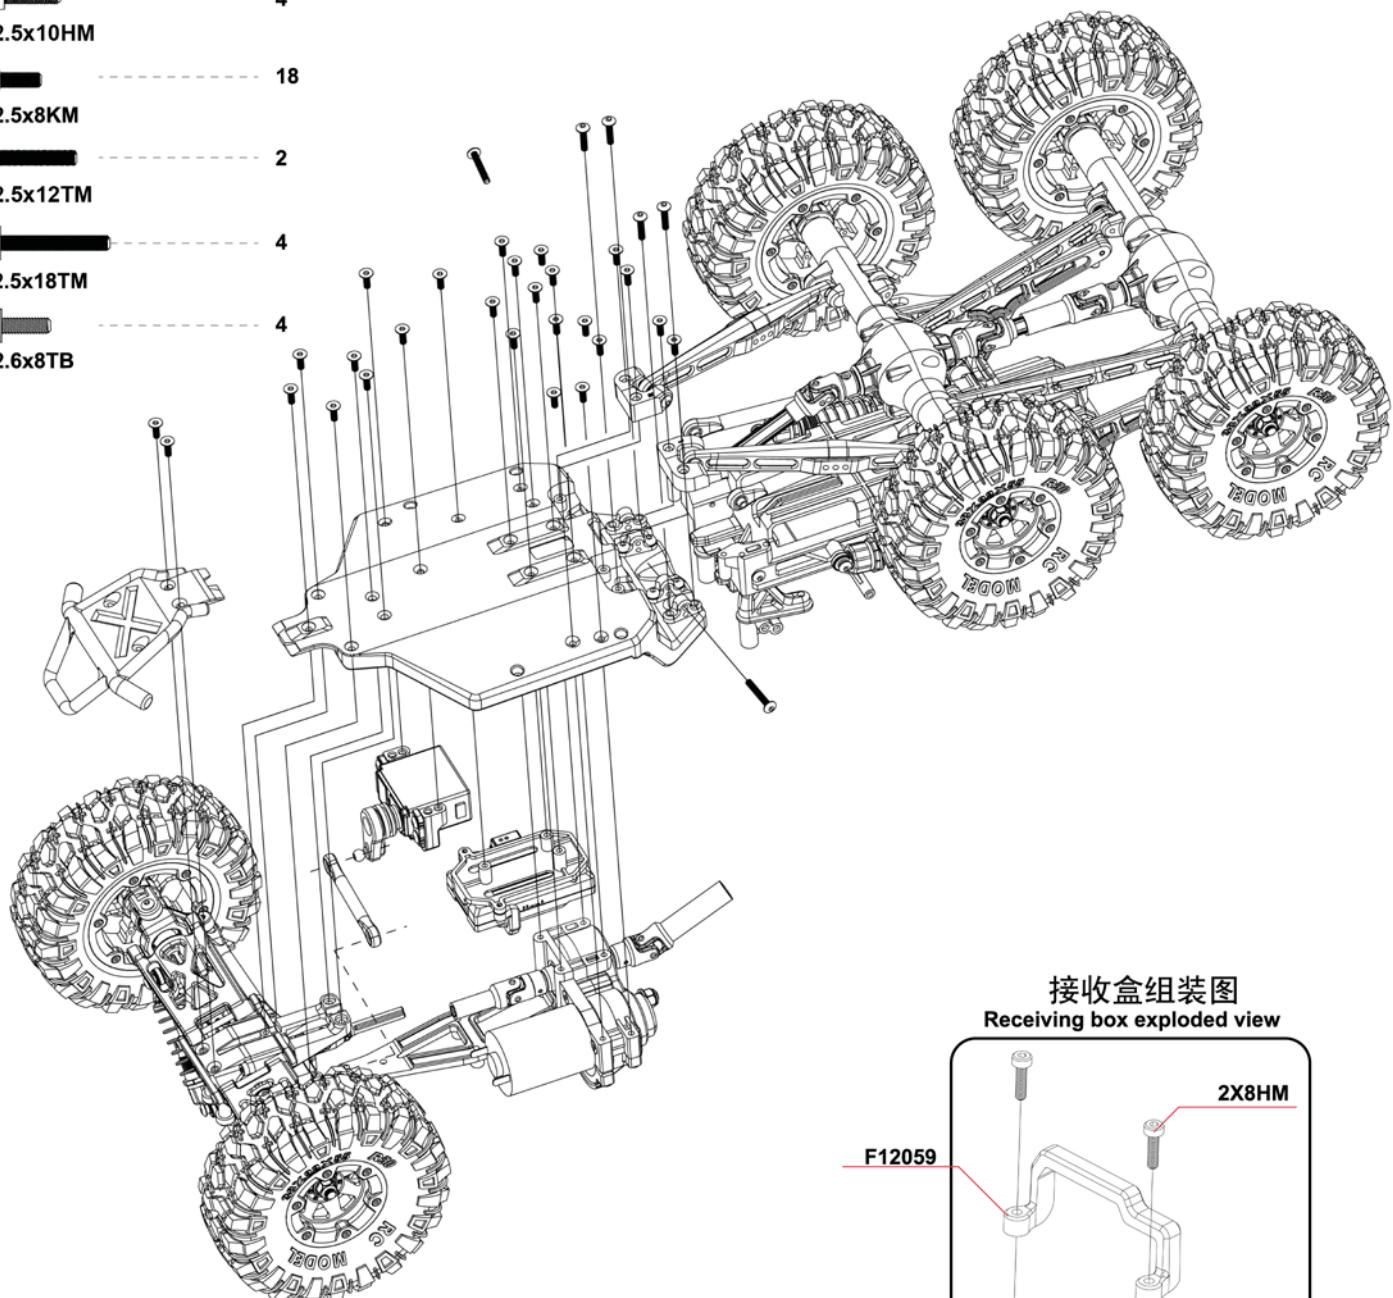

接收盒组装图
Receiving box exploded view

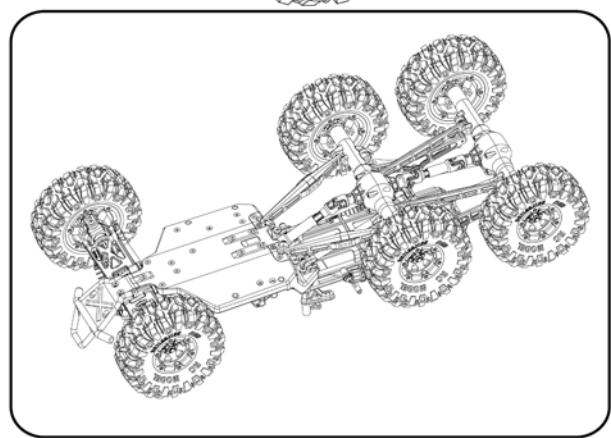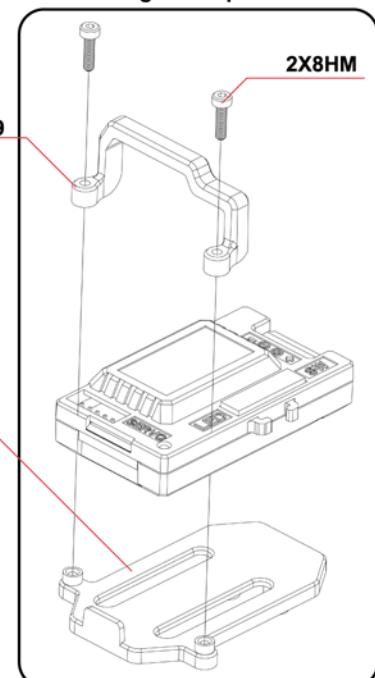


FY-06 车壳组装图 (Vehicle bottom assembly diagram)

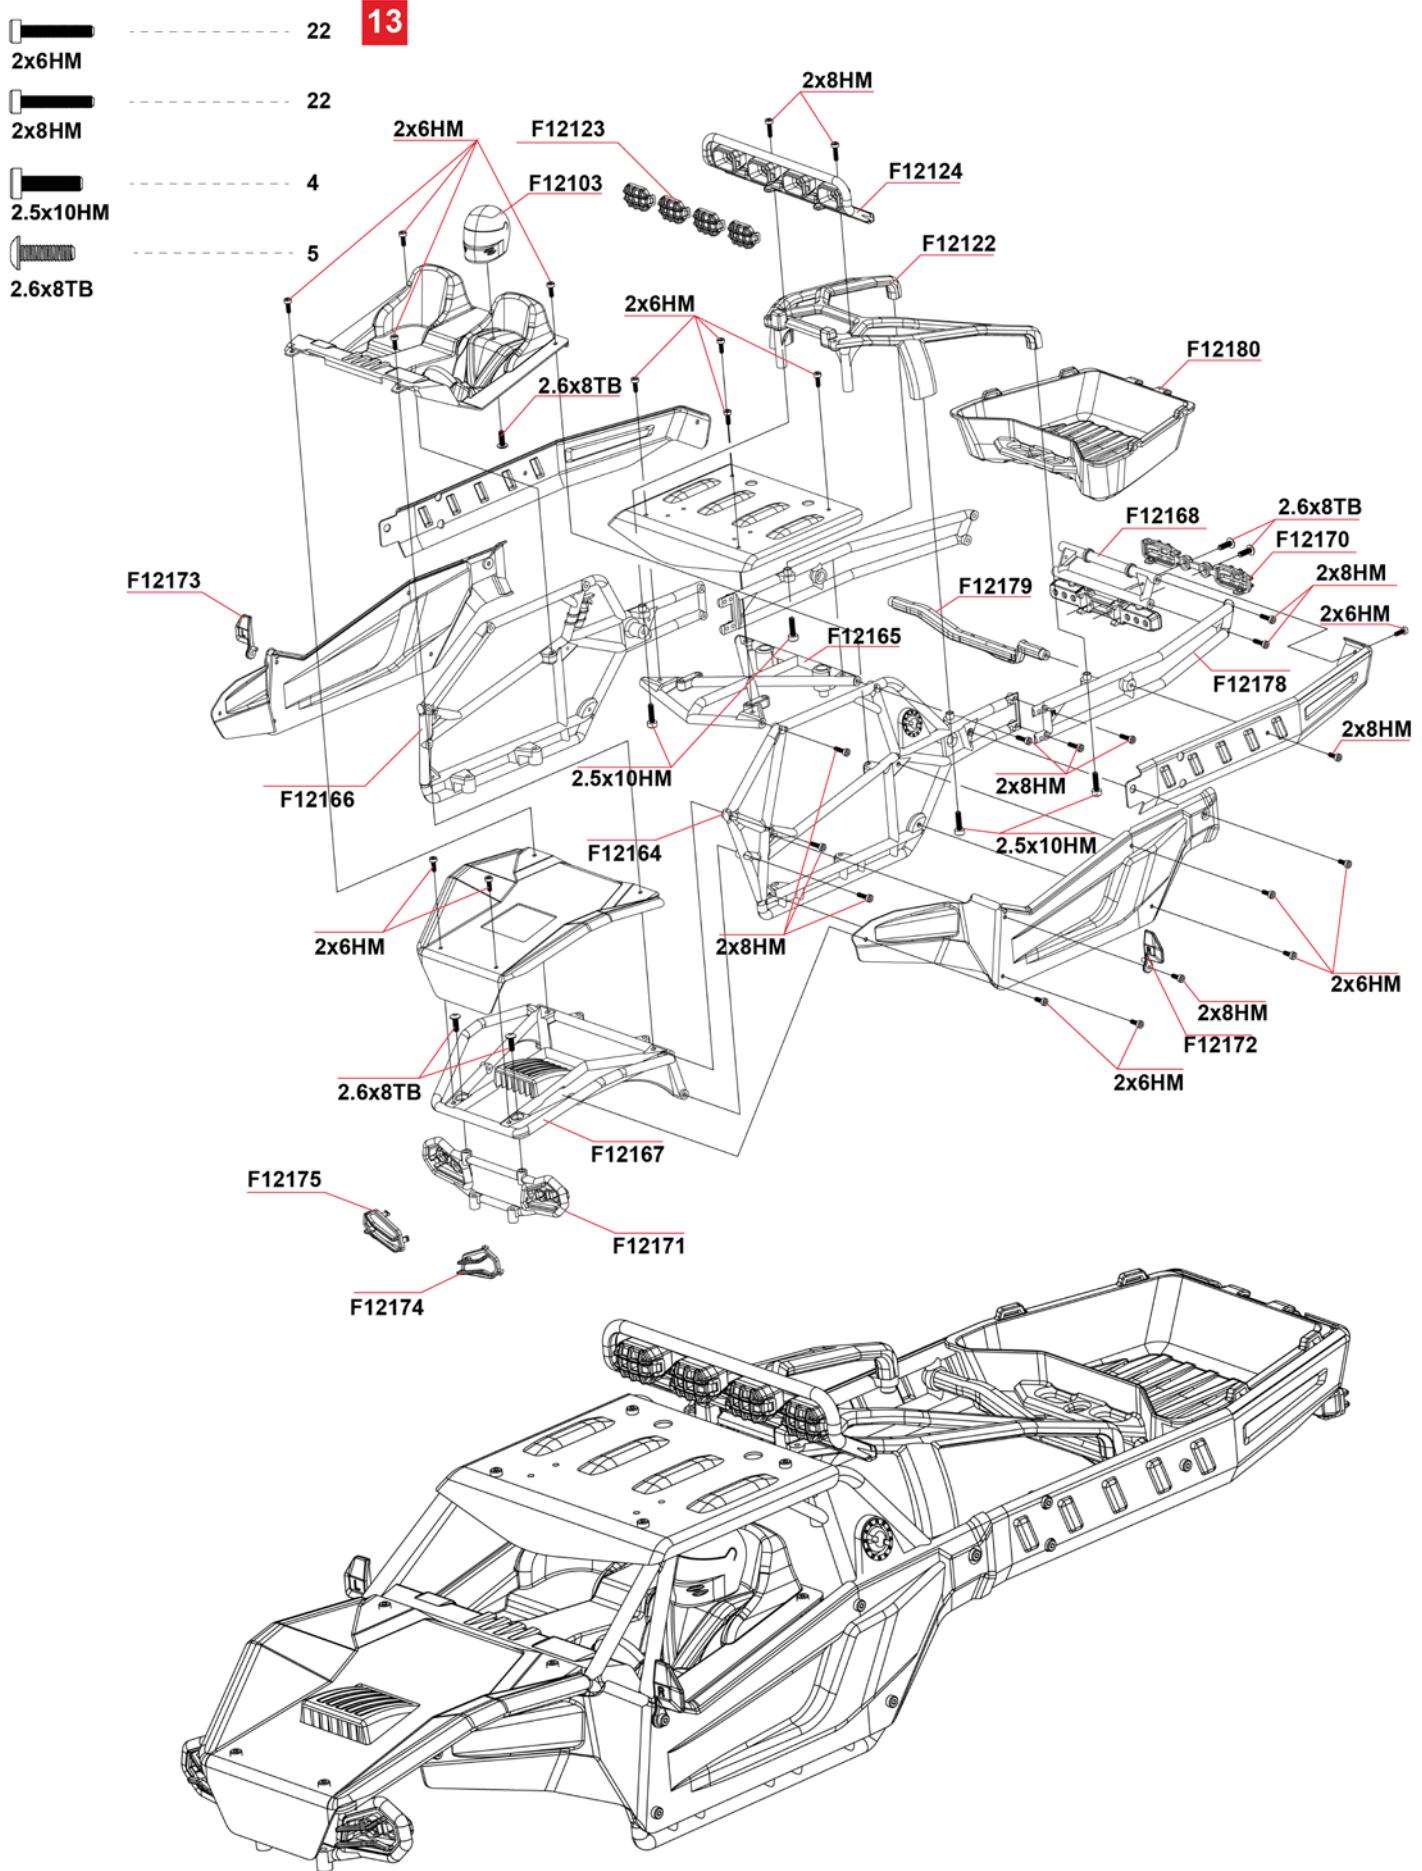

FY-06 整车组装图 (Vehicle bottom assembly diagram)

2x8HM	2
2.5x6HM	4
2.5x8KM	2
2.5x12TM	4
2.5x14TM	2

14 整车组装图
Complete vehicle assembly diagram

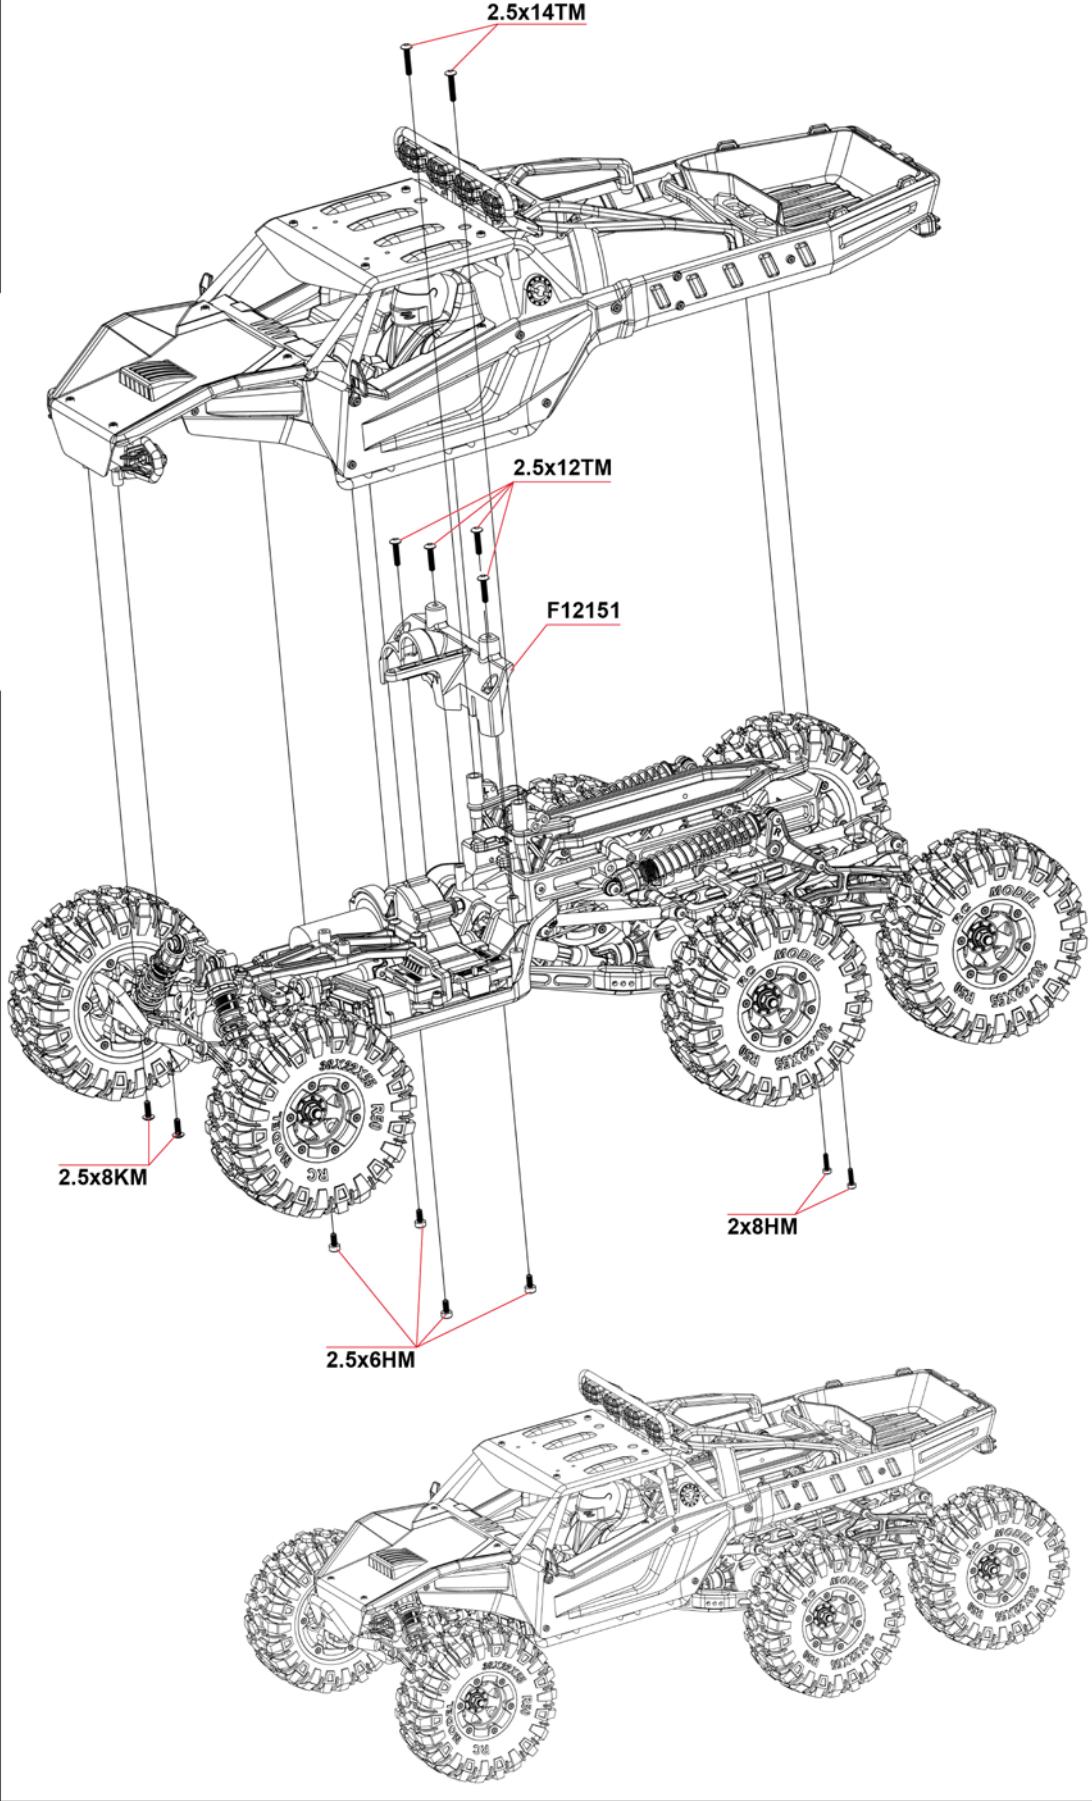

配件表 Parts list

零件表 Parts list

				
F12001 车底 Chassis	F12005-006-007 中波箱配件 Transmission case	F12023-024 前波箱配件 Front Transmission case housing	F12160 后减震连杆 After the suspension link	F12002-003-004-030 后桥波箱配件 Rear axle housing
				
F12021-022 电池座 Battery tray & Stray	F12150 六轮电池座 Six battery holder- Battery tray(KW-C06)	F12163 电池压条 Battery layering	F12014-015 摇臂 Suspension arms	F12008-009 万向座 Steering knuckle
				
F12010-011 万向节 Front spindles	F12152-153 车壳固定架 Car shell fixator	F12033-042 转向配件 Steering housing	F12016-017 后桥主梁 Rear axle linkage	F12161 六轮后桥主梁 Six bridge girder- Trailing arms(KW-C06)
				
F12018 二楼板 Front shock bracket	F12019-020 避震架 Rear shock tower	F12158-159 六轮后减震固定座(L/R) (L/R) After six damping block- Rear damping bracket (KW-C06)	F12034-035 羊角 Front rocker arm set	F12156-157 六轮羊角 Front rocker arm set(KW-C06)
				
F12031-032 后桥固定件 Rear suspension track	F12155 六轮后轮连杆固定座 Rear wheel linkage track(KW-C06)	F12154 六轮中轮连杆固定座 Middle wheel linkage track(KW-C06)	F12040-041 后连接杆固定件 Rear linkage track	F12162 衣架 hangers
				
F12039 舵机固定件 Servo Bracket	F12102 车架防撞固定件 Skid plate	F12121 支柱 (中) 52mm Pillar(M)	F12066 支柱 (短) 36mm Pillar(S)	F12065 支柱 (长) 79mm Pillar(L)

配件表 Parts list



后车壳支架
Rear shell bracket



前车壳支架
Front shell bracket



六轮前支架
Six former stents



灯罩
Light buckets



车顶灯座
Roof light buckets



前灯座
light bucket



摇臂连杆
Suspension arm linkage



转向连杆
Steering linkage



前避震连杆
Front shock linkage



后桥连接杆
Rear axle joint lever



传动齿轮
Transmission gear set

五金类 Metal & Screws



电机固定座
Motor plate



钉头轴
Pin screw



摇臂加强片
Suspension brace



电机齿轮套装
Motor gear set



六角套
Hex adapter



滚珠轴承
Ball bearing



滚珠轴承
Ball bearing



球头套
Pivot ball



球头套
Pivot ball



球头套
Pivot ball



螺母
M4 flat nut



内六角球头螺丝
Ball stud



插销
Body clips



内六角杯头机丝
Hexagonal cup head



内六角平头机丝
Hexagonal flat head


配件表 Parts list

2.0x8HM	2.0x12HM	2.0x14KM	2.0x22PB	2.5x6HM
				
内六角杯头机丝 Hexagonal cup head	内六角杯头机丝 Hexagonal cup head	内六角平头机丝 Hexagonal flat head	十字头半牙自攻 Crosshead half tooth tapping	内六角杯头机丝 Hexagonal cup head
2.5X8KM	2.5x10HM	2.5x12TM	2.5x14TM	2.5x18TM
				
内六角平头机丝 Hexagonal flat head	内六角杯头机丝 Hexagonal cup head	内六角T头机丝 Hexagonal T head	内六角T头机丝 Hexagonal T head	内六角T头机丝 Hexagonal T head
2.6x8TB	2.6x14KB	4.0X22TM	4.0x10TM	4.0X14TB
				
内六角T头自攻 Hexagonal T head tapping	内六角平头自攻 Hexagonal flat head tapping	十字头T头机丝 Crosshead half T head	内六角T头机丝 Hexagonal T head	内六角T头自攻 Hexagonal T head tapping

组件表 Components list

FY-CL01	FY-CL02	FY-CL03	FY-QFZ01	FY-QFZ02
				
车轮01 Wheel 01	车轮02 Wheel 02	车轮03 Wheel 03	前防撞01 Bumper set	前防撞02 After the collision
FY-HFZ02	FY-BZ01	FY-BZ02	FY-CD01	FY-CD02
				
后防撞02 After the collision	避震01 Shock 01	避震02 Shock 02	轮轴传动 Wheel axle	前轮传动 Front drive shaft
FY-CD03	FY-CD04	FY-HCS01	FY-QCS01	FY-QBX01
				
后轮传动 Rear drive shaft	传动04 Rear wheel transmission 04	后差速器总成 Rear differential assembly	前差速器总成 Front differential assembly	前波箱 Front differential gear

配件表 Parts list

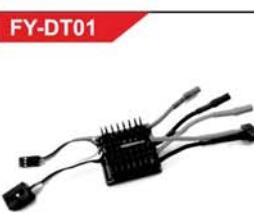FY-ZBX01	FY-HBX01	FY-HBX02	FY-HBX03	FY-CK01
				
中波箱 Middle differential gear	后波箱 Rear differential gear	后波箱02 Rear differential gear 02	后波箱03 Rear differential gear 03	车壳01 Body shell 01
FY-CK02	FY-CK03	FY-CK04	FY-CK05	FY-CK06
				
车壳02 Body shell 02	车壳03 Body shell 03	车壳04 Body shell 04	车壳05 Body shell 05	车壳06 Body shell 06
FY-CK07	FY-CS01	FY-7415	FY-7430	FY-DJ02
				
车壳07 Body shell 07	摩托车手 The motorcycler	7.4V 1500mAH锂电池 7.4V 1500mAh lithium battery	7.4V 3000mAH锂电池 7.4V 3000mAh lithium battery	舵机02 Servo 02
FY-RX01	FY-RX02	FY-KG01	FY-M390	FY-2216
				
接收盒 Receiver box	接收盒02 Receiver box 02	开关 Switch	390高速马达 390 Motor	2216无刷电机 Brushless motor
FY-TX01	FY-DJ01	FY-CHA01	FY-LH01	FY-HC01
				
遥控器 Transmitter	舵机 Servo	USB Charger	离合器 Clutch	缓冲器 Bumper
FY-DT01				
				
电调01 Electrically controlled 01				

注：所有配件如有变更恕不另行通知，请以实际销售为准。

Remarks: All parts are subject to change without prior notice, please refer to our actual sales.

1.The battery is in low status when it leaves the manufacturer for the safety reason, so please charge it before you use.

由于安全原因，电池在出厂时处于低电量状态，请在使用前充电。

2.Please plug the USB charger into a power source first, and then connect the battery to the USB charger.

请先将 USB 充电器插入电源，然后再将电池连接到 USB 充电器。

3.The red indicator light on the USB charger is on, and the green indicator light starts flashing while charging the battery.

After charging is complete, the red indicator light turns off, and the green indicator light stops flashing.

USB 充电器上的红色指示灯亮，在给电池充电时，绿色指示灯开始闪烁。

充电完成后，红色指示灯熄灭，绿色指示灯停止闪烁。

4.When the charging is completed, please disconnect it in time to avoid overcharging.

电池充满时请及时断开连接以避免造成过度充电。

提示

TIPS

To avoid over-discharging, please do not connect the battery to the USB charger when the USB charger is not plugged into a power source.

为避免电池过度放电，在 USB 充电器没有连接电源的情况下，请不要将电池连接至充电器。



模型车常见问题及故障处理 (Model car troubleshooting common problems)

品名 Of the goods	故障现象 The fault phenomenon	故障处置分析方法及故障原因 Fault disposal analysis method and the cause of the problem	排除分析方法 To rule out analysis method
遥控器 The remote control	1、电源指示灯不亮 1, The electric light is not bright	1. 电池没电 2. 电池安装错误 1. The batteries 2. The battery installation errors	1、更换新的电池或检测电池正负安装位置。 1, Change new battery, or test battery positive and negative installation location.
	2、电源指示灯一直闪烁 (红灯) 2, The electric lamp has been flashing (red)	1. 电池电量过低快耗尽 1. Low battery run out quickly	1、更换新的电池 1, Change the new battery
	3、电源指示灯红绿一直交替闪烁 3, The electric lamp has been flashing red and green	1. 产品接收器电源未开启 2. 产品接收端电池没电 1. Products receiver power did not open it 2. Battery products the receiving end	1、检查电源是否开启 2、更换或重新给电池充电 1, Check whether the power source is open 2, Change back to recharge the battery
	4、电源指示灯正常亮起但产品不可控制 4, The electric lamp lights up but normal product can not be controlled	1. 观察使用附近有同类产品使用 2. 附近可有高压线或其他大功率无线网络 1. The observation using similar products using near here 2. Nearby can have high tension line or other high power wireless networks	1、重新将产品所有电源关闭后开启 2、重新选择视野开阔及无干扰地方使用该产品。 1, Again will open products all the power is turned off 2, To choose vision, and no interference using the product.
	5、遥控器左右转向相反 5, About the remote control to the opposite	1. 遥控器上方的转向 "CH1" 左右手切换功能进行切换操作 1. The function of remote control switch to "CH1" or so above the switching operation	1、请参考产品说明遥控器设置方法 1, Please refer to the instructions set remote control method
	6、遥控器未操作下，产品自行行走。 6, The remote control operation, products to walk.	1. 遥控器油门板机不在中间位时开启电源。遥控在开启电源情况切换 "50/50" "30/70" 模式 1. Remote control throttle plate is out of the middle bit open power supply, remote control in open the power switch is "50/50" "30/70" mode	1、请立即关闭遥控电源开关，确保不操作遥控器其它功能情况下开启遥控器电源。 1, please immediately shut off the power switch of remote control, remote controller to ensure that no other function cases, open the remote control power.
模型车 The model car	1、打开电源开关后 "ESC" 指示灯不亮。 1, Turn the power switch after the "ESC" light is not bright.	1. 车子电池没电 2. 电源插头未正确插入。 1. The car batteries 2. The power plug is not inserted correctly.	1、更换新电池或重新给电池充电 2、检查电源插头安装位置 1, Change new battery or to recharge the battery 2, Check the power plug is installed
	2、打开电源开关后 "ESC" 指示灯一直闪烁。 2, After open the power switch "ESC" has been flashing light.	1. 遥控器电池没电或电力不足 2. 产品遥控通讯受到干扰。 1. Remote control battery or power shortage 2. Product remote communication interference.	1、观察附近是否有同类产品使用造成频段冲突 2、是否有高压线及其它大功率无线设备的影响。 1, Observe whether there are similar products using near spectrum caused by conflict 2, If there is a high tension line and other high power wireless devices.
	3、 "ESC" 指示灯一闪一停。 3, "ESC" indicator light stops flashing.	1. "ESC" 使用温度过高或热保护 2. "ESC" 使用电流超过最大负载保护 1. The "ESC" temperature too high or thermal protection 2. The "ESC" to use current exceeds maximum load protection	1、是否连续长时间使用，可暂停使用十分钟 2、检查产品车轮或动力传动结构是否有杂物 3、检查产品是否因撞击或配件损坏 1, Whether continuous use for a long time, can stop using ten minutes 2, Check product wheel or power transmission structure for sundry 3, check whether products or parts damage as a result of strokes
	4、 "ESC" 指示灯两闪一停。 4, "ESC" indicator light stops flashing.	1. 产品电池电力不足，低电压保护。 1. The product battery power is insufficient, low voltage protection.	1、请及时给电池充电 2、更换新电池使用。 1, Please recharge the battery 2, Replace the new battery.
	5、产品前轮转向没力或没功能。 5, The product function of front wheel steering force or not.	1. 检查遥控器 "转向幅度" 旋钮是否在正确值 2. 检查产品转向机是否有杂物或配件损坏。 1. Check the remote control "to" knob is in the correct value 2. To check whether there is sundry or products to machineparts damaged.	1、请将遥控器 "转向幅度" 旋钮调到100%最大值 2、将转向机构杂物去除 3、更换受损转向机构配件。 1, Please dispatch "steering" remote control knob to a maximum 100% 2, Remove steering mechanism of sundry 3, The replacement of damaged steering parts.
	6、产品电源一开启后会有并动或行走。 6, Product power will have after a open and move or walk.	1. 遥控器未正确使用 2. 附近是否有同类产品或信号干扰 1. Remote control is not used correctly 2. Is there a similar products around or signal interference.	1、请重新按说明书要求开启遥控器 2、将产品所有电源重新关闭后开启 3、尝试选择安全无信号干扰场地使用该产品。 1, Please open the remote control according to the requirements of specification 2, The product all the power is turned off again 3, Try to select safe no signal interference field using the product.
	7、产品无法行走或加速无力。 7, product cannot walk or acceleration.	1. 电池电力不足 2. 传动机构可能有杂物或损坏。 1. Battery power is insufficient 2. The drive mechanism may be debris or damaged.	1、更换新电池或重新充电 2、检查产品传动机构清理杂物或更换损坏配件 1, Change new batteries or recharging the batteries 2, Check the product transmission mechanism clear clutter to replace damaged parts 3, Change new high-power power motors.
	8、产品无法前进或后退。 8, the product can't forward or backward.	1. 电池没电 2. 产品车轮或传动机构有杂物及损坏 3. 产品 "ESC" 故障或损坏 4. 遥控器功能损坏。 1. The batteries 2. The wheels or actuator products are damage and debris 3. Product "ESC" failure or damage 4. The remote control function damage.	1、更换新电池或重新充电 2、清理产品车轮及传动机构上的杂物或更换新的传动配件 3、检查 "ESC" 的马达插头是否有摇动 4、检查 "ESC" 外观是否完整无变形或烧黑 5、更换新的 "ESC" 6、更换新的遥控器。 1, Change new batteries or recharging the batteries 2, Cleaning products and impurities on the transmission mechanism wheel or replace new transmission parts 3, Check the motor plug "ESC" have moved 4, Check the "ESC" appearance is complete without a mishap or blackened 5, Change new "ESC" 6, Replace the new remote control.

FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is

encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.