

# Remote Control

## Model 60.0



Quick Reference  
Guide

# Get Started in 3 easy steps.

## Remove Battery Tab

Batteries initially included.


Remove the back cover by pressing the battery door, and remove the **PULL tab**.

## Battery Replacement

**1** Press **Battery** door.

**2** Slide door open.

**3** Press **Red button** to change batteries.

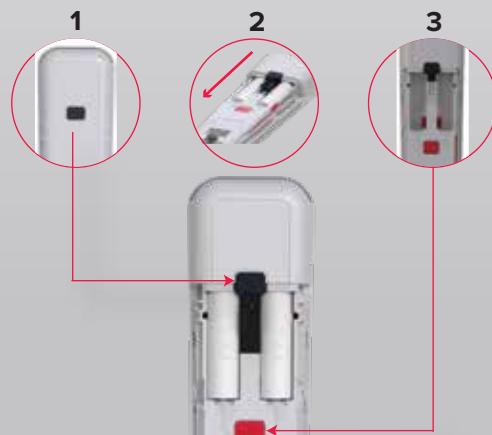

## Pair to DISH

**1** On your **DISH** box lift the tab and press the **SYS Info** button.



**2** Press **any button** on your new remote. Three beeps indicate the process is complete.



## Pair Remote to TV

**1** Press **Home** on the **remote**.



**2** In **DISH**, select **Settings**, then **Remote Control**.



**3** Select **TV**, and then **TV Pairing Wizard**.



# Explore Your Remote

**1 Power**-Turn your TV, and DISH box on/off.

**2 Previous Channel**- Goes to last channel watched.

**3 Mute**- Mute or unmute volume.

**4 Rewind**- Press to go back 10 seconds. *Press and hold to rewind.*

**5 DVR**- Display Recordings menu. *ie: Watch Recordings.*  
*\*Press twice for DVR options.*

**6 Select**- Make selections. Can also be used to Record shows when watching.

**7 Navigation Pad**- Use arrows to navigate up/down, left/right.

**8 Back**- Press to go back one screen.

**9 Live**- Press to go to live TV.

**10 CC**- Turns on/off close captions.



**11 Fast Forward**- Press to fast forward 30 seconds. *Press and hold to fast forward.*

**12 Home**- Display the Home Screen. *\*Access Menu and Settings via Home Screen.*

**13 Guide**- Display Program Guide. *\*Press Twice for Guide options.*

**14 Info**- Display program info.

**15 Voice**- Press and hold down the voice button to ask the Voice Assistant to help you find what you're looking for.

**16 Search Button**- Search onscreen with text.

**17 Loop Hole**- Attach lanyard here. *\*Optional, lanyard not included.*

## DVR and Record

Press **DVR** to access your Recordings. Press DVR twice for DVR options.



### Record in Live

Press **SELECT** when watching from Live and choose **RECORD** with the **Navigation Pad**.



### Record in Guide

When in **GUIDE**, select the desired program and use **Navigation Pad** to select **RECORD**.



## Voice Command

With Voice Commands, just **Press, Hold, and Speak**.



### Change Channel:

Say, "**Tune to ESPN**" to start watching ESPN.

### Navigation:

Say, "**Open Guide**" to open the Guide.

### Controls:

Say, "**Play**," "**Pause**," or "**Fast Forward**" while watching.

### Launch Apps:

Say, "**OnDemand**," or "**Netflix**".

### Personalization:

Say, "**Audio Description off**," or "**Magnification on**".

### Settings:

Say, "**Record this**," to start Recording.

## Pair Speaker

1 Press **Home** button on the Remote.

2 In **DISH** select the following. **Settings**, **Remote Control**, **Devices**, **Auxiliary Device**, **Audio Accessory**, **Next**.

3 Select **Auxiliary Device Pairing Wizard** and find your Brand in the list, and then select **Next**.

## Customize Your DISH

Choose what you see when you turn your **DISH/TV** on.

1 Press the **HOME** button on your remote.

2 In **DISH** select **Settings**.

3 In **DISH** select **Power**, select **Power On**.

4 Choose your preferred option.

# Notes



dish  
Tuned In To You.

**Need Help?**  
**1-800-333-3474**



[mydish.com/support/remotes](http://mydish.com/support/remotes)

DISH Anywhere



Warranty, safety, regulatory, and legal information can be found at  
[mydish.com/support/remotes](http://mydish.com/support/remotes).  
DN012037

# Regulatory Information

## FCC Statement

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

## Safety Instructions

You must keep safety in mind while using this device. Keep these and any other instructions for future reference.

Observe Warnings: Carefully follow all warnings on the device and in the operating instructions.

## Case and Use

Cleaning: Do NOT use liquid, abrasive, solvent, or aerosol cleaners. Use a damp cloth for cleaning.

When Not in Use: Remove the batteries if this device is to be left unattended or unused for a long period of time.

Refer servicing to qualified personnel when a solid object or liquid has fallen onto or into the device.

Do NOT attempt to service this device. Refer all servicing to qualified personnel. Opening covers other than the battery cover will void the warranty.

