



Email:Musicross@126.com

FCC ID: 2A66Z-MUSCDP001
Model: MUSCDP001

1 IMPORTANT REMINDER

- (1) **Safety Instructions:**
 - ◇ Don't expose this unit or any accessories near water or under the sun. Don't place this unit next to the fire, heating or the liquid. If liquid splashes on the surface or inside of the product, please cut off the power supply immediately. Please contact with our customers' service people firstly, they will indicate you how to re-work and operate.
 - ◇ Please unplug the AC/DC adaptor before lightning or rainstorm weather. (If you use AC/DC adaptor to supply power)
 - ◇ When you play the CD music, make sure the CD compartment closely. Please make sure the CD already stopped when you open CD compartment.
 - ◇ Don't scratch LCD lens with something hard, to avoid any damage.
 - ◇ Don't touch CD optical head, otherwise, the playback will be affected.
 - ◇ Don't insert anything into the ventilation slot.
 - ◇ If this unit is transported at less than 5°C, please open the unit package and wait for the unit temperature in accordance with the house temperature, then turn it on.

2 Don't Overheat

- ◇ Relevant identification and power supply, please check the technical data in back of unit or user manual.
- ◇ Don't place this unit in an enclosed space, be sure to leave 10cm/4 inches space around it.

3 Don't Pollute the Environment

- ◇ Don't mix the old and new batteries, or rechargeable and non-chargeable batteries.
- ◇ Please remove your AC/DC adaptor or battery when you don't use this product for a long time, avoid battery leakage to damage the machine.
- ◇ Don't use the less-power battery.
- ◇ The battery contains chemicals, please dispose it correctly after use.

4 Don't Swallow Battery

- ◇ Don't swallow the battery, or it will cause chemical burns.
- ◇ If you accidentally swallow the battery, see your clinician immediately.
- ◇ Please keep new or used battery far away children.

5 Product Maintenance

- ◇ Only use a fine fiber cloth to clean this unit.

6 Protect the environment


- ◇ This product is made of recyclable high-performance materials and components.

- ◇ Don't dispose this unit with other domestic garbage. Please check the local regulations on collecting electrical products and batteries, then discard them correctly.

2 PRODUCT PACKAGE LIST


- When you buy this unit, please confirm all accessories is complete as blow:
- ◇ Portable CD player x1
- ◇ Earphone x1
- ◇ USB Power Cable x1
- ◇ User Manual x1

3 FUNCTION DESCRIPTION

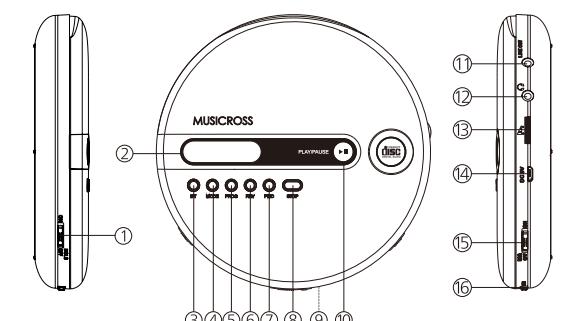

- (1) HOLD OFF/ON (10) Play/Pause/Power on
- (2) BT (11) Line out Jack
- (3) BBS Bass boost system (12) Earphone Jack
- (4) MP3 MP3 playback (13) Volume Knob
- (5) ESP Electronic skip protection (14) DC 5V Jack
- (6) PROG Program setting (15) BBS ON/OFF
- (7) REP Repeat one music (16) Open(For CD Door)
- (8) ALL Repeat all music
- (9) Battery symbol
- (10) INTRO Skim and play in 10 seconds
- (11) RAND Random playback mode
- (12) Playing track NO. & time
- (13) ALBUM Folder repeat

4 INTRODUCTION OF LCD DISPLAY

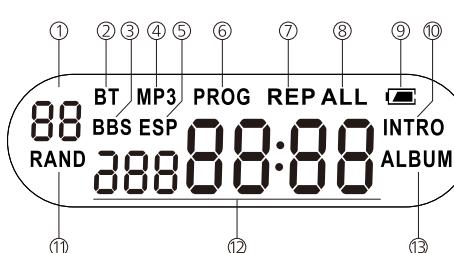

- (1) 88 CD playback. When it's playing Mp3, will display the folder number
- (2) BT Bluetooth transmission only
- (3) BBS Bass boost system
- (4) MP3 MP3 playback
- (5) ESP Electronic skip protection
- (6) PROG Program setting
- (7) REP Repeat one music
- (8) ALL Repeat all music
- (9) Battery symbol
- (10) INTRO Skim and play in 10 seconds
- (11) RAND Random playback mode
- (12) Playing track NO. & time
- (13) ALBUM Folder repeat

5 POWER SUPPLY

- ◇ **Battery:** Open the CD player's door and open the internal battery compartment. Put 2 pcs LR06 or AA size dry batteries in and make sure they are in the correct direction based on the "+" or "-". Please note that incorrect operation will lead to the unit doesn't work or be broken. ◇ only is showed as a battery symbol fixed, doesn't show the remaining battery capacity. When playing the music, ◇ will display in LCD. When the battery is low power, ◇ will flash, please replace the new batteries in time.
- ◇ **AC/DC adaptor:** put the AC/DC adaptor on a plug into a AC power, another one plug into the DC 5V jack and start to work.

6 EARPHONE USE

- ◇ This unit has no built-in speaker, please use earphone to listen.
- ◇ In play mode, use the earphone which is stereo plug into earphone jack to enjoy your music.
- ◇ And use bluetooth earphone also available.
- ◇ This unit only uses three poles plug of earphone, but four poles plug of earphone are not applicable. Please check your earphone plug type before using.

6

After-sales Service

- ◇ Thank you for choosing Musicross. Our customer service team will look forward to hearing from you.
- ◇ If you have any questions about our products or any suggestions, please send us email first. We will reply you within 24 hours and provide you with a satisfactory solution.
- ◇ Defective products will get a 100% replacement or refund.
- ◇ Email: Musicross@126.com
- ◇ We have continuously improved the quality of our products and enhanced customer service. Hope our efforts can get your support.
- ◇ Please feel free to share your feelings on our product page to help more people know about it.
- ◇ Press the OPEN button to open the CD compartment, insert a CD or MP3 disc, and close the CD compartment. The CD player will automatically play music. (This product does not have built-in speaker, please use this product with earphones.)
- ◇ Press REV or FWD button to choose the previous or next music you want. Long press the REV or FWD to control fast forward or fast backward.
- ◇ Press MODE button to choose one repeat, all repeat, skip 10 seconds (that means each song can play the first 10 seconds, then enter to next song the first 10 seconds), random play, delete repeat mode, LCD will display symbol accordingly.
- ◇ Press the STOP button to pause playback, press again to continue.
- ◇ Dial the volume knob to adjust the volume level.
- ◇ Put the BBS button to ON position to open the bass boost system. BBS mode can enhance the bass effect for a better music experience. (Please note that the actual effect depends on the specific type of music and the quality of the CD disc.)

Made in China

7 CD PLAYBACK OPERATION

- (1) **CD Playback**
 - ◇ In standby mode, press the STOP button to turn the power on, LCD is lighted. Press STOP button twice to turn the power off, LCD is off.
 - ◇ Push the OPEN button to open the CD compartment, insert a CD or MP3 disc, and close the CD compartment. The CD player will automatically play music. (This product does not have built-in speaker, please use this product with earphones.)
 - ◇ Press REV or FWD button to choose the previous or next music you want. Long press the REV or FWD to control fast forward or fast backward.
 - ◇ Press MODE button to choose one repeat, all repeat, skip 10 seconds (that means each song can play the first 10 seconds, then enter to next song the first 10 seconds), random play, delete repeat mode, LCD will display symbol accordingly.
 - ◇ Press the STOP button to pause playback, press again to continue.
 - ◇ Dial the volume knob to adjust the volume level.
 - ◇ Put the BBS button to ON position to open the bass boost system. BBS mode can enhance the bass effect for a better music experience. (Please note that the actual effect depends on the specific type of music and the quality of the CD disc.)

Special Reminder

- ◇ Don't use irregular discs.
- ◇ Don't put more than 1 piece disc into CD compartment.
- ◇ Don't open CD compartment when CD is playing.
- ◇ Don't touch the CD laser head, or will lead to damage.

7

3 Bluetooth Transmission

- ◇ In play mode, press the STOP button to stop playing
- (2) **Program Setting**
 - ◇ Use the Program Setting to select as many songs as you want to repeat.
 - ◇ In CD or MP3 stopped mode, press PROG button to enter the Program interface.
 - ◇ Press the REV or FWD button to select the song you want, then press the PROG button to confirm the song. Use the same steps again to select the second song you want.
 - ◇ After you have selected all the songs you want, press the STOP button to start repeating these songs.
 - ◇ Press the STOP button to exit program mode.

4 LINE-OUT

- ◇ This product can be connected to external audio device through the LINE OUT port. (You need to use your own audio cord.)
- ◇ In LINE OUT mode, the CD player's volume knob will not work. You can adjust the volume through the external device.

5 ELECTRONIC LOCK

- ◇ Put the HOLD button to ON position, the function of MODE, PROG, REV, FWD, PLAY/PAUSE buttons will be locked.
- ◇ Put the HOLD button to OFF position will unlock these functions.

6 ESP FUNCTION

- ◇ ESP(Electronic skip protection), that means this unit has anti-shock function, it can keep your music stable when you are walking fast etc.

8 TECHNICAL SPECIFICATION

- Power Supply: 5V=1A
- Battery Supply: 3V=1W(LR06/AAx2)
- CD Frequency Response: 20Hz-18kHz
- Earphone Impedance: 32Ω
- Output Power: 8mW(Earphone)
- Support Music Format: CD/CD-R/CD-RW/MP3
- Unit Size: 145x145x28mm
- Weight: about 235g(not included battery)

8

9

10

11

12

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.